


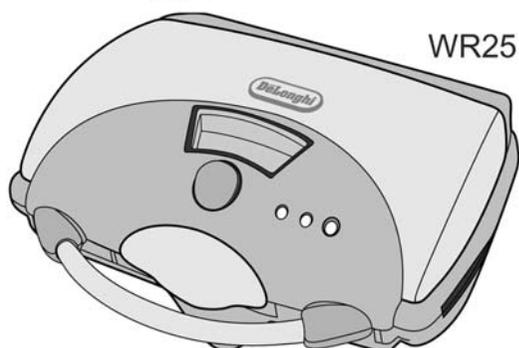

WR25 / WR45 WAFFLE MAKER



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plug or cooking unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or has been damaged in any manner.
7. The use of accessory attachments is not recommended by the manufacturer. It may cause hazards.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. Plug cord into wall outlet. To disconnect, remove plug from wall outlet.
12. Do not use appliance for other than intended use.


SAVE THESE INSTRUCTIONS

This appliance is intended for household use only. No user-serviceable parts inside. Refer servicing to qualified service personnel. If the appliance is of the ground type, the extension cord should be a grounding 3-wire cord

Before First Use

Before using for the first time, the baking surfaces should be cleaned with a moist cloth. We recommend lightly greasing the baking surfaces when using for the first time. This will not be necessary on subsequent occasions. The first two or three waffles should not be eaten. Before filling with batter, please decide if you want medium or crispy waffles by using the adjustable thermostat knob.


WR25 WAFFLE MAKER

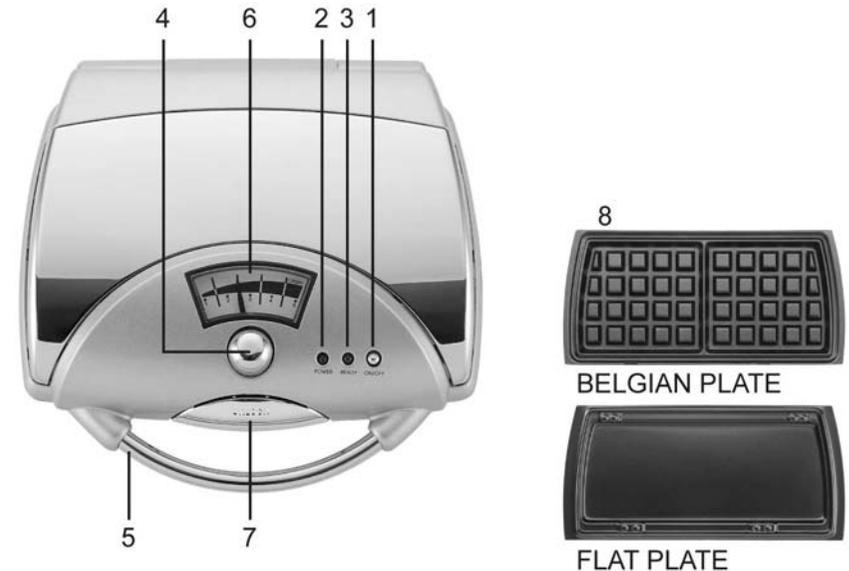

SPECIAL FEATURES

1. ON/OFF BUTTON
2. POWER LIGHT
3. READY LIGHT
4. ADJUSTABLE THERMOSTAT KNOB
5. HANDLE
6. TEMPERATURE RANGE INDICATOR
7. LATCH
8. BELGIAN & FLAT PLATES INCLUDED (2 OF EACH)

WR45 WAFFLE MAKER

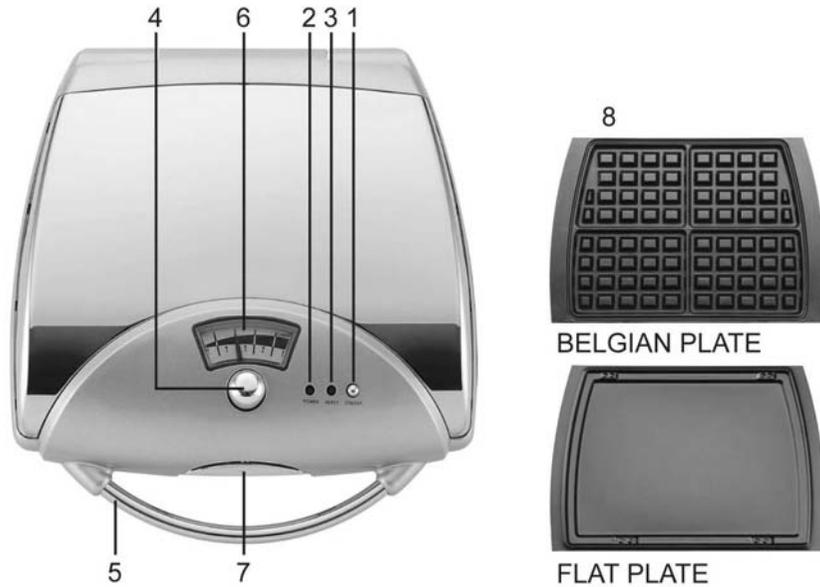

SPECIAL FEATURES

1. ON/OFF BUTTON
2. POWER LIGHT
3. READY LIGHT
4. ADJUSTABLE THERMOSTAT KNOB
5. HANDLE
6. TEMPERATURE RANGE INDICATOR
7. LATCH
8. BELGIAN & FLAT PLATES INCLUDED (2 OF EACH)

HOW TO MAKE WAFFLES

NOTE: Make sure that both plates (Belgian or Flat) are secure and properly in place before plugging in and turning on the waffle maker.

1. Insert the plug into a 120V/60Hz only outlet.
2. The red power light will illuminate when the ON/OFF button is pushed. This button turns the appliance on for preheating. If the ON/OFF button is pushed during operation, then the appliance will automatically turn off and the red power light will turn off immediately.
3. The desired degree of browning can be achieved with the adjustable thermostat. Choose your desired temperature by turning the adjustable thermostat knob from low to high (or high to low) setting. When the appliance reaches the set temperature, the green ready light will illuminate and 6 beeps will sound to let you know it is time to pour the waffle (pancake) batter into the bottom of the grid (Belgian plate). The appliance will maintain the set temperature during the entire baking process. **NOTE:** Be sure to close the lid before baking begins.
4. The green ready light will turn off when the baking operation begins. It will light up again along with 3 beeps to let you know the waffle is done.

Note:

- Care must be taken to ensure that fingers do not come into contact with the Belgian or flat plates.
 - When making waffles, bake only with the lid closed.
 - The waffle maker features a height adjustable hinge. When the flat plates are in place, the unit will automatically adjust to larger-sized food when the lid is closed.
5. When baking is finished, open the waffle maker and remove the waffle with a plastic or wooden spatula. Never use metal knife as this may damage the non-stick coating.
 6. NOTE: The waffle maker does not turn off automatically after baking is complete. The only way to turn off the waffle maker is to push the ON/OFF button until the red light is no longer illuminated. Be sure to unplug the waffle maker after each use. eeps to let you know the waffle is done.

IMPORTANT: Contents are hot. Use caution when removing waffle or other food from the plates.

7. Always unplug the appliance from the outlet after baking is complete. Allow to cool before taking off or putting on any parts, and before cleaning. CAUTION: Contents are hot.
8. Please return the appliance to the nearest service facility for repair, adjustment and replacement when both red and green lights flash.

CLEANING:

- Always pull out the main plug before any cleaning operation and allow the appliance to cool down.
- Never dip the appliance into water or hold it under running water.
- Wipe down the casing with a moist cloth only.
- Remove the plates for cleaning after they have cooled down. Use a damp cloth and a non-abrasive cleaning detergent. Rinse and dry thoroughly. The Belgian and flat plates are the only detachable parts that can be cleaned separately.
- Never use sharp or pointed objects or any abrasive cleaning agents for cleaning purposes.

NEVER IMMERSE THE APPLIANCE IN WATER OR OTHER LIQUID.

Limited Warranty

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.