

BRINKMANN®

Candle Glow™
**Garden
Lanterns**

OWNER'S
MANUAL

ASSEMBLY &
OPERATING
INSTRUCTIONS



IMPORTANT SAFETY WARNINGS

WE WANT YOU TO ASSEMBLE AND USE YOUR GARDEN LANTERNS AS SAFELY AS POSSIBLE.

THE PURPOSE OF THIS SAFETY ALERT SYMBOL ⚠

IS TO ATTRACT YOUR ATTENTION TO POSSIBLE HAZARDS AS YOU ASSEMBLE AND USE YOUR LANTERNS.
WHEN YOU SEE THE SAFETY ALERT SYMBOL, PAY CLOSE ATTENTION TO THE INFORMATION WHICH FOLLOWS!

**⚠ READ ALL SAFETY WARNINGS & INSTRUCTIONS CAREFULLY
BEFORE ASSEMBLING AND OPERATING YOUR GARDEN LANTERNS.**

⚠ WARNING

- Proper clearance between garden lanterns and combustible material (bushes, trees, wooden decks, fences, buildings, etc.) or construction should be maintained at all times when lantern is in use. Do not place garden lanterns close to flammable material, under or near shrubbery, tree limbs or roof overhang.
- For household use only. Do not use these garden lanterns for other than their intended purpose.
- In windy weather, remove glass lanterns from stands and place indoors in a safe location to avoid breakage.
- Use caution and use a long match or lighter when lighting candles.
- Do not wear loose clothing or allow hair to hang freely while lighting candles.
- Do not use other substances other than candles in the glass lanterns.
- Due to possible fire hazard, do not leave garden lanterns unattended when in use.
- Do not touch or remove hot wax or burning candles.
- The glass lantern can get VERY HOT and caution must be used when handling glass lantern after use. Never move garden lantern when in use or directly after use when glass lantern contains hot wax.
- Do not store or use garden lanterns near gasoline or other flammable liquids, gases or where flammable vapors may be present.
- Place garden lanterns in an area where children and pets cannot come into contact with unit.
- We advise that a fire extinguisher be on hand. Refer to your local authority to determine proper size and type of fire extinguisher.
- Store garden lanterns out of reach of children, indoors in a dry location when not in use.
- Do not attempt to service or modify garden lanterns other than normal maintenance as explained in "After-Use Safety and Proper Care & Maintenance" sections of this manual. Repairs should be performed by The Brinkmann Corporation only.
- Properly dispose of all packaging material.

USE CAUTION AND COMMON SENSE WHEN USING YOUR GARDEN LANTERNS.

**FAILURE TO ADHERE TO THE SAFETY WARNINGS AND GUIDELINES IN THIS MANUAL
COULD RESULT IN BODILY INJURY OR PROPERTY DAMAGE.**


SAVE THIS MANUAL FOR FUTURE REFERENCE.

Inspect contents of the box to ensure all parts are included and undamaged.

PARTS LIST:

Parts and quantity are dependent on kit purchased.

- ① Wrought Iron Stand
- ② Lantern Holder
- ③ Candle
- ④ Frosted Glass Lantern

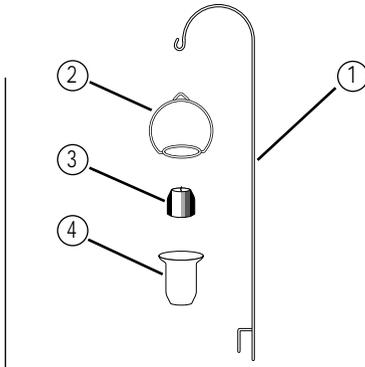

**Also Great For
Hanging Bird
Feeder, Bird House,
Wind Chimes &
Small Planters**

ASSEMBLY & OPERATING INSTRUCTIONS

⚠ PLACE GARDEN LANTERNS OUTDOORS AWAY FROM ROOF OVERHANG, TREE LIMBS OR ANY COMBUSTIBLE MATERIAL. IN WINDY WEATHER, REMOVE GLASS LANTERNS FROM STANDS AND PLACE INDOORS IN A SAFE LOCATION TO AVOID BREAKAGE.

⚠ READ ALL SAFETY WARNINGS & INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND OPERATING YOUR GARDEN LANTERNS.

Step 1

Locate an area of solid ground where you can place your garden lanterns.

Step 2

Insert bottom of wrought iron stand into ground. Step and press down on stabilizer bar to aid in driving stand into ground. Make sure stand is inserted all the way into ground to the top of stabilizer bar.

NOTE: Ground can be softened by soaking area with water first.

Step 3

Once stand is firmly in place, hang lantern holder from hook.

Step 4


Place candle in glass lantern. Insert glass lantern in lantern holder.

Step 5

Carefully light candle with a long match or lighter.

⚠ CAUTION: The glass lantern can get VERY HOT and caution must be used when handling glass lantern after use. Never move garden lantern when in use or directly after use when glass lantern contains hot wax.

READ ALL SAFETY WARNINGS AND OPERATING INSTRUCTIONS PRIOR TO USING YOUR GARDEN LANTERNS.

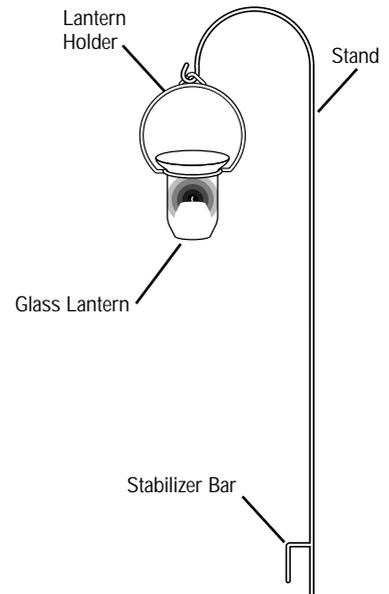


AFTER-USE SAFETY

⚠ WARNING

- Always allow glass lanterns to cool completely before handling.
- Store garden lanterns out of reach of children, indoors in a dry location when not in use.

- Allow glass lanterns to cool, then clean inside and outside by wiping with a damp cloth to minimize accumulation of smoke residue.
- Make sure glass lanterns have completely cooled before applying damp cloth to glass to avoid shattering.
- If rust appears on the stands and lantern holder, clean and buff the affected area with steel wool or fine grit emery cloth. Touch-up with high quality rust resistant paint.
- To maintain the beauty of your garden lanterns, paint the stand and lantern holder with high quality rust resistant paint as necessary.

Proper Care & Maintenance

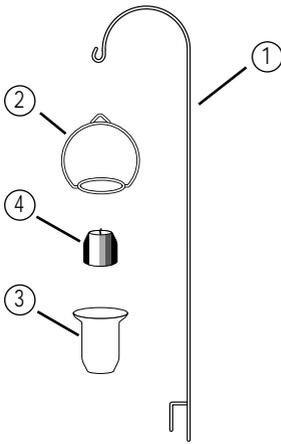

Model No.	
882-0200-2	Garden Lantern Kit with Citronella Candle – 2 Pack
882-0250-2	Garden Lantern Kit with Standard Candle – 2 Pack
882-0200-4	Garden Lantern Kit with Citronella Candle – 4 Pack
882-0250-4	Garden Lantern Kit with Standard Candle – 4 Pack
① 115-0250-0	Wrought Iron Stand
② 115-0251-0	Lantern Holder
③ 119-0251-0	Frosted Glass Lantern
④ 882-0215-0	Standard Candles (Pack of 8)
④ 882-0210-0	Citronella Candles (Pack of 8)

LOOK FOR THESE KITS AND ACCESSORIES AT YOUR LOCAL RETAILER WHERE BRINKMANN LANDSCAPE PRODUCTS ARE SOLD, OR ORDER DIRECT BY CALLING 1-800-468-5252.

ONE YEAR LIMITED WARRANTY

For one year from date of purchase, The Brinkmann Corporation warrants the Brinkmann Candle Glow™ Garden Lanterns against defects due to workmanship or materials to the original purchaser. The Brinkmann Corporation's obligations under this warranty are limited to the following guidelines:

- This warranty does not cover Garden Lanterns that have been altered or damaged due to: normal wear, rust, abuse, improper maintenance, improper use, disassembly of parts or attempted repair by anyone other than an authorized employee of The Brinkmann Corporation.
- This warranty does not cover surface scratches to the finish or staining of glass lantern, which is considered normal wear.
- The Brinkmann Corporation may elect to repair or replace damaged units covered by the terms of this warranty.
- This warranty extends to the original purchaser only and is not transferable or assignable to subsequent purchasers.

The Brinkmann Corporation requires reasonable proof of purchase. Therefore, we strongly recommend that you retain your sales receipt or invoice. To obtain repair or replacement of your Garden Lanterns under the terms of this warranty, please call Customer Service Department at 1-800-527-0717 for a Return Authorization Number and further instructions. **A receipt will be required. A Return Authorization Number must be clearly marked on the outside of the box.** The Brinkmann Corporation will not be responsible for any products forwarded to us without a Return Authorization Number.

EXCEPT AS ABOVE STATED, THE BRINKMANN CORPORATION MAKES NO OTHER EXPRESS WARRANTY.

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE FAILURE OF THE CANDLE GLOW™ GARDEN LANTERNS TO COMPLY WITH THIS WARRANTY OR ANY IMPLIED WARRANTY IS EXCLUDED. CUSTOMER ACKNOWLEDGES THAT THE PURCHASE PRICE CHARGED IS BASED UPON THE LIMITATIONS CONTAINED IN THE WARRANTY SET OUT ABOVE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.