

# IMPORTANT SAFETY INSTRUCTIONS

When using this product, especially when children are present, basic safety precautions should be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING WARNING

1. Never operate the unit if it is not working properly, if it has been damaged or immersed in water.
2. **THIS IS NOT A TOY.** Close adult supervision is necessary when this product is used by, on or near children or people with certain disabilities.
3. Use only new batteries. Never mix old and new batteries.
4. Use this product only for its intended use as described in this manual.
5. This product is designed for styling hair only. **DO NOT** use this product for any other purpose.
6. This appliance is not intended for commercial use.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Never drop or insert any object into an opening.

## FEATURES

- 1 ½ in. (38mm) **ROTATING HEAD**  
Use the rotating hairbrush with your blow dryer to revolutionize your styling process. This styling brush straightens and volumizes without tangling your hair – with superior styling results. Thanks to its two-way rotation the hair can be dried to curl under or out whether you are right-handed or left-handed. To roll the section of hair around the rotating head automatically, press the button for the desired direction (right or left) and hold throughout the blow-drying. To stop rotating, release the button.
- Ergonomic handle for a comfortable hold.
- The brush head is detachable for easy cleaning.



## MAINTENANCE

**CAUTION!** When you have finished using the brush do not put it down on the bristles, as you risk damaging them. Store the brush upright. (Fig. 1)

We advise you to clean the brush regularly to avoid build-up of hair, styling products, etc. Use a comb to remove hair from the brush. Use a dry or very slightly damp cloth for plastic surfaces.

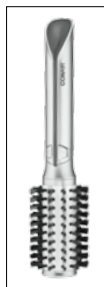


FIG. 1

## INSTRUCTIONS FOR USING BATTERIES

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries at the same time.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon – zinc) or rechargeable (nickel cadmium) batteries.
- Clean the battery compartment by blowing away any debris and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.

## REPLACING THE BATTERIES

Using a pointed object, such as a pen, push the button on the bottom of the handle to remove the battery compartment cover. Insert 4 AA batteries in the compartment.

**NOTE:** If the hairbrush remains unused for a while or if the batteries have run down, remove them from the unit. These precautions will extend the life of the product.

**WARNING:** Only use new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

## RECYCLING RECHARGEABLE AND NON-RECHARGEABLE BATTERIES

Before discarding your unit, please remove the batteries and place them in a container intended for this purpose. Check beforehand that the batteries are fully discharged. For any further information on removing the batteries, please contact Conair.

## SAFETY INSTRUCTIONS

- Store the unit in a dry place.
- Never immerse the unit in water or any other liquid.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Use only accessories recommended by Conair.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

## LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at:  
[www.conair.com/registration](http://www.conair.com/registration)

## SERVICE CENTER

**CONAIR CORPORATION**  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307

©2012 CONAIR CORPORATION  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307  
[www.conair.com](http://www.conair.com)

11PA127017

## PRO styling and volume brush



rotates left and right

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

**CONAIR®**  
Model BCR2

IB-11180