

How to connect a a Furuno M1622 to the NEXUS Server.

SETTINGS:

NEXUS Server:

- [Cxx] =
- C79 = DPT
- C84 = RMB
- C85 = RMC
- C87 = ZDA

