

# Nokia 5300 Xpress Music User Guide

---

9254409  
Issue 1

#### DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION, declares that this RM-147 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the Declaration of Conformity can be found at  
[http://www.nokiausa.com/phones/declaration\\_of\\_conformity/](http://www.nokiausa.com/phones/declaration_of_conformity/).

# CE 0434



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of life. This applies to your device but also to any enhancements marked with this symbol. Do not dispose of these products as unsorted municipal waste. For more information, see product Eco-Declaration or country specific information at [www.nokiausa.com](http://www.nokiausa.com).

PART NO. 9254409, Issue No. 1  
Copyright © 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Visual Radio, Nokia Connecting People, XpressPrint, and Navi are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2006. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

This device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

#### **EXPORT CONTROLS**

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### **FCC/INDUSTRY CANADA NOTICE**

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

## Contents

---

<b>For your safety.....</b>	<b>6</b>	Memory full.....	30
<b>1. General information.....</b>	<b>9</b>	Folders.....	30
Access codes.....	9	Voice messages.....	31
Configuration settings service.....	10	Info messages.....	31
Download content.....	10	Service commands.....	31
Digital rights management.....	10	Delete messages.....	31
<b>2. Get started.....</b>	<b>12</b>	SIM messages.....	32
Install SIM card and battery.....	12	Message settings.....	32
Charge the battery.....	13	<b>7. Phonebook.....</b>	<b>34</b>
Memory card installation.....	13	Search for a contact.....	34
Open the slide phone.....	14	Save names and phone numbers....	34
Switch the phone on and off.....	14	Save details.....	34
Antenna.....	15	Copy or move contacts.....	34
Headset.....	15	Edit contact details.....	35
Phone strap.....	16	Synchronize all.....	35
<b>3. Your phone.....</b>	<b>17</b>	Delete contacts.....	35
Keys and parts.....	17	Business cards.....	35
Standby mode.....	18	Settings.....	36
Indicators and icons.....	19	Groups.....	36
Flight mode.....	20	1-touch dials.....	36
Keypad lock (keyguard).....	20	Info, service, and my numbers.....	36
Functions without a SIM card.....	21	<b>8. Log.....</b>	<b>38</b>
<b>4. Call functions.....</b>	<b>22</b>	<b>9. Settings.....</b>	<b>39</b>
Make a call.....	22	Profiles.....	39
1-touch dialing.....	22	Themes.....	39
Enhanced voice dialing.....	22	Tones.....	39
Answer or decline a call.....	23	Display.....	40
Options during a call.....	23	Time and date.....	40
<b>5. Navigate the menus.....</b>	<b>25</b>	My shortcuts.....	41
<b>6. Messaging.....</b>	<b>26</b>	Connectivity.....	42
Text messages.....	26	Call.....	46
Picture message.....	28	Phone.....	47
Postcards.....	29	Enhancements.....	47
Nokia Xpress audio messaging.....	30	Configuration.....	48
		Security.....	49
		Restore factory settings.....	49

Phone software updates.....	50	Contacts.....	67
<b>10.Operator menu.....</b>	<b>51</b>	Conversation options.....	67
<b>11.Gallery .....</b>	<b>52</b>	Set your availability.....	67
Print images.....	52	Log off service.....	68
Memory card.....	52	<b>16.SIM services.....</b>	<b>69</b>
<b>12.Media .....</b>	<b>54</b>	<b>17.t-zones.....</b>	<b>70</b>
Camera and video.....	54	Set up browsing.....	70
Media player.....	55	Connect to a service.....	70
Music player.....	55	Browse pages.....	71
Radio.....	57	Bookmarks.....	71
Voice recorder.....	58	Appearance settings.....	72
Equalizer.....	59	Security settings.....	72
Stereo widening.....	59	Download settings.....	73
<b>13.Organizer.....</b>	<b>60</b>	t-zones inbox.....	73
Alarm clock.....	60	Cache memory.....	74
Calendar.....	60	Browser security.....	74
To-do list.....	61	<b>18.PC connectivity.....</b>	<b>76</b>
Notes.....	61	Nokia PC Suite.....	76
Calculator.....	61	Packet data, HSCSD, and CSD.....	76
Countdown timer.....	62	Bluetooth.....	76
Stopwatch.....	62	Data communication applications.....	76
<b>14.Games and Applications ..</b>	<b>63</b>	<b>19.Enhancements.....</b>	<b>78</b>
Launch a game.....	63	<b>20.Battery information .....</b>	<b>79</b>
Launch an application.....	63	Charging and discharging.....	79
Application options.....	63	Nokia battery authentication.....	80
Download an application.....	64	<b>Care and maintenance .....</b>	<b>82</b>
<b>15.Instant messaging .....</b>	<b>65</b>	<b>Additional safety</b>	
Register with an IM service.....	65	<b>information.....</b>	<b>83</b>
Login.....	65	<b>Index.....</b>	<b>88</b>
Begin an IM session.....	66		
Receive and reply to messages.....	66		
Return to chat session.....	66		

For your safety

## For your safety

---

Read these simple guidelines. Not following them may be dangerous or illegal.  
Read the complete user guide for further information.



### SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



### ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



### INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



### SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



### SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



### SWITCH OFF WHEN REFUELING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



### SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



### USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



### QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



### ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

## For your safety



### WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



### BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



### CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



### EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

## About your device

The wireless device described in this guide is approved for use on the GSM 850, 1800, and 1900 networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect the privacy and legitimate rights of others.

When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others, including copyrights.



**Warning:** To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless phone use may cause interference or danger.

## Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your

#### For your safety

device may also have been specially configured for your network provider. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging (MMS), browsing, instant messaging, remote synchronization, and content downloading using the browser or MMS, require network support for these technologies.

#### ■ Shared memory

The following features in this device may share memory: gallery, contacts, text messages, multimedia messages, and instant messages, e-mail, calendar, to-do notes, Java™ games and applications, and note application. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java applications may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text messages, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.



## 1. General information

---

Congratulations on your purchase of this Nokia mobile phone. Some of its other features include a calendar, a clock, an alarm clock, a radio, a music player, and a built-in camera.

### ■ Access codes

#### Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. The preset code is 12345. To change the code, and to set the phone to request the code, see "Security," p. 49.

#### PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SIM card against unauthorized use. See "Security," p. 49.

The PIN2 code (4 to 8 digits) may be supplied with the SIM card and is required for some functions.

The module PIN is required to access the information in the security module. See "Security module," p. 74.

The signing PIN is required for the digital signature. See "Digital signature," p. 75.

#### PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) is required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact your local service provider for the codes.

#### Restriction password

The restriction password (4 digits) is required when using the [Call restrictions](#). See "Security," p. 49.

## General information

### ■ Configuration settings service

To use some of the network services, such as mobile Internet services, MMS, Nokia Xpress audio messaging, or remote Internet server synchronization, your phone needs the correct configuration settings. For more information on availability, contact your network operator, service provider, nearest authorized Nokia dealer, or visit the support area on the Nokia Web site, [www.nokiausa.com/support](http://www.nokiausa.com/support).

When you have received the settings as a configuration message, and the settings are not automatically saved and activated, *Configuration settings received* is displayed.

To save the settings, select **Show** > **Save**. If required, enter the PIN code supplied by the service provider.

To discard the received settings, select **Exit** or **Show** > **Discard**.

### ■ Download content

You may be able to download new content, such as themes, tones, and video clips, to the phone (network service dependency). You may also be able to download updates of phone software (network service dependency). See "Phone," p. 47, *Phone updates*.

For the availability of different services, pricing, and fees, contact your service provider.



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

### ■ Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you may be able to access content protected with WMDRM 10, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

## General information

Digital rights management (DRM) protected content comes with an associated activation key that defines your rights to use the content.

If your device has OMA DRM protected content, to back up the content, use the backup feature of Nokia PC Suite.

If your device has WMDRM protected content, both the activation keys and the content will be lost if the device memory is formatted. You may also lose the activation keys and the content in case the files on your device get corrupted. Losing the activation keys or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

## 2. Get started

---

### ■ Install SIM card and battery

Always switch the device off and disconnect the charger before removing the battery.

 
Keep all SIM cards out of the reach of small children.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.


This device is intended for use with BL-5B battery. Always use original Nokia batteries. See "Nokia battery authentication," p. 80.

To install the SIM card, do the following:


1. To remove the back cover of the phone, push the back cover release button (1), and detach the back cover away from the phone (2). Remove the battery as shown (3).

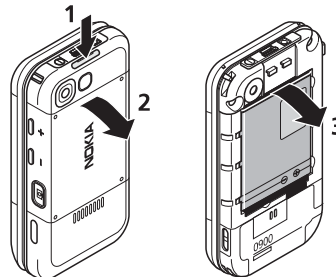

 2. Open the SIM card holder (4), and insert the SIM card properly into the holder (5). Close the SIM card holder (6).

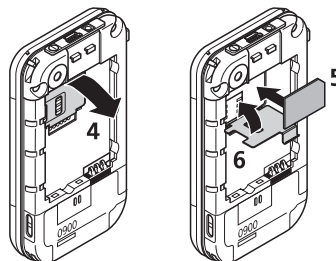

 3. Replace the battery (7). Slide the back cover into its place (8, 9).

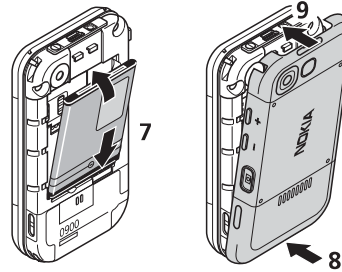

## ■ Charge the battery



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-3 or AC-4 charger.

 
For availability of approved enhancements, please check with your dealer.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Connect the charger to a wall socket and the lead from the charger to the connector on the bottom of your phone.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger used. Charging a BL-5B battery with the AC-3 charger takes approximately 3 hours while the phone is in the standby mode.

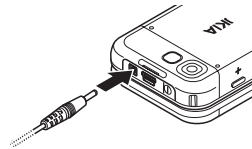

## ■ Memory card installation

Keep all microSD memory cards out of the reach of small children.



 
## Get started

Use only compatible microSD cards with this device. Other memory cards, such as reduced size multimedia cards, do not fit in the microSD card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.

### Insert a microSD card

1. Remove the back cover of the phone.
2. Insert the card into the microSD card slot with the contact surface facing backwards, and press it until it locks into place.
3. Close the back cover of the phone.

Use only microSD cards approved by Nokia for use with this device. Nokia utilizes the approved industry standards for memory cards but not all other brands may function correctly or be fully compatible with this device.

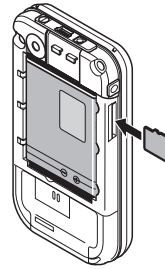

### Remove the microSD card



Important: Do not remove the microSD card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

1. Make sure that no application is currently accessing the microSD memory card.
2. Remove the back cover of the phone.
3. Press the microSD card slightly in to release the lock, and remove the microSD card from the slot.

## ■ Open the slide phone

To open the slide of the phone, push the upper part of the phone up.

## ■ Switch the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key. See "Keys and parts," p. 17. If the phone asks for a PIN or a UPIN code, enter the code (displayed as \*\*\*\*), and select [OK](#).

### Set the time and date

Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date. See "Time and date," p. 40.

### Plug and play service

 
When you switch on your phone for the first time, and the phone is in the standby mode, you may be asked to get the configuration settings from your service provider (network service dependency). Confirm or decline the query. See "[Connect to support](#)," p. 48, and "Configuration settings service," p. 10.

## ■ Antenna

Your device has an internal antenna.



Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.

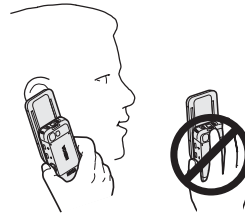

## ■ Headset

The headset in the sales box has been approved by Nokia for use with this device. Always listen to music at a moderate level. Please be advised to pay special attention to volume level in case you connect any other headsets to the device.

Do not connect products that create an output signal, as this may cause damage to the device. Do not connect any voltage source to this connector.

## Get started

 
### Audio adaptor

Use an audio adaptor AD-50 to connect a headphone with a 3.5-mm plug to your phone. If the adaptor is connected to the phone the earpiece of the phone will be disconnected.

Please note that the adaptor does not support a microphone line.

### ■ Phone strap

Thread a strap through the eyelet of the phone as shown in the picture and tighten it.

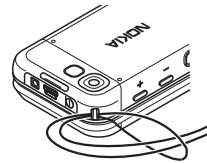




### 3. Your phone

#### ■ Keys and parts

 - Earpiece (1)
- Music player, rewind (2)
- Music player, start, stop (3)
- Enhancements connector (4)
- Music player, fast forward (5)
- Call key (6)
- Left, middle, and right selection keys (7)
- End key (8)
- Scroll keys (9)
- Keypad (10)
- Charger connector (11)
- USB connector (12)
- Power key (13)
- Phone strap eyelet (14)
- Camera lens (15)
- Volume up/ PTT key (16)
- Volume down (17)
- Camera key (18)
- Infrared port (19)
- Selfportrait viewfinder (20)
- Loudspeaker (21)

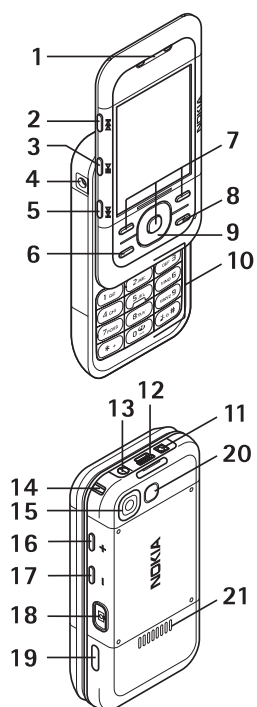

## Your phone

### ■ Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

#### Display

Signal strength of the cellular network (1)

Battery charge status (2)

Indicators (3)

Network name or operator logo (4)

 
Clock (5)

Main screen (6)

Function of left selection key (7) is [Go to](#) or a shortcut to another function. See "Left selection key," p. 41.

Function of middle selection key (8) is [Menu](#).

Function of right selection key (9) is [Phonebk.](#) or a shortcut to another function. See "Right selection key," p. 41. Operator variants may have an operator-specific name.

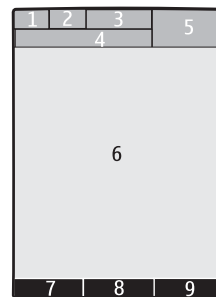

#### Active standby

In the active standby mode there is a list of selected phone features and information on the screen that you can directly access. To switch it on or off, select [Menu](#) > [Settings](#) > [Display](#) > [Active standby](#) > [Active standby mode](#) > [On](#) or [Off](#).

In the standby mode, scroll up or down to activate the navigation in the list, and select [Select](#) or [View](#). Left and right arrows at the beginning and end of a line indicate that further information is available by scrolling left or right. To end the active standby mode, select [Exit](#).

To organize and change the active standby mode, activate the navigation mode, and select [Options](#) and from the available options.

## ■ Indicators and icons


















Your phone has two types of identifiers: indicators and icons.

### Indicators

See "Standby mode," p. 18 for information on indicators.

### Icons

Icons are graphical representations of a specific item or situation. The following list describes each icon.

-  You have unread messages.
-  You have unsent, canceled, or failed messages.
-  The phone registered a missed call.
-  Your phone is connected to the instant messaging service, and the availability status is online or offline.
-  You received one or several instant messages.
-  The keypad is locked.
-  The phone does not ring for an incoming call or text message.
-  The alarm clock is activated.
-  The countdown timer is running.
-  The stopwatch is running.
-  The phone is registered to the GPRS or EGPRS network.
-  A GPRS or EGPRS connection is established.
-  The GPRS or EGPRS connection is suspended (on hold).
-  A Bluetooth connection is active.
-  If you have two phone lines, the second phone line is selected.
-  All incoming calls are forwarded to another number.
-  The loudspeaker is activated, or the music stand is connected to the phone.

 
## Your phone



Calls are limited to a closed user group.




The timed profile is selected.



A headset, hands-free, loopset, or music stand enhancement is connected to the phone.

## ■ Flight mode

You can deactivate all radio frequency functionality and still have access to offline games, calendar, and phone numbers. Use the flight mode in radio sensitive environments—on board aircraft or in hospitals. When the flight mode is active,  is shown.

Select [Menu](#) > [Settings](#) > [Profiles](#) > [Flight](#) > [Activate](#) or [Customize](#).

To deactivate the flight mode, select any other profile.

In the flight mode you can make an emergency call. Enter the emergency number, press the call key, and select Yes when asked Exit flight profile? The phone attempts to make an emergency call.

## ■ Keypad lock (keyguard)

To prevent the keys from being accidentally pressed, close the phone, and select [Lock](#) within 3.5 seconds.

To unlock the keypad, select [Unlock](#) > [Ok](#), or open the phone. If the security keyguard is activated, enter the security code if requested.

To answer a call when the keyguard is on, press the call key or open the phone. When you end or decline the call, the keypad automatically locks.

For [Security keyguard](#), see “Phone,” p. 47.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

## ■ Functions without a SIM card

Several functions of your phone may be used without installing a SIM card (for example, the data transfer with a compatible PC or another compatible device). Some functions appear dimmed in the menus and cannot be used.

For an emergency call, some networks may require that a valid SIM card is properly inserted in the device.

## 4. Call functions

---

### ■ Make a call

1. Push the upper part of the phone up.
2. Enter the phone number, including the area code.

For international calls, press \* twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.

3. To call the number, press the call key.  
To increase the volume in a call, press + and to decrease, press - .
4. To end the call or to cancel the call attempt, press the end key, or close the phone.

To search for a name or phone number that you have saved in [Phonebook](#), see "Search for a contact," p. 34. Press the call key to call the number.

To access the list of dialed numbers, press the call key once in the standby mode.

To call the number, select a number or name, and press the call key.

### ■ 1-touch dialing

Assign a phone number to one of the 1-touch-dialing keys, 2 to 9. See "1-touch dials," p. 36. Call the number in either of the following ways:

- Press a 1-touch-dialing key, then the call key.
- If [1-touch dialing](#) is set to [On](#), press and hold a 1-touch-dialing key until the call begins. See [1-touch dialing](#) in "Call," p. 46.

### ■ Enhanced voice dialing

You can make a phone call by saying the name that is saved in the contact list of the phone. Voice commands are language-dependent. To set the language, see [Recognition lang.](#) in "Phone," p. 47.

### **Make a voice dialing call**



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

1. In the standby mode, press and hold the right selection key, or press and hold the volume down key. A short tone is played, and *Speak now* is displayed.
2. Say the voice command clearly. If the voice recognition is successful, a list with matches is shown. The phone plays the voice command of the match on the top of the list. If the result is not the correct one, scroll to another entry.

Using voice commands to carry out a selected phone function is similar to voice dialing. See *Voice commands* in "My shortcuts," p. 41.

### **■ Answer or decline a call**

To answer an incoming call, press the call key, or open the phone. To end the call, press the end key, or close the phone.

To decline an incoming call, press the end key. To mute the ringing tone, select *Silence*.

### **Call waiting**

To answer the waiting call during an active call (network service dependency), press the call key. The first call is put on hold. To end the active call, press the end key.

To activate the *Call waiting* function, see "Call," p. 46.

### **■ Options during a call**

Many of the options that you can use during a call are network services. For availability, contact your service provider.

During a call, select *Options* and from the following options:

Call options are *Mute* or *Unmute*, *Phonebook*, *Menu*, *Lock keypad*, *Record*, *Voice clarity*, *Loudspeaker* or *Handset*.

Network services options are *Answer* or *Decline*, *Hold* or *Resume*, *New call*, *Add to conference*, *End call*, *End all calls*, and the following:

*Touch tones* — to send tone strings

## Call functions

*Swap* — to switch between the active call and the call on hold

*Transfer calls* — to connect a call on hold to an active call and disconnect yourself

*Conference* — to make a conference call

*Private call* —to discuss privately in a conference call



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.



## 5. Navigate the menus

---

The phone offers you an extensive range of functions, which are grouped into menus.

1. To access the menu, select [Menu](#).

To change the menu view, select [Options](#) > [Main menu view](#) > [List](#), [Grid](#), [Grid with labels](#), or [Tab](#).

To rearrange the menu, scroll to the menu you want to move, and select [Options](#) > [Organize](#) > [Move](#). Scroll to where you want to move the menu, and select [OK](#). To save the change, select [Done](#) > [Yes](#).

2. Scroll through the menu, and select an option (for example, [Settings](#)).
3. If the selected menu contains further submenus, select the one that you want (for example, [Call](#)).
4. If the selected menu contains further submenus, repeat step 3.
5. Select the setting of your choice.
6. To return to the previous menu level, select [Back](#). To exit the menu, select [Exit](#).

## 6. Messaging

---

You can read, write, send, and save text and picture messages, postcards, and voice notes. All messages are organized into folders.

### ■ Text messages

With the short message service (SMS) you can send and receive text messages, and receive messages that can contain pictures (network service dependency).



Before you can send any text or SMS e-mail message, you must save your message center number. See "Message settings," p. 32.

To check SMS e-mail service availability and to subscribe to the service, contact your service provider. To save an e-mail address in *Phonebook*, see "Save details," p. 34.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages will be sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.

An indicator at the top of the display shows the total number of characters left and the number of messages needed for sending. For example, 673/2 means that there are 673 characters left and that the message will be sent as a series of 2 messages.

### Text entry

To enter text (for example, when writing messages), use traditional or predictive text input. When you write text, press and hold **Options** to toggle between traditional text input, indicated by , and predictive text input, indicated by . Not all languages are supported by predictive text input.

The character cases are indicated by **Abc**, **abc**, and **ABC**. To change the character case, press #. To change from the letter to number mode, indicated by **123**, press and hold #, and select *Number mode*. To change from the number to the letter mode, press and hold #.

To set the writing language, select **Options** > *Writing language*.

### Predictive text input

Predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word using the keys, 2 to 9. Press each key only once for one letter.
2. When you finish writing the word and it is correct, to confirm it by adding a space, press 0.

If the word is not correct, press \* repeatedly, and select the word from the list.

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select [Spell](#). Enter the word using traditional text input, and select [Save](#).

To write compound words, enter the first part of the word, and press the scroll key right to confirm it. Write the last part of the word, and confirm the word.

3. Start writing the next word.

### Traditional text input

Press a number key, 1 to 9, repeatedly until the desired character appears. The characters available depend on the selected writing language. If the next letter you want is located on the same key as the present one, wait until the cursor appears and enter the letter. The most common punctuation marks and special characters are available under the number key 1.

### Write and send a message

1. Select [Menu](#) > [Messaging](#) > [Create message](#) > [Text message](#).
2. Enter one or more phone numbers or e-mail addresses in the [To:](#) field. To retrieve a phone number or e-mail address from a memory, select [Add](#).
3. For a SMS e-mail, enter a subject in the [Subject:](#) field.
4. Write your message in the [Message:](#) field.
5. To send the message, select [Send](#). See "Message sending," p. 28.

### Read and reply to a message

1. To view a received message, select [Show](#). To view it later, select [Exit](#).

## Messaging

To read the message later, select [Menu](#) > [Messaging](#) > [Inbox](#).

2. To reply to a message, select [Reply](#) > [Text message](#), [Picture message](#), or [Voice notes](#).
3. Write the reply message.
4. To send the message, select [Send](#). See "Message sending," p. 28.

### ■ Picture message



Note: Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

A multimedia message can contain some attachments.

To check availability and to subscribe to the multimedia messaging service (MMS, network service), contact your service provider. See "Message settings," p. 32.

### Write and send a picture message


The wireless network may limit the size of multimedia messages. If the inserted image exceeds this limit, the device may make it smaller so that it can be sent by MMS.

1. Select [Menu](#) > [Messaging](#) > [Create message](#) > [Picture message](#).
2. Write your message. To add a file, select [Insert](#) and from the options.
3. To view the message before sending it, select [Options](#) > [Preview](#).
4. To send the message, select [Send](#). See "Message sending," p. 28.
5. Enter one or more phone numbers or e-mail addresses in the [To:](#) field. To retrieve a phone number or e-mail address from a memory, select [Add](#).
6. To send the message, select [Send](#). See "Message sending," p. 28.

### Message sending

To send the message, select [Send](#). The phone saves the message in the [Outbox](#) folder, and the sending starts.



Note: When the phone is sending the message, the animated  is shown. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

If an interruption occurs while the message is being sent, the phone tries to resend the message a few times. If these attempts fail, the message remains in the *Outbox* folder. To cancel the sending of the messages in the *Outbox* folder, scroll to the desired message, and select *Options* > *Cancel sending*.

### Read and reply to a message



Important: Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

1. To view a received message, select *Show*. To view it later, select *Exit*.
2. To view the whole message if the received message contains a presentation, select *Play*.  
To view the files in the presentation or the attachments, select *Options* > *Objects* or *Attachments*.
3. To reply to the message, select *Options* > *Reply* > *Text message*, *Picture message*, *Postcard*, *Flash message*, or *Voice notes*.
4. Write the reply message.
5. To send the message, select *Send*. See "Message sending," p. 28.

### ■ Postcards

Before you can use the postcard service you must subscribe to the service. To check the availability, and costs, and to subscribe to the service if available, contact your network operator or service provider.

With the postcard messaging service (network service dependency), create and send postcards that may contain an image and a greeting text. The postcard is sent to the service provider using multimedia messaging. The service provider prints the postcard and sends it to the postal address given with the message. MMS must be activated before this service can be used.

## Messaging

To send a postcard, select [Menu](#) > [Messaging](#) > [Create message](#) > [Postcard](#). Fill in the address, mandatory editor fields are marked by a \*. Scroll to the image field, select [Insert](#) and an image from the gallery, or [New image](#) to insert a recent image; then write your greeting text. To send the message, select [Send](#).

### ■ Nokia Xpress audio messaging

You can use the MMS to create and send an audio message in a convenient way. MMS must be activated before you can use audio messages.

#### Create a message

1. Select [Menu](#) > [Messaging](#) > [Create message](#) > [Voice notes](#). The recorder opens. To use the recorder, see "Voice recorder," p. 58.
2. Speak your message.
3. Enter one or more phone numbers in the [To:](#) field, or select [Add](#) to retrieve a number.
4. To send the message, select [Send](#).

#### Listen to a message

To open a received audio message, select [Play](#); or if more than one message is received, select [Show](#) > [Play](#). To listen to the message later, select [Exit](#).

### ■ Memory full

When you receive a message, and the memory for the messages is full, [Memory full. Unable to receive messages](#). is shown. To first delete old messages, select [OK](#) > [Yes](#) and the folder. Scroll to the desired message, and select [Delete](#). If more messages are to be deleted, select [Mark](#). Mark all the messages you want to delete, and select [Options](#) > [Delete marked](#).

### ■ Folders

The phone saves received messages in the [Inbox](#) folder.

Messages that have not yet been sent are saved in the [Outbox](#) folder.

To set the phone to save the sent messages in the [Sent items](#) folder, see [Save sent messages](#) in "General settings," p. 32.

To edit and send messages that you have written and saved in the [Drafts](#) folder, select [Menu](#) > [Messaging](#) > [Drafts](#).


You can move your messages to the [Saved items](#) folder. To organize your [Saved items](#) subfolders, select [Menu](#) > [Messaging](#) > [Saved items](#). To add a folder, select [Options](#) > [Add folder](#). To delete or rename a folder, scroll to the desired folder, and select [Options](#) > [Delete folder](#) or [Rename folder](#).

Your phone has templates. To create a new template, save a message as a template. To access the template list, select [Menu](#) > [Messaging](#) > [Saved items](#) > [Templates](#).

### ■ Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information contact your service provider.

To call your voice mailbox, select [Menu](#) > [Messaging](#) > [Voice mail](#) > [Listen to voice mails](#). To enter, search for, or edit your voice mailbox number, select [Voice mailbox no.](#)

If supported by the network,  indicates new voice messages. To call your voice mailbox number, select [Listen](#).

### ■ Info messages

You can receive messages on various topics from your service provider (network service dependency). For more information, contact your service provider. Select [Menu](#) > [Messaging](#) > [Info messages](#) and from the available options.

### ■ Service commands

Write and send service requests (USSD commands) to your service provider (such as activation commands for network services). Select [Menu](#) > [Messaging](#) > [Serv. commands](#).

### ■ Delete messages

To delete messages, select [Menu](#) > [Messaging](#) > [Delete messages](#) > [By message](#) to delete single messages, [By folder](#) to delete all messages from a folder, or [All messages](#).

## M e s s a g i n g

### ■ SIM messages

SIM messages are specific text messages that are saved to your SIM card. You can copy or move those messages from the SIM to the phone memory, but not vice versa. To read SIM messages, select [Menu](#) > [Messaging](#) > [Options](#) > [SIM messages](#).

### ■ Message settings

#### General settings

General settings are common for text and multimedia messages.

Select [Menu](#) > [Messaging](#) > [Message settings](#) > [General settings](#) and from the following options:

[Save sent messages](#) > [Yes](#) — to set the phone to save the sent messages in the [Sent items](#) folder

[Overwriting in Sent](#) > [Allowed](#) — to set the phone to overwrite the old sent messages with the new ones when the message memory is full. This setting is shown only if you set [Save sent messages](#) > [Yes](#).

[Font size](#) — to select the font size used in messages

[Graphical smileys](#) > [Yes](#) — to set the phone to replace character-based smileys with graphical ones

#### Text messages

The text message settings affect the sending, receiving, and viewing of text and SMS e-mail messages.

Select [Menu](#) > [Messaging](#) > [Message settings](#) > [Text messages](#) and from the following options:

[Delivery reports](#) > [On](#) — to ask the network to send delivery reports about your messages (network service dependency)

[Message centers](#) > [Add center](#) — to set the phone number and name of the message center that is required for sending text messages. You receive this number from your service provider.

[Msg. center in use](#) — to select the message center in use

[Message validity](#) — to select the length of time for which the network attempts to deliver your message



*Messages sent via* — to select the format of the messages to be sent: *Text*, *Page*, or *Fax* (network service dependency)

*Use packet data* > *Yes* — to set GPRS as the preferred SMS bearer

*Character support* > *Full* — to select all characters in the messages to be sent as viewed. If you select *Reduced*, characters with accents and other marks may be converted to other characters.

*Rep. via same center* > *Yes* — to allow the recipient of your message to send you a reply using your message center (network service dependency)

## **Picture messages**

The message settings affect the sending, receiving, and viewing of picture messages. You may receive the configuration settings for picture messaging as a configuration message. See "Configuration settings service," p. 10. You can also enter the settings manually. See "Configuration," p. 48.

Select *Menu* > *Messaging* > *Message settings* > *Picture messages* and from the following options:

*Delivery reports* > *On* — to ask the network to send delivery reports about your messages (network service dependency)

*Image size (MMS)* — to set the image size in picture messages.

*Default slide timing* — to define the default time between slides in picture messages

*Allow p. msg receptn.* > *Yes* or *No* — to receive or block the picture message. If you select *In home network*, you cannot receive picture messages when outside your home network. The default setting of the picture message service is generally *Yes*. The availability of this menu depends on your phone.

*Incoming pic. msgs.* — to allow the reception of picture messages automatically, manually after being prompted, or to decline the reception. This setting is not shown if *Allow p. msg receptn.* is set to *No*.

*Allow ads* — to receive or decline advertisements. This setting is not shown if *Allow p. msg receptn.* is set to *No*, or *Incoming pic. msgs.* is set to *Reject*.


*Configuration sett.* > *Configuration* — Only the configurations that support picture messaging are shown. Select a service provider, *Default*, or *Personal config.* for picture messaging. Select *Account* and a MMS account contained in the active configuration settings.

## 7. Phonebook

---

You can save names and phone numbers (contacts) in the phone memory and in the SIM card memory.

The phone memory may save contacts with additional details, such as various phone numbers and text items. You can also save an image for a limited number of contacts.

The SIM card memory can save names with one phone number attached to them. The contacts saved in the SIM card memory are indicated by .

### ■ Search for a contact


Select [Menu](#) > [Phonebook](#) > [Names](#). Scroll through the list of contacts, or enter the first characters of the name you are searching for.

### ■ Save names and phone numbers

Names and numbers are saved in the used memory. To save a name and phone number, select [Menu](#) > [Phonebook](#) > [Names](#) > [Options](#) > [Add new contact](#).

### ■ Save details

In the phone memory you can save different types of phone numbers, a tone or a video clip, and short text items for a contact.

The first number you save is automatically set as the default number and is indicated with a frame around the number type indicator (for example, .

When you select a name from contacts (for example, to make a call), the default number is used unless you select another number.

Make sure that the memory in use is [Phone](#) or [Phone and SIM](#). See "Settings," p. 36.

Search for the contact to which you want to add a detail, and select [Details](#) > [Options](#) > [Add detail](#). Select from the options available.

### ■ Copy or move contacts

To copy or move a contact from the phone contact memory to the SIM card memory, or vice versa, select [Menu](#) > [Phonebook](#) > [Names](#). Select the contact to copy or move and [Options](#) > [Copy contact](#) or [Move contact](#).

To copy or move several contacts, select the first contact to copy or move and [Options](#) > [Mark](#). Mark the other contacts, and select [Options](#) > [Copy marked](#) or [Move marked](#).

To copy or move all contacts from the phone contact memory to the SIM card memory, or vice versa, select [Menu](#) > [Phonebook](#) > [Copy contacts](#) or [Move contacts](#).

The SIM card memory can save names with one phone number attached to them.

## ■ Edit contact details

Search for the contact, and select [Details](#). To edit a name, number, or text item or to change the image, select [Options](#) > [Edit](#). To change the number type, scroll to the desired number, and select [Options](#) > [Change type](#). To set the selected number as the default number, select [Set as default](#).

## ■ Synchronize all

Synchronize your calendar, contacts data, and notes with a remote Internet server (network service dependency). For details see "Synchronize from a server," p. 45.

## ■ Delete contacts

To delete all the contacts and the details attached to them from the phone or SIM card memory, select [Menu](#) > [Phonebook](#) > [Del. all contacts](#) > [From phone memory](#) or [From SIM card](#).

To delete a contact, search for the desired contact, and select [Options](#) > [Delete contact](#).

To delete a number, text item, or an image attached to the contact, search for the contact, and select [Details](#). Scroll to the desired detail, and select [Options](#) > [Delete](#) and from the options available.

## ■ Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact whose information you want to send, and select [Details](#) > [Options](#) > [Send business card](#).

## Phonebook

When you have received a business card, select [Show](#) > [Save](#) to save the business card in the phone memory. To discard the business card, select [Exit](#) > [Yes](#).

### ■ Settings

Select [Menu](#) > [Phonebook](#) > [Settings](#) and from the following options:

[Memory in use](#) — to select the SIM card or phone memory for your contacts.

Select [Phone and SIM](#) to recall names and numbers from both memories. In that case, when you save names and numbers, they are saved in the phone memory.

[Phonebook view](#) — to select how the names and numbers in [Phonebook](#) are displayed

[Name display](#) — to select whether the contact's first or last name is displayed first

[Font size](#) — to set the font size for the list of contacts

[Memory status](#) — to view the free and used memory capacity

### ■ Groups

Select [Menu](#) > [Phonebook](#) > [Groups](#) to arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images.

### ■ 1-touch dials

To assign a number to a 1-touch-dialing key, select [Menu](#) > [Phonebook](#) > [1-touch dialing](#), and scroll to the 1-touch-dialing number that you want.

Select [Assign](#), or if a number has already been assigned to the key, select [Options](#) > [Change](#). Select [Find](#) and the contact you want to assign. If the [1-touch dialing](#) function is off, the phone asks whether you want to activate it. See also [1-touch dialing](#) in "Call," p. 46.

To make a call using the 1-touch-dialing keys, see "1-touch dialing," p. 22.

### ■ Info, service, and my numbers

Select [Menu](#) > [Phonebook](#) and from one of these submenus:

[Info numbers](#) — to call the information numbers of your service provider if the numbers are included on your SIM card (network service dependency)

[Service numbers](#) — to call the service numbers of your service provider if the numbers are included on your SIM card (network service dependency)

## Phonebook

[Mynumbers](#) — to view the phone numbers assigned to your SIM card, if the numbers are included on your SIM card

L o g

## 8. Log

---

The phone registers your missed, received, and dialed calls if the network supports it and the phone is switched on and within the network service area.

To view the information on your calls, select [Menu > Log > Missed calls](#), [Received calls](#), or [Dialed numbers](#). To view your recent missed and received calls and the dialed numbers chronologically, select [Call log](#). To view the contacts to whom you most recently sent messages, select [Msg. recipients](#).

To view the approximate information on your recent communications, select [Menu > Log > Call timers](#), [Data counter](#), or [Pack. data timer](#).

To view how many text and multimedia messages you have sent and received, select [Menu > Log > Message log](#).



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

Some timers may be reset during service or software upgrades.

## 9. Settings

---

Use this menu to set or change your profiles, themes, tone settings, personal shortcuts, time and date settings, call settings, phone settings, main display settings, mini display settings, enhancement settings, configuration settings, security settings, and to restore factory settings.

### ■ Profiles

Your phone has various setting groups called profiles, for which you can customize the phone tones for different events and environments.

Select [Menu](#) > [Settings](#) > [Profiles](#), the desired profile and from the following options:

[Activate](#) — to activate the selected profile

[Customize](#) — to personalize the profile. Select the setting you want to change, and make the changes.

[Timed](#) — to set the profile to be active until a certain time (up to 24 hours) and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active.

### ■ Themes

A theme contains elements for personalizing your phone.

Select [Menu](#) > [Settings](#) > [Themes](#) and from the following options:

[Select theme](#) — to set a theme. A list of folders in [Gallery](#) opens. Open the [Themes](#) folder, and select a theme.

[Theme downloads](#) — to open a list of links to download more themes

### ■ Tones

You can change the tone settings of the selected active profile.

Select [Menu](#) > [Settings](#) > [Tones](#). You can find the same settings in the [Profiles](#) menu. See [Customize](#) in "Profiles," p. 39.

To set the phone to ring only for calls from phone numbers that belong to a selected caller group, select [Alert for](#). Scroll to the caller group you want or [All calls](#), and select [Mark](#).

## Settings

Select [Options](#) > [Save](#) to save the settings or [Cancel](#) to leave the settings unchanged.

If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

## ■ Display

Select [Menu](#) > [Settings](#) > [Display](#) and from the available options:

[Wallpaper](#) — to add the background image in the standby mode

[Active standby](#) — to switch the active standby mode on or off and to organize and personalize the active standby mode.

[Standby font color](#) — to select the color for the texts in the standby mode

[Navigation key icons](#) — to display the icons of the current navigation key shortcuts in the standby mode when active standby is off

[Slide animation](#) — to set your phone to display an animation and sound a tone when you open and close the phone, depending on the theme

[Screen saver](#) > [On](#) — to set your phone to display a screen saver. To download more screen savers, select [Graphic downloads](#). To set the time after which the screen saver is activated, select [Time-out](#).

[Power saver](#) — to save some battery power. The date and a digital clock are displayed when no function of the phone is used for a certain time.

[Font size](#) — to set the font size for messaging, contacts, and web pages

[Operator logo](#) — to set your phone to display or hide the operator logo.

[Cell info display](#) > [On](#) — to display the cell identity, if available from the network

## ■ Time and date

To change the time, time zone, and date settings, select [Menu](#) > [Settings](#) > [Time and date](#) > [Time](#), [Date](#), or [Auto-update of time](#) (network service dependency).

When traveling to a different time zone, select [Menu](#) > [Settings](#) > [Time and date](#) > [Time](#) > [Time zone](#) and the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich/London (UK).



## ■ My shortcuts

With personal shortcuts you get quick access to often used functions of the phone.

### Left selection key

To select a function from the list, select [Menu](#) > [Settings](#) > [My shortcuts](#) > [Left selection key](#).

If the left selection key is [Go to](#) to activate a function, in the standby mode, select [Go to](#) > [Options](#) and from the following options:

[Select options](#) — to add a function to the shortcut list or to remove one

[Organize](#) — to rearrange the functions on your personal shortcut list

### Right selection key


To select a function from the list, select [Menu](#) > [Settings](#) > [My shortcuts](#) > [Right selection key](#).

### Navigation key

To assign other phone functions from a predefined list to the navigation key (scroll key), select [Menu](#) > [Settings](#) > [My shortcuts](#) > [Navigation key](#).

### Voice commands

To call contacts and carry out phone functions, say the voice commands. Voice commands are language-dependent. To set the language, see [Recognition lang.](#) in "Phone," p. 47.

To select the phone functions to activate with a voice commands, select [Menu](#) > [Settings](#) > [My shortcuts](#) > [Voice commands](#) and a folder. Scroll to a function.  indicates that the voice tag is activated. To activate the voice tag, select [Add](#). To play the activated voice command, select [Play](#). To use voice commands, see "Enhanced voice dialing," p. 22.

To manage the voice commands, scroll to a phone function, and select from the following options:

[Edit](#) or [Remove](#) — to change or deactivate the voice command of the selected function

## Settings

[Add all](#) or [Remove all](#) — to activate or deactivate voice commands to all functions in the voice commands list

## ■ Connectivity

You can connect the phone to a compatible device using a Bluetooth wireless technology, infrared, or a USB data cable connection. You can also define the settings for EGPRS dial-up connections.

### Bluetooth wireless technology

This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: generic access, network access, generic object exchange, hands-free, headset, object push, file transfer, dial-up networking, SIM access, and serial port. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.


There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features using Bluetooth technology or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters (32 feet). Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of-sight, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

### Set up a Bluetooth connection

Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) and from the following options:

[Bluetooth](#) > [On](#) or [Off](#) — to activate or deactivate the Bluetooth function.  indicates that Bluetooth is activated.

[Search audio enhanc.](#) — to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.

[Paired devices](#) — to search for any Bluetooth device in range. Select [New](#) to list any Bluetooth device in range. Select a device and [Pair](#). Enter an agreed Bluetooth passcode of the device (up to 16 characters) to pair (associate) the

device to your phone. You must only give this passcode when you connect to the device for the first time. Your phone connects to the device, and you can start data transfer.

### Bluetooth wireless connection

Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#). To check which Bluetooth connection is currently active, select [Active devices](#). To view a list of Bluetooth devices that are currently paired with the phone, select [Paired devices](#).

### Bluetooth settings

To define how your phone is shown to other Bluetooth devices, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [My phone's visibility](#) or [My phone's name](#).

If you are concerned about security, turn off the Bluetooth function, or set [My phone's visibility](#) to [Hidden](#). Always accept only Bluetooth communication from others with whom you agree.

### Infrared

You can set up the phone to send and receive data through its infrared (IR) port to or from a IRDA compatible phone or data device.


Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices. Infrared devices are Class 1 laser products.


When sending or receiving data, ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.

To activate or deactivate the IR port of your phone, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Infrared](#).

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is cancelled and must be started again.

### IR connection indicator

When  is shown continuously, the IR connection is activated, and your phone is ready to send or receive data through its IR port.

When  blinks, your phone is trying to connect to the other device, or a connection has been lost.

## Settings

### Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an Internet protocol (IP)-based network.

To define how to use the service, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Packet data](#) > [Packet data conn.](#) and from the following options:

[When needed](#) — to set the packet data connection to established when an application needs it. The connection will be closed when the application is terminated.

[Always online](#) — to set the phone to automatically connect to a packet data network when you switch the phone on

### **Modem settings**

You can connect the phone using Bluetooth wireless technology or USB data cable connection to a compatible PC and use the phone as a modem to enable GPRS connectivity from the PC.

To define the settings for connections from your PC, select [Menu](#) > [Settings](#) > [Connectivity](#) > [Packet data](#) > [Packet data settings](#) > [Active access point](#), and activate the access point you want to use. Select [Edit active access pt.](#) > [Packet data acc. pt.](#), enter a name to change the access point settings, and select [OK](#). Select [Packet data acc. pt.](#), enter the access point name (APN) to establish a connection to an network, and select [OK](#).

You can also set the EGPRS dial-up service settings (access point name) on your PC using the Nokia Modem Options software. See "Nokia PC Suite," p. 76. If you have set the settings both on your PC and on your phone, the PC settings are used.

### Data transfer

Synchronize your calendar, contacts data, and notes with another compatible device (for example, a mobile phone), a compatible PC, or a remote Internet server (network service dependency).

Your phone allows data transfer with a compatible PC or another compatible device when using the phone without a SIM card.

#### Transfer contact list

To copy or synchronize data from your phone, the name of the device and the settings must be in the list of transfer contacts. If you receive data from another device (for example, a compatible mobile phone), the corresponding transfer

contact is automatically added to the list, using the contact data from the other device. *Server sync* and *PC synchronization* are the original items in the list.

To add a new transfer contact to the list (for example, a mobile phone), select *Menu > Settings > Connectivity > Data transfer > Options > Add transfer contact > Phone synchronization* or *Phone copy*, and enter the settings according to the transfer type.

To edit the copy and synchronize settings, select a contact from the transfer contact list and *Options > Edit*.

To delete a transfer contact, select it from the transfer contact list and *Options > Delete*.

### Data transfer with a compatible device

For synchronization use Bluetooth wireless technology or a cable connection. The other device must be activated for receiving data.

To start data transfer, select *Menu > Settings > Connectivity > Data transfer* and the transfer contact from the list other than *Server sync* or *PC synchronization*. According to the settings, the selected data is copied or synchronized.

### Synchronize from a compatible PC

To synchronize data from calendar, notes, and contacts, install the Nokia PC Suite software on the PC. Use Bluetooth wireless technology or a USB data cable for the synchronization, and start the synchronization from the PC.

### Synchronize from a server

To use a remote Internet server, subscribe to a synchronization service. For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message. See "Configuration settings service," p. 10 and "Configuration," p. 48.

To start the synchronization from your phone, select *Menu > Settings > Connectivity > Data transfer > Server sync*. Depending on the settings, select *Initializing syn-chronization* or *Initializing copy*.

Synchronizing for the first time or after an interrupted synchronization may take up to 30 minutes to complete.

### USB data cable

You can use the USB data cable to transfer data between the phone and a compatible PC or a printer supporting PictBridge. You can also use the USB data cable with Nokia PC Suite.

## Settings

To activate the phone for data transfer or image printing, connect the data cable. Confirm *USB data cable connected. Select mode.*, and select from the following options:

*Nokia mode* — to use the cable for PC Suite

*Music sync* — to use the phone with a PictBridge compatible printer or with your compatible PC

*Data storage* — to connect to a PC that does not have Nokia software and use the phone as a data storage device

To change the USB mode, select *Menu > Settings > Connectivity > USB data cable > Nokia mode, Printing, or Data storage.*

## ■ Call

Select *Menu > Settings > Call* and from the following options:

*Call forwarding* — to forward your incoming calls (network service dependency). You may not be able to forward your calls if some call restriction functions are active. See *Call restrictions* in "Security," p. 49.

*Voice clarity > Active* — to enhance speech intelligibility especially in noisy environments

*Anykey answer > On* — to answer an incoming call by briefly pressing any key, except the power key, the camera key, the left and right selection keys, or the end key

*Automatic redial > On* — to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt

*1-touch dialing > On* — to dial the names and phone numbers assigned to the 1-touch-dialing keys, 2 to 9, by pressing and holding the corresponding number key

*Call waiting > Activate* — to have the network notify you of an incoming call while you have a call in progress (network service dependency). See "Call waiting," p. 23.

*Summary after call > On* — to briefly display the approximate duration and cost (network service dependency) of the call after each call

*Send my caller ID > Yes* — to show your phone number to the person you are calling (network service dependency). To use the setting agreed upon with your service provider, select *Set by network.*

*Outgoing call line* — to select the phone line 1 or 2 for making calls if supported by your SIM card (network service dependency).

*Slide call handling* — to set the phone to answer calls when you open the phone and to end calls when you close the phone

## ■ Phone

Select **Menu** > *Settings* > *Phone* and from the following options:

*Language settings* — To set the display language of your phone, select *Phone language*. *Automatic* selects the language according to the information on the SIM card. To select the USIM card language, select *SIM language*. To set a language for the voice playback, select *Recognition lang.*. See "Enhanced voice dialing," p. 22 and *Voice commands* in "My shortcuts," p. 41.

*Security keyguard* — to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select *On*.

*Automatic keyguard* — to lock the keypad automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used. Select *On*, and set the time.

*Welcome note* — to write the note that is shown when the phone is switched on

*Flight query* > *On*— The phone asks every time when it is switched on whether the flight profile shall be used. With flight profile all radio connections are switched off. The flight profile should be used in areas sensitive to radio emissions.

*Phone updates* — to receive phone software updates from your service provider (network service dependency). This option may not be available, depending on your phone. See "Phone software updates," p. 50.

*Operator selection* > *Automatic* — to set the phone to automatically select one of the cellular networks available in your area. With *Manual* you can select a network that has a roaming agreement with your service provider.

*Confirm SIM actions* — See "SIM services," p. 69.

*Help text activation* — to select whether the phone shows help texts

*Start-up tone* > *On*— The phone plays a tone when it is switched on.

## ■ Enhancements

This menu or the following options are shown only if the phone is or has been connected to a compatible mobile enhancement.

## Settings

Select **Menu** > **Settings** > **Enhancements**. Select an enhancement, and depending on the enhancement, from the following options:

**Default profile** — to select the profile that you want to be automatically activated when you connect to the selected enhancement

**Automatic answer** — to set the phone to answer an incoming call automatically after 5 seconds. If **Incoming call alert** is set to **Beep once** or **Off**, automatic answer is off.

**Lights** — to set the lights permanently **On**. Select **Automatic** to set the lights on for 15 seconds after a key press.

**TTY/TDD** > **Use TTY** > **Yes** — to use the text phone settings instead of headset or loopset settings

## ■ Configuration

You can configure your phone with settings that are required for certain services to function correctly. Your service provider may also send you these settings. See "Configuration settings service," p. 10.

Select **Menu** > **Settings** > **Configuration** and from the following options:

**Default config. sett.** — to view the service providers saved in the phone. To set the configuration settings of the service provider as default settings, select **Options** > **Set as default**.

**Activ. def. in all apps.** — to activate the default configuration settings for supported applications

**Preferred access pt.** — to view the saved access points. Scroll to an access point, and select **Options** > **Details** to view the name of the service provider, data bearer, and packet data access point or GSM dial-up number.

**Connect to support** — to download the configuration settings from your service provider

**Device manager sett.** — to allow or prevent the phone from receiving phone software updates. This option may not be available, depending on your phone. See "Phone software updates," p. 50.

**Personal config. sett.** — to add new personal accounts for various services manually and to activate or delete them. To add a new personal account if you have not added any, select **Add new**; otherwise, select **Options** > **Add new**. Select the service type, and select and enter each of the required parameters. The parameters differ according to the selected service type. To delete or activate a personal account, scroll to it, and select **Options** > **Delete** or **Activate**.



## ■ Security

When security features that restrict calls are in use (such as call restrictions, closed user group, and fixed dialing) calls still may be possible to the official emergency number programmed into your device.

Select **Menu** > **Settings** > **Security** and from the following options:

**PIN code request** and **UPIN code request** — to set the phone to ask for your PIN or UPIN code every time the phone is switched on. Some SIM cards do not allow the code request to be turned off.

**Call restrictions** — to restrict incoming calls to and outgoing calls from your phone (network service dependency). A restriction password is required.

**Fixed dialing** — to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card. When the fixed dialing is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message center number must be included in the fixed dialing list (network service dependency).

**Closed user group** — to specify a group of people whom you can call and who can call you (network service dependency)

**Security level** > **Phone** — to set the phone to ask for the security code whenever a new SIM card is inserted into the phone. If you select **Memory**, the phone asks for the security code when the SIM card memory is selected, and you want to change the memory in use.

**Access codes** — to change the security code, PIN code, PIN2 code, or restriction password

**Code in use** — to select whether the PIN code should be active

**PIN2 code request** — to select whether the PIN2 code is required when using a specific phone feature which is protected by the PIN2 code. Some SIM cards do not allow the code request to be turned off.

**Authority certificates** or **User certificates** — to view the list of the authority or user certificates downloaded into your phone. See "Certificates," p. 74.

**Security module sett.** — to view *Secur. module details*, activate **Module PIN request**, or change the module PIN and signing PIN. See also "Access codes," p. 9.

## ■ Restore factory settings

To reset some of the menu settings to their original values, select **Menu** > **Settings** > **Rest. factory sett.**. Enter the security code. The names and phone numbers saved in *Phonebook* are not deleted.

## Settings

### ■ Phone software updates

Your service provider may send phone software updates over the air directly to your device (network service dependency). This option may not be available, depending on your phone.



Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the update is completed and the device is restarted. Be sure to backup data before accepting a software update.

### Settings

To allow or disallow phone software updates, select [Menu](#) > [Settings](#) > [Configuration](#) > [Device manager sett.](#) >

[Serv. softw. updates](#) and following options:

[Always allow](#) — to perform all software downloads and updates automatically

[Always reject](#) — to decline all software updates

[Confirm first](#) — to perform software downloads and updates only after your confirmation (default setting)

### Request a software update

Select [Menu](#) > [Settings](#) > [Phone](#) > [Phone updates](#) to request available phone software updates from your service provider. Select [Current softw. details](#) to display the current software version and check whether an update is needed. Select [Downl. phone softw.](#) to download and install a phone software update. Follow the instructions on the display.

### Install a software update

Select [Install softw. update](#) to start the installation, when the installation was cancelled after the download.

The software update may take several minutes. If there are problems with the installation, contact your service provider.

## 10. Operator menu

---

This menu lets you access a portal to services provided by your network operator. The name and the icon depend on the operator. For more information contact your network operator. The operator can update this menu with a service message. For more information, see "t-zones inbox," p. 73.

## 11. Gallery

---

In this menu you can manage images, video clips, music files, themes, graphics, tones, recordings, and received files. These files are stored in the phone memory or an attached microSD memory card and may be arranged in folders.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

To see the list of folders, select [Menu](#) > [Fun & Apps](#) > [Gallery](#).

To see the available options of a folder, select a folder and [Options](#).

To view the list of files in a folder, select a folder and [Open](#).

To see the available options of a file, select a file and [Options](#).

To view the folders of the memory card when moving a file, scroll to the memory card, and press the scroll key right.

### ■ Print images

XpressPrint

Your device supports Nokia XPressPrint. To connect it to a compatible printer use a data cable or send the image via Bluetooth to a printer supporting Bluetooth technology. See "Connectivity," p. 42.

You can print images that are in the jpg format. The images taken with the camera are automatically saved in the jpg format.

Select the image you want to print and [Options](#) > [Print](#).

### ■ Memory card

Keep all memory cards out of the reach of small children.


You can use the microSD memory card to store your multimedia files such as video clips, music tracks, and sound files, images, and messaging data, and to back up information from phone memory.

Some of the folders in [Gallery](#) with content that the phone use (for example, Themes) may be stored on the memory card.

To insert and remove the microSD memory card see "Insert a microSD card," p. 14 and "Remove the microSD card," p. 14.

### **Format the memory card**

When a memory card is formatted, all data on the card is permanently lost. Some memory cards are supplied preformatted and others require formatting. Consult your retailer to find out if you must format the memory card before you can use it.

To format a memory card, select **Menu > Fun & Apps > Gallery** or **Games & Apps**, the memory card folder , and **Options > Format memory card > Yes**.

When formatting is complete, enter a name for the memory card.

### **Lock the memory card**

To set a password to lock your memory card to help prevent unauthorized use, select **Options > Set password**. The password can be up to eight characters long.

The password is stored in your phone and you do not have to enter it again while you are using the memory card on the same phone. If you want to use the memory card on another phone, you are asked for the password. To delete the password, select **Options > Delete password**.

### **Check memory consumption**

To check the memory consumption of different data groups and the available memory for installing new applications or software on your memory card, select **Options > Details**.

## 12. Media

---

When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others.

 
### ■ Camera and video

You can take images or record video clips with the built-in camera.

#### Take an image

To use the still image function, press the camera key in the standby mode, select [Menu](#) > [Fun Et Apps](#) > [Media](#) > [Camera](#), or if the video function is on, scroll left or right.

To take an image in landscape format, hold the phone in a horizontal position. To zoom in and out in the camera mode, press the scroll key up and down or the volume keys.

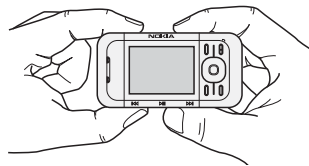

To take an image, select [Capture](#), or press the camera key. The phone saves the images on the memory card (if installed).

Select [Options](#) to set [Night mode on](#) if the lighting is dim, [Self-timer on](#) to activate the self-timer, or [Img. sequence on](#) to take images in a fast sequence. With the highest image size setting, three images are taken in a sequence, with other size settings, five images are taken.

Select [Options](#) > [Settings](#) > [Image preview time](#) and a preview time to display the taken images on the display. During the preview time, select [Back](#) to take another image or [Send](#) to send the image as a picture message.

Your device supports an image capture resolution of 1024 x 1280 pixels. The image resolution in these materials may appear different.

#### Record a video clip

To have the video function, press and hold the camera key in the standby mode, and select [Menu](#) > [Fun Et Apps](#) > [Media](#) > [Video](#), or if the camera function is on, scroll left or right. To start the video recording, select [Record](#). To pause the

recording, select [Pause](#); to resume the recording, select [Continue](#); to stop the recording, select [Stop](#). The phone saves the images on the memory card.

### **Camera and video options**

To use a filter, select [Options](#) > [Effects](#) > [Normal](#) > [False colors](#), [Grayscale](#), [Sepia](#), [Negative](#), or [Solarize](#).

To change the camera and video settings, select [Options](#) > [Settings](#).

### **■ Media player**

With the media player you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service dependency).

Select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Media player](#) > [Open gallery](#), [Bookmarks](#), or [Go to address](#) to select or download media.

Select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Media player](#) > [FF/Rew interval](#) to set the step width for fast forward or rewind.

### **Configuration for a streaming service**

You may receive the configuration settings required for streaming as a configuration message from the service provider. See "Configuration settings service," p. 10. You can also enter the settings manually. See "Configuration," p. 48. To activate the settings, do the following:

1. Select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Media player](#) > [Streaming settings](#) > [Configuration](#).
2. Select a service provider, [Default](#), or [Personal config](#) for streaming.
3. Select [Account](#) and a streaming service account contained in the active configuration settings.

### **■ Music player**

Your phone includes a music player for listening to music tracks, or other MP3, AAC, AAC+, and enhanced AAC+ sound files that you have downloaded from the Web or transferred to the phone with the Nokia Audio Manager application, which is part of Nokia PC Suite. See "Nokia PC Suite," p. 76.

## Media

Music files stored in the music folder in the phone memory or on the memory card will automatically be detected and added to the music library during the startup of the phone.

To open the music player, select [Menu](#) > [Music player](#).

### Playing the music tracks



Warning! Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

Operate the music player with the music player keys on the phone or with the scroll keys.

To start playing, press **▶||**.

To adjust the volume level, use the volume keys on the side of the phone.

To pause the playing, press **▶||**.

To rewind the current track, press and hold **◀◀**. To fast forward the current track, press and hold **▶▶**. Release the key at the position you want to continue the music playback.

To skip to the next track, press **▶▶▶**. To skip to the beginning of the previous track, press **◀◀◀**.

To close the music player and to continue music playback in the background, press the end key.

To stop the music player, press and hold the end key.



**Note:** While the music player is open, the middle selection key and the 4-way scroll key can also be used to control the music player.

### Music player options

Select from the following options:

[Show tracks](#) — View all available tracks of the active track list and play the desired track. To play a track, scroll to the desired track, and select [Play](#).

[Music library](#) — View all available tracks ordered according to [Artists](#), [Albums](#), [Genres](#), [Composers](#), or [Track lists](#). Select [Update library](#) to refresh the lists. Track lists generated with the Nokia Music Manager are found under [Track lists](#) > [My track lists](#)

[Play options](#) — Select [Random](#) to play the tracks on the track list in random order. Select [Repeat](#) to play the current track or the entire track list repeatedly.



*Media equalizer* — to select or define an equalizer setting. See “Equalizer,” p. 59.

*Add to Favorites* — to add the current track to the favorite track list

*Play via Bluetooth* — to connect and play the tracks on an audio accessory using Bluetooth technology

*Send* — to send the current track by a multimedia message or using Bluetooth technology

*Web page* — to access a Web page associated with the currently played track.

*Music downloads* — to connect to a Web service.

*Memory status* — to view the free and used memory capacity




 
## ■ Radio

The FM radio depends on an antenna other than the wireless device's antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.







Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.


 
Select *Menu* > *Fun & Apps* > *Media* > *Radio*.

To use the graphical keys , , , or  on the display, scroll left or right to the desired key, and select it.

### Save radio frequencies

1. To start the search, select and hold  or . To change the radio frequency in 0.05 MHz steps, briefly press  or .
2. To save a frequency to a memory location, 1 to 9, press and hold the corresponding number key. To save a frequency to a memory location from 10 to 20, press briefly 1 or 2, and press and hold the desired number key, 0 to 9.
3. Enter the name of the radio station.

### Listen to the radio

Select *Menu* > *Fun & Apps* > *Media* > *Radio*. To scroll to the desired frequency, select  or , or press the headset key. To select a radio station, briefly press the corresponding number keys. To adjust the volume, press the volume keys.

## Media

Select from the following options:

[Turn off](#) — to turn off the radio

[Save station](#) — to save a new station (shown if a new station is detected)

[Loudspeaker](#) or [Headset](#) — to listen to the radio using the loudspeakers or headset.

[Mono output](#) or [Stereo output](#) — to listen to the radio in monophonic sound or in stereo

[Stations](#) — to select the list of saved stations. To delete or rename a station, scroll to the desired station, and select [Options](#) > [Delete station](#), or [Rename](#). Select [Visual service ID](#) to enter a service ID given by the visual radio service provider (network service dependency)

[Search all stations](#) — to search for new radio stations

[Set frequency](#) — to enter the frequency of the desired radio station

[Station directory](#) — to access a Web site with a list of radio stations

[Enable visual service](#) > [Automatically](#) — to set whether [Visual Radio](#) (network service dependency) starts automatically when you turn on the radio.

Some radio stations may send text or graphical information that you can view using the Visual Radio application. To check the availability and costs, contact your service provider.

When an application using a packet data or HSCSD connection is sending or receiving data, it may interfere with the radio.




## ■ Voice recorder


You can record pieces of speech, sound, or an active call, and save them in [Gallery](#). This is useful when recording a name and phone number to write down later.


The recorder cannot be used when a data call or GPRS connection is active.


## Record sound

1. Select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Voice recorder](#).

To use the graphical keys , , or  on the display, scroll left or right to the desired key, and select it.

2. To start the recording, select . To start the recording during a call, select [Options](#) > [Record](#). While recording a call, all parties to the call hear a faint

beeping. When recording a call, hold the phone in the normal position near to your ear. To pause the recording, select .

3. To end the recording, select . The recording is saved in [Gallery](#) > [Recordings](#).

To listen to the latest recording, select [Options](#) > [Play last recorded](#).

To send the last recording, select [Options](#) > [Send last recorded](#).

To see the list of recordings, select [Menu](#) > [Fun & Apps](#) > [Gallery](#) > [Recordings](#).

## ■ Equalizer

You can control the sound quality when using the music player by amplifying or diminishing frequency bands.

Select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Equalizer](#).

To activate a set, scroll to one of the equalizer sets, and select [Activate](#).

To view, edit, or rename a selected set, select [Options](#) > [View](#), [Edit](#), or [Rename](#).

Not all sets can be edited or renamed.

## ■ Stereo widening

Stereo widening enhances the audio output of the phone by enabling a wider stereo sound effect. To change the setting, select [Menu](#) > [Fun & Apps](#) > [Media](#) > [Stereo widening](#).

## 13. Organizer

---

Your Nokia mobile phone has many useful features for organizing your everyday life. The following features are found in **Organizer**: alarm clock, calendar, to-do list, notes, calculator, countdown timer, and stopwatch.

### ■ Alarm clock

You can set the phone to alarm at a desired time. Select **Menu** > **Fun & Apps** > **Organizer** > **Alarm clock**.

To set the alarm, select **Alarm time**, and enter the alarm time. To change the alarm time when the alarm time is set, select **On**.

To set the phone to alert you on selected days of the week, select **Repeat alarm**.

To select the alarm tone or set the radio as the alarm tone, select **Alarm tone**. If you select the radio as an alarm tone, connect the headset to the phone.

To set a snooze time-out, select **Snooze time-out** and the time.

### Stop the alarm

The phone sounds an alert tone even if the phone was switched off. To stop the alarm, select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the time you set in **Snooze time-out**, then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.

### ■ Calendar






Select **Menu** > **Fun & Apps** > **Organizer** > **Calendar**.

The current day is indicated by a frame. If there are any notes set for the day, the day is in bold type, and the beginning of the note is shown below the calendar. To view the day notes, select **View**. To view a week, select **Options** > **Week view**. To delete all notes in the calendar, select the month or week view, and select **Options** > **Delete all notes**.


## Organizer

In [Settings](#) you can set the date, time, time zone, date or time format, date separator, default view, or the first day of the week. In [Auto-delete notes](#), you can set the phone to delete old notes automatically after a specified time.

### Make a calendar note

Select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Calendar](#). Scroll to the date, and select [Options](#) > [Make a note](#) and one of the following note types:  [Meeting](#),  [Call](#),  [Birthday](#),  [Memo](#), or  [Reminder](#). Fill in the fields.

### Note alarm

The phone displays the note and if set, sounds a tone. With a call note  on the display, to call the displayed number, press the call key. To stop the alarm and to view the note, select [View](#). To stop the alarm for 10 minutes, select [Snooze](#).

To stop the alarm without viewing the note, select [Exit](#).

## ■ To-do list

To save a note for a task that you must do, select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [To-do list](#).

To make a note if no note is added, select [Add](#); otherwise, select [Options](#) > [Add](#). Fill in the fields, and select [Save](#).

To view a note, scroll to it, and select [View](#). While viewing a note, you can also select an option to edit the attributes. You can also select an option to delete the selected note and delete all the notes that you have marked as done.

## ■ Notes

To write and send notes, select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Notes](#).

To make a note if no note is added, select [Add](#); otherwise, select [Options](#) > [Make a note](#). Write the note, and select [Save](#).

## ■ Calculator

The calculator in your phone provides basic arithmetic and trigonometric functions, calculates the square and the square root, the inverse of a number, and converts currency values.



Note: This calculator has limited accuracy and is designed for simple calculations.

## Organizer

Select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Calculator](#). Press # for a decimal point. Scroll to the desired operation or function, or select it from the [Options](#).

To set the exchange rate, select [Options](#) > [Exchange rate](#).

### ■ Countdown timer

To start the countdown timer, select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Countd. timer](#) > [Normal timer](#), enter the alarm time, and write a note text that is displayed when the time expires. To start the countdown timer, select [Start](#). To change the countdown time, select [Change time](#). To stop the timer, select [Stop timer](#).

To have an interval timer with up to 10 intervals started, first enter the intervals. Select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Countd. timer](#) > [Interval timer](#). To start the timer, select [Start timer](#) > [Start](#).

### ■ Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press the end key.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Select [Menu](#) > [Fun & Apps](#) > [Organizer](#) > [Stopwatch](#) and from the following options:

[Split timing](#) — to take intermediate times. To start the time observation, select [Start](#). Select [Split](#) every time that you want to take an intermediate time. To stop the time observation, select [Stop](#).

To save the measured time, select [Save](#).

To start the time observation again, select [Options](#) > [Start](#). The new time is added to the previous time. To reset the time without saving it, select [Reset](#).

[Lap timing](#) — to take lap times

[Show last time](#) — to view the most recently measured time if the stopwatch is not reset

[View times](#) or [Delete times](#) — to view or delete the saved times

## 14. Games and Applications

---

Use the [Games & Apps](#) menu to manage games and applications. These files are stored in the phone memory or an attached microSD memory card and can be arranged in folders.

For options to format or lock and unlock the memory card see "Memory card," p. 52.

### ■ Launch a game

Your phone software includes some games.

Select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Games](#). Scroll to the desired game, and select [Open](#).

For games stored on the memory card, select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Memory card](#) > [Games](#). Scroll to the desired game.

To set sounds, lights, and shakes for the game, select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Options](#) > [Application settings](#). For more options, see "Application options," p. 63.

### ■ Launch an application

Your phone software includes some Java applications.

Select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Collection](#). Scroll to an application, and select [Open](#).

For applications stored on the memory card, select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Memory card](#) > [Collection](#). Scroll to the desired application.

### ■ Application options

[Update version](#) — to check if a new version of the application is available for download from [t-zones](#) (network service dependency)

[Web page](#) — to provide further information or additional data for the application from an Internet page (network service dependency), if available

[Application access](#) — to restrict the application from accessing the network

## Games and Applications

### ■ Download an application

Your phone supports J2ME Java applications. Make sure that the application is compatible with your phone before downloading it.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications and games in different ways.

Use the Nokia Application Installer from PC Suite to download the applications to your phone, or select [Menu](#) > [Fun & Apps](#) > [Games & Apps](#) > [Options](#) > [Downloads](#) > [App. downloads](#); the list of available bookmarks is shown. See "Bookmarks," p. 71.

For the availability of different services, pricing, and fees, contact your service provider.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.



## 15. Instant messaging

---

You can take text messaging to the next level by experiencing instant messaging (IM) (network service) in a wireless environment. You can engage in IM with friends and family, regardless of the mobile system or platform (like the Internet) they are using, as long as you all use the same IM service.

Before you can start using IM, you must first register with the instant messaging service you want to use and obtain a unique ID and password before you can use IM. See "Register with an IM service," p. 65 for more information.



Note: Depending on your IM service provider, you may not have access to all of the features described in this guide and your menus may be different.

To check the availability and costs and to subscribe to the IM service, contact your wireless service provider and the IM service provider from whom you receive your unique ID, password, and settings.

While you are logged in and connected to the IM service, you can exit the IM application and use the other functions of the phone, and the IM session and conversations remain active in the background.

### ■ Register with an IM service

You can do this by registering over the Internet with the IM service provider you have selected to use. During the registration process, you will have the opportunity to create the unique ID and password of your choice. For more information about signing up for IM services, contact your wireless service provider or an IM service provider.

### ■ Login

1. Select **Menu** > **IM**.  
A list of available IM services is displayed.
2. Select the IM service you want to use and enter your unique ID and password.  
If you have already logged in to an IM service before, the unique ID you used previously is displayed automatically.
3. Select **Login**.

Depending on the IM service provider you are using, these may not be the exact menu items displayed.

## Instant messaging

You can choose to save your password so you do not have to enter it each time you sign in, or you can choose to log in automatically and skip the login menu when you select the IM application.

### ■ Begin an IM session

You can send instant messages to anyone if you have the person's unique ID and you use the same IM service.

To begin an IM session, do the following:

1. From your contacts list, select a contact who is online.  
Some IM service providers also allow sending instant messages to contacts who are not online.
2. To send a message to a person who is not in your contacts list, select [Options](#), the option to send a message, and enter unique ID of the person.  
A conversation menu is displayed, with the contact's name displayed at the top.
3. Enter a message. When you finish the message, select [Send](#).

### ■ Receive and reply to messages

If you have an active IM conversation open and receive an instant message from the contact with whom you are chatting, the new message notification sound plays and the message appears in the conversation. As the conversation progresses, the most recent message appears at the bottom of the menu, causing the previous messages to move up if the screen is full. To reply, enter your message and select [Send](#).

If you receive an instant message when you have the IM application open, but do not have an active conversation open, the new message notification sound plays. Also, a new IM icon is displayed next to the name of the message sender under the conversations section of the contacts list.

If you receive an instant message when you are logged in to the IM service but do not have the IM application open on your phone, a message is displayed telling you that a new IM message has been received. Select [Start](#) to open the IM application, and view the new message.

### ■ Return to chat session

From the [IM](#) contacts list, select [Conversations](#). This list displays all IM conversations and group chats in which you are currently participating. To view a conversation or continue chatting, select a group name or contact name.

## ■ Contacts

You can add the names of contacts with whom you interact frequently by IM to the contacts list.

### Add a new contact

To add a contact to the contacts list, select [Options](#) > [Add contact](#). Enter the contact's unique ID for the IM service and select [OK](#).

### Remove a contact

From the contacts list, select the contact you want to remove, and select [Options](#) > [Remove contact](#) > [OK](#).

## ■ Conversation options

You can save an open conversation to be available for viewing, even after you end the conversation.

To save a conversation, while you have it open, select [Options](#) > [Save](#), edit the name, if you want, and select [Save](#).

To view a saved conversation, from the contacts list, select [Options](#) > [Saved convers.](#) Scroll to the conversation name you want, and select [Open](#).

To rename a saved conversation, from the contacts list, select [Options](#) > [Saved convers.](#) Scroll to the conversation name you want, and select [Options](#) > [Rename](#). Rename the conversation, and select [OK](#).

To delete a saved conversation, from the contacts list, select [Options](#) > [Saved convers.](#) Scroll to the conversation name you want, and select [Options](#) > [Delete](#) > [OK](#).

## ■ Set your availability

You can determine if other users can tell whether you are available or not.

From the contacts list, highlight your name at the top of the menu, and select [Options](#) > [My status](#) > [Available for all](#), [Avail. for contacts](#), or [Appear offline](#).

## Instant messaging

### ■ Log off service

#### Exit the IM application

From the contacts list, you can exit the IM application but still be connected to the IM service. Select [Exit](#), confirm the selection, and select [Exit](#) again. If you open IM again, you do not need to log in again.

You can receive instant messages from your contacts when using your phone for other purposes, such as playing a game. If you are connected to your IM service, but you have not used your IM application for some time, you may be automatically disconnected from the IM service. The next time you open the IM application, you must log in again.

#### Log out of IM

To disconnect from the IM service, you must log out. From the contacts list, select [Options](#) > [Logout](#) > [OK](#).

You are taken to the login screen of the IM service provider, where you can return to the IM service provider selection list, exit the IM application, or select an IM service and log in again.

## 16. SIM services

---

Your SIM card may provide additional services that you can access. This menu is shown only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

To set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services, select [Menu > Settings > Phone > Confirm SIM actions > Yes](#).

Accessing these services may involve sending messages or making a phone call for which you may be charged.

## 17. t-zones

---

You can access various mobile Internet services with your phone browser.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, fees, and instructions with your service provider.

With the phone browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size. You may not be able to view all details of the Internet pages.

### ■ Set up browsing

You may receive the configuration settings required for browsing as a configuration message from the service provider that offers the service that you want to use. See "Configuration settings service," p. 10. You can also enter all the configuration settings manually. See "Configuration," p. 48.

### ■ Connect to a service

Ensure that the correct configuration settings of the service are activated.

1. To select the settings for connecting to the service, select **Menu** > **t-zones** > **Settings** > **Configuration sett.**
2. Select **Configuration**. Only the configurations that support browsing service are shown. Select a service provider, **Default**, or **Personal config.** for browsing. See "Set up browsing," p. 70.
3. Select **Account** and a browsing service account contained in the active configuration settings.
4. Select **Displ. term. window** > **Yes** to perform manual user authentication for intranet connections.

Make a connection to the service in one of the following ways:

- Select **Menu** > **t-zones** > **Home**; or in the standby mode, press and hold 0.
- To select a bookmark of the service, select **Menu** > **t-zones** > **Bookmarks**.
- To select the last URL, select **Menu** > **t-zones** > **Last web addr.**

- To enter the address of the service, select [Menu](#) > [t-zones](#) > [Go to address](#). Enter the address of the service, and select [OK](#).

## ■ Browse pages

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

### Browse with phone keys

To browse through the page, scroll in any direction.

To select an item, press the call key, or select [Select](#).

To enter letters and numbers, press the 0 to 9 keys. To enter special characters, press [\\*](#).

### Direct calling

While browsing, you can make a phone call, and save a name and a phone number from a page.

## ■ Bookmarks

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select [Options](#) > [Bookmarks](#); or in the standby mode, select [Menu](#) > [t-zones](#) > [Bookmarks](#).
2. Scroll to a bookmark, and select it; or press the call key to make a connection to the page associated with the bookmark.
3. Select [Options](#) to view, edit, delete, or send the bookmark; to create a new bookmark; or to save the bookmark to a folder.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

### Receive a bookmark

When you have received a bookmark that is sent as a bookmark, [1 bookmark received](#) is displayed. To view the bookmark, select [Show](#).

## ■ Appearance settings

While browsing, select [Options](#) > [Other options](#) > [Appearance settings](#); or in the standby mode, select [Menu](#) > [t-zones](#) > [Settings](#) > [Appearance settings](#) and from the following options:

[Text wrapping](#) — to select how the text shall appear on the display

[Font size](#) — to set the font size

[Show images](#) > [No](#) — to hide images on the page

[Alerts](#) > [Alert for unsec. conn.](#) > [Yes](#) — to set the phone to alert when a secure connection changes to an unsecure one during browsing

[Alerts](#) > [Alert for unsec. items](#) > [Yes](#) — to set the phone to alert when a secure page contains an unsecure item. These alerts do not guarantee a secure connection. For more information, see "Browser security," p. 74.

[Character encoding](#) > [Content encoding](#) — to select the encoding for the browser page content

[Character encoding](#) > [Unicode \(UTF-8\) addr.](#) > [On](#) — to set the phone to send a URL as a UTF-8 encoding

[Screen size](#) > [Full](#) or [Small](#) — to set the screen layout

[JavaScript](#) > [Enable](#) — to enable the Java scripts

## ■ Security settings

### Cookies

A cookie is data that a site saves in the cache memory of your phone. Cookies are saved until you clear the cache memory. See "Cache memory," p. 74.

While browsing, select [Options](#) > [Other options](#) > [Security](#) > [Cookie settings](#); or in the standby mode, select [Menu](#) > [t-zones](#) > [Settings](#) > [Security settings](#) > [Cookies](#). To allow or prevent the phone from receiving cookies, select [Allow](#) or [Reject](#).

### Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.



While browsing, to allow the scripts, select [Options](#) > [Other options](#) > [Security](#) > [WMLScript settings](#); or in the standby mode, select [Menu](#) > [t-zones](#) > [Settings](#) > [Security settings](#) > [WMLScripts in conn.](#) > [Allow](#).

## ■ Download settings

To automatically save all downloaded files in [Gallery](#), select [Menu](#) > [t-zones](#) > [Settings](#) > [Downloading sett.](#) > [Automatic saving](#) > [On](#).

## ■ t-zones inbox

The phone is able to receive service messages sent by your service provider (network service dependency). Service messages are notifications (for example, news headlines), and they may contain a text message or an address of a service.

To access the [t-zones inbox](#) in the standby mode, when you have received a service message, select [Show](#). If you select [Exit](#), the message is moved to the [t-zones inbox](#). To access the [t-zones inbox](#) later, select [Menu](#) > [t-zones](#) > [t-zones inbox](#).

To access the [t-zones inbox](#) while browsing, select [Options](#) > [Other options](#) > [t-zones inbox](#). Scroll to the message you want, and to activate the browser and download the marked content, select [Go](#). To display detailed information on the service notification or delete the message, select [Options](#) > [Details](#) or [Delete](#).

## t-zones inbox settings

Select [Menu](#) > [t-zones](#) > [Settings](#) > [t-zones inbox sett.](#)

To set whether you want to receive service messages, select [t-zones messages](#) > [On](#) or [Off](#).

To set the phone to receive service messages only from content authors approved by the service provider, select [Message filter](#) > [On](#). To view the list of the approved content authors, select [Trusted channels](#).

To set the phone to automatically activate the browser from the standby mode when the phone has received a service message, select [Autom. connection](#) > [On](#). If you select [Off](#), the phone activates the browser only after you select [Go](#) when the phone has received a service message.

t - z o n e s

## ■ Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache while browsing, select [Options](#) > [Other options](#) > [Clear the cache](#); in the standby mode, select [Menu](#) > [t-zones](#) > [Clear the cache](#).

## ■ Browser security

Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

### Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider.

To view or change the security module settings, select [Menu](#) > [Settings](#) > [Security](#) > [Security module sett..](#)

### Certificates




Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are three kinds of certificates: server certificates, authority certificates, and user certificates. You may receive these certificates from your service provider. Authority certificates and user certificates may also be saved in the security module by the service provider.

To view the list of the authority or user certificates downloaded into your phone, select [Menu](#) > [Settings](#) > [Security](#) > [Authority certificates](#) or [User certificates](#).


 is displayed during a connection, if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

### Digital signature

You can make digital signatures with your phone if your SIM card has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page (for example, the title of the book you want to buy and its price). The text to sign is shown, which may include the amount and date.

Check that the header text is [Read](#) and that the digital signature icon  is shown.

If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first, and select [Sign](#).

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Enter the signing PIN. The digital signature icon disappears, and the service may display a confirmation of your purchase.

## 18. PC connectivity

---

You can send and receive e-mail, and access the Internet when your phone is connected to a compatible PC through a Bluetooth, infrared, or a data cable connection. You can use your phone with a variety of PC connectivity and data communications applications.

### ■ Nokia PC Suite

With Nokia PC Suite you can synchronize contacts, calendar, notes, and to-do notes between your phone and the compatible PC or a remote Internet server (network service dependency). Download the PC Suite from the CD delivered with your phone. You may find more information on the Nokia Web site at [www.nokiausa.com/support](http://www.nokiausa.com/support) or your local Nokia Web site.

### ■ Packet data, HSCSD, and CSD

With your phone you can use the packet data, high-speed circuit switched data (HSCSD), and circuit switched data (CSD, *GSM data*) data services. For availability and subscription to data services, contact your network operator or service provider. See "Modem settings," p. 44.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls.

### ■ Bluetooth

Use the Bluetooth technology to connect your compatible Laptop to the Internet. Your phone must have activated a service provider that supports Internet access and your PC has to support Bluetooth PAN (Personal Area Network). After connecting to the network access point (NAP) service of the phone and pairing with your PC your phone automatically opens a packet data connection to the Internet. PC Suite software installation is not necessary when using the NAP service of the phone.

See "Bluetooth wireless technology," p. 42.

### ■ Data communication applications

For information on using a data communication application, refer to the documentation provided with it.

## PC connectivity

Making or answering phone calls during a computer connection is not recommended, as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

## 19. Enhancements

---

If you want to enhance phone functionality, a range of enhancements is available for you. You can select any of these items to help accommodate your specific communication needs.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-3 or AC-4 charger.



**Warning:** Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer.

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

## 20. Battery information

---

### ■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to start the charging.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

## Battery information

 
 
### ■ Nokia battery authentication

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging, and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it, and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

#### Authenticate hologram

1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.
2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.
3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.
4. Confirm that the 20-digit code is valid by following the instructions at [www.nokia.com/batterycheck](http://www.nokia.com/batterycheck).

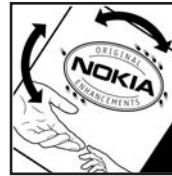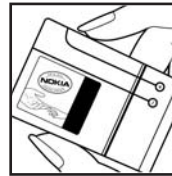



## Battery information

### What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit [www.nokia.com/battery](http://www.nokia.com/battery).

## Care and maintenance

---

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Do not touch the main display with hard or angular materials. Objects like earrings or jewelry may scratch the display.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

## Additional safety information

---

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

### ■ Operating environment

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inch) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

### ■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15.3 centimeters) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

#### Additional safety information

- Always keep the device more than 6 inches (15.3 centimeters) from the pacemaker
- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

#### Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

#### ■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

#### ■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel

## Additional safety information

depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

### ■ Emergency calls



**Important:** Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

#### To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength.  
Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. If the device is in the offline or flight mode, you must change the profile to activate the phone function before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

### ■ Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

#### Additional safety information

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device RM-147 at the ear is 0.66 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokiausa.com](http://www.nokiausa.com).

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear for device type RM-147 is 0.90 W/kg and when properly worn on the body is 0.51 W/kg. Information about this device can be found at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID: PPIRM-147.

Talk and standby times

#### ■ Talk and standby times

This section provides information about battery talk times, and standby times. Be aware that the information in this section is subject to change. For more information, contact your service provider.

Operation times are estimates only and depend on signal strength, phone use, network conditions, features used, battery age and condition (including charging habits), temperatures to which the battery is exposed, and many other factors.

The following times are approximate with the BL-5B 860 mAhLi-ion battery:

Talk time: up to 3.2 hours

Standby time: up to 263 hours

Additional safety information

■ Technical information

Feature	Specification
Weight	3.76 ounces (106.5 grams)
Size	Volume: 5.19 cubic inches (85 ccm) Length: 3.64 inches (92.4 mm) Width: 1.9 inches (48.2 mm) Thickness: 0.82 inches (20.7 mm)
Frequency range	RM-147 GSM 850 824–849 MHz (TX) 869–894 MHz (RX)) GSM 1800 1710–1785 MHz (TX) 1805–1865 MHz (RX) GSM 1900 1850–1910 MHz (TX) 1930–1990 MHz (RX)
Transmitter output power	Up to 2 W
Battery Voltage	BL-5B, 860 mAh 3.7 V dc
Operating temperature	59°F to + 77°F 15°C to + 25°C

## Index

---

### Numerics

1-touch dialing 22, 36

### A

access codes 9  
active standby 18, 40  
alarm clock 60  
antenna 15  
applications 63  
audio  
    adaptor 16  
    messages 30

### B

battery  
    authentication 80  
    charging 13  
    charging, discharging 79  
    installation 12  
Bluetooth 42, 76  
bookmarks 71  
browser  
    appearance settings 72  
    bookmarks 71  
    security 72  
    set up 70  
business cards 35

### C

cache memory 74  
calculator 61  
calendar 60  
call  
    functions 22  
    options 23  
    settings 46  
    waiting 23  
call key 17  
call register. See log.  
calls 22–24  
camera 54, 55  
camera key 17

certificates 74  
certification information 85  
charge the battery 13  
charger connector 17  
clock settings 40  
codes 9  
configuration 48  
    setting service 10  
    settings 15  
connector  
    charger 17  
    USB 17  
contact  
    search 34  
contacts  
    1-touch dialing 36  
    copy 34  
    delete 35  
    edit 35  
    groups 36  
    my numbers 36  
    save 34  
    service numbers 36  
    settings 36  
cookies 72  
countdown timer 62

### D

data  
    cable 45  
    communication 76  
    transfer 44  
date settings 40  
digital signature 75  
display 18, 40  
downloads 10, 73

### E

earpiece 17  
EGPRS 44  
emergency calls 85  
end  
    call 22  
    key 17



- enhancements 47, 78
- enhancements connector 17
- equalizer 59
- explosive environments 84

## F

- factory settings 49
- FM radio 57
- font size 40

## G

- gallery 52
- games 63
- general packet radio service 44, 76
- GPRS. See general packet radio service.

## H

- handsfree. See loudspeaker.
- Headset 15
- hearing aid 84

## I

- image 54
- indicators 19
- info messages 31
- infrared
  - connection 43
  - lens 17
- installation 12
- instant messaging 65
- Internet 70
- IR. See infrared.

## K

- keyguard 20
- keypad 17, 20
- keys 17

## L

- language settings 47
- log 38
- loudspeaker 17, 23

## M

- maintenance 82

- media player 55
- memory
  - card 14, 52
  - full 30
- menu 25
- message
  - center number 26
  - folder 30
  - settings 32
- messages
  - audio message 30
  - delete 31
  - info messages 31
  - length indicator 26
  - postcards 29
  - service commands 31
  - text 26
  - voice message 31
- MMS. See picture messages.
- music player 55

## N

- navigation
  - key 41
  - menus 25
- network
  - name on display 18
  - services 7
- notes 61
- numbers 36

## O

- offline mode 21
- operator menu 51
- organizer 60

## P

- pacemakers 83
- packet data
  - See general packet radio service.
- parts 17
- PC connectivity 76
- PC Suite 76
- phone
  - configuration 48
  - open 14
  - settings 47
  - updates 47, 50

- phone lock. See keypad lock.
- PictBridge 45
- picture messages 28, 33
- PIN codes 9, 15
- plug and play service 15
- postcards 29
- power
  - key 17
  - saver 40
- predictive text input 27
- profiles 39
- PUK codes 9
- pushed messages 73

## R

- radio 57
- recorder 58
- restriction password 9
- ringing tones 39

## S

- safety information 6, 83
- SAR 85
- screen saver 40
- scroll key 17
- scrolling 25
- security
  - codes 9
  - module 74
  - settings 49
- selection keys 17
- service
  - commands 31
  - inbox 73
  - messages 73
  - numbers 36
- services 70
- settings
  - active standby 40
  - call 46
  - clock 40
  - configuration 48
  - connectivity 42
  - data transfer 44
  - date 40
  - display 40
  - downloads 73

- enhancements 47
- fold animation 40
- GPRS, EGPRS 44
- infrared 43
- messages 32
- my shortcuts 41
- phone 47
- profiles 39
- restore factory settings 49
- security 49
- service inbox 73
- themes 39
- time 40
- tones 39
- USB data cable 45
- wallpaper 40
- shared memory 8
- shortcuts 41
- signal strength 18
- SIM
  - card 21
  - card installation 12
  - messages 32
  - services 69
- SMS. See text messages
- software updates 47, 50
- speakerphone. See loudspeaker.
- standby mode 18, 41
- status indicators 18
- stereo widening 59
- stopwatch 62
- strap 16
- streaming service 55
- switch on and off 14
- swivel 40
- synchronization 44

## T

- take an image 54
- text
  - message 26
  - phone 48
- themes 39
- time settings 40
- to-do list 61
- tones 39
- traditional text input 27

## U

- unlock keypad 20
- UPIN 15
- USB 17

## V

- vehicles 84
- video clip 54
- visual radio 58
- voice
  - commands 41
  - dialing 22
  - messages 31
  - recorder 58

- volume

- adjusting 22, 56, 57
  - key 17

## W

- wallpaper 40
- web 70
- wireless markup language 70
- wrist strap 16

## X

- XHTML 70