

Setting Up Your Sprint Power Vision[™] Smart Device Treo[™] 700p by Palm

© 2006 Sprint Nextel. All rights reserved. SPRINT, the "Going Forward" logo, and other trademarks are trademarks of Sprint Nextel.

June 6, 2006

Your Treo 700P Smart Device




Welcome to Your Treo 700P Smart Device

Before you begin using your Treo 700^p smart device, there are a few simple steps you'll need to take care of:


- **1.** Set Up Your Device.
- 2. Make Your First Phone Call.
- **3.** Connect to Your Computer.

Once you've completed these simple setup procedures, you'll be ready to begin using all the exciting features of your Treo 700P smart device.

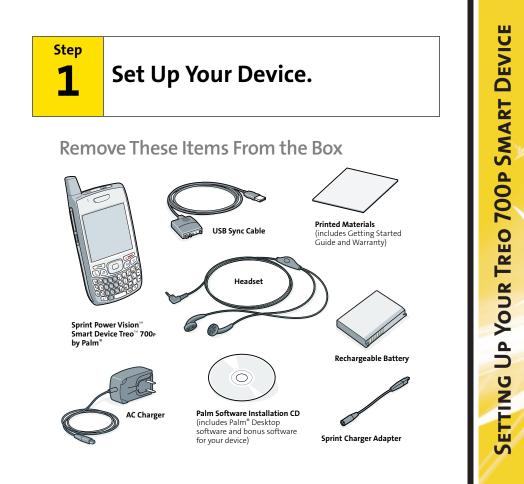

Insert the Battery

- Remove the battery door. a.
- b.
- c.

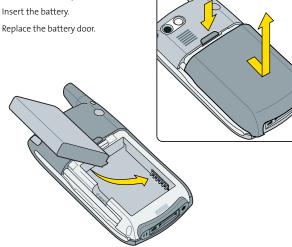

Complete Device Setup

- a. Confirm that the date and time are correct, and select Next. If the date or time is incorrect, uncheck the Get date & time from mobile network box, select the correct date or time, and then select Next.
- b. Read through the screens to learn about three key features of your device.
- c. When you're finished, select Done.

Tip: If your device screen turns off, press **Power/End Device** to wake up the screen.



Make Your First Phone Call.

Check Your Device

To use your device's phone, press **Phone** (). If **Sprint** appears in the upper-left corner, your phone is ready to use; skip ahead to "Make a Call." If **Locked** appears in the upper-left corner, you need to unlock your device.

Using the keyboard, enter your four-digit lock code. If you do not know the code, try the following:


- · the last four digits of your Social Security number
- the last four digits of your wireless phone number
- 0000 (four zeros)

If none of these works, you may need to activate your phone. Call Sprint Customer Service at 1-888-211-4PCS (4727) for help.

What's My Phone Num	ıber?
To view your phone nu Menu (1997), select Option	mber, press Phone (), press ons, and then select Phone Info .
Phone Infe Phone Number: 408 PCS Vision Username: jsmith03 Software: Sprint v1.1 CC-Cap: 000-000-000 Carrier DB: 255 Hardware: MSID: 40855533333 OK	-555-3333 — Look Here for Your Phone Number 0

Make a Call

- a. Press Phone 🕓 .
- b. Enter the number you want to call.
 - Tip: There are two ways to enter a phone number: press the numbered keys on the keyboard, or use the stylus to tap the onscreen buttons.
- c. Press Talk 💬 to dial.
- d. After you finish the call, press Power/End Improvement to end the call.

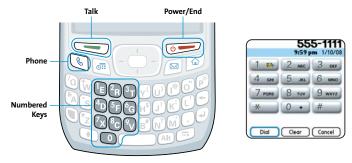

Keyboard

Onscreen Buttons

Set Up Your Voicemail

- a. Press Phone 🕓 .
- b. On the keyboard, press and hold 1.
- c. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether or not to activate Skip Pass Code (a feature that lets you access your voicemail simply by pressing and holding 1, bypassing the need for you to enter your password). If you do not activate Skip Pass Code, your device uses the Voicemail Pass Code feature, which requires you to enter your password each time you want to access your voicemail.

Tip: If you are concerned about unauthorized access to your voicemail account, we recommend that you use the Voicemail Pass Code.

Step 3

Connect to Your Computer.


Install the Software

IMPORTANT: You must install the software that came with your Treo 700^p device even if you already have Treo software installed on your computer.

- Insert the Palm Software Installation CD into your computer's CD drive.
- b. On a Windows computer, follow the onscreen instructions to install the software. On a Mac computer, double-click the CD icon, and then double-click PalmSoftware.pkg.



c. When prompted, connect your device and your computer.

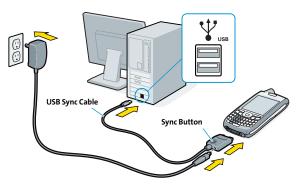

Synchronize

- a. When prompted to synchronize, press the sync button on the USB sync cable.
 - Tip: During the installation process on a Windows computer, you can select to synchronize with Outlook.
- **b.** When synchronization is complete, press **Applications** (a) on your device to view and start using the applications.

What Does the First Synchronization Do?

The first synchronization is required in order for you to move information between your computer and your device, such as the following:

- Install bonus software from the Palm Software Installation CD on your device.
- Transfer your address book and calendar to your device.
- Take photos and videos with your device's camera and camcorder, and then transfer them to your computer for editing.

Learn More

Explore these resources to learn how to use your device:

	L
	L
-	1
÷.	8
1	(-) t

Quick Tour: Introduces you to your device's features. Press Applications 🙆 and select Quick Tour 🚇 .

Getting Started Guide: Shows you how to move around on your device, set up features (such as voicemail and email), and perform common tasks.



User Guide: Provides step-by-step instructions and explanations of all your device's features. To access the User Guide on your desktop computer, dick Start > Programs > Palm > User Manuals > Treo700pUG_Sprint_pdf. A copy of the guide is also available right on your device. Press Applications (a) and select My Treo La.

Р
 5 1 -35

My Device Web site: Answers common questions and provides links to accessories, additional software, the User Guide, and other useful information. Check out www.palm.com/mytreo700pSprint.



Online Support from Palm: Provides up-to-date downloads, troubleshooting, support information, and online forums. Visit www.palm.com/us/support/Treo700pSprint.