TUNGSTEN 75



READTHIS FIRST

palmOne^{*}

Start Here


Here's what you'll do with this guide:

- · Charge and set up your handheld.
- Install Palm® Desktop software and other software for synchronizing, moving files, and more.
- Synchronize your handheld with your computer.

Important! Already use a palmOne™ handheld?


Before going on to step 1, synchronize your current handheld with your computer so that the information is up-to-date.

For more information on upgrading, go to www.palmOne.com/intl/support.

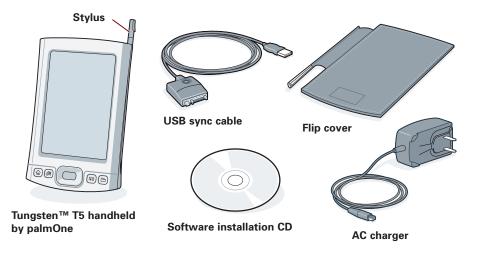

Connect and charge

- a. Plug the sync cable into your handheld and into a USB port on the back of your computer.
- **b.** Plug the AC charger into the Multi-connector on the sync cable and into an outlet.
- **c.** Charge for **three hours**. Be sure to fully charge your handheld before going on to the next step.

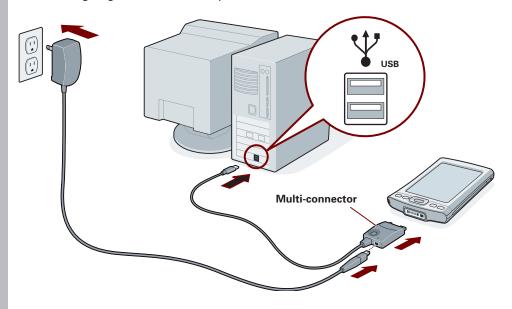

2 Set up

- a. Unplug the sync cable from your handheld.
- **b**. Press the power button.
- c. Remove the stylus.
- **d.** Follow the onscreen instructions to set up your handheld.

Tip: Take the Quick Tour to learn more about the great features of your Tungsten T5.



Stylus

Problems? See the "Troubleshooting" section in the upcoming pages.

3 Install software


To install Palm Desktop software, the new File Transfer application, and other important software, insert the CD into your computer's CD drive.

Windows:

Follow the installation instructions that appear on your computer screen.

Mac:

Double-click the CD icon, and then double-click palmOneDesktop.pkg.

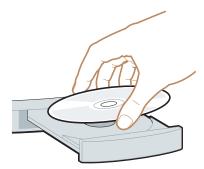

Already use a palmOne™ handheld?

Want to synchronize with Microsoft Outlook? Select "Change your synchronization method" at the end of the installation process on the CD.

Problems? See the "Troubleshooting" section in the upcoming pages.


Get answers, learn more

Take the tutorial



Learn to use the popular features of your handheld. Insert the installation CD in your computer and click here for an interactive tutorial.

Find your manual

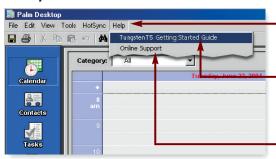

Open Palm Desktop software on your computer and click **Help**.

Click here for the manual. For more detail, go online: www.palmOne.com/tungstent5handbook.

Click Online Support for the latest software updates and answers to frequently asked questions.

Look for these great features

Take the tutorial



Palm Desktop software. Enter info in Palm Desktop software and it shows up on your handheld the next time you synchronize.



File Transfer (Windows only). Copy files and folders from your computer into your handheld's internal flash drive. Manage them in File Transfer.



Documents To Go (Windows only). Synchronize Microsoft Word, Excel, and PowerPoint files between your handheld and your computer. View and edit these files on your handheld.

On your handheld



Files. Access files and folders in your handheld's internal flash drive.



Media. View and organize photos and videos.



Bluetooth® wireless technology. Wirelessly connect with your data-enabled Bluetooth phones or devices. Browse the web and send email and short messages (phone requires Bluetooth wireless capability, data service, and ISP, sold separately).

Troubleshooting

- Support information is also available at www.palmOne.com/intl/support
- Your handheld does not turn on, or does not respond when you tap it
 - 1. Try turning it on by pressing one of the quick buttons on the front panel.
 - 2. Do a soft reset. Unscrew the top of the stylus and use the tool inside to gently press the reset button inside the hole on the back of the handheld.
 - 3. Make sure the AC charger is fully connected to the handheld or the sync cableand to a *working* outlet. Charge for another three full hours.
- ▶ Palm Desktop Installer does not start when you put the CD into the drive Windows:
 - 1. Click the Start button and select Run.
 - Click Browse to locate the drive that contains the CD that came with your Tungsten T5.
 - 3. Double-click autorun.exe on the CD.

Mac:

- 1. Double-click the CD icon on the Mac desktop.
- 2. Double-click palmOneDesktop.pkg.

Synchronization does not begin

Be sure the sync cable is plugged into your handheld and a USB port on the back of your computer.

Check your computer:

Windows:

 Make sure the HotSync® icon appears in the group of icons in the lower-right part of your screen.



If not:

- a. Click the Start button and select Programs.
- b. Select Palm Desktop, and then select HotSync Manager.
- 2. Check the connection type:
 - a. Disconnect and then reconnect the sync cable.
 - **b.** Make sure there is a checkmark next to Local USB. If not, click Local USB.


Mac:

- 1. Make sure the HotSync Manager is enabled:
 - a. Double-click the HotSync Manager icon in the Palm folder.
 - b. In the HotSync Controls tab, click Enabled.
- 2. Make sure the USB connection is working:
 - a. Disconnect and then reconnect the sync cable.
 - b. Restart your computer.




Check your computer:


- 1. Press the Home 🚳 button twice, and then tap HotSync 🐧 in Applications.
- 2. In the HotSync application, make sure of the following:
 - Local is highlighted. If it isn't highlighted, tap Local.
 - The phrase Cable/Cradle appears. If not, tap the pick list, and then tap Cradle/Cable.
- 3. Press the HotSync button on the cable.

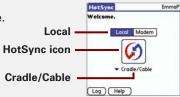

Already use a palmOne™ handheld?

Did you load any third-party applications on your previous palmOne handheld? You'll have to update them if they are not compatible with your new handheld. If any of the following symptoms occur on your new handheld after you synchronize, remove these applications and contact the vendor for updated versions: handheld freezes or resets when you open an application; slow performance; unusual screen display; difficulties using handheld features; uneven sound quality.

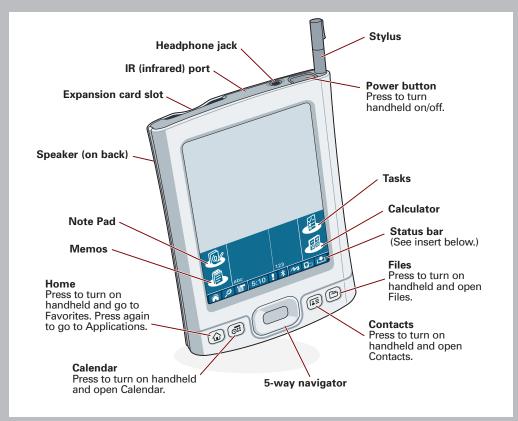

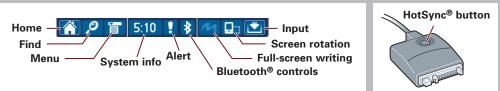

palmOne, Inc. 400 N. McCarthy Blvd. Milpitas, CA 95035, U.S.A

Copyright

© 2004 palmOne, Inc. All rights reserved.

palmOne, Tungsten, "T" (Stylized), Palm Powered, Palm OS, and HotSync are among the trademarks or registered trademarks owned by or licensed to palmOne, Inc. palmOne, Inc. uses the Bluetooth wireless technology trademark under express license from Bluetooth SIG, Inc. All other brand and product names are or may be trademarks of, and are used to identify products or servicesof, their respective owners.

Disclaimer and Limitation of Liability

palmOne, Inc. assumes no responsibility for any damage or loss resulting from the use of this guide. palmOne, Inc. assumes no responsibility for any loss or claims by third parties which may arise through use of this software. palmOne, Inc. assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

IMPORTANT

Please read the End User Software License Agreement with this product before using the accompanying software program(s). Using any part of the software indicates that you accept the terms of the End User Software License Agreement.

Software Download Available

Palm® Desktop software is available on CD. Check www.palmOne.com/intl/support for updates and new versions of the software.

Agency Compliance Information

Product regulatory and compliance information can be found in the User Guide at www.palmOne.com/tungstent5-handbook



PN: 406-10115-20