

Item # X9191H Accessories for Food Processor (Model EP91)



Food Processor Bowl
Food Processor Lid
Food Pusher

Before Using Your New Accessories

CAUTION: Make sure that the unit is unplugged from the power source and the operating button is "OFF" before inserting or removing attachments and before cleaning.

WARNING: For safety, the food pusher must always be in its place while operating the appliance. Keep hands, hair, clothing as well as spatulas and other utensils away from attachment during operation to reduce the risk of injury and/or damage to the appliance.

Assembly

See instruction manual for general assembly instructions with various accessories.

Care & Maintenance

Wash the food processor bowl, lid and food pusher in warm, sudsy water using regular dishwashing liquid. Do not wash in dishwasher. Dry thoroughly before using or storing.



Item # X9191H

Accessories for Food Processor (Model EP91)



1. Food Processor Bowl 2. Food Processor Lid 3. Food Pusher

Before Using Your New Accessories

CAUTION: Make sure that the unit is unplugged from the power source and the operating button is "OFF" before inserting or removing attachments and before cleaning.

WARNING: For safety, the food pusher must always be in its place while operating the appliance. Keep hands, hair, clothing as well as spatulas and other utensils away from attachment during operation to reduce the risk of injury and/or damage to the appliance.

Assembly

See instruction manual for general assembly instructions with various accessories.

Care & Maintenance

Wash the food processor bowl, lid and food pusher in warm, sudsy water using regular dishwashing liquid. Do not wash in dishwasher. Dry thoroughly before using or storing.

For information or assistance: *EURO-PRO Operating LLC* 21 Lawrence Paquette Indust. Dr. Champlain, NY 12919 Tel.: 800-798-7398

Rev. 12/03

Printed in Canada

For information or assistance: *EURO-PRO Operating LLC* 21 Lawrence Paquette Indust. Dr. Champlain, NY 12919 Tel.: 800-798-7398