

PARTS LIST

for

KitchenAid®

3 CUP FOOD CHOPPER

MODELS:

KFC3100WH1 (White)
KFC3100BU1 (Blue)
KFC3100ER1 (Empire Red)
KFC3100OB1 (Onyx Black)
KFC3100CR1 (Chrome)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



MOTOR AND HOUSING PARTS

For Models: KFC3100__1

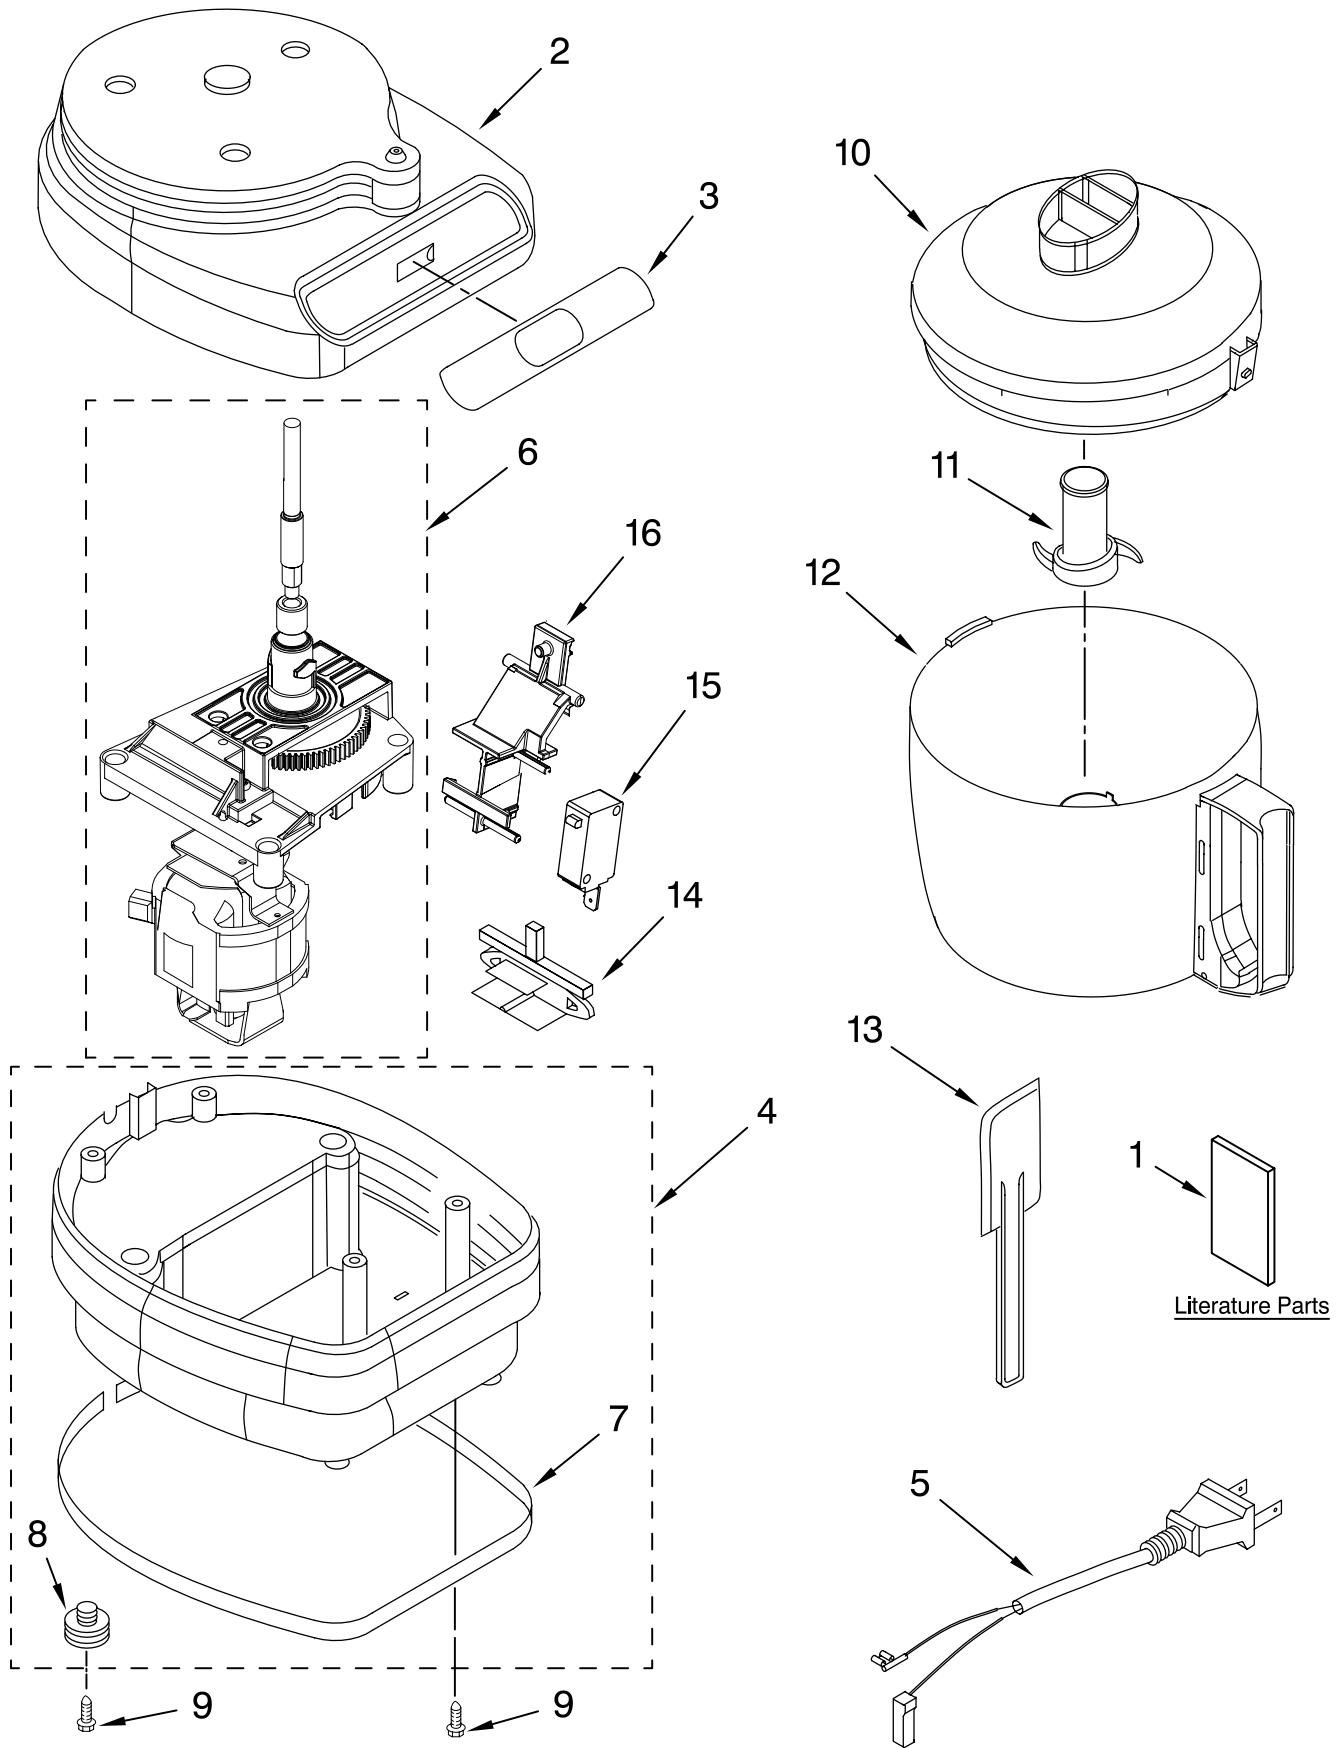

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR AND HOUSING PARTS

For Models: KFC3100__1

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8211786	Owners Manual
	8204587	Parts List
2		Upper Housing
	8211769	White
	8211789	Empire Red
	8211792	Cobalt Blue
	8211795	Onyx Black
	8211797	Chrome
3		Overlay
	8211768	White
	8211788	Empire Red
	8211791	Cobalt Blue
	8211794	Onyx Black & Chrome Models
4		Base
	8211771	White
	8211790	Empire Red
	8211793	Cobalt Blue
	8211796	Onyx Black
	8211798	Chrome
5		Power Cord
	8211778	White
	8211799	Black
6	8211777	Motor Assembly
7	8211785	Trim Band
8	8211772	Foot
9	8211770	Screw
10	8211775	Lid
11	8211773	Blade
12	8211774	Bowl Assembly
13	8211787	Spatula
14	8211781	Plate, Backing (Pulse Switch)
15	8211782	Micro Switch
16	8211783	Mount, Micro Switch

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST