



- ① Precautions
- ② Product Overview
- ③ Connections
- ④ Screen Adjustment
- ⑤ Troubleshooting
- ⑥ Other Information



LED Pocket Projector  
Owner's Instructions  
**SP-P400**



✘ To avoid injuries or damage to property, please read the following precautions carefully and use the product accordingly.



**Warning**

Failure to follow the instructions marked with this symbol may cause personal injury or even fatality.



**Notice**

Failure to follow the instructions marked with this symbol may cause personal injury or damage to the product or property.


| [Power Related](#) | [Installation Related](#) | [Cleaning and Use Related](#) |

## Power Related

[The images here are for reference only, and are not applicable in all cases (or countries).]




**Warning**

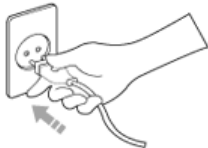

Insert the power plug firmly so that it does not come loose.

- When the connection is not firm, it may cause a fire.

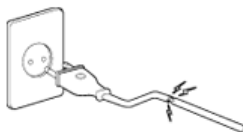


Do not use loose power outlets or damaged power cables.

- There is a danger of electric shock or fire.



Under no circumstances touch the power plug with wet hands.

- There is a danger of electric shock.

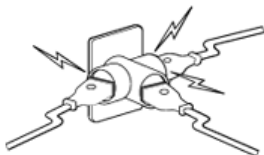

Do not plug multiple devices into a single wall outlet.

- There is a danger of fire.



Do not bend the power cord excessively or place heavy objects on it.

- There is a danger of electric shock or fire.

Before moving the product, make sure the power is off and remove the power cord from the wall outlet. In addition, make sure all connection cables are disconnected from other devices before moving it.

- Moving the product without disconnecting the power cord may damage the power cord and cause electric shock or fire.



To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

- There is a danger of electric shock or fire.

 **Notice**



Always unplug the unit by holding the power plug. Pulling the power cable may damage the inside of it.

- There is a danger of fire.



Unplug the power plug before cleaning the product.

- There is a danger of electric shock or fire.

| [Power Related](#) | [Installation Related](#) | [Cleaning and Use Related](#) |


 **Installation Related**

 **Warning**




TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

- There is a danger of fire.

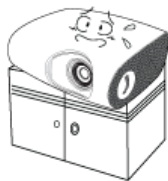

When installing the product in a cabinet or on a shelf, make sure the front end of the base does not protrude.

- Dropping the product may damage it or cause injury.

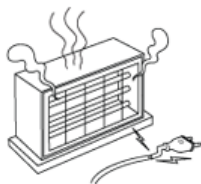

Keep the power cord away from heaters.

- The coating of the power cord may melt and cause electric shock or fire.

Do not install the product in locations exposed to oil, smoke, moisture or water

(rainwater), or in a vehicle.



- There is a danger of electric shock or fire.



Do not install the product in locations with poor ventilation such as a bookshelf, closet, etc.

- An increase in the internal temperature may cause a fire.




Do not install on an unstable location, or on a stand smaller than the product.

- Make sure to keep the product out of the reach of children.  
The product may fall and cause personal injury.



In case of thunder/lightning, disconnect the power cord from the wall outlet.

- There is a danger of electric shock or fire.

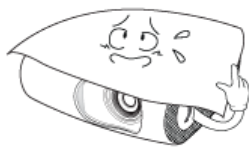

Make sure the product's vents are not blocked by a table cloth or curtain.

- An increase in the internal temperature may cause a fire.



Place the product on the ground carefully.

- Doing so may cause damage or injury.



Do not drop the product while carrying it.

- Doing so may cause damage or injury.




Keep the product out of children's reach.

- Make sure to keep the product out of the reach of children.  
The product may fall and cause personal injury.


## Cleaning and Use Related

### Warning

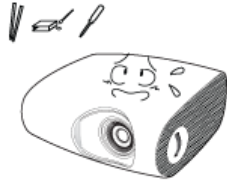

Do not insert metal items, such as chopsticks, steel wire, gimlets, or inflammable objects such as matches or paper into the product through the ventilating openings and the PC/Video and power terminals.

- This may cause electric shock or fire.  
If water or an alien substance enters the product, turn the product off, disconnect the power cord from a wall outlet and contact a [Service Center](#).

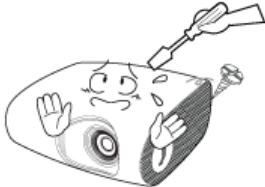


Do not disassemble, or attempt to fix or modify the product.

- When the product requires repairs, contact a [Service Center](#).



Do not use or keep the product near flammable sprays or other such substances.

- There is a danger of fire or explosion.

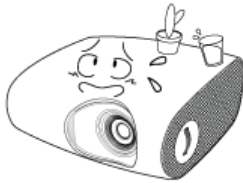


Do not place containers with water, vases, drinks, chemicals, small metal parts or heavy objects on the product.

- If water enters the product, it may cause electric shock, or fire and when heavy objects fall, it may cause injury.



Do not let children place objects such as toys or cookies on the product.

- If a child tries to reach for any of these objects, the product may fall and cause harm.

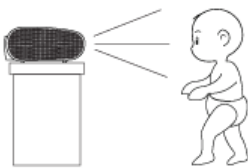

Do not look directly at the light of the lamp nor project the picture onto eyes.

- This is dangerous especially for children.



When you remove batteries from the remote, be careful that they are not swallowed by children. Keep batteries out of the reach of children.

- If swallowed, see a doctor immediately.

### Notice



If the product emits smoke, unusual noise, or there is a burning smell, disconnect the power plug immediately, and contact a [Service Center](#).

- There is a danger of electric shock or fire.




If the power plug pin or jack is exposed to dust, water or alien substances, clean it thoroughly.

- There is a danger of electric shock or fire.



When cleaning the product, disconnect the power cord and wipe the product using a soft dry cloth.

- Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air freshener, lubricant or detergent.

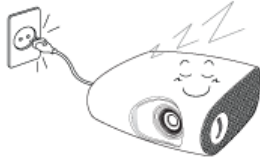


When not using the product for an extended period of time, disconnect the power plug.

- Otherwise, this may cause heat emission from the accumulated dirt or degraded insulation, leading to electric shock or fire.



 Do not install the product in places with heavy dust, chemical substances, high or low temperatures, high humidity, or where it will be operated for a long period continuously etc.



If the product is dropped or the casing is damaged, turn the product off and unplug the power cord.

- This may cause electric shock or fire. Contact a [Service Center](#).



Make sure to place your remote control on a table or desk.

- If you step on the remote control, you may fall and hurt yourself or the product may be damaged.

## Correct Disposal of This Product (Waste Electrical & Electronic Equipment) – Europe only

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household waste at the end of its working life. To prevent possible harm to the environment or damage to health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or



their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

## Correct disposal of batteries in this product – Europe only

---



**(Applicable in the European Union and other European countries with separate battery return systems.)**

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Product Features

### 01 High Mobility Design

- Small Size.
- Lightweight.

### 02 Next Generation Backlight Light Source, LED Lamp

- Effective energy saving by using low voltage.
- Semi-permanent long lifetime guaranteed.

## Product Views

### 2 Front/Upper Side





1. Indicators

6. Move/Select/Volume button



- TEMP (Red LED)
- STAND BY (Blue LED)
- ※ Refer to the [LED Indications](#).

 : Use this button to move to or select an item within a menu.

 : Use this button to adjust the volume.

## 2. Lens cover

### 3-1. Adjustable Feet

You can adjust the screen position by moving the adjustable feet up and down.

### 3-2. The holes to hold the tripod

#### 4. Lens

#### 5. Focus Ring

Used for Focus Adjustment.

## 7. MENU Button

Used to display Menu Screen.

## 8. SOURCE Button

Use this button to select the external device signal.

## 9. POWER() Button

Used to turn the projector on or off.



The buttons on the top of the projector are touch buttons. Touch them lightly with your fingers to use them.



When using a tripod, make sure to use one with a screw length of 5.5 mm or less. If the screw length is longer than 5.5 mm, you will not be able to fix the projector to the tripod firmly, which may result in damage to the projector or tripod.

## Package Contents



Quick Installation Guide



Warranty  
(Not available in all locations)



User Manual CD



Power Cable



Remote Control  
/ 1 Batteries (Not available in all locations)



Cleaning Cloth



Adapter



D-Sub Cable

## LED Indications

●:Light is On   ●:Light is Blinking   ○:Light is Off

STAND BY	TEMP	Information
●	○	This state occurs when power is supplied to the projector normally after the POWER button on the projector or the remote control has been pressed. – This state appears when the projector is preparing an operation after the POWER button on the projector or the remote control has been pressed.
●	○	– The POWER button is pressed to turn off the projector, and the cooling system is in operation to cool off the inside of the projector.
○	○	The projector is in normal operating condition.
●	●	Refer to Action 1 below if the cooling fan inside the projector is not in normal operation condition.
○	●	Power is turned off automatically when temperature inside of the projector goes beyond the control limit. Refer to Action 2.
●	●	This state occurs when the auto color compensation function has an error. Refer to Action 3.

## Clearing Indicator Problems

Classification	State	Measures
Action 1	When the cooling fan system is not in normal operating condition.	If the symptom remains even after disconnecting and then reconnecting the power cord and turning the projector on again, contact your product provider or our <a href="#">service center</a> .
Action 2	When temperature inside of the projector becomes too high.	Adjust the installation state of your projector by referring to the Installation Precautions section listed above. Cool down your projector sufficiently and then operate it again. If the same problem occurs continually, contact your product distributor or <a href="#">service center</a> .
Action 3	When the sensor system inside the projector is not operating normally.	Cool your projector down sufficiently and then operate it again. If the same problem occurs again, contact your product distributor or <a href="#">service center</a> .




This Projector uses a cooling fan system to keep the unit from overheating. Operation of the cooling fan may cause noise, which does not affect the product performance and is part of normal operation.

## Rear Side



- |                                   |                         |
|-----------------------------------|-------------------------|
| 1. VIDEO IN Input port            | 5. Kensington Lock      |
| 2. VIDEO/PC AUDIO IN Input ports  | 6. PC IN Input port     |
| 3. Remote Control Signal Receiver | 7. SERVICE Input port   |
| 4. POWER Input port               | 8. Headphone Input port |

## Remote Control

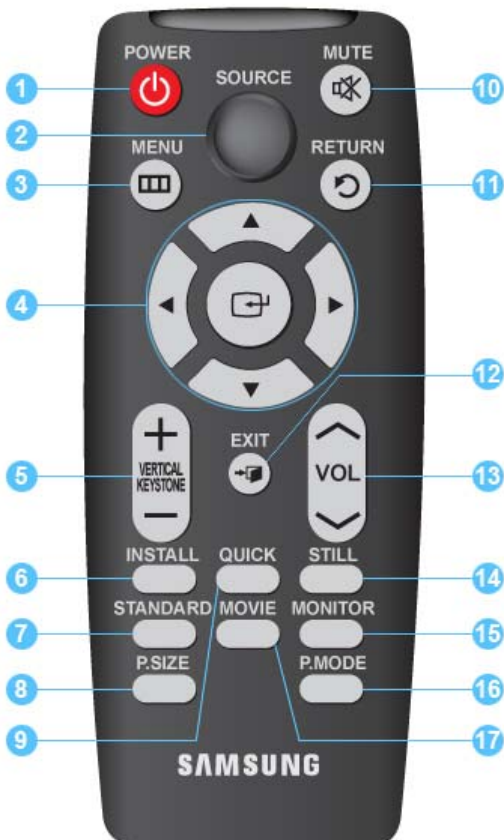

1. POWER Button (🔴)
2. SOURCE Button
3. MENU Button (☰)
4. Move (▲▼◀▶) / (🏠) Button
5. VERTICAL KEYSTONE Button (+/-)
6. INSTALL Button
7. STANDARD Button
8. P.SIZE Button
9. QUICK Button
10. MUTE Button (🔇)
11. RETURN Button (↶)
12. EXIT Button
13. VOL Button (▲▼)
14. STILL Button
15. MOVIE Button
16. P.MODE Button
17. MONITOR Button

15. [MONITOR Button](#)

16. [P.MODE Button](#)

17. [MOVIE Button](#)

1. **POWER Button** (🔌)

Use this button for turning the product on and off.

2. **SOURCE Button**

Used to check or select the connection status of external devices.

3. **MENU Button** (☰)

Used to display Menu Screen.

4. **Move**(▲▼◀▶) / (📄) **Button**

Used to move to or select each menu item.

5. **VERTICAL KEYSTONE Button** (+ -)

Use this when the screen is displayed in a trapezoid shape.

6. **INSTALL Button**

Used to flip or reverse the projected image.

7. **STANDARD Button**

Used to set the projector to the correct mode when the surroundings are somewhat bright.

8. **P.SIZE Button**

Used to adjust the size of picture screen.

9. **QUICK Button**

Use this to quickly select the last menu you used.

10. **MUTE Button** (🔇)

Press to mute the sound temporarily. Displayed on the bottom left of the screen. Press the MUTE button again or the VOL button (^v) when the sound is muted to hear sound again.

11. **RETURN Button** (↶)

Returns to the previous menu.

12. **EXIT Button**

Used to make Menu Screen disappear.

13. **VOL Button** (^v)

Adjusts the audio volume.

14. **STILL Button**

Used to see still images.

15. **MONITOR Button**

Used to set the projector to the optimal mode when used as a monitor.

16. **P.MODE Button**

Used to select Picture Mode.

17. **MOVIE Button**

Use this when the surroundings are dark.

Design and specifications of the product may be modified without prior notice for better performance.

### Specifications

 
<b>Model</b>	SP-P400	
Panel	Size	13.97 mm/0.55 inch
	Resolution	800 x 600 (SVGA)
Light Source	LED	
Power	Power Consumption	53 W
	Voltage	DC 14V 4A
Dimensions (W×H×D)	147.5 x 64.5 x 145.5 mm / 5.8 x 2.5 x 5.7 inch	
Weight	900 g / 2.0 lb	
Key Features	Brightness	150 ANSI
	Contrast	1000:1
	Screen Size (Diagonal)	20" to 80"
Input signal	Projection Range	0.68 – 2.83m
	Keystone	Vertical
	PC	1) Connector Type : 15Pin D-Sub 2) Frequency (Refer to the <a href="#">Supported Display Modes.</a> )
	VIDEO	Supported Broadcast Signals : NTSC, PAL, SECAM (PAL-60 and PAL-Nc signals are not supported.)
Voice output	1W + 1W	
User Environment	Temperature and Humidity	Operating Temperature 32 °F ~ 104 °F (0 °C ~ 40 °C), Humidity (10 % ~ 80 %)
		Storage Temperature -4 °F ~ 113 °F (-20 °C ~ 45 °C) , Humidity (5 % ~ 95 %)
Noise	30dB	



This Class B equipment is designed for home and office use. The equipment has been registered regarding EMI for residential use. It may be used in all areas. Class A is for office use. Class A is for business while class B emits less electromagnetic waves than class A.



The DMD Panel used in DLP Projectors consists of several hundred thousand micro mirrors. As with other visual display elements, the DMD Panel may include a few bad pixels. Samsung and the DMD Panel manufacturer have a rigid, bad pixel identification and limitation procedure in place and products will not exceed the maximum number of bad pixels set by our standards. Rarely, non-displayable pixels may exist, however it does not affect the picture quality nor the lifespan of the product.



### Supported Display Modes

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal /Vertical)
IBM, 640 x 350	31.469	70.086	25.175	+/-
IBM, 640 x 480	31.469	59.940	25.175	-/-
IBM, 720 x 400	31.469	70.087	28.322	-/+

MAC, 640 x 480	35.000	66.667	30.240	-/-
MAC, 832 x 624	49.726	74.551	57.284	-/-
VESA, 640 x 350	37.861	85.080	31.500	+/-
VESA, 640 x 400	37.861	85.080	31.500	+/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 640 x 480	43.269	85.008	36.000	-/-
VESA, 720 x 400	37.927	85.039	35.500	-/+
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 800 x 600	53.674	85.061	56.250	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1024 x 768	68.677	84.997	94.500	+/+
VESA, 1280 x 1024	63.981	60.020	108.000	+/+

#### Supported Resolution/Size Modes

Source		Picture Size			
Input	Mode	Normal	Zoom 1	Zoom 2	16:9
VIDEO	576i	O	O	O	O
	480i	O	O	O	O
PC	16:9 Mode	O	x	x	O
	4:3 Mode	O	x	x	O

#### Picture Position Modes

Source		Picture Position (H/V)			
Input	Mode	Normal	Zoom 1	Zoom 2	16:9
VIDEO	576i	x	x	x	x
	480i	x	x	x	x
PC	16:9 Mode	O	x	x	O
	4:3 Mode	O	x	x	O

## Basic Settings

### Installing the Projector

Install the projector so that the beam from the projector is perpendicular to the screen.



Place the projector so that the lens is at the center of the screen.

If the screen is not vertically installed, the picture on the screen may not be a rectangle.

- Do not install the screen in bright surroundings. If the screen is too bright, the picture on the screen will not be displayed clearly.
- When installing the screen in bright surroundings, use curtains.
- You can install the projector in the following locations: Front-Floor / Front-Ceiling / Rear-Floor / Rear-Ceiling.  
([To view the installation position settings](#))

#### 01 To view the picture when installing the projector behind the screen,

Install a semi-transparent screen.

Select [Menu > Setup > Install > Rear-Floor](#)



#### 02 To view the picture when installing the projector in the front of the screen,

Install the projector at the side where you are watching the screen.

Select [Menu > Setup > Install > Front-Floor](#)



### Zoom and Focus Adjustment



## 1 Focus Ring

01 Focus the picture on the screen using the Focus Ring.



⤵ If your product is installed at a location out of the specified projection distance (refer to [Screen Size and Projection Distance](#)), the focus cannot be adjusted correctly.

## 2 Leveling with Adjustable Feet



For level placing of the projector, adjust the Adjustable Feet of the projector.




⤵ You may adjust the level of the projector up to 3 degrees.

⤵ Depending on the position of the projector, Keystone distortion of image may appear.

## 3 Screen Size and Projection Distance

Install the projector on a flat, even surface and level the projector using the adjustable feet to realize optimal picture quality. If images are not clear, adjust them using the Focus Ring, or move the projector forward and backward.

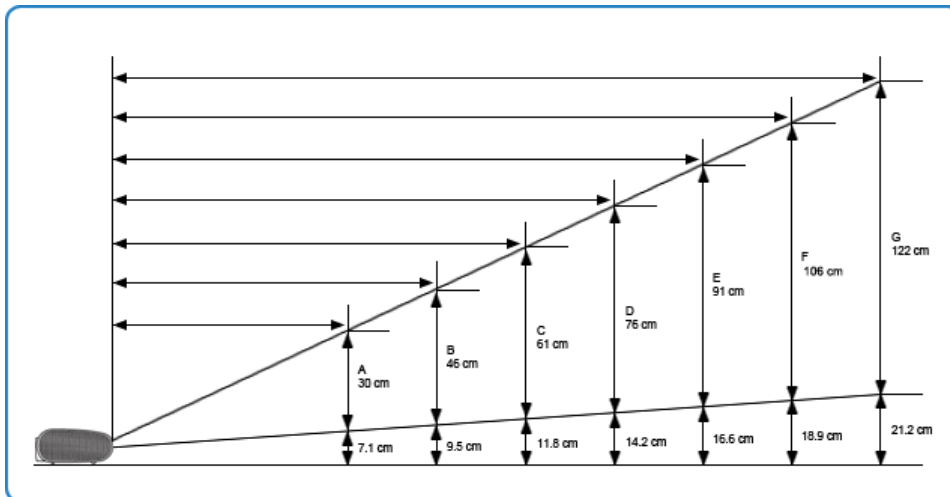

1. The screen height and diagonal length according to the projection distance

Screen position	A	B	C	D	E	F	G
Projection Range	68 cm	104 cm	140 cm	176 cm	212 cm	248 cm	283 cm
Screen height	30 cm	46 cm	61 cm	76 cm	91 cm	106 cm	122 cm
Screen diagonal length	50.8 cm	76.2 cm	101.6 cm	127 cm	152.4 cm	177.8 cm	203.2 cm


⤵ The projection distance is the horizontal distance between the projector and the screen.

2. When your P400 projector is installed at the location of the projection distance matching the screen diagonal length, you will enjoy a clear screen with no distortions (keystone).




➤ **Setting up the PC Environment** – Check the following items before connecting your PC to your projector.


1. Click the right mouse button on the Windows desktop and click on [Properties].  
<Display Properties> tab will appear.

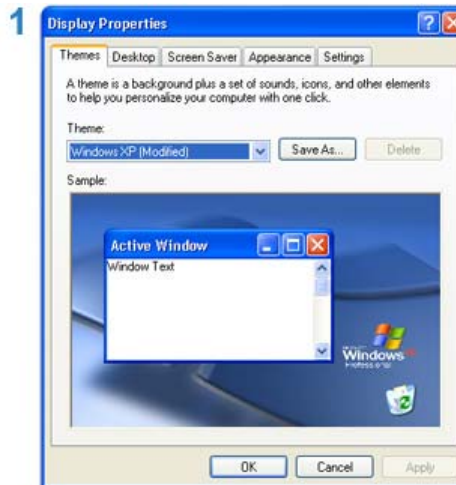

2. Click on [Settings] tab and set the <Screen resolution> by referring to <Resolution> described in [the display mode table supported](#) by this projector.  
You do not have to change <Color quality> setup.

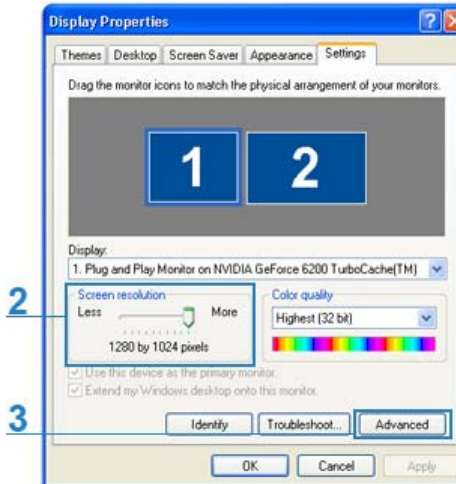

3. Press the [Advanced] button.  
Another property window will appear.

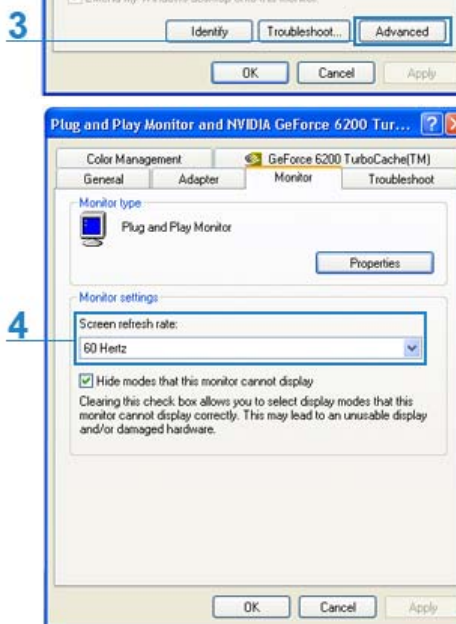

4. Click on [Monitor] tab and set the <Screen refresh rate> by referring to <Vertical Frequency> described in [the Supported Resolution/Size Modes table](#).  
Set up both the vertical and horizontal frequency instead of <Screen refresh rate>.

5. Click the [OK] button to close the window, and click the [OK] button of the <Display Properties> window to close the window.  
The computer may restart automatically.

6. Shut down the PC and connect to the projector.



- ⌘ Process might vary depending on the type of computers or Windows versions.  
(For example, [Properties] appears instead of [Properties (R)] as shown in 1.)
- ⌘ This appliance supports up to 32 bits per pixel in Color quality when it is used as a PC monitor.
- ⌘ Projected images may differ from the monitor depending on monitor manufacture or Windows versions.
- ⌘ When connecting the projector to a PC, check that PC setup complies to display settings supported by this projector. If not, there may be signal problems.

| [Basic Settings](#) | [Connecting the Power](#) | [Connecting to video equipment](#) |

## Connecting the Power



### 1. Rear of Projector

- 01** Connect the adapter to the power port.
- 02** Connect the power cord to the adapter and connect it to a wall outlet.
- 03** When the power is connected, the screen turns on automatically. Do not look at the lens while connecting the power.




- ⌘ Use only an authorized adapter.

| [Basic Settings](#) | [Connecting the Power](#) | [Connecting to video equipment](#) |

## Connecting to video equipment

### Connecting an AV Device

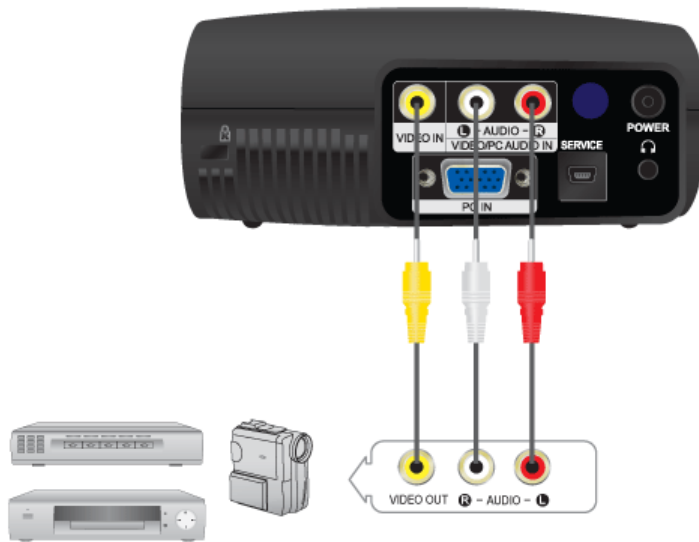

- 01**
- Connect [VIDEO IN(yellow)] input port of the projector to the VIDEO (yellow) OUT port of video equipment using the video cable.
  - Connect the [L - AUDIO - R] input port of the projector to the Audio (L), Audio (R) output ports of the external device, such as a DVD, VCR or camcorder using an audio cable.

- 02** When the connections are all completed, connect both power cables of the projector and the DVD, VCR, or camcorder.


### > Using the Projector

- 01** Turn on the projector, press the [SOURCE] button and select the image which denotes that the DVD, VCR or camcorder is connected.
- 02** If the corresponding mode is not selected, check whether the video cable is connected correctly.



⇒ Check that the projector and the video equipment are turned off before connecting cables.

### > Connecting to PC

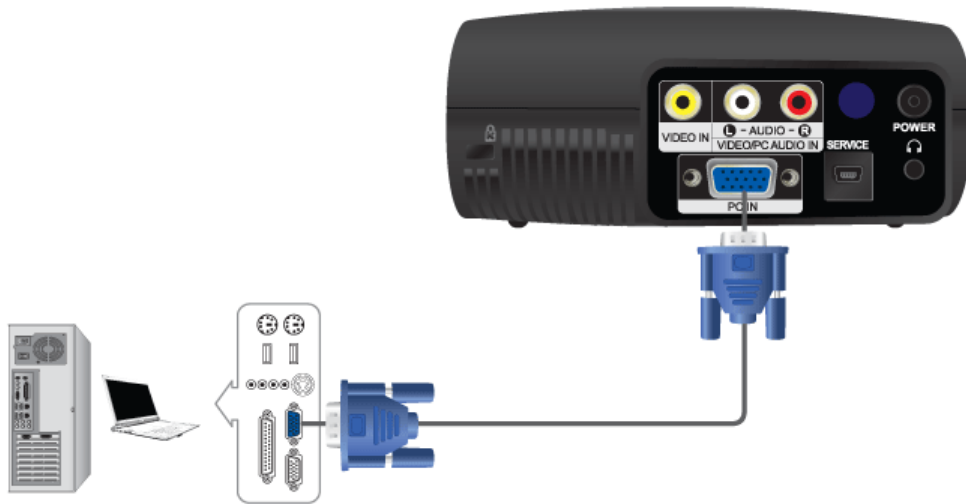

- 01 Connect [PC IN] port on the rear side of the projector to the monitor output port of the PC using a PC video cable.
- 02 When connections are all completed, connect both power codes of the projector and the PC.
- 03 Connect the [VIDEO/PC AUDIO IN] input port of the projector to the speaker output ports of the PC using an audio cable.



▶ This product supports plug and play and therefore, if you use Window XP you do not need to setup the driver on your PC.

#### ▶ Using the Projector

- 01 Turn on the projector and press the [SOURCE] button to select <PC>. PC Mode is not available, check PC video cable is in place.
- 02 Turn on the PC and [set the PC Environment](#) when necessary.
- 03 Adjust the screen. ([Auto Adjustment](#))

#### ▶ Connecting Headphones



- 01 Connect the jack of the headphones to the input terminal  on the back of the projector.

## Kensington Lock



 
The Kensington Lock is a device used to physically fix the system when using it in a public place. The locking device has to be purchased separately. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for proper use. The locking device has to be purchased separately.

- 01** Insert the locking device into the Kensington slot on the Monitor (**B**) and turn it in the locking direction (**A**).
- 02** Connect the Kensington Lock cable.
- 03** Fix the Kensington Lock to a desk or a heavy stationary object.





» For the locking device, contact our product distributor or a general appliance shop.

 **Input**






\* Click the Play(▶)/Stop(■) button in the table below to view the video file.

Screen Adjustment	Description	Play/Stop
<b>Source List</b>	You can select a device connected to the projector to display.	
1) Video	2) PC	
<b>Edit Name</b>	You can edit the names of devices connected to the projector.	
1) VCR	2) DVD	
3) Cable STB	4) HD STB	
5) Satellite STB	6) AV Receiver	
7) DVD Receiver	8) Game	
9) Camcorder	10) DVD Combo	
11) PC		

 **Picture**



\* Click the Play(▶)/Stop(◻) button in the table below to view the video file.

Screen Adjustment	Description	Play/Stop
<b>Mode</b>	<p>Select a screen state which is customized to your projector or change the screen mode as required.</p> <p><b>1) Mode</b></p> <ul style="list-style-type: none"> <li>- <b>Dynamic</b> Select this if you want the screen quality to be clearer than standard screen quality.</li> <li>- <b>Standard</b> You can comfortably view the projection screen if the surrounding is somewhat bright.</li> <li>- <b>Movie</b> Select this if your surroundings are dark. This saves energy and reduces eye fatigue.</li> <li>- <b>Monitor</b> Select this to use the screen as a monitor.</li> <li>- <b>Sports</b> Select this to view sports. You can enjoy a more vivid screen than a standard screen.</li> <li>- <b>User</b> Select this if you want to view the screen in your customized screen Mode. You can set this in <a href="#">Mode-Save</a>.</li> </ul>	 Mode
	<p><b>2) Contrast</b> : Used to adjust the contrast between the object and the background.</p> <p><b>3) Brightness</b> : Used to adjust brightness of the entire picture.</p> <p><b>4) Sharpness</b> : Used to adjust the sharpness of the picture.</p> <p><b>5) Color</b> : Used to adjust color lighter or darker.</p> <ul style="list-style-type: none"> <li>▶ <b>[PC] mode is not supported.</b></li> </ul> <p><b>6) Tint</b> : Used to obtain more natural color of objects using Green or Red enhancement.</p> <ul style="list-style-type: none"> <li>▶ <b>When the input signal is [PC] or PAL and SECAM of the [AV] mode, the Tint can't be adjusted.</b></li> </ul>	 Contrast Brightness Sharpness Color Tint
	<p><b>7) Color Temperature</b> : You can change tint of the entire screen to suit your needs.</p> <ul style="list-style-type: none"> <li>- <b>Cool2</b> : Suitable to use when the surroundings are very bright.</li> <li>- <b>Cool1</b> : Suitable to use when the surroundings are somewhat bright.</li> <li>- <b>Normal</b> : Used when creating most scenes. This presents colors most exactly.</li> <li>- <b>Warm</b> : Select this when watching a black and white movie for optimal quality.</li> </ul>	 Color Temperature

## 8) Color Gamut

- **Wide** : Displays the native color gamut of panel device.
- **Normal** : Normal Color Gamut offers flat and natural color tone.
- **SMPTE\_C** : Standardized for Video Equipment by the Society of Motion Picture and Television Engineers.
- **EBU** : Regulations and standards for European Broadcasting Production and technology, standardized by the European Broadcasting Union.



**9) Gamma** : An image compensation function that controls the settings according to the video properties.

- **Film** : The best setting for watching a film.
- **Video** : The best setting for watching a TV program.
- **Graphic** : The best setting when you have a PC connected.
- **Vivid** : The gamma mode suitable for watching a movie.



**10) Save** : Used to save custom picture settings.



**11) Reset** : Restores the mode settings to the factory defaults.



**Size** You can select a screen size according to the type of scene.

- 1) Normal
- 2) Zoom1
- 3) Zoom2
- 4) 16:9

### ► Supported Resolution/Size Modes

Source	Mode	Picture Size			
		Normal	Zoom 1	Zoom 2	16:9
VIDEO	576i	O	O	O	O
	480i	O	O	O	O
PC	16:9 Mode	O	x	x	O
	4:3 Mode	O	x	x	O



**Position** Adjust the screen position if it is not aligned.

- You can only set a position in [PC] mode.



**Digital NR** When a dotted line is displayed or the screen shakes, you can view picture in better visual quality by enabling Noise Reduction.



**Black Level** Using the Black Level function, you can set the light level of the darkest portion of the video signal so that you can clearly see dark areas on the screen.

- You can only enable Black Level in [Video] mode.

- 1) **0 IRE** : Sets the light level of the darkest portion of the video signal to low. If the setting does not match the input signal, the dark screen looks milky-white.
- 2) **7.5 IRE** : Sets the light level of the darkest portion of the video signal to high. If the setting does not match the input signal, the dark screen is saturated and may not display properly.



**Film Mode** Using this function, you can set the display mode optimized for playing movies when watching a movie. Film Mode provides optimal display settings for movies.

- You can only enable Film Mode in [Video] mode.




- 1) Off
- 2) On







\* Click the Play() / Stop() button in the table below to view the video file.

Screen Adjustment	Description	Play/Stop
<b>Install</b>	<p>To tailor the picture to the installation location, you can invert the projected images vertically/horizontally.</p> <ul style="list-style-type: none"> <li>1) <b>Front-Floor</b> : Normal Image</li> <li>2) <b>Front-Ceiling</b> : Horizontal/Vertical Reversed Image</li> <li>3) <b>Rear-Floor</b> : Horizontally Reversed Image</li> <li>4) <b>Rear-Ceiling</b> : Vertically Reversed Image</li> </ul>	
<b>V-Keystone</b>	<p>If video scenes are distorted or tilted, you can compensate for this using the vertical Keystone function.</p> <ul style="list-style-type: none"> <li>▶ As the Vertical Keystone function compensates for screen distortions via software, we recommend installing the projector so that no screen distortions occur in the horizontal and vertical directions, rather than using the vertical keystone function.</li> </ul>	
<b>Test Pattern</b>	<p>Generated by the projector itself. Utilized as standard to optimize the installation of the projector.</p> <ul style="list-style-type: none"> <li>1) <b>Crosshatch</b> : You can check whether the picture is distorted or not.</li> <li>2) <b>Screen Size</b> : You can refer to picture format sizes such as 1.33 : 1 or 1.78 : 1.</li> <li>3) <b>Red</b> : Red Screen, only for color adjustment.</li> <li>4) <b>Green</b> : Green Screen, only for color adjustment.</li> <li>5) <b>Blue</b> : Blue Screen, only for color adjustment.</li> <li>6) <b>White</b> : White Screen, only for color adjustment.</li> <li>7) <b>6500K_White</b> : White Screen, brings out the white tones for a more real white.</li> </ul> <ul style="list-style-type: none"> <li>▶ The Red/Green/Blue colors of the test patterns are only for the color adjustment procedures, and may not comply with the actual colors displayed during video playback.</li> </ul>	
<b>PC</b>	<p>Eliminates or reduces noise that causes unstable screen quality, such as screen</p>	

shaking. If the noise is not removed using Fine Adjustment, adjust the frequency to the maximum and then perform Fine Adjustment again.



Only activated in the PC environment.

- 1) **Auto Adjustment** : Used to adjust frequency and phase of PC screen automatically.
- 2) **Coarse** : Used to adjust frequency when vertical lines appear on PC screen.
- 3) **Fine** : Used to fine tune the PC screen.
- 4) **Zoom** : Used to extend PC screen from the center.
- 5) **Reset** : Using this function, you can reset the PC menu settings to the factory default settings.

► **Video Type**

If the Component video signal input through the D-SUB input port is not automatically recognized, you can set the input signal type by force.

※ For the SP-P400 model, this function is unavailable as this model does not support component input.

 
**Factory Default** Using this function, you can reset various settings to the factory default settings.



Auto Adjustment  
Coarse  
Fine  
Zoom  
Reset



**Option**



\* Click the Play(▶)/Stop(■) button in the table below to view the video file.

Screen Adjustment	Description	Play/Stop
<b>Language</b>	You can select the language used for the menu screen.	

- 1) English      2) Deutsch      3) Français      4) Italiano
- 5) Svenska      6) Español      7) Nederlands      8) Português
- 9) Türkçe      10) 中国語      11) 한국어



**Menu Position**      You can move Menu Position up/down/left/right.



**Menu Translucency**      You can set the translucency of menu.

- 1) Opaque
- 2) Low
- 3) Medium
- 4) High



**Menu Display Time**      You can set the display time of the menu.

- 1) 5 sec      5) 90 sec
- 2) 10 sec      6) 120 sec
- 3) 30 sec      7) Stay On
- 4) 60 sec



**Logo**      If Logo mode is enabled, the Samsung logo is displayed when the projector is turned on. If disabled, it is not displayed.



**Blue screen**      The Blue screen function causes the screen to change to the Blue screen if there is no signal input from the external device connected to your projector.

- 1) Off
- 2) On



**Information**      You can check external source signals, picture setup, PC picture adjustment.



## Before Contacting Service Personnel

### 2 Installation and Connection

Symptoms	Troubleshooting
No Power.	<ul style="list-style-type: none"> <li>• Check the power cable connections.</li> </ul>
I want to install my projector on the ceiling.	<ul style="list-style-type: none"> <li>• The ceiling installation support is sold separately. Contact your local product distributor.</li> </ul>
External Source can not be selected.	<ul style="list-style-type: none"> <li>• Be sure that the connection cable(s) (video) is properly connected to the proper port. If the device is not connected properly, it can not be selected.</li> </ul>

### 2 Menu and Remote Control

Symptoms	Troubleshooting
Remote control does not work.	<ul style="list-style-type: none"> <li>• Be sure that the proper external source is selected.</li> <li>• Check the remote control battery. If there is something wrong with it, replace it with a new battery of the recommended size.</li> <li>• Check whether your remote control is at a right angle and at the correct distance. Remove any obstacles between your remote control and the product.</li> <li>• Direct lighting of 3-way light bulbs or other lighting device on the remote sensor of the projector may affect the sensitivity and cause the remote control to malfunction.</li> <li>• Check if the remote control battery is empty.</li> <li>• Check whether the LED indicator on the top of the projector is turned on.</li> </ul>
I cannot select a menu.	<ul style="list-style-type: none"> <li>• Check if the menu is displayed in gray. A gray-colored menu is unavailable.</li> </ul>

### 2 Screen and External Source

Symptoms	Troubleshooting
Cannot see picture images.	<ul style="list-style-type: none"> <li>• Be sure that the power cord of the projector is connected.</li> <li>• Be sure that the proper input source is selected.</li> <li>• Check that the connectors are properly connected to the ports at the back of the projector.</li> <li>• Check the Remote Control batteries.</li> <li>• Be sure that the &lt;Color&gt;, &lt;Brightness&gt; settings are not at their lower limit.</li> </ul>
Poor color.	<ul style="list-style-type: none"> <li>• Adjust the &lt;Tint&gt; and &lt;Contrast&gt;.</li> </ul>
Images are not clear.	<ul style="list-style-type: none"> <li>• Adjust the focus.</li> <li>• Check that the projection distance is either too far or too near to the screen.</li> </ul>
Strange noise.	<ul style="list-style-type: none"> <li>• If a strange sound continues, contact our <a href="#">service center</a>.</li> </ul>
The operating LED is lit up.	<ul style="list-style-type: none"> <li>• Refer to <a href="#">Corrective Actions According to LED Indications</a>.</li> </ul>
Lines appear on screen.	<ul style="list-style-type: none"> <li>• Because noise may occur when using your PC, adjust the frequency of the screen.</li> </ul>
No external device screen is displayed.	<ul style="list-style-type: none"> <li>• Check the operating status for the external device and check whether the adjustment items, such as the Brightness and the Contrast have been changed correctly in the &lt;Mode&gt; command screen of the Projector menu.</li> </ul>

again.

Screen appears in black and white or odd color./ screen is too dark or bright.

The <Mode not supported.  
Recommended Mode: 800x600 60Hz>  
message appears.

- As mentioned above, check the adjustment items such as the Brightness, Contrast and Color in the menu.
- If you want to restore various settings to their factory defaults, run <Factory Default>from the menu.
- Set the resolution and the refresh rate for your PC display to 800x600 and 60Hz respectively.
- See the ["3. Connections" – "Basic settings" – "Setting up the PC Environment"](#) section herein for details on the setting.

## Care and Maintenance

### To clean the exterior and lens of the projector

Clean the projector using a soft dry cloth.

- ⋄ Do not clean the projector with flammable substances such as benzene, thinners or a wet cloth, as these may cause problems.
- ⋄ Do not touch the projector with a nail or any other sharp objects, as this may scratch the surface.



### To clean the interior of the projector

For cleaning the interior of the projector, ask your Service Center or a distributor.

- ⋄ Contact your distributor or a Service Center if dust or other substances are inside the projector.



## Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact a SAMSUNG customer care center.

NORTH AMERICA		
U.S.A	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CANADA	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
MEXICO	01-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>



LATIN AMERICA		
ARGENTINA	0800-333-3733	<a href="http://www.samsung.com">http://www.samsung.com</a>
BRAZIL	0800-124-421 4004-0000	<a href="http://www.samsung.com">http://www.samsung.com</a>
CHILE	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
COLOMBIA	01-8000112112	<a href="http://www.samsung.com">http://www.samsung.com</a>
COSTA RICA	0-800-507-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
ECUADOR	1-800-10-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
EL SALVADOR	800-6225	<a href="http://www.samsung.com">http://www.samsung.com</a>
GUATEMALA	1-800-299-0013	<a href="http://www.samsung.com">http://www.samsung.com</a>
HONDURAS	800-7919267	<a href="http://www.samsung.com">http://www.samsung.com</a>
JAMAICA	1-800-234-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
NICARAGUA	00-1800-5077267	<a href="http://www.samsung.com">http://www.samsung.com</a>
PANAMA	800-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
PERU	0-800-777-08	<a href="http://www.samsung.com">http://www.samsung.com</a>
PUERTO RICO	1-800-682-3180	<a href="http://www.samsung.com">http://www.samsung.com</a>
REP. DOMINICA	1-800-751-2676	<a href="http://www.samsung.com">http://www.samsung.com</a>
TRINIDAD & TOBAGO	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
VENEZUELA	0-800-100-5303	<a href="http://www.samsung.com">http://www.samsung.com</a>

EUROPE		
AUSTRIA	42 27 5755	-
AUSTRIA	0810 - SAMSUNG (7267864, €0.07/min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
BELGIUM	02-201-24-18	<a href="http://www.samsung.com/be">http://www.samsung.com/be</a> (Dutch) <a href="http://www.samsung.com/be_fr">http://www.samsung.com/be_fr</a> (French)
BOSNIA	05 133 1999	-
BULGARIA	07001 33 11	<a href="http://www.samsung.com">http://www.samsung.com</a>
CROATIA	062 SAMSUNG (062 726 7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CZECH	800 - SAMSUNG (800-726786)	<a href="http://www.samsung.com">http://www.samsung.com</a>
	Samsung Zrt., česká organizační složka, Oasis Florenc, Sokolovská 394/17, 180 00, Praha 8	
DENMARK	70 70 19 70	<a href="http://www.samsung.com">http://www.samsung.com</a>
EIRE	0818 717100	<a href="http://www.samsung.com">http://www.samsung.com</a>
ESTONIA	800-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
FINLAND	030 - 6227 515	<a href="http://www.samsung.com">http://www.samsung.com</a>
FRANCE	01 48 63 00 00	<a href="http://www.samsung.com">http://www.samsung.com</a>
GERMANY	01805 - SAMSUNG (726-7864, €0,14/Min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
HUNGARY	06-80-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
ITALIA	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
KOSOVO	+381 0113216899	-

LATVIA	8000-7267	<a href="http://www.samsung.com">http://www.samsung.com</a>
LITHUANIA	8-800-77777	<a href="http://www.samsung.com">http://www.samsung.com</a>
LUXEMBURG	261 03 710	<a href="http://www.samsung.com">http://www.samsung.com</a>
MACEDONIA	023 207 777	-
MONTENEGRO	020 405 888	-
NETHERLANDS	0900 - SAMSUNG (0900-7267864) (€0,10/Min)	<a href="http://www.samsung.com">http://www.samsung.com</a>
NORWAY	815-56 480	<a href="http://www.samsung.com">http://www.samsung.com</a>
POLAND	0 801 1SAMSUNG (172678) 022 - 607 - 93 - 33	<a href="http://www.samsung.com">http://www.samsung.com</a>
PORTUGAL	80820 - SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
RUMANIA	1. 08010 SAMSUNG (72678) - doar din rețeaua Romtelecom, tarif local; 2. 021.206.01.10 - din orice rețea, tarif normal	<a href="http://www.samsung.com">http://www.samsung.com</a>
SERBIA	0700 Samsung (0700 726 7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SLOVAKIA	0800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SPAIN	902 - 1 - SAMSUNG (902 172 678)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SWEDEN	0771 726 7864 (SAMSUNG)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SWITZERLAND	0848-SAMSUNG (7267864, CHF 0.08/min)	<a href="http://www.samsung.com/ch">http://www.samsung.com/ch</a> <a href="http://www.samsung.com/ch_fr">http://www.samsung.com/ch_fr</a> (French)
U.K	0330 SAMSUNG (7267864)	<a href="http://www.samsung.com">http://www.samsung.com</a>

CIS		
ARMENIA	0-800-05-555	-
AZERBAIJAN	088-55-55-555	-
BELARUS	810-800-500-55-500	-
GEORGIA	8-800-555-555	-
KAZAKHSTAN	8-10-800-500-55-500 (GSM: 7799)	<a href="http://www.samsung.com">http://www.samsung.com</a>
KYRGYZSTAN	00-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
MOLDOVA	00-800-500-55-500	-
RUSSIA	8-800-555-55-55	<a href="http://www.samsung.com">http://www.samsung.com</a>
TADJIKISTAN	8-10-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>
UKRAINE	0-800-502-000	<a href="http://www.samsung.com/ua">http://www.samsung.com/ua</a> <a href="http://www.samsung.com/ua_ru">http://www.samsung.com/ua_ru</a>
UZBEKISTAN	8-10-800-500-55-500	<a href="http://www.samsung.com">http://www.samsung.com</a>

ASIA PACIFIC		
AUSTRALIA	1300 362 603	<a href="http://www.samsung.com">http://www.samsung.com</a>
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	<a href="http://www.samsung.com">http://www.samsung.com</a>
CHINA	400-810-5858 010-6475 1880	<a href="http://www.samsung.com">http://www.samsung.com</a>



HONG KONG	(852) 3698-4698	<a href="http://www.samsung.com/hk">http://www.samsung.com/hk</a> <a href="http://www.samsung.com/hk_en/">http://www.samsung.com/hk_en/</a>
INDIA	3030 8282 1800 110011 1800 3000 8282 1800 266 8282	<a href="http://www.samsung.com">http://www.samsung.com</a>
INDONESIA	0800-112-8888 021-5699-7777	<a href="http://www.samsung.com">http://www.samsung.com</a>
JAPAN	0120-327-527	<a href="http://www.samsung.com">http://www.samsung.com</a>
MALAYSIA	1800-88-9999	<a href="http://www.samsung.com">http://www.samsung.com</a>
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	<a href="http://www.samsung.com">http://www.samsung.com</a>
SINGAPORE	1800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
TAIWAN	0800-329-999	<a href="http://www.samsung.com">http://www.samsung.com</a>
THAILAND	1800-29-3232 02-689-3232	<a href="http://www.samsung.com">http://www.samsung.com</a>
VIETNAM	1 800 588 889	<a href="http://www.samsung.com">http://www.samsung.com</a>

MIDDLE EAST		
BAHRAIN	8000-4726	<a href="http://www.samsung.com">http://www.samsung.com</a>
EGYPT	08000-726786	<a href="http://www.samsung.com">http://www.samsung.com</a>
JORDAN	800-22273	<a href="http://www.samsung.com">http://www.samsung.com</a>
MOROCCO	080 100 2255	<a href="http://www.samsung.com">http://www.samsung.com</a>
OMAN	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SAUDI ARABIA	9200-21230	<a href="http://www.samsung.com">http://www.samsung.com</a>
TURKEY	444 77 11	<a href="http://www.samsung.com">http://www.samsung.com</a>
U.A.E	800-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>

AFRICA		
NIGERIA	0800 - SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>
SOUTH AFRICA	0860-SAMSUNG (726-7864)	<a href="http://www.samsung.com">http://www.samsung.com</a>



✧ **Gamma Mode**

Gamma Mode compensates the video signal produced for analog display devices such as a CRT (Cathode Ray Tube) so that the video signal can be clearly displayed on a digital display device.

✧ **Black Level**

Black Level sets the light level of the darkest portion of the video signal to match that of the display's black level capability so that users can clearly view dark visuals. If the setting does not match the input signal, the dark screen is saturated and may not display properly or the dark screen looks milky-white.

✧ **VIDEO IN Port**

A COMPOSITE IN Port is a general video input port (yellow). Both chrominance and luminance are transmitted on the same 75-ohm cable.

✧ **Color Standard**

A pre-determined default color standard determined by the broadcasting standard of the corresponding country or area.

✧ **Color Temperature**

Color temperature is a simplified way to characterize the spectral properties of a light source. A low color temperature implies a warmer (more yellow/red) light while a high color temperature implies a colder (more blue) light.

✧ **Vertical Keystone**

This correction function is used when vertical distortion of the projected picture occurs. Vertical distortion refers to the distortion of the projected picture when the beam from the projector is not perpendicular to the screen. You can view pictures more comfortably by correcting the distortion using the Vertical Keystone function.

✧ **Analog Broadcast**

An existing broadcasting signal transmitted by a broadcasting station in accordance with the NTSC standard.

✧ **Overscan**

Overscan cuts the edge of the picture when there is unnecessary information, images or noise at the edge of the picture. For extremely poor video signals, some unnecessary video signals may be displayed on the screen.

✧ **External Input**

External Input is connecting video devices such as a VCR, camcorder, DTV receiver, DVD, etc. to the projector as a video source.

✧ **Satellite Broadcast**

Satellite Broadcast broadcasts programs via satellite so that the program can be viewed in all area in a high visual and sound quality. Approximately 100 channels including public broadcast channels are provided. To view satellite broadcasts, you have to install an additional receiver.

✧ **Cable Broadcast**

Cable Broadcast broadcasts programs via cable instead of radio waves. To view cable broadcasts, you have to subscribe to your local cable broadcast service provider and install an additional receiver.

✧ **Projected Picture**

A picture projected by the projector onto the screen.

✧ **Resolution**

Pixels are a number of horizontal / vertical dots making up the TV screen. The resolution represents the number of pixels on a screen. Since, the more pixels there are, the more information is displayed, select a higher resolution when you wish to view multiple tasks simultaneously.

For example, if the resolution is 800 \* 600, this means the width of the screen consists of 800 dots (Horizontal Resolution) and the height of the screen consists of 600 lines (Vertical Resolution).

✧ **ANSI**

Abbreviations of the American National Standards Institute

✧ **ANSI Lumen**

Unit of brightness as defined by the American National Standards Institute. This value is determined as follows: project light onto a 40-inch screen, divide the screen into 9 rectangles and measure the average brightness of each of the rectangles. Since the brightness at the center is generally different from that of the edges, ANSI Lumen provides a more precise measure of the projector brightness than LUX.

✧ **AV Receiver**

An AV Receiver provides a number of input and output interfaces for audio and video so as to enable the user to connect and use various input and output devices.

✧ **Backwards Compatible**

Backwards compatibility for previous computer models. The SVGA (800\*600) projector provides backwards compatibility for SVGA and VGA (640\*480) computers.

- ✧ **Compression Mode**  
A mode that displays video in a zoomed out format.
- ✧ **Contrast Ratio**  
The ratio of the brightest and dimmest points that can be displayed on the screen.
- ✧ **Convergence**  
The alignment of the Red, Green and Blue video signals on the projected picture on the screen.
- ✧ **Display Size**  
The Display Size is determined by the diagonal length of the LCD panel.
- ✧ **DVD (Digital Versatile Disc)**  
Digital media developed to provide the advantages of CD and LD. DVD provides high quality video and audio.
- ✧ **DLP (Digital Light Processing)**  
DLP is a digital display technology using a DMD panel developed by TI (Texas Instruments) of the United States.
- ✧ **DLP HD2, DC2, DC3**  
This is a grade of DMD panel.
- ✧ **DMD (Digital Micromirror Device)**  
A DMD panel is an implementation of DLP technology. It consists of microscopic mirrors where each mirror represents a pixel.
- ✧ **EGA**  
Enhanced Graphics Array. EGA provides enhanced graphics quality in IBM PC, XT and AT as a CGA card. (640x350 pixels for all modes)
- ✧ **Hz (kHz, MHz)**  
Hertz (Kilohertz, Megahertz). Frequency per second. (Kilo: 1,000, Mega: 1 million) Hz is used to represent the frequency of electric signals.
- ✧ **NTSC**  
National Television Standards Committee. A TV and video signal transmission standard developed in North America in 1953. 525lines / 60 Hz
- ✧ **PAL**  
Phase Alternate Line. A method to transmit and receive color line by line. PAL is widely used in Western European countries. 625lines / 50 Hz
- ✧ **SECAM**  
Sequential Couleur Avec Memorie. A method developed in France to transmit and receive the color TV broadcasting. SECAM is mainly used in France and Eastern European countries. 625 lines / 50 Hz
- ✧ **Super VGA (SVGA)**  
SVGA provides a graphics resolution of 800x600 pixels. This standard includes a vertical frequency version.
- ✧ **VGA**  
Video Graphics Array. Standard output interface for IBM PS/ 2. An analog graphics card developed by IBM that supports 720x400 pixels resolution in text mode and 640x480 pixels for graphics mode. (Other graphics cards process digital data.)
- ✧ **Video**  
The picture projection capability of a PC with a VCR, Laser disk or CD-ROM drive.
- ✧ **XGA**  
Extended Graphics Adapter. A graphics standard developed by IBM. XGA includes VGA standard and provides 1024x768 pixels of resolution.

Information in this document is subject to change without notice.  
© 2009 Samsung Electronics Co., Ltd. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.