

Operating Instructions

1. Check if the heating plates are clean and dust-free.If necessary ,wipe them with damp cloth
2. Uncoil the cable completely
3. Place the appliance on a flat, level surface and slide the locking clip open
4. Open the appliance and place your sandwich on the lower plate. Always place th sandwich toward the rear end of the plate.
5. Close the upper plate, and lock it with the height control.The heating plates mu: be in a closed position before connecting with supplier mains.
6. Insert the plug into a mains socket .The red operating lamp is on.
7. Allow green lamp on and off during operation.
8. Depending on the thickness of your sandwich, takes approx.5-8 minutes.
9. After toasting, open the upper plate,and lock it with the height control.Remov your sandwich with a wooden or plastic spatula.
10. After using, pull out the plug .Open the upper lid and let it get cool.

Cleaning Instructions

1. Be aware that parts of the appliance become very hot during operation. Make sur that the appliance is switched off, unplugged and sufficiently cooled down befor cleaning or storage.
2. Wipe the heating plates with a soft damp cloth. If this fails to remove all residue soften them with a little oil
3. Do not use any spray-on metal objects as they would damage the non-stic coating.

Continental[®]
E l e c t r i c

INSTRUCTION MANUAL



PANINI GRILL

**MODEL:
CM43505**

IMPORTANT SAFEGUARDS

1. Read this instruction manual very carefully before operating the appliance for the first time.
2. Keep this instruction manual, the packing and your receipt. If you give or sell the product to a third party, please make sure that you also hand out this instruction manual.
3. This appliance is strictly designed for private use and do not fit a commercial use.
4. The appliance is not intended for use by young children or infirm persons without supervision.
5. Do not use the appliance outdoors. Keep it away from sources of heat, direct sunlight, open fire or high humidity and never operate it with wet hands.
6. Always pull the plug from the socket, when you do not use it or when you clean it. Always pull the plug, not the cable.
7. Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances, make sure that the cables are not hanging down and children do not have access to the appliance.
8. Do not immerse the appliance in water or any other liquids.
9. Never use the appliance if it is damaged.
10. Never use the appliance if you detect a faulty cable or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly person in order to avoid a hazard.
11. Do not try to repair the appliance on your own. Always contact our service agent to have a faulty appliance repaired or replaced.
12. Only use the appliance for the intended purpose.

SAVE THESE INSTRUCTIONS

SAFETY INSTRUCTIONS

1. Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that the hot steam can disappear.
2. The temperature of the outer surface may be high when the appliance is operating. Please do not touch the outer surface by your hand.
3. To avoid the danger of fire, never leave the appliance unattended.
4. Before connecting with supplier mains, the heating plates must be in a closed position.
5. It is not allowed that let the upper plate be at the highest position and only use the lower plate as cooking plate to roast small foodstuffs, such as a chicken breast.

Before the first use

After unpacking the device you should clean the heating plates (see below for further instructions). The first heating process should take place without any foodstuffs. Let it heat for about ten minutes. There may be a slight development of smoke or smell. This is caused by production residues and it's harmless.