

1. PRECAUTIONS FOR USE	13
2. TIPS FOR SCRAPPING– SAFEGUARDING THE ENVIRONMENT	14
3. SAFETY PRECAUTIONS	15
4. PRESCRIBED USE OF THE APPLIANCE	16
5. KNOW YOUR APPLIANCE	16
6. BEFORE INSTALLATION	16
7. DESCRIPTION OF CONTROLS	17
8. CARE AND MAINTENANCE	18
8.1 Cleaning the stainless steel	18
8.2 Routine daily cleaning	18
8.3 Food stains or residues	18
8.4 Cleaning the glass-ceramic surface	18
8.5 Cleaning the tray	18
9. INSTALLING THE APPLIANCE	19
9.1 Technical specifications data plate	19
9.2 Electrical connection	19
9.3 Overall dimensions	20
9.4 Positioning the hotplate	20
9.5 Levelling the hotplate	20



INSTRUCTIONS FOR THE USER: these contain user advice, description of the commands and the correct procedures for cleaning and maintenance of the appliance.



INSTRUCTIONS FOR THE INSTALLER: these are for the **qualified technician** who must install the appliance, set it functioning and carry out an inspection test.

1. PRECAUTIONS FOR USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE AND THEREFORE MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE APPLIANCE.

WE ADVISE YOU READ THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN CAREFULLY BEFORE USING THE APPLIANCE. THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USES AND CONFORMS TO EEC DIRECTIVES CURRENTLY IN FORCE. THE APPLIANCE IS DESIGNED FOR THE FOLLOWING FUNCTIONS: TO GRIDDLE FOOD (HAMBURGERS, CHOPS, SAUSAGES, EGGS, FISH, VEGETABLES ETC) AND TOASTING SANDWICHES AND FILLED ROLLS; ANY OTHER USE IS TO BE CONSIDERED IMPROPER. DO NOT USE IT TO HEAT POTS AND PANS. **THE MANUFACTURER DECLINES ALL LIABILITY FOR IMPROPER USE.**



NEVER USE THIS APPLIANCE FOR THE PURPOSE OF HEATING .



DO NOT LEAVE THE PACKAGING MATERIALS UNATTENDED IN THE HOME ENVIRONMENT. SEPARATE THE DIFFERENT WASTE MATERIALS FROM THE PACKAGING AND DELIVER THEM TO THE NEAREST COLLECTION CENTRE FOR RECYCLABLE WASTE.



WHEN DISPOSING OF THE APPLIANCE, TAKE IT TO A COLLECTION CENTRE FOR RECYCLABLE WASTE.



DO NOT OBSTRUCT ANY VENTILATION OPENINGS OR COOLING VENTS.



THE DATA PLATE, WITH TECHNICAL DATA, REGISTRATION NUMBER AND BRAND NAME, IS POSITIONED AT A VISIBLE POINT ON THE REAR OF THE APPLIANCE.

THIS DATA PLATE MUST NEVER BE REMOVED.



TAKE CARE NOT TO SPILL SUGAR OR SWEET SUBSTANCES ON THE HOTPLATE WHILE COOKING, AND NOT TO PLACE MATERIALS OR ITEMS THAT COULD MELT (PLASTIC OR ALUMINIUM FOIL); IF THIS HAPPENS, SWITCH THE APPLIANCE OFF IMMEDIATELY IN ORDER TO PROTECT THE SURFACES, THEN ONCE THE HOTPLATE HAS COOLED SUFFICIENTLY BUT IS STILL WARM, CLEAN USING THE SCRAPER PROVIDED. **IF THE GLASS CERAMIC SURFACE IS NOT CLEANED IMMEDIATELY, THE DEPOSITS MAY BECOME BAKED ON AND PROVE IMPOSSIBLE TO REMOVE ONCE THE SURFACE IS COLD.**



DO NOT PLACE OBJECTS OR CLOTHS ON THE CLOSED APPLIANCE, ESPECIALLY WHILE IT IS WORKING.



BEFORE ANY KIND OF COOKING, ALWAYS LOWER THE LID; ONLY RAISE IT BRIEFLY.



IT IS BEST TO POSITION THE HOTPLATE LEAVING THE REAR SECTION SLIGHTLY HIGHER THAN THE FRONT. SEE PARAGRAPH "9.5 Levelling the hotplate"



The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from non-observance of the above prescriptions or from tampering with any part of the appliance or for the use of non-original spare parts.



2. TIPS FOR SCRAPPING– SAFEGUARDING THE ENVIRONMENT

The packaging materials used for our products are non-pollutant, eco-friendly and recyclable. Please dispose of the packaging materials responsibly. Ask your dealer or competent local authority for the addresses of local recycling plants or collection centres for waste disposal and scrapping.

Do not discard the packaging or parts thereof in the environment. In the hands of young children, packaging materials can cause suffocation, plastic bags in particular.

Even when scrapping your old appliance, do so responsibly!

Important: deliver it to your local centre authorized for the scrapping of electrical appliances. Proper scrapping allows sensible recovery of valuable materials.

3. SAFETY PRECAUTIONS



ELECTRICAL CONNECTION: SEE INSTALLATION INSTRUCTIONS FOR SAFETY REGULATIONS PERTAINING TO ELECTRICAL APPLIANCES. IN THE INTERESTS OF SAFETY, THE LAW REQUIRES THAT INSTALLATION AND MAINTAINANCE OF ELECTRICAL APPLIANCES BE CARRIED OUT BY COMPETENT PERSONS IN ACCORDANCE WITH CURRENT REGULATIONS. OUR RECOGNIZED INSTALLERS PROVIDE A GUARANTEE OF GOOD WORKMANSHIP. ELECTRICAL APPLIANCES MUST ONLY BE DISMANTLED BY A QUALIFIED ELECTRICIAN.




THE PLUG TO BE CONNECTED TO THE POWER SUPPLY CABLE AND THE SOCKET MUST BE OF THE SAME TYPE AND MUST CONFORM TO CURRENT REGULATIONS.

THE POWER SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS POSITIONED.

NEVER UNPLUG THE APPLIANCE BY PULLING THE POWER SUPPLY CABLE.



THIS APPLIANCE MUST NOT BE INSTALLED ON TOP OF OTHER APPLIANCES, BUT ON A WORKTOP.

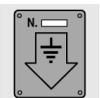

REGULATIONS REQUIRE THAT THE APPLIANCE IS EARTHED IN ACCORDANCE WITH ELECTRICAL SAFETY REGULATIONS.



ALWAYS CHECK THAT THE CONTROL KNOBS ARE TURNED TO 0 (OFF) WHEN YOU HAVE FINISHED USING THE APPLIANCE.



IMMEDIATELY AFTER INSTALLATION, CARRY OUT A BRIEF INSPECTION TEST OF THE APPLIANCE, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE POWER SUPPLY AND CONTACT YOUR NEAREST AFTER-SALES ASSISTANCE CENTRE.

NEVER ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.



DURING USE, THE GLASS CERAMIC HOTPLATE BECOMES VERY HOT. MAKE SURE YOU NEVER TOUCH IT WITH YOUR HANDS.

EVEN WHEN VERY HOT, THE GLASS CERAMIC HOTPLATES MAY NOT SEEM HOT, THEREFORE BE VERY CAREFUL WHENEVER TOUCHING THEM WITH BARE HANDS.



THE APPLIANCE IS DESIGNED FOR PROFESSIONAL USE BY TRAINED PERSONNEL. DO NOT ALLOW CHILDREN TO GO NEAR OR PLAY WITH THE APPLIANCE.



NEVER, UNDER ANY CIRCUMSTANCES, PLACE ALUMINIUM FOIL OR PLASTIC CONTAINERS ON THE HOTPLATE.



NEVER ATTEMPT TO REPAIR THE APPLIANCE YOURSELF. ALL REPAIRS MUST BE CARRIED OUT BY AN AUTHORIZED TECHNICIAN OR AN AUTHORIZED AFTER-SALES SERVICE CENTRE. IN THE EVENT OF MALFUNCTION, DISCONNECT THE APPLIANCE FROM THE POWER SUPPLY.



IF YOU NOTICE ANY CRACKS OR DAMAGE TO THE SURFACE OF THE GLASS CERAMIC HOTPLATE, IMMEDIATELY DISCONNECT THE APPLIANCE FROM THE POWER SUPPLY AND CONTACT AN AUTHORIZED AFTER-SALES SERVICE CENTRE.



WHEN DISPOSING OF THE APPLIANCE, TAKE IT TO A COLLECTION CENTRE FOR RECYCLABLE WASTE.



The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from non-observance of the above prescriptions or from tampering with any part of the appliance or for the use of non-original spare parts.



4. PRESCRIBED USE OF THE APPLIANCE


The appliance is designed for cooking and heating food such as chops, eggs and similar fare, and for toasting sandwiches and filled rolls. It must not be used to heat pots and pans of any material whatsoever. The appliance is designed and manufactured for professional use and conforms to all current relevant EEC directives. The manufacturer declines all liability for damage or injury resulting from improper use of the appliance.




Attention:

The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from non-observance of the above prescriptions or from tampering with any part of the appliance or for the use of non-original spare parts.

5. KNOW YOUR APPLIANCE

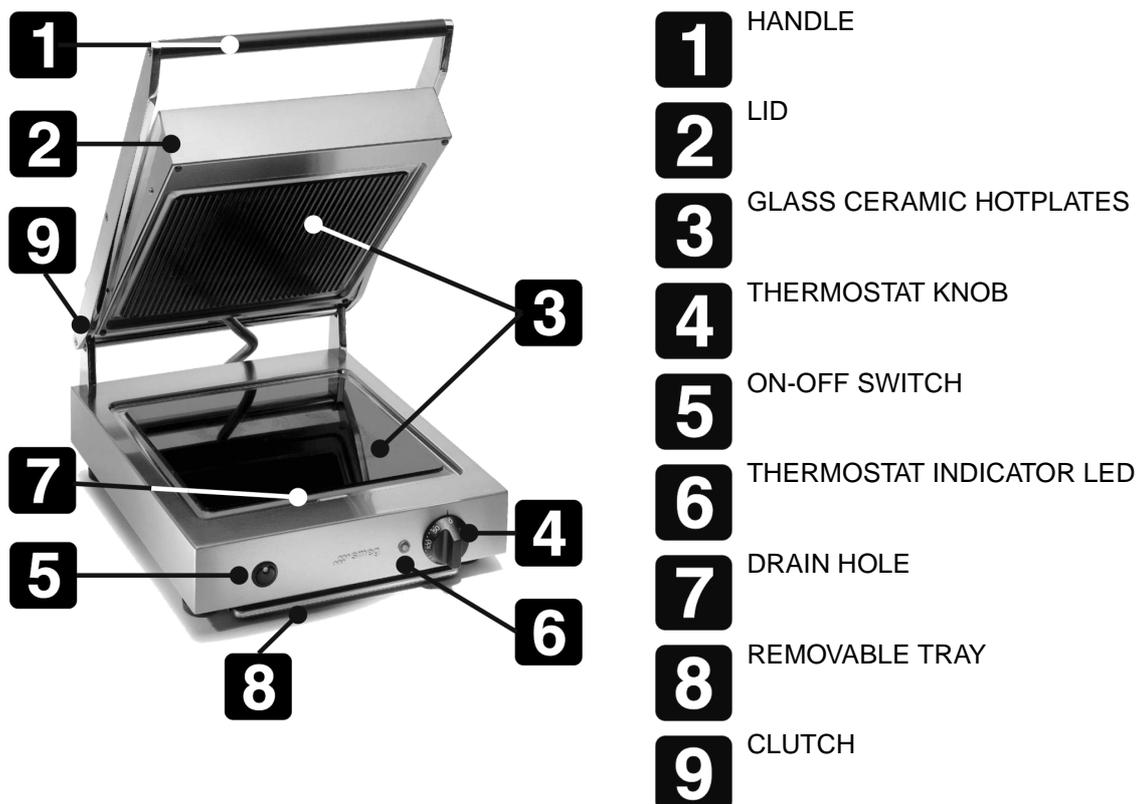

6. BEFORE INSTALLATION

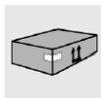

Do not leave the packaging materials unattended. Separate the different waste materials of the packaging and deliver them to the nearest collection centre for recyclable waste.



We advise you clean the appliance before use in order to remove any residue from manufacturing. For more details on cleaning, see chapter "8. CARE AND MAINTENANCE".



Before cooking for the first time, clean the cooking hotplate. Subsequently, switch the hotplate on for 5 minutes at the highest setting. This will help eliminate "the new smell" and will burn off any humidity that might have built up inside the heating elements.

Remove all REMOVABLE labels and protective films from the appliance.

To switch on the hotplate, follow the instructions given in paragraph "7. DESCRIPTION OF CONTROLS".




Instructions for the user

GB-IE

7. DESCRIPTION OF CONTROLS


THERMOSTAT KNOB

To select the cooking temperature, turn the thermostat knob clockwise to the desired setting, between **50°C** and **350°C**.

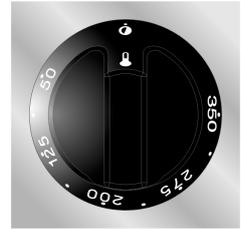


THERMOSTAT INDICATOR LED

The thermostat led lights up when the hotplate is heating. It switches off again upon reaching the set temperature. The led flashes intermittently to indicate that the temperature of the hotplate is being maintained at the set level.

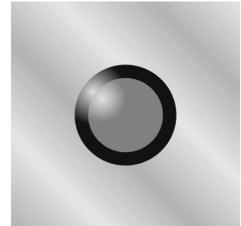

ON-OFF BUTTON

This button switches on the hotplates, which are nonetheless controlled using the thermostat knob. If the thermostat knob is set to 0, and you set the button to 1, the hotplates will not heat up.

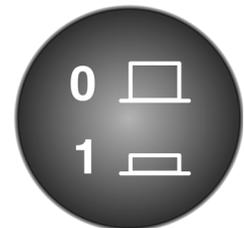



8. CARE AND MAINTENANCE

Before any intervention, disconnect the appliance from the mains.



8.1 Cleaning the stainless steel

Do not use a jet of water to clean the appliance.



To keep stainless steel in good condition it should be cleaned regularly each time the hotplate is used. Let it cool first.

8.2 Routine daily cleaning

To clean and preserve the stainless steel surfaces, always use **only** specific products that do not contain abrasives or chlorine-based acids.

Use: pour the product on a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or chamois leather.

8.3 Food stains or residues

Under no circumstances must metallic scourers or sharp scrapers be used: they will damage the surface.

Use normal non-abrasive products, and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or chamois leather.




8.4 Cleaning the glass-ceramic surface

The glass-ceramic surface must be cleaned regularly, preferably after every use.




If burnt-on residue is present after cooking, remove it with the scraper provided, rinse with water and dry thoroughly with a clean cloth. Regular use of the scraper significantly reduces the need to use chemical products for daily cleaning of the hotplate. Never under any circumstances use abrasive or corrosive detergents (e.g. abrasive powders, oven sprays, stain removers or metallic scourers).

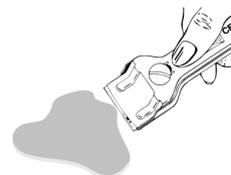

8.5 Cleaning the tray


Below the hotplate, at the front, is a steel tray designed to collect the grease and juices that are produced when cooking meat and which drain away through the hole "A". Before cooking, it is advisable to pour some water into the tray to facilitate subsequent cleaning operations.

The tray can be removed completely by sliding it out of its runners, and washed in the dishwasher.

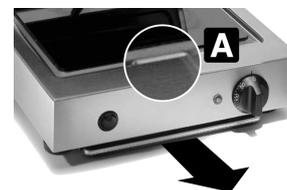

8.6 Adjusting the clutch

Over time, the clutch mechanism installed to prevent quick or accidental closure of the lid may become slack. In this case, simply use a D4 Allen key to re-tighten the clutch mechanism on the underside of the lid.

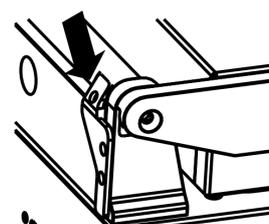




9. INSTALLING THE APPLIANCE




The hotplate must be installed on a horizontal worksurface, and must be freestanding. The distance from the rear wall must allow easy access to the terminal board in order to allow connection of the power supply cable.

Installation must be carried out by a qualified technician and in accordance with current EEC regulations.

9.1 Technical specifications data plate

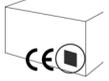


Make sure that the voltage and capacity of the power supply cable conform to the data shown on the plate located under the protective cover. **Do not remove this plate for any reason.**

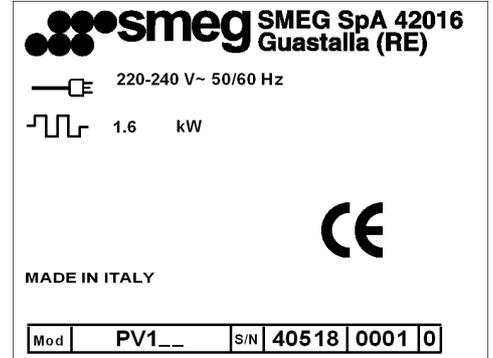

9.2 Electrical connection



Regulations require that the appliance is earthed in accordance with electrical safety regulations.

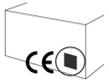

Make sure that the voltage and capacity of the power supply cable conform to the data shown on the plate located on the rear of the appliance. **Do not remove this plate for any reason.**

The hotplate comes supplied with a 3-pole H07RN-F cable for use at **220-240V~** and with a power plug.



The cable provided is 3-pole 3 x 1.5 mm² type H07RN-F.

In order to avoid any risks, have the power cable replaced if necessary by a qualified electrician only.



If using a permanent connection, install an all-pole disconnect switch on the line with a minimum contact gap of **3 mm**, located at an easily accessible position near the appliance.



If using a power plug and socket connection, ensure these are of the same type. Do not use reducers, adapters or shunts since they could caused overheating or burns.

9.2.1 Safety thermostat

The appliance is equipped with a safety device that trips in the event of serious malfunction. To reset the safety device, contact the after-sales technical service.




The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from non-observance of the above prescriptions or from tampering with any part of the appliance.



9.3 Overall dimensions

The overall dimensions of the appliance when open and closed are specified below.

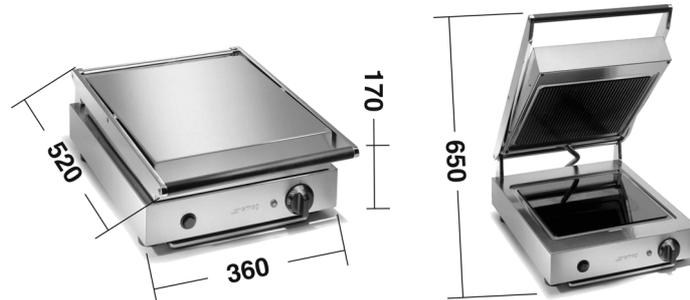

9.4 Positioning the hotplate




There are a few things to bear in mind when positioning the hotplate.

Leave a distance of at least 50 mm between the appliance and the rear and side walls.

Surfaces close to the appliance must be of non inflammable material or covered with a non-flammable heat insulating material. Pay particular attention to fire prevention measures.

If two hotplates are positioned side by side, leave a gap of at least 6-7 mm between them.

They can also be connected using the special bracket and screws provided with each product. There are two holes at the front underneath the hotplate specially for joining the appliances together, maintaining the minimum safety distance.

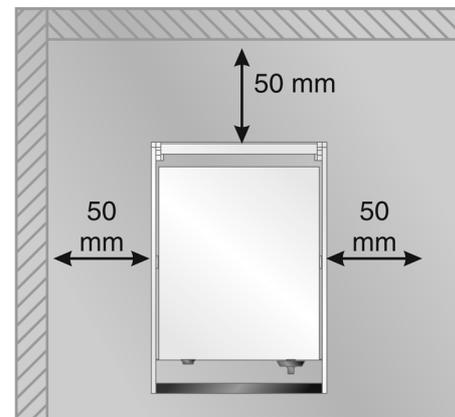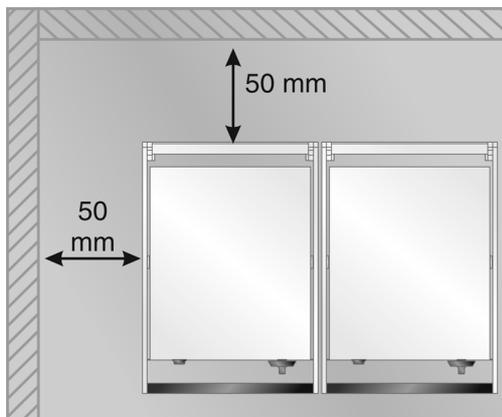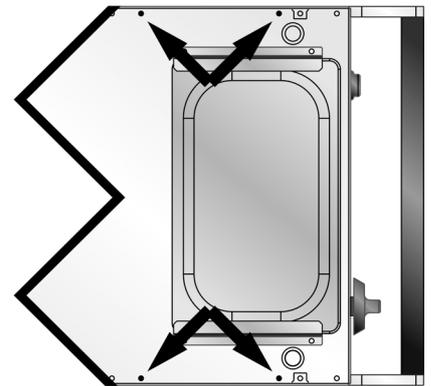

9.5 Levelling the hotplate

The hotplate is equipped with height-adjustable feet front and back.

It is advisable to leave the rear section slightly higher so that the product tilts forward, allowing grease and cooking juices to run to the front of the hotplate and drain through the hole into the drip tray, which can then be removed and washed separately.

