



MANUAL DE INSTRUCCIONES
CAFETERA ELÉCTRICA (8 TAZAS)
ED-1237



ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

INTRODUCCIÓN	2
 INSTRUCCIONES DE SEGURIDAD	2
INSTRUCCIONES DE OPERACIÓN	2
PREPARACIÓN DE CAFÉ	2
FUNCIÓN DE TETERA U OLLA	3
LIMPIEZA Y MANTENIMIENTO	3
DIAGRAMA DE CIRCUITOS	3

	PRECAUCIÓN	
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA		
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
	Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.	
	Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

INTRODUCCIÓN

Con el fin de que obtenga el mayor desempeño de su cafetera por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo.

! INSTRUCCIONES DE SEGURIDAD

- No toque las partes calientes.
- Utilice guantes para protección.
- No coloque la unidad o el cable en el agua.
- Mantenga la unidad lejos del alcance de los niños y mantenga una estricta supervisión si ellos se encuentran cerca.
- Desconecte el cable cuando no la esté utilizando y antes de hacer la limpieza.
- No utilice la unidad si observa algún daño en el cable.
- No intente reparar la unidad usted mismo. Remita todo mantenimiento o reparación a personal de servicio técnico calificado.
- Utilice sólo accesiones recomendados por nuestra compañía.
- No utilice en exteriores.
- No permita que el cable cuelgue o toque superficies calientes.
- No coloque la unidad cerca de superficies muy calientes, gas o quemadores eléctricos.
- Conecte el cable antes de encender la unidad.
- Al desconectar el cable, hágalo del enchufe más no del cable.
- No utilice esta unidad para fines distintos a los que fue diseñada.
- No retire la tapa mientras el café está en preparación.
- No se recomienda el uso de extensiones eléctricas para conectar la unidad. Sin embargo, si necesita conectar una extensión, tenga en cuenta el voltaje y al mismo tiempo ubíquela de tal forma que no sea un obstáculo o se corra el riesgo de enredarse.
- El enchufe del cable de poder tiene está polarizado, es decir, que una pata es más gruesa que la otra. Al conectarlo, solo puede entrar en una posición al tomacorriente. Si no es posible conectarlo, entonces gírelo para que coincidan los orificios. Si aún no es posible, se requiere un cambio de toma eléctrica. Contacte a un técnico en esta área para que le ayude.
- No utilice el cable con una extensión, a menos de que empate efectivamente.
- No altere el diseño del enchufe para que lo pueda conectar.

INSTRUCCIONES DE OPERACIÓN

PREPARACIÓN DE CAFÉ

1. Introduzca el tubo en el recipiente hasta que quede recto.
2. Retire la tapa, el recipiente y la base. Llene con agua fresca hasta el nivel deseado indicado en el interior de la cafetera. No utilice agua caliente.
3. Vierta el café a su gusto en el recipiente, colóquelo dentro de la cafetera y ponga la tapa. (El diseño especial de la tapa distribuye el agua sobre el café. No se requiere recipiente perforado).
4. Conecte la cafetera al tomacorriente para comenzar la preparación.
5. Cuando el café esté listo, la temperatura disminuirá y mantendrá el café a una temperatura perfecta tanto tiempo como permanezca conectada al tomacorriente.
6. Sirva un delicioso café.



NOTA

Nunca conecte la cafetera sin líquido o sin café. Esto puede dañarla y además anular la garantía.

FUNCIÓN DE TETERA U OLLA

Caliente o hierva agua o comida.

1. Conecte el cable al tomacorriente. (No utilice corriente directa.)
2. Caliente hasta la temperatura deseada.
3. Si desea que hierva, una vez que alcance esta temperatura, desconecte el cable.
4. No permita que la tetera siga calentándose si no hay nada en el interior.

LIMPIEZA Y MANTENIMIENTO


1. Desconecte la unidad antes de hacer la limpieza.
2. Retire cualquier cantidad de líquido que quede en el interior.
3. Lave el interior de la unidad con agua caliente jabonosa. Haga lo mismo con la tapa.
4. Limpie el recipiente y el tubo del café de la misma forma al igual que la parte externa de la cafetera.
5. Seque los elementos completamente.

Para eliminar manchas de minerales y sabores haga lo siguiente:

1. Vierta 12 onzas (360 ml) de vinagre en la unidad.
2. Conecte la cafetera al tomacorriente hasta que el vinagre esté caliente.
3. Desconecte la unidad y déjela así durante la noche.
4. Retire el vinagre con agua jabonosa caliente, enjuague y seque. Repita si es necesario.

NOTA

- No introduzca la base en agua.
- Restriegue de vez en cuando la placa de calefacción con un jabón fuerte para remover los depósitos minerales.

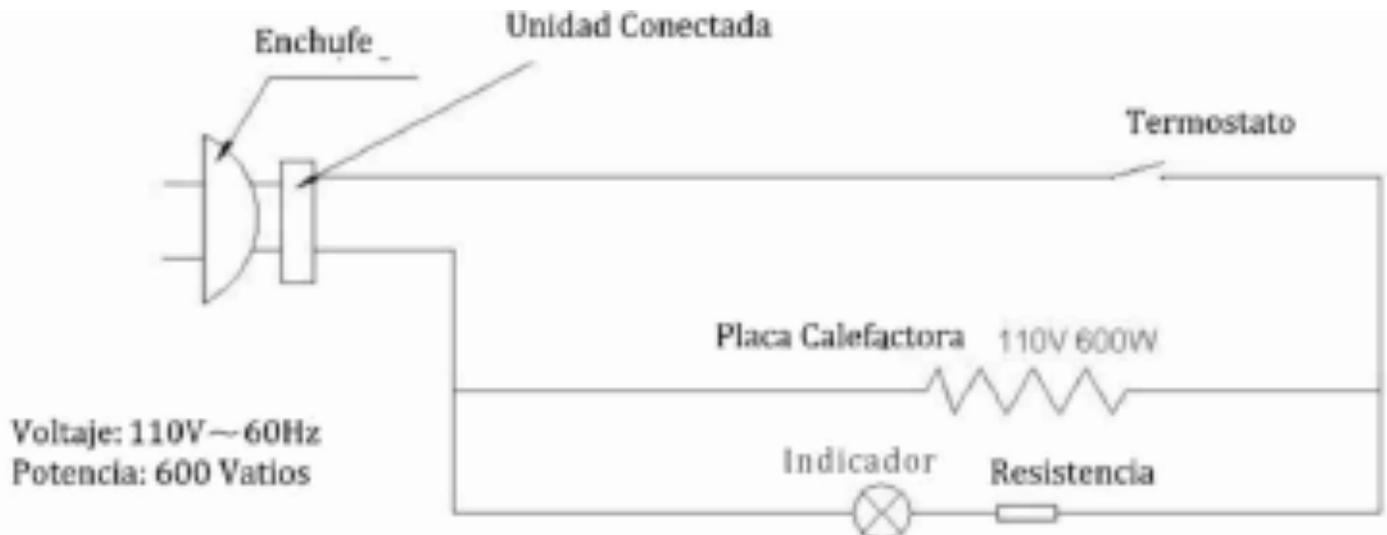DIAGRAMA DE CIRCUITOS



INSTRUCTION MANUAL

ELECTRIC COFFEE MAKER (8 CUPS)

ED-1237



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

	CAUTION	
	RISK OF ELECTRIC SHOCK, DO NOT OPEN	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to manufacturer for examination, repair or adjustment.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always plug cord into the wall outlet before turning on any control. To disconnect, remove plug from outlet.
13. Do not use appliance for other than intended use.
14. Remove and replace cover carefully when hot.
15. Scalding may occur if lid is removed while brewing coffee.

SAVE THESE INSTRUCTIONS

A short cord is provided to reduce the risks of becoming tangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use and the wattage rating is at least as great as the wattage stamped on the base of the appliance. If an extension cord is used, it should be arranged so that it will not drape over the counter or tabletop where it can be reached by children or tripped over accidentally.

SAFETY FEATURE FOR MODELS WITH ATTACHED CORD


To reduce the hazard of potential shock, this item has a polarized plug (one blade is wider than the other), which will fit only one way in a polarized outlet. If the plug does not fit the outlet properly, turn the plug the other way; if it still does not fit, contact a qualified electrician for assistance. Never use this plug with an extension cord unless it fits properly. **DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.**

COFFEEMAKER OPERATING INSTRUCTIONS

TO ASSEMBLE - insert tube into basket until tube is seated(see illustration)

MEASURE WATER- Remove cover, basket and stem. Fill with fresh, cold tap water to desired fill line located on inside of coffeemaker. Never use hot water to make coffee.

MEASURE COFFEE- Measure ground coffee into basket, place basket and tube in coffeemaker and place cover on unit. Specially designed cover distributes water over ground coffee; no perforated basket cover is required.

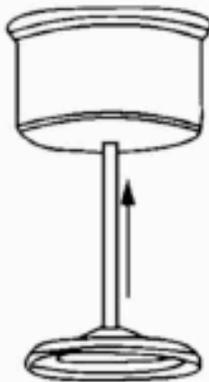

NOTE: The amount of coffee used can be adjusted to personal taste.

BREWS AUTOMATICALLY - Plug cord into AC outlet. When the coffee is finished brewing, it will automatically switch to low heat and will keep the coffee at proper serving temperature as long as it remains plugged in, **NEVER** plug in coffeemaker without water or liquid coffee in it. This will damage the coffeemaker and void the warranty.

Insert plug into Hot Pot(for models with detachable cord only). Connect the wall plug to AC electrical outlet. Never use on direct current.

Heat to desired temperature. If you heat to boiling, after boiling point has been achieved, unplug unit from power source. Continued boiling will cause sticking or burning. **DO NOT ALLOW TO BOIL DRY.**

WARNING: Position the lid so that steam is directed away from the handle.

WARNING: Do not remove the lid while the water is boiling.

CARE AND CLEANING

UNPLUG FROM OUTLET. Allow unit to cool. Empty any remaining coffee or other liquid from unit. **NEVER IMMERSE BASE IN WATER.**

WASH INSIDE OF UNIT with hot, soapy water and rinse with hot water before using for the first time and after each use. Do same with cover. **DO NOT IMMERSE BASE IN WATER.**

Clean basket and tube of coffeemakers. Tube can be cleaned with a tube brush or a pipe cleaner and hot, soapy water to remove manufacturing oils. Dry with a towel. Wipe outside of unit with a damp cloth, then dry.

MINERAL STAINS AND FLAVORS CAN BE REMOVED by following these instructions: pour 12 ounces(360ml) vinegar into the appliance. Plug in and heat until vinegar is warm. Unplug unit and allow to stand overnight. Discard vinegar wash with hot, soapy water; rinse thoroughly and dry. Repeat if necessary.

VERY IMPORTANT: Scour "heating plate" frequently with an abrasive soap pad. Rinse thoroughly with hot water. This will remove hard water mineral deposits which can effect the operation of this appliance.

FOR HOUSEHOLD USE ONLY

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged , it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.

