



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING: Users of this product are cautioned not to make modifications or changes that are not approved by MEM-CE, LLC., doing so may void the compliance of this product and may result in the loss of the user's authority to operate the equipment.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

- Do not disassemble, open, drop (mechanical abuse), crush, bend, deform, puncture, or shred.
 - Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or ex- pose to water or other liquids, or expose to fire or excessive heat including soldering irons, or put in microwave.
 - Only use the battery with the charging system specified by the manufacturer/supplier.
 - Do not short-circuit the rechargeable battery or allow metallic or conductive objects to contact both internal battery.
 - Only use the provided charger. Never use a damaged charger.
 - Remember to charge the device before storing for a long period of time.
 - Do not leave your device in hot or cold areas (car in direct sunlight or parked in a garage in winter). Always store in area where temperatures remain consistent. The charger and the device can become hot during charging.
 - Do not cover. Do not use your device in the rain or in/near any damp area.
 - Do not disassemble the device.
 - In the event of battery leakage, avoid contact of the liquid with skin and eyes. If contact occurs, rinse affected areas with plenty of water and contact a physician.
- WARNING**
- Listening to music at high volumes for long periods can lead to hearing problems. Using these headphones at maximum volume for long periods of time is not recommended.
 - To protect your hearing, turn down the volume of your music player before connecting your headphones. After putting on the headphones, gradually turn up the volume until you reach a suitable level.
 - Avoid hazardous behavior that may cause an accident for you or somebody else (pedestrians, motorcyclists, drivers, cyclists) or cause damage to property when you are wearing your headphones.

IMPORTANT SAFETY INSTRUCTIONS

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all Instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
- The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.

HOW TO USE THE MEMOREX MHTB0245

Congratulations on your purchase of the Memorex Bluetooth® Touch Control Headphones! Built-in Bluetooth Wireless Technology and easy-access touch controls make it easy to stay tuned in and chill with comfortable, rechargeable headphones, and Dynamic Bass for enhanced sound. With gesture-touch operation, controlling your jam and answering calls from a Bluetooth-compatible smartphone has never been easier. No need to take them off, except for recharging through micro-USB as needed. Please follow these operational instructions carefully. Save them for future reference.

RECHARGEABLE BATTERY

The MHTB0245 Touch Control Bluetooth® headphones feature a built-in Rechargeable Battery that can be charged using the micro-USB Charging Port and cable (included). Plug the other end into an AC-Powered USB device or outlet.

Notes:

- Before initial use, fully recharge the Touch Control Bluetooth Headphones for approximately 2-3 hours for about 8 hours of music playback or talk time.
- The Red LED indicates when Headphone Set is charging, and LED off indicates when fully charged.
- A Red LED blinking quickly indicates low battery.

OPERATION

Pair a Bluetooth-Enabled Mobile Device

- Press and hold Power/Phone button for 3 seconds until Blue LED is On to turn the unit on.
- Press and hold Power/Phone button for 5 seconds until Red LED is illuminated to turn the unit off.
- When Pairing to a Bluetooth-enabled device from the Power Off status, press the Power/Phone button and hold 5 seconds until the Blue and Red LEDs both blink alternately.

- MRX-MHTB0245 will appear in list of discoverable devices on smartphone or tablet. There will be a tone indicating the Bluetooth connection is now enabled, and the Blue LED will blink slowly when successfully paired.
- Refer to your mobile device for instruction on enabling Bluetooth. It is usually located in the Settings menu or similar location.

If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 ft/10 m. If the connection is interrupted due to low battery, switch the speaker off, recharge the internal battery, and repeat steps when fully charged.

Note: When powered ON and in Bluetooth source mode, the Headphones will automatically try to connect to the most recently played paired device when available.

Listen to Music

- When the Bluetooth-enabled device is paired, use your mobile device to Play and Pause music and adjust Volume Controls under the Music or Conversation Mode.
- In Music mode, press the Skip Back ◀ button to play Previous song, or Skip Next ▶ button to play Next song. Press the Play/Pause button (middle of Multi-Function control) to Pause the music; press again to continue Play.
- Use the Volume +/- buttons to increase or decrease the volume while in music mode

Using Gesture Touch Operations:

- For Volume Control while wearing Headphone Set, glide one finger upward or towards right side in the Gesture Touch Area for Volume Up, or glide one finger downward or towards left side for Volume Down.
- To advance to Next song, glide two fingers upward or towards the right.
- To play Previous song, glide two fingers downward or towards the left.
- To Pause/Play music, click the center of the touch area once.

To Answer or End Calls:

While wearing the Headphones answer an incoming call with built-in speaker from your Bluetooth-enabled smartphone by pressing the Power Button.

- Reject an incoming call by pressing and holding the Power/Phone button for 2 seconds.
- End a conversation by pressing and holding the Power/Phone button for 2 seconds.
- To Redial the last call, double-click the Power/Phone button and the Headphones will remotely and automatically dial the last phone number.

AUTO OFF

The MHTB0245 will automatically shut off if there is no music from a Line-in source or from a Bluetooth-enabled device for more than 20 minutes.

LINE IN AUDIO JACK

- Insert one end of the audio cable (included) into the Line Out Jack (or Headphone Jack) on your external audio device and the other end into the Line-In Jack.
- Use the connected external audio device to play and pause music. Sound will be heard through the headphone set.
- Adjust the speaker volume level either by pushing the "+" or "-" Volume Buttons on the headphone set, or by using the volume controls on the mobile device.

LED INDICATOR

MODE	LED EFFECT	MODE	LED EFFECT
Charging	Red LED On	Pairing	Red and Blue LEDs blink alternately
Fully Charged	LED Off	Music Mode	Blue LED blinks slowly
Standby	Blue LED blinks quickly	Low Battery	Red LED blinks slowly

SPECIFICATIONS AND COMPATIBILITY

Battery	3.7v/250 mAh Polymer Lithium Battery	Frequency Response	100Hz – 9000Hz
Charging Interface	Micro USB	Weight	????
Charging Input	5V / 500mA	Dimensions	????
Charging Indication	Red LED On	Compatibility	Bluetooth version VER4.1
Charging Time	2-3 hours	Range	30ft/10m
Speaker	20mW	Accessories	USB Cable, Line-in Cable, Manual

LOCATION OF CONTROLS



- Multi-Function Control (Skip Next ▶/Volume +, Play/Pause, Skip Back ◀/Volume -)
- Power/Phone Button
- Micro USB Jack (for Charging)
- Gesture Touch Area
- Line-In Jack

LIMITED WARRANTY

MEM-CE, LLC. warrants this product against defects for 90 days from the date of original purchase. MEM-CE, LLC. shall not be responsible for any lost data or other incidental or consequential damages related to this product. Some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may have other rights which may vary from one state, province or country to another.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEM-CE, LLC.

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT: WWW.MEMOREX-CE.COM
OR CONTACT CUSTOMER SERVICE: For customers calling within the United States and Canada, call 1-877-363-6673

MEM-CE, LLC.

11485 Valley View Road, Eden Prairie, MN 55344 USA MEMOREX-CE.COM

Memorex and the Memorex logo are trademarks of Imation Corp and its affiliates. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Imation Corp is under license. All other trademarks are the property of their respective owners.

For additional setup, operating assistance or an electronic version of this user manual, please visit www.MEMOREX-CE.COM



PRECAUCIÓN
RIESGO DE DESCARGA ELÉCTRICA NO ABRIR



PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta (ni la parte trasera). NO contiene piezas en el interior que puedan ser reparadas por el usuario. EL MANTENIMIENTO DEBE SER REALIZADO POR PERSONAL DE MANTENIMIENTO CALIFICADO.



VOLTAJE PELIGROSO: El rayo con el símbolo de la punta de flecha dentro de un triángulo equilátero tiene como objetivo advertir al usuario acerca de la presencia de voltaje no aislado peligroso dentro de la caja del producto que puede ser de magnitud suficiente para generar un riesgo de descarga eléctrica para las personas.



ATENCIÓN: El signo de exclamación dentro de un triángulo equilátero tiene como objetivo alertar al usuario acerca de la presencia de instrucciones de funcionamiento y mantenimiento (servicio) importantes en la bibliografía que acompaña a la aplicación.



ADVERTENCIA DE LA FCC: Este equipo puede generar o utilizar energía de radio frecuencia. Los cambios o las modificaciones de este equipo pueden provocar interferencia perjudicial, a menos que estén expresamente aprobadas en el manual de instrucciones. El usuario podría perder la autoridad para hacer funcionar este equipo si realiza algún cambio o modificación no autorizados.

PRECAUCIÓN: PARA EVITAR DESCARGAS ELÉCTRICAS, UNA LA CLAVIJA ANCHA DEL ENCHUFE CON LA RANURA ANCHA E INSÉRTELA POR COMPLETO.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTA: Este equipo ha sido probado y cumple con los límites correspondientes a un dispositivo digital Clase B, según la parte 15 de las Normas de FCC. Estos límites están diseñados para proporcionar una protección razonable contra la interferencia dañina en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con las instrucciones, puede generar interferencia perjudicial en las comunicaciones de radio. Sin embargo, no se garantiza que la interferencia no se produzca en una instalación en particular. Si este equipo genera interferencia perjudicial en la recepción de radio o televisión, que puede determinarse encendiendo y apagando el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Vuelva a orientar o ubique la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente de un circuito distinto del que está conectado el receptor.
- Consulte con el distribuidor o con un técnico de radio o TV experimentado para obtener asistencia.

PRECAUCIÓN: Cualquier cambio o modificación no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para operar el equipo.

PROTECTORES CONTRA SOBRETENSION: Se recomienda utilizar un protector contra sobretensión para la conexión de ca. Los casos de sobretensión de energía y rayos no están cubiertos por la garantía de este producto.

ADVERTENCIA: PARA EVITAR EL RIESGO DE INCENDIO O DESCARGA, NO EXPONGA ESTA UNIDAD A LA LLUVIA O LA HUMEDAD.

Este aparato digital Clase B cumple con la norma canadiense ICES-003.

1. Do not disassemble, open, drop (mechanical abuse), crush, bend, deform, puncture, or shred.
 2. Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or ex- pose to water or other liquids, or expose to fire or excessive heat including soldering irons, or put in microwave.
 3. Only use the battery with the charging system specified by the manufacturer/supplier.
 4. Do not short-circuit the rechargeable battery or allow metallic or conductive objects to contact both internal battery.
 5. Only use the provided charger. Never use a damaged charger.
 6. Remember to charge the device before storing for a long period of time.
 7. Do not leave your device in hot or cold areas (car in direct sunlight or parked in a garage in winter). Always store in area where temperatures remain consistent. The charger and the device can become hot during charging.
 8. Do not cover. Do not use your device in the rain or in/near any damp area.
 9. Do not disassemble the device.
 10. In the event of battery leakage, avoid contact of the liquid with skin and eyes. If contact occurs, rinse affected areas with plenty of water and contact a physician.
- WARNING:**
1. Listening to music at high volumes for long periods can lead to hearing problems. Using these headphones at maximum volume for long periods of time is not recommended.
 2. To protect your hearing, turn down the volume of your music player before connecting your headphones. After putting on the headphones, gradually turn up the volume until you reach a suitable level.
 3. Avoid hazardous behavior that may cause an accident for you or somebody else (pedestrians, motorcyclists, drivers, cyclists) or cause damage to property when you are wearing your headphones.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Preste atención a todas las advertencias.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca de agua.
6. Limpie sólo con un paño seco.
7. No bloquee ninguna de las aberturas de ventilación. Instale el producto de acuerdo con las instrucciones del fabricante.
8. No instale el producto cerca de fuentes de calor, como radiadores, rejillas de calefacción, estufas u otros aparatos (incluidos los amplificadores) que generen calor.
9. No rechace el objetivo de seguridad del enchufe polarizado o de conexión a tierra. Un enchufe polarizado tiene dos clavijas: una más ancha que la otra. Un enchufe de conexión a tierra posee dos clavijas y una tercera prolongación de conexión a tierra. La clavija ancha y la tercera clavija se proporcionan para su seguridad. Si el enchufe proporcionado no encaja en su tomacorriente, comuníquese con un electricista para reemplazar el tomacorriente obsoleto.
10. Proteja el cable de alimentación de pisadas o pinchaduras, en particular en los enchufes, los tomacorrientes y el punto de donde salen del aparato.
11. Utilice sólo dispositivos/accesorios especificados por el fabricante.
12. Desconecte el aparato durante las tormentas eléctricas o cuando no se utilice durante un periodo prolongado.
13. El mantenimiento debe ser llevado a cabo por personal de mantenimiento calificado. Se requiere mantenimiento si el aparato se dañó de alguna forma; por ejemplo, si se derramó líquido o cayeron objetos dentro del aparato, si se expuso a la lluvia o a la humedad, si se cayó, si no funciona normalmente o si se dañó el cable de alimentación o el enchufe.
14. **ADVERTENCIA:** Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia o a la humedad. No coloque objetos con líquidos (p. ej., jarrones) sobre el aparato.
15. El cable de alimentación de CA es el dispositivo para desconectar la corriente; por lo tanto, debe estar al alcance de la mano y se debe poder manejar durante el uso previsto. Para desconectar el aparato de la corriente, el cable de alimentación se debe quitar completamente del tomacorriente de CA.

MODE D'EMPLOI DU MEMOREX MHBT0245

Congratulations on your purchase of the Memorex Bluetooth® Touch Control Headphones! Built-in Bluetooth Wireless Technology and easy-access touch controls make it easy to stay tuned in and chill with comfortable, rechargeable headphones, and Dynamic Bass for enhanced sound. With gesture-touch operation, controlling your jam and answering calls from a Bluetooth-compatible smartphone has never been easier. No need to take them off, except for recharging through micro-USB as needed. Please follow these operational instructions carefully. Save them for future reference.

RECHARGEABLE BATTERY

The MHBT0245 Touch Control Bluetooth® headphones feature a built-in Rechargeable Battery that can be charged using the micro-USB Charging Port and cable (included). Plug the other end into an AC-Powered USB device or outlet.

Notes:

- Before initial use, fully recharge the Touch Control Bluetooth Headphones for approximately 2-3 hours for about 8 hours of music playback or talk time.
- The Red LED indicates when Headphone Set is charging, and LED off indicates when fully charged.
- A Red LED blinking quickly indicates low battery.

OPERATION

Pair a Bluetooth-Enabled Mobile Device

1. Press and hold Power/Phone button for 3 seconds until Blue LED is On to pair the unit on.
2. Press and hold Power/Phone button for 5 seconds until Red LED is illuminated to turn the unit off.
3. When Pairing to a Bluetooth-enabled device from the Power Off status, press the Power/Phone button and hold 5 seconds until the Blue and Red LEDs both blink alternatively.
4. MRX-MHBT0245 will appear in list of discoverable devices on smartphone or tablet. There will be a tone indicating the Bluetooth connection is now enabled, and the Blue LED will blink slowly when successfully paired.
5. Refer to your mobile device for instruction on enabling Bluetooth. It is usually located in the Settings menu or

similar location.

If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 ft/10 m. If the connection is interrupted due to low battery, switch the speaker off, recharge the internal battery, and repeat steps when fully charged.

Note: When powered ON and in Bluetooth source mode, the Headphones will automatically try to connect to the most recently played paired device when available.

Listen to Music

1. When the Bluetooth-enabled device is paired, use your mobile device to Play and Pause music and adjust Volume Controls under the Music or Conversation Mode.
2. In Music mode, press the Skip Back ⏮ button to Play Previous song, or Skip Next ⏭ button to play Next song. Press the Play/Pause button (middle of Multi-Function Control) to Pause the music; press again to continue Play.
3. Use the Volume +/- buttons to increase or decrease the volume while in music mode

Using Gesture Touch Operations:

1. For Volume Control while wearing Headphone Set, glide one finger upward or towards right side in the Gesture Touch Area for Volume Up, or glide one finger downward or towards left side for Volume Down.
2. To advance to Next song, glide two fingers upward or towards the right.
3. To play Previous song, glide two fingers downward or towards the left.
4. To Pause/Play music, click the center of the touch area once.

To Answer or End Calls:

While wearing the Headphones answer an incoming call with built-in speaker from your Bluetooth-enabled smartphone by pressing the Power Button.

- Reject an incoming call by pressing and holding the Power/Phone button for 2 seconds.
- End a conversation by pressing and holding the Power/Phone button for 2 seconds.
- To Redial the last call, double-click the Power/Phone button and the Headphones will remotely and automatically dial the last phone number.

AUTO OFF

The MHBT0245 will automatically shut off if there is no music from a Line-in source or from a Bluetooth-enabled device for more than 20 minutes.

LINE IN AUDIO JACK

1. Insert one end of the audio cable (included) into the Line Out Jack (or Headphone Jack) on your external audio device and the other end into the Line-In Jack.
2. Use the connected external audio device to play and pause music. Sound will be heard through the headphone set.
3. Adjust the speaker volume level either by pushing the "+" or "-" Volume Buttons on the headphone set, or by using the volume controls on the mobile device.


INDICADOR LED

MODE	LED EFFECT	MODE	LED EFFECT
Charging	Red LED On	Pairing	Red and Blue LEDs blink alternatively
Fully Charged	LED Off	Music Mode	Blue LED blinks slowly
Standby	Blue LED blinks quickly	Low Battery	Red LED blinks slowly

ESPECIFICACIONES Y COMPATIBILIDAD

Battery3.7v/250 mAh Polymer Lithium Battery	Frequency Response100Hz – 9000Hz
Charging InterfaceMicro USB	Weight?????
Charging Input5V / 500mA	Dimensions?????
Charging IndicationRed LED On	CompatibilityBluetooth version VER4.1
Charging Time2-3 hours	Range30ft/10m
Speaker20mW	AccessoriesUSB Cable, Line-in Cable, Manual

UBICACIÓN DE LOS CONTROLES

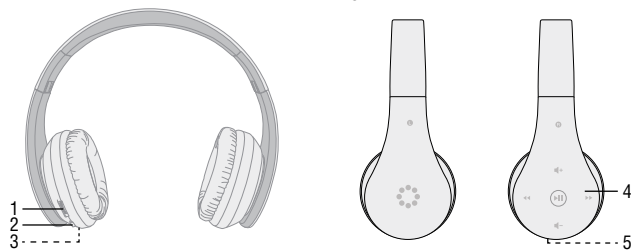

1. Multi-Function Control (Skip Next ⏭/Volume +, Play/Pause, Skip Back ⏮/Volume -)
2. Power/Phone Button
3. Micro USB Jack (for Charging)
4. Gesture Touch Area
5. Line-In Jack

LIMITED WARRANTY

MEM-CE, LLC. warrants this product against defects for 90 days from the date of original purchase. MEM-CE, LLC. shall not be responsible for any lost data or other incidental or consequential damages related to this product. Some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may have other rights which may vary from one state, province or country to another.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEM-CE, LLC.

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT: WWW.MEMOREX-CE.COM OR CONTACT CUSTOMER SERVICE: For customers calling within the United States and Canada, call 1-877-363-6673

MEM-CE, LLC.

11485 Valley View Road, Eden Prairie, MN 55344 USA MEMOREX-CE.COM

Memorex and the Memorex logo are trademarks of Ination Corp and its affiliates. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ination Corp is under license. All other trademarks are the property of their respective owners.

For additional setup, operating assistance or an electronic version of this user manual, please visit www.MEMOREX-CE.COM