

mistral[®]

Evaporative Cooler

8 Litre



MEC1R

2
YEAR

Replacement
Warranty

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you feel that you are familiar with the appliance.

- The appliance is not intended for use by children or infirm persons without supervision.
- Children should be prevented from playing with the appliance.
- Switch off the power outlet and remove the plug when the appliance is not in use.
- Do not operate any appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not use outdoors.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- This appliance is intended to be plugged in a 240v power outlet only.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Arrange the power cord away from traffic areas where it will not be tripped over.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or user.
- The Evaporative Cooler must be disconnected before cleaning.
- The appliance must only be stored and operated in a horizontal position.
- Before use, always ensure the Evaporative Cooler contains water. After cleaning, water should be replaced.

- Where humidity is high, the Evaporative Cooler should be operated at normal fan type.
- Do not use corrosive liquids when cleaning.

COMPULSORY WARNING


If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person, in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of your Evaporative Cooler

Water Box Cover

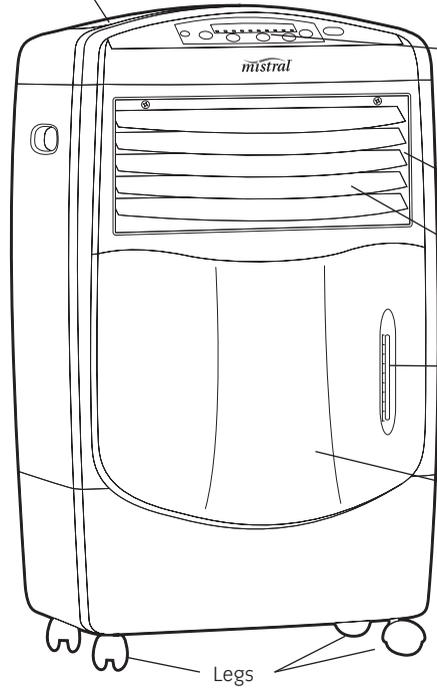

Front

Control Panel

Automatic Louvre (Vertical)

Manual Louvre (Horizontal)

Water-Level Indicator

Water Box

Back


Evaporated Net Holder (inside)

Dust-Proof Net (inside)

Evaporated Net

Rubber Plug

Legs

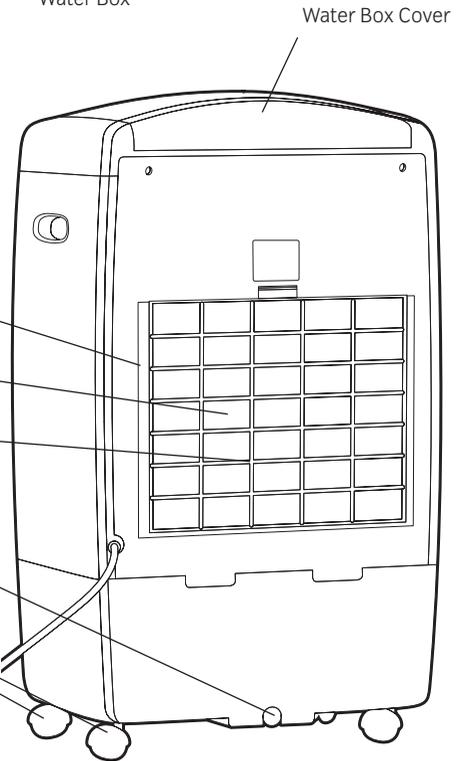

Water Box Cover

Getting to know your Evaporative Cooler

Congratulations on the purchase of your new Evaporative Cooler by Mistral.

Before first using your new Evaporative Cooler, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Your Evaporative Cooler uses energy efficient technology to bring fresh air into your home or office. The air-cooling efficiency value is greater than that of traditional air conditioners. It also has zero impact on the ozone layer, helping to reduce the greenhouse effect.


In addition to the fan and timing operations, your Evaporative Cooler has natural air fan and sleep functions.

Operation of your Evaporative Cooler


Before first use, remove all packaging material and ensure your Evaporative Cooler is in good condition.

Add cold or iced water by opening the water box cover and filling it to the highest level indicated.

Control Panel (on unit)

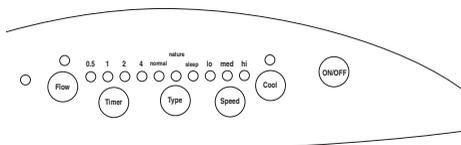

Remote Control

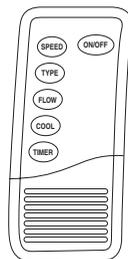

Note: The functions on the control panel are the same as those on the remote control

On/Off

Pressing the on/off switch will turn the Evaporative Cooler on at medium speed. After 3 seconds, it will revert back to low speed or to the pre-programmed memory settings. When the Evaporative Cooler is in operation, pressing this switch will turn it off. The memory function will remember the settings in use when the Evaporative Cooler is turned off and re-use the same settings when it is switched on again.

Speed

Press this key to choose between low, medium and high fan speeds.

Fan Type

Use the fan types key to choose between normal, nature and sleep fan types.

Normal: Normal settings are high, medium or low depending on speed selected.

Care and Cleaning

Nature: Nature settings provide a soft and comfortable environment with a choice of high, medium or low fan speeds.

Sleep: The sleep function uses the natural fan type and slowly lowers the speed of the Evaporative Cooler before finally turning it off altogether.

At high speed, the Evaporative Cooler will operate at the highest speed for 30 minutes, the medium speed for 30 minutes and the low speed for 30 minutes before turning off.

At medium speed, the Evaporative Cooler will operate at the medium speed for 30 minutes and the low speed for 30 minutes before turning off.

At low speed, the Evaporative Cooler will operate at low speed for 30 minutes before turning off.

 
Timer

The timer settings are for 0.5, 1, 2 or 4 hours. When the timer is set, the indicator "LED" will show it is in use. Press it once and the 0.5 indicator will illuminate. Press it again and the 1 indicator will illuminate (having both the 0.5 and the 1 hour indicators lit indicates the timer is set for 1.5 hours). Pressing the timer button four times in total will set the timer for 7.5 hours.

When none of the timer lights are lit, the timer is not set.

Flow

Press this key to turn on or off the automatic vertical louvre function. The direction can also be adjusted by using the manual horizontal louvre.



Cool Air

Press this key to start and stop the flow of cool air.

Always disconnect electrical appliances before cleaning them.

Never spray with liquids or submerge the Evaporative Cooler in water or any other liquid.

Note: If the cordset of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician.

Cleaning the Dust-Proof and Evaporated Nets

To clean the dust-proof and evaporated nets, ensure the Evaporative Cooler is turned off and disconnected from the power outlet.

Press the dust-proof net and pull it out of the main unit.


Twist off the two screws on the back cover and take them out. Twist off the two screws between the evaporated net holder and the wind channel, then remove the evaporated net from its holder.

Clean both using a damp sponge or cloth.

Cleaning the Pump

Before cleaning the pump, ensure the Evaporative Cooler is turned off and disconnected from the power outlet, remove the rubber plug from the back of the unit and drain the water. Remove the back cover, twist off the two screws of the pump and remove the rotor.

Clean it with a damp sponge or cloth and dry thoroughly before reinstalling it by reversing the above procedure.

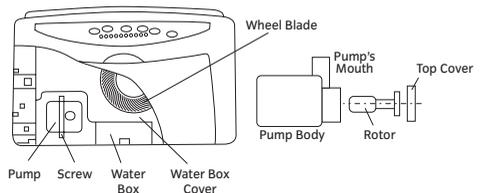

Note: If the Evaporative Cooler stops working efficiently, drain the water from it and operate it on normal fan type at high speed for 1-2 hours to allow the evaporated net to dry.

Specifications

Product Code	MEC1R
Product Name	8L Evaporative Cooler
Rating Voltage	220-240V
Rating Frequency	50Hz
Total Rated Input	60W
CFM	5m3
Noise	Lp ≤ 54Db Lw ≤ 65Db
Maximum Water Capacity	8L
Net Weight	8kg
Size	400(w) × 270(d) × 680(h)

For indoor use only.

Troubleshooting

Problem	Possible Cause	Possible Solution
The indicator is not lighting.	The Evaporative Cooler is not connected to a power outlet or the power outlet is not switched on.	Insert the plug into a power outlet and make sure the outlet is switched on.
	The circuit board is damaged.	Do not attempt to fix the circuit board. Send it to a qualified repair centre for servicing.
The Evaporative Cooler is not operating.	The motor has over-heated.	Allow the Evaporative Cooler time to cool before turning it on.
The louvre won't oscillate.	The direction key has not been touched.	Press the direction key once. Press it again to turn the oscillating feature off.
	The louvre motor is damaged.	Do not attempt to fix the louvre motor. Send it to a qualified repair centre for servicing.
The temperature of air being expelled from the Evaporative Cooler is not cold enough.	The pump needs to be cleaned.	Follow the directions under Care and Cleaning to clean the pump.
	The pump is damaged.	Do not attempt to fix the pump. Send it to a qualified repair centre for servicing. The timer is not operating.
	The dust-proof net is blocked.	Follow the directions under Care and Cleaning to clean the dust-proof net.
The fan type can't be operated.	The evaporated net is blocked.	Follow the directions under Care and Cleaning to clean the evaporated net.
The speed can't be operated.	The circuit board is damaged.	Do not attempt to fix the circuit board. Send it to a qualified repair centre for servicing.

Warranty

The benefits conferred by this warranty are in addition to all implied warranties, other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

The original purchaser of this Mistral product is provided with the following warranty, subject to the following conditions.

Linda Australia Pty Ltd warrant this product for a period of 2 years from the date of purchase for all parts defective in workmanship or materials. The product or defective parts will be replaced free of charge.

WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT.

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or service under warranty.

Linda Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: _____

Co. Name: _____

Address: _____

Date of Purchase: _____

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

Cat. No. MEC1R
June 2003

Product of Linda Australia Pty Ltd ABN 60 079 923 130
A member of the Mistral International Pty Ltd group of companies
324 Frankston-Dandenong Road
Dandenong South, Victoria, Australia 3175
Telephone 03 9212 1333 **Facsimile** 03 9212 1340
Customer Service 1300 654 488
Internet Address: www.mistral.com.au

RINGGRIP (NZ) Pty Ltd ACN 006 771 922
PO Box 51317, Pakuranga, Auckland NZ
Telephone 0800 328 280 **Facsimile** 0800 328 238

Manufactured for Linda Australia

© 2003 Linda Australia Pty Ltd

