

SCH-u450 Series

P O R T A B L E   D U A L   M O D E  
T E L E P H O N E

User Guide

Please read this manual before operating your phone, and keep it for future reference.





## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

© 2009 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.



## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.



# Table of Contents

Important Safety Precautions .....	1
Road Safety at All Times .....	1
Switching Off When Refueling .....	1
Switching Off in an Aircraft .....	1
Switching Off in Hospitals .....	1
Interference .....	1
Special Regulations .....	1
Sensible Use .....	1
Emergency Call .....	1
Liquid Resistance .....	1
Accessories and Batteries .....	2
Qualified Service .....	2
Getting Started .....	3
Installing and Charging the Battery .....	3
Turning Your Phone On and Off .....	5
Your Phone .....	6
Front Open View of Your Phone .....	7
Understanding the Display Screen .....	10
Screen Icons .....	10
Memory Card .....	13
Inserting the Micro SD Memory Card .....	13
Removing the Micro SD Memory Card .....	14
Using a Micro SD Adapter .....	14
Phone Basics .....	15
Displaying Your Phone Number .....	15
Making Calls .....	15
Making Regular Calls .....	15
Correcting the Number .....	15
Redial the Last Number .....	15
Calling Emergency Numbers .....	15
Adjusting the Volume .....	15
Dialing and Saving Phone Numbers with Pauses .....	16
Dialing from Your Contacts List .....	16
Using One-Touch/Two-Touch Speed Dialing .....	17
Answering Voice Calls .....	17
Answering Calls .....	18
Missed Call Notification .....	18
In-Call Options .....	18
Using the Menu Options .....	18



Making Three-Way Calls . . . . .	19
Mute/UnMute . . . . .	19
End-of-Call Options . . . . .	20
Saving Phone Numbers . . . . .	20
Entering Text . . . . .	20
Selecting a Character Input Mode . . . . .	20
Entering Characters Using T9 Text Input . . . . .	21
Entering Characters with the Keypad . . . . .	21
Entering Numbers and Symbols . . . . .	21
Using Caller ID . . . . .	22
Responding to Call Waiting . . . . .	22
Using the Speakerphone . . . . .	23
<b>History . . . . .</b>	<b>24</b>
Viewing Your Recent Calls . . . . .	24
Recent Calls Options . . . . .	24
<b>Contacts . . . . .</b>	<b>25</b>
Adding New Entries . . . . .	25
Adding New Entries in Idle Mode . . . . .	25
Adding New Entries from the Contacts Menu . . . . .	25
Finding, Editing or Dialing Contacts . . . . .	25
Selecting Ringer Types to Identify Entries . . . . .	26
Selecting Pictures for Entries . . . . .	26
Groups . . . . .	27
Assigning Contacts to Groups . . . . .	27
Sending Messages to Groups . . . . .	27
Group Options . . . . .	28
Speed Dials . . . . .	28
Creating Speed Dial Entries . . . . .	28
Editing Speed Dial Entries . . . . .	29
Using Speed Dial . . . . .	29
My Name Card . . . . .	29
<b>Messaging . . . . .</b>	<b>30</b>
Voice Mail . . . . .	30
Setting Up Your Voice Mail . . . . .	30
Voice Mail Notification . . . . .	30
New Voice Mail Message Alerts . . . . .	30
Retrieving Your Voice Mail Messages . . . . .	31
Clearing the Message Icon . . . . .	31
Text & Multimedia Messages . . . . .	32
Create New . . . . .	32
Inbox . . . . .	35
Outbox/Sent . . . . .	35
Templates . . . . .	36



Drafts .....	37
Saved .....	37
Erase Messages .....	37
Settings .....	38
Memory Info .....	40
Web Alert .....	40
<b>Music .....</b>	<b>41</b>
<b>Wireless Web .....</b>	<b>42</b>
Launch Web .....	42
Navigating the Web .....	42
Bookmarks .....	43
Go To URL .....	43
<b>My Files .....</b>	<b>44</b>
Ringtones .....	44
Wallpaper .....	44
<b>Camera .....</b>	<b>45</b>
Camera .....	45
Taking Pictures .....	45
Camera Options .....	46
Sending Pictures via Multimedia Messaging .....	46
Image Album .....	46
Settings .....	48
PictBridge Print .....	48
My Albums .....	50
<b>Bluetooth .....</b>	<b>51</b>
Adding New Devices .....	51
Options .....	52
<b>Voice Memo .....</b>	<b>53</b>
Recording Voice Memos .....	53
Recording Phone Call Conversations .....	53
Voice Memo Options .....	54
<b>Tools .....</b>	<b>55</b>
Alarm .....	55
Calculator .....	55
Calendar .....	56
Using Today Entries .....	56
Using Scheduler Entries .....	57
Using the Task List .....	58
Using Countdown .....	58
Mass Storage .....	59
Connect to PC .....	59



Format . . . . .	60
Memory Info. . . . .	61
Memo Pad . . . . .	61
Creating Memos . . . . .	61
Viewing and Editing Memos . . . . .	61
Deleting Memos . . . . .	61
World Time. . . . .	61
Voice Service . . . . .	62
Activating Voice Recognition . . . . .	62
Call . . . . .	62
Send Text . . . . .	63
Lookup . . . . .	64
Go To . . . . .	64
Check . . . . .	64
Configuring Confirmation . . . . .	65
Configuring Voice Adaptation . . . . .	65
Changing Audio Guidance Mode . . . . .	65
Displaying Voice Recognition Software Version. . . . .	66
<b>Settings . . . . .</b>	<b>67</b>
Display . . . . .	67
Changing the Main Screen . . . . .	67
Changing the Display Brightness Settings . . . . .	68
Changing the Backlight Settings. . . . .	69
Changing the Dialing Font. . . . .	69
Changing the PowerSave Mode Setting . . . . .	69
Changing the Keypad Light Settings. . . . .	70
Changing the Language . . . . .	70
Sounds. . . . .	70
Volume . . . . .	70
Ringer Type . . . . .	71
Alerts. . . . .	73
Key Tone. . . . .	74
Text Entry . . . . .	75
Nav. Key Shortcuts. . . . .	76
Phone Info . . . . .	77
More... . . . .	77
Accessibility . . . . .	77
Airplane Mode. . . . .	78
Browser . . . . .	78
Call Setup . . . . .	79
Headset Mode. . . . .	82
Restrict and Lock . . . . .	83
Roaming . . . . .	84
Security. . . . .	84



Keypad Lock ..... 85

Landscape Mode ..... 86

    Landscape View of Your Phone ..... 86

    Opening Your Phone to a Landscape View ..... 86

    Answering a Call - Landscape Mode ..... 86

    Creating and Sending Messages - Landscape Mode ..... 87

    Accessing the Menus in Landscape Mode ..... 87

Safety ..... 88

    Getting the Most Out of Your Reception ..... 88

    UL Certified Travel Adapter ..... 89

    Caring for the Battery ..... 92

        Acknowledging Special Precautions and

        Industry Canada Notice ..... 93

        Information to User ..... 93

    Owner’s Record ..... 94

    User Guide Proprietary Notice ..... 94

Warranty ..... 96

Index ..... 99



# Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

## Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

## Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

## Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

## Interference

All wireless phones may be subject to interference, which could affect their performance.


## Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital, for example).

## Sensible Use

Use the phone in the intended position (held to the ear). If your phone has an external antenna, avoid unnecessary contact with the antenna when the phone is on.

## Emergency Call

Ensure the phone is switched on and in-service. Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

## Liquid Resistance

Your phone is not liquid resistant. Keep it dry.



## Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

---

**Important:** Although the phone can be used while the battery is charging, the battery must be fully charged before first use, otherwise you could damage the battery.

---

---

**Important:** Using a non-supported battery may cause damage to your phone.

---

## Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Safety" on page 88.



# Getting Started

## Installing and Charging the Battery

Your phone is equipped with a Lithium Ion (Li-ion) battery. It allows you to recharge your battery before it is fully drained. When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, the display dims to conserve the remaining battery power. When the battery level becomes too low, the phone automatically turns off.

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power. You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Long backlight settings, searching for service, vibration mode, playing games, camera and browser usage affect the battery's talk and standby times.

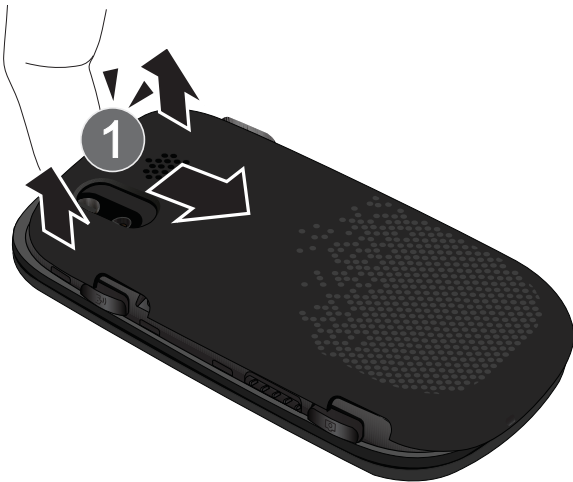 
---

**Important:** The battery must be fully charged before you use the phone for the first time; otherwise, you could damage the battery.

---

### Installing the Battery

1. To remove the back cover, use a fingernail in the groove to lever the cover up until it clicks, then pull the cover in the direction shown to remove it.





2. Insert the top end of the battery into the phone housing with the label side down. The gold contacts on the end of the battery should match up with those on the phone.





3. Push the top end of the battery down until it snaps into place.
4. Replace the battery cover.

### Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Remove the back cover.
3. Use your finger to lift the battery (top end first) up and away from the phone.



### Charging the Battery with the Travel Adapter

Your phone is powered by a rechargeable standard Li-ion battery. Use Samsung-approved charging devices and batteries. The  icon indicates that the battery is full. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.



---


**Warning!** Using the wrong battery charger could cause damage to your phone and void the warranty.

---


1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Plug the large end of the travel adapter into a standard 120/220V AC wall outlet.
3. Insert the end of the adapter into the charger/ accessory connector at the side of the phone.



## Turning Your Phone On and Off

1. To turn your phone on, press and hold the End key  until the phone switches on. Once your phone is on, it displays “Looking for Service”. When your phone finds a signal, it automatically enters Idle mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, the phone enters Power Save mode and periodically searches for a signal. When a signal is found, your phone automatically returns to Idle mode.

2. To turn your phone off, press and hold the End key  until you see the powering down animation on the display screen.



# Your Phone

Congratulations on the purchase of your Samsung SCH-u450 phone. This phone is lightweight, easy-to-use, reliable, and offers many exciting features and service options:

- Mobile Browser™ provides access to the wireless Internet. See "Launch Web" on page 42.
- 1.3 MP camera
- MP3 Player
- Nuance technology for voice-activated dialing and other commands
- Messaging provides quick and convenient text (SMS) and multimedia (MMS) messaging capabilities. See "Messaging" on page 30.
- Downloadable ringtones and wallpapers
- A built-in planner and other useful personal management applications. See "Tools" on page 55.
- Bluetooth® wireless technology



# Front Open View of Your Phone





1. **Earpiece:** The earpiece allows you to hear the other caller. Ringtones and sounds are also played through the earpiece, as are speakerphone conversations.
2. **Earphone Jack:** Allows you to plug in an optional earphone for safe, convenient hands-free conversations.
3. **Display Screen:** This screen displays all the information you need to operate your phone.
4. **Volume Key:** Allows you to adjust the ringer volume in Idle mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
5. **Navigation Keys:**
  - The navigation keys allow you to scroll through the phone menu options.
  - In Idle mode, press the up navigation key to access the **Messaging** menu and press the down navigation key to access the **Recent Calls** menu. Press the left and right navigation keys to create new shortcuts.
6. **Left Soft Key:**
  - In Idle mode, press to access the **Send Msg** menu.
  - When using other features, such as the Web Browser, the left soft key performs a context-sensitive action. This action is shown in the bottom-left corner of the display screen.
7. **Send Key:**
  - Allows you to place or receive a call.
  - In Idle mode, press the key once to access the recent call log.
8. **Speakerphone Key:** During a call, press the key to enable or disable the speaker phone function.
9. **Power/Accessory Interface Connector:** The Power/Accessory Interface Connector is used to plug in a travel adapter, or any available accessory to your phone.



## 10. Special Function Keys:

- **Shift/Asterisk:**

- Enters the asterisk [\*] character for calling features.
- In text entry mode, press the key to switch between letter cases when using the input type Alpha (ABC, Abc, abc) or T9 (T9word, T9Word, T9WORD).
- In Idle mode, press and hold to switch your handset to Silent Mode (with vibration).

- **Space/Pound:**

- Enters the pound [#] character for calling features.
- In text entry mode, press to enter a space.
- In Idle mode, press and hold the key to lock the phone.


**11. Microphone:** The microphone allows other callers to hear you clearly when you are speaking to them.

**12. Alpha-numeric Keys:** Use these keys to enter numbers, letters, and characters. For information on entering text, see "Entering Text" on page 20.

**13. Camera Key:** Launches the integrated digital camera:

- In Idle mode, press to access the camera's preview mode.

**14. OK Key:**

- In Idle mode, press to access the **Menu**.
- Pressing  when navigating through a menu accepts the highlighted choice in the menu.

**15. Back Key:**

- Deletes characters from the display when you are in text entry mode.
- Press to return to the previous menu or screen when navigating features on your phone.

**16. END/Power Key:**

- During a call, press this key to end the call.
- When you receive an incoming call, press this key to reject the call.
- When in the main menu, press to return the phone to Idle mode and cancel your input.



- When the phone is off, press and hold this key for a few seconds to turn your phone on. When your phone is in Idle mode, press and hold this key for a few seconds to turn your phone off.

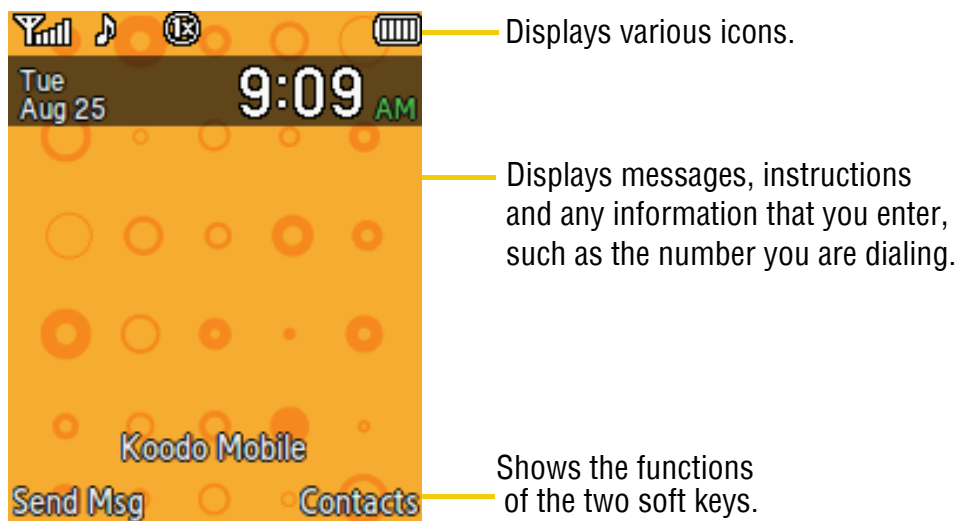 
### 17. Right Soft Key:

- In Idle mode, press to access your **Contacts**.
- When using other features, such as the Web Browser, the right soft key performs a context-sensitive action. This action is shown in the bottom right corner of the display screen.

**18. Voice Services Key:** In Idle mode, press and hold the key to access the voice recognition feature. For more information, see ‘Activating Voice Recognition’ on page 62.

## Understanding the Display Screen

Your phone’s display screen provide a wealth of information about your phone’s status and options. The display screen has three areas:



### Screen Icons

This list identifies the symbols you’ll see on your phone’s display screens:



Indicates that your 1X web connection is active. Incoming voice calls go directly to Voicemail; outgoing voice calls can be made, but the web connection will terminate.



Indicates that data is being transferred over the 1X network. The arrow direction indicates whether the handset is sending or receiving data.





Indicates that your 1X connection is dormant.



Indicates that your phone is receiving 1X digital service.



Indicates that your phone is receiving digital (non-3G) service.



Indicates that Memory Card is inserted.



Indicates that you missed a call.



Indicates that you have a missed text message.



Indicates that you have a missed voice mail.



Indicates that you have missed scheduler.



Indicates that you have a missed alarm.



Indicates that you have a new Text message.



Indicates that you have a new Picture message.



Indicates that you have a new Voicemail.



Indicates that the text message is locked. A locked message cannot be deleted without confirmation.



Indicates that the TTY option is On. This icon is displayed only when earphones or a Bluetooth headset is in use.



Indicates that your phone is in vibrate mode.



Indicates that your phone is set to ringer plus vibrate mode.



Indicates that the ringer is set at a level between 1-8 or that 1-Beep is selected.



Indicates that the ringer is turned Off.





Indicates that an alarm is set on your phone.



Tells you a call is in progress.



Means there is no service, as your phone cannot find a signal.



Displays your current signal strength. When you are receiving maximum signal strength, six bars are shown.



Displays your current battery strength at full.



Indicates your current battery charge strength. (Icon shown fully discharged in idle mode.)



Indicates that the handset is in Key Mute mode.



Indicates that the handset is in Speaker mode.



Indicates that the Camera is enabled.



Indicates that the self-timer function is enabled. With the self-timer enabled, a set amount of time is required prior to taking a picture.



Indicates that the white balance has been set to Sunny. This is used for taking pictures outdoors on bright sunny days.



Indicates that the white balance has been set to Cloudy. This is used for taking pictures outdoors under cloudy conditions.



Indicates that the white balance has been set to Incandescent. This is used for taking pictures indoors under normal lighting conditions.



Indicates that the white balance has been set to Fluorescent. This is used for taking pictures indoors under fluorescent lighting conditions.



Indicates that the white balance has been set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.



Indicates that a voice memo is being recorded.



Indicates that a voice memo is being stopped.



Indicates that a voice memo has been paused.



Indicates that a voice memo is being played.





Indicates that there is a voice caption attached to an image.



Indicates that Bluetooth technology is enabled.



Indicates that Bluetooth technology is connected.



Indicates that Bluetooth headset is connected.



Indicates that Bluetooth technology is hidden.



Indicates that the handset is in Airplane mode.

## Memory Card

Your phone allows you to use a Micro SD (Secure Digital) memory card (up to 16GB) and an adapter to expand the phone's available memory space. This digital card makes it easy to exchange images, music, and voice data quickly between SD-compatible devices.

---

**Note:** Before you can copy files to a memory card from your PC, you must first insert it into the phone. The phone will format the card for you and create the necessary file folders. The card is formatted with a FAT32 file system that can be read by most computers.

---

### Inserting the Micro SD Memory Card

#### To insert the Micro SD memory card into your phone:

1. Remove the back cover of the phone. Notice the memory card opening on the lower right side of the phone.
2. Position the Micro SD memory card in line with the opening and gently slide it into place until it is fully inserted and locked.

---

**Note:** Be sure to use only recommended memory cards (up to 16GB). Using non-recommended memory cards could cause data loss or damage your phone.

---



---

**Note:** Make sure your battery is fully charged before using the Micro SD memory card. Your data may become damaged or unusable if the battery runs out while reading or writing to the card.

---

### Removing the Micro SD Memory Card

**To remove the Micro SD memory card from your phone:**

1. Remove the back cover of the phone.
2. Eject the card by pushing in and then releasing.
3. Pull the memory card out of the handset.

---

**Warning!** DO NOT remove a memory card while files are being accessed or transferred. It could result in loss or damage of data.

---

---

**Note:** If you remove your memory card, the location to save images will automatically default back to the Phone.

---

### Using a Micro SD Adapter

You can also purchase a Micro SD memory adapter, which allows Micro SD memory cards to be used in SD-compatible devices. Before using with a reader, you will need to insert the Micro SD memory card into the Micro SD memory adapter.

- With the label side of the Micro SD memory card facing up, insert the card into the Micro SD memory adapter and gently slide the card until it is fully inserted.

To remove the Micro SD memory card from the memory adapter:

- Hold the front edge of the Micro SD memory card and gently pull outward to remove it from the adapter.



# Phone Basics

## Displaying Your Phone Number



In case you forget your phone number, your phone can remind you.

### To display your phone number:



- In Idle mode, press right soft key  twice, followed by  . Your **My Name Card** is displayed with your phone number.

## Making Calls

### Making Regular Calls

From the Idle screen, enter the phone number and press the  key. To end the call, press the  key.

### Correcting the Number

To clear	Press the
the last digit displayed	 key
the whole display	 key and hold it

### Redial the Last Number

To redial your last outgoing call, press  twice. See "History" on page 24 for further information.

### Calling Emergency Numbers

You can place calls to 911 (dial    and press ) , even if your phone is locked or your account is restricted.

### Adjusting the Volume


During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

- Press the volume keys on the side of the phone to increase and decrease the volume level.
- In Idle mode, you can also adjust the ringer volume using these keys.



## Dialing and Saving Phone Numbers with Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as Voice Mail or credit card billing numbers. There are two types of pauses available on your phone:




- **Hard Pause:** sends the next set of numbers when you press .
- **2sec Pause:** automatically sends the next set of numbers after two seconds.


---

**Note:** You can have multiple pauses in a phone number and combine 2-second and hard pauses.

---

### To dial or save phone numbers with pauses:



1. Enter a phone number from Idle mode.
2. Press right soft key  for **Options** and select **Hard Pause** or **2sec Pause**.
3. Enter additional numbers.
4. Press  to dial the number.  
— or —  
Press right soft key  for **Options** and select **Save** to save the number in your Contacts list.

When dialing a number with a hard pause, press  to send the next set of numbers.

## Dialing from Your Contacts List

You can select a Contact and dial the number automatically.


### To dial directly from a Contacts entry:

1. Press  for **Menu** and then press  for **Contacts**.

---


**Tip:** In idle mode, press the right soft key  to quickly retrieve the Contacts list.

---

2. Scroll up or down to highlight the desired entry and press  to make the call.



---

**Tip:** If the desired entry contains more than one phone number, scroll up or down to display the number you wish to call and press  to make the call.

---

### Using One-Touch/Two-Touch Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a few buttons. For information on setting up this feature, see "Speed Dials" on page 28.

With this feature, you can dial Speed Dial entries using one key press for locations 2-9 and two key presses for locations 10-99.


#### To use One-Touch Dialing for Speed Dial locations 2-9:



- Press and hold the appropriate key for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved caller ID or number.)

#### To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved call ID or number.)

---

**Note:** Your phone also supports 1 to 4 digit dialing. If you enter a number using the keypad without holding the last number and then press , your phone will dial those digits.

For example, if you enter   and press , it dials 21, not the number stored in memory location 21.

---

## Answering Voice Calls




 



#### Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.



If the incoming call is from a number stored in your Contacts list, the entry's name is displayed. The caller's phone number may also be displayed, if available.



## Answering Calls

1. Press the  key to answer the incoming call.
  - When the **Any Key** option in the **Call Answer** menu is activated, you can answer a call by pressing any key (**Menu**     ).
2. To end the call, press the  key.

The following options are also available to handle an incoming call:

- Press either of the side volume keys to quiet the ringer.
- Press the right soft key  or  key to **Ignore** the incoming call and send it directly to your Voice Mail box.


## Missed Call Notification

When an incoming call is not answered, the Missed Alerts screen is displayed. You have two options:

 


 


- Press the left soft key  to **Call** the number.
- Press the right soft key  for **Dismiss** to remove the missed call from the call log.

## In-Call Options




### Using the Menu Options

Select actions by pressing the right soft key  for **Options** during a call. A list of options is displayed that allows you to perform different actions during the course of a call.

The following options are available:




 
 



-  **Speaker On/Off**: allows you to activate or deactivate the speakerphone.
-  **Key Mute/Unmute**: allows you to activate or deactivate DTMF tones. See "Tone Length" on page 74 for more information.
-  **Contacts**: accesses the Contacts menu options. See "Contacts" on page 25.
-  **Messaging**: allows you to check for Voice Mail and notifications. See "Messaging" on page 30.
-  **3-Way Call**: allows you to talk to two different people at the same time. See "Making Three-Way Calls" on page 19.
-  **Recent Calls**: checks your call log for Recent, Dialed, Received and Missed calls. You can also erase the logs and view call times from this menu. See "History" on page 24.



-  **Voice Memo:** allows you to record the other person's conversation during a call. For more information, see "Voice Service" on page 62.
-  **Tools:** accesses the Tools menu options. See "Tools" on page 55.
-  **Phone Info:** displays your phone's hardware and software versions. See "Phone Info" on page 77.


## Making Three-Way Calls

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press the right soft key  for **Options**, followed by  for **3-Way Call**.
3. Select one of the following options for dialing the second number then press :
  -  **Contacts:** accesses Contacts list.
  -  **Recent Calls:** accesses Recent Calls.
  -  **Enter Phone #:** allows you to dial the phone number.
4. When you're connected to the second party, press  again to begin your three-way call.



If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

---

**Tip:** You can also begin a three-way call by displaying a phone number stored in your Contacts, Recent Calls, or Messaging menus. To call the third party, press .


---

## Mute/UnMute

You can place the current call on hold by pressing the left soft key  for **Mute**. To reactivate your phone's microphone, press the left soft key  again for **UnMute**.



## End-of-Call Options

After receiving a call from or making a call, the phone number and the duration of the call are displayed. The call details are automatically moved to the recent calls. If the phone number is not in your Contacts, press the right soft key  for **Options** and select **Save** to save the number to your Contacts.

---

**Note:** The End-of-Call options are not displayed for calls identified as Unknown ID or Restricted numbers.

---

## Saving Phone Numbers





 


Your phone can store up to 600 entries (numbers/e-mails/URLs) in multiple categories (Mobile, Home, Work, Pager, E-mail, etc.). The Contacts capacity is based on number of entries, not on number of contacts. (For more information, see "Adding New Entries" on page 25.)

## Entering Text


### Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, symbols, and numbers whenever you are prompted to enter text (for example, when sending text messages).




 
#### To change the character input mode:

1. When you display a screen where you can enter text, press the right soft key  for **Options**.
2. Select a character input mode:
  -  **Alpha** to enter characters with the keypad (see page 21).
  -  **T9** to enter characters using predictive T9 Text Input (see the next topic).
  -  **Symbol** to enter symbols (see page 21).
  -  **Number** to enter numbers (see page 21).
  -  **Quick Text** to enter prewritten phrases. This option is available only for fields where Quick Text can be entered.
  -  **ShortCut** to enter common Web text. This option is available only for fields where Shortcut text can be entered.



 

 

 


-  **Text Options** to configure these options: Auto Capital, Used Word Dic., Display Cand., Prediction Start, Dual Language, and Auto-Space.



## Entering Characters Using T9 Text Input

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press . If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.


 
 
 
 
### To enter text using T9:

1. From the text entry screen (for example, a new event in scheduler), press the right soft key  for **Text Mode** and select **T9**.
2. Use the keypad to enter the new event. (For example, to enter "Meeting", press  once,  twice,  once,  once,  once, and  once.)

## Entering Characters with the Keypad

To enter characters by tapping the keypad, select the **Alpha** mode (see "Selecting a Character Input Mode" on page 20). Press the corresponding key repeatedly until the desired character appears. When the  icon is shown at the bottom of your screen, the first letter of the first word is capitalized and following letters are lowercase. The  key can be used to select the case desired.

### To enter text using Alpha:

1. From a text entry screen (for example, a Contacts entry), press the right soft key  for **Text Mode** and select **Alpha**.
2. Use your keypad to enter the contact's name. (For example, to enter "Bill", press  twice,  three times,  three times, and  three times again.)

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

## Entering Numbers and Symbols

### To enter numbers:

- Select the **Number** mode and press the appropriate key. (See "Selecting a Character Input Mode" on page 20.)







## To enter symbols:

- Select the **Symbol** mode. (See “Selecting a Character Input Mode” on page 20.) To enter a symbol, press the appropriate key displayed above the desired symbol character.

## Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the Received call. If you do not want your number displayed when you make a call, just follow these easy steps.

### To block your phone number from being displayed for a specific outgoing call:

1. Press   .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call the Customer Service department of your network service provider.

---


**Tip:** If you want to block the displaying of your phone number for the calls you make, you can do so by typing specific characters before you type the number you want to dial. You can also automate this. For information on prepending numbers to all of your phone calls automatically, see "Auto Prepend" on page 81.

---

## Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

### To respond to an incoming call while you're on a call:





- Press . (This puts the first caller on hold and answers the second call.)

### To switch back to the first caller:

- Press  again.



## Using the Speakerphone

The speakerphone allows you to hear audio through the speaker and talk without holding your phone. During a call, press the right soft key  for **Options** and then select **Speaker On** to activate the speakerphone or press . When the speakerphone is activated, use the Volume keys to adjust the sound level. To turn the speakerphone off during a call, press the right soft key  for **Options** and then select **Speaker Off** or press .

---

**Warning!** Due to higher volume levels, do not place the phone near your ear during speakerphone use.

---




# History

With the History menu, you can:

- view recent calls, grouped by day, that you missed, received, or dialed





---

**Note:** You can also access the most recent numbers in the three types of call records by pressing the  key while in Idle mode.

---

## Viewing Your Recent Calls

**To view an entry in your recent calls:**



1. Press  for **Menu**.
2. Press  for **History**.
3. Highlight an entry and press  to display the time and date of the call.
4. To call a number, highlight the entry and press .

---

**Note:** You cannot make calls from Recent Calls to entries identified as Unknown or Restricted.

---

## Recent Calls Options

When an entry is highlighted, press the left soft key  for **Send Msg** to send a message to the person. See "Messaging" on page 30. Press the right soft key  for **Options** to select one of the following options for this entry. Depending on the Recent Calls category, not all options may be available:

- **Save:** saves the number to your Contacts as a **New Entry** or **Existing Entry**. See "Contacts" on page 25. You cannot save phone numbers already in your Internal Contacts or from calls identified as Unknown ID or Restricted.
- **Prepend** to add a dialing prefix to the phone number prior to calling. (Appears only if this number is not already stored as a Contact.)
- **Delete:** removes the number from your Call History.
- **Delete All:** removes all the entries from your Recent Calls.
- **Show Contact:** displays Contact information.








# Contacts



Use the Contacts menu to store your phone numbers and other contact information. You can specify the following information for each contact you add to your Contacts list: Mobile, Home, Work, Pager, E-mail, URL, Memo, Ringer, Fax, and Others. You can store up to 600 entries.

## Adding New Entries


### Adding New Entries in Idle Mode

1. Enter a new phone number and press the right soft key  for **Options**.
2. Using the navigation keys, select **Save** and press .
3. Select **New Entry** and press .
4. Select the type of number to be stored: **Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Others**. To select the category, press the Up or Down navigation key and then press .
5. Enter a name. For information about entering text, see "Entering Text" on page 20.
6. Press the Up or Down navigation keys to edit information in the other categories.
7. Press the left soft key  for **Done** to save the entry.

### Adding New Entries from the Contacts Menu

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Select **Add New**.
4. Select **New Contact**.
5. Enter the new contact information. See "Adding New Entries in Idle Mode" on page 25.


## Finding, Editing or Dialing Contacts

You can access your contact list from the Idle screen by pressing the right soft key .

### To find an entry from the Contacts menu:

1. Press  for **Menu**.
2. Press  for **Contacts**.







3. A list of your Contacts is displayed. You can find a specific contact in one of the following ways:
  - Scroll through the list using the Up and Down navigation keys.
  - Enter the first few letters to locate the desired Contact. If more than one Contact appears, scroll through the list using the Up and Down navigation keys.
4. To call the Contact, press .

To edit the Contact, press the right soft key  for **Options**, and select **Edit**. See "Adding New Entries" on page 25.

## Selecting Ringer Types to Identify Entries

You can assign ringer types to different Contact entries so you can identify callers by the ringer you hear when they call.


### To assign a ringer to a contact:

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 25.
2. Press the navigation key down until **Ring** is selected and press .
3. Using the navigation keys, select a ringer category and press .
4. Press the navigation key up or down to highlight and listen to the desired ringer. Press  to select the desired ringer.
5. Press the left soft key  for **Done** to save the changes to the contact entry.



## Selecting Pictures for Entries

You can assign a picture to a Contacts entry so that it appears on the displays whenever that person phones you.

### To assign a picture to a contact:

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 25.
2. Press the Up navigation key to select the photo area (if there is no photo, this area will be labelled **Add Photo**) and press the right soft key  for **Add**. (If a photo has already been assigned, the right soft key will say **Change**.)
3. Using the navigation keys, select one of the following options:
  - **No Image**: Leave the picture blank.




 






- **New Picture:** Use the camera to take a new picture. See "Camera" on page 45.
  - **My Pictures:** Select an image from your **Photo Gallery**, **MMS**, or **Transferred Images**. See "Image Album" on page 46.
  - **My Content:** Select an image from your downloaded images.
4. When you find the image, highlight it and press the left soft key  for **Assign**.
  5. Press the left soft key  for **Done** to save the changes to the contact entry.

## Groups

### Assigning Contacts to Groups





You can associate a group name to your entries. Once contacts are organized into groups, you can send text and multimedia messages to all members of a group simultaneously. Additionally, you can assign a unique Picture ID to the group.

To create a new group and associate an existing contact to a group:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**.
4. Press  for **New Group**.
5. Press left soft key  for **Start**.
6. Highlight the desired contact and press the  key. When you are finished adding contacts, press the left soft key  for **Continue**.
7. Enter a name for the group.
8. Press the left soft key  for **Save**.

### Sending Messages to Groups

**To send text messages to all the Contacts in a group:**






1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Select the desired group to display the group details.
4. Press the left soft key  for **Send Msg**.
5. Press the left soft key  for **Next**.



6. Create the text message to send. See "Text & Multimedia Messages" on page 32.

## Group Options







### To add members, rename, or delete groups:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Select the desired group to display the group details.
4. Press the right soft key  for **Options**.
5. Select an option:
  - **Edit Group**: You can rename the existing group or select **Add More** to add a new group member. After making changes, press the left soft key  for **Save**.
  - **Delete Group**: To delete the group, press the left soft key  for **Delete**.

## Speed Dials

You can assign up to 98 phone numbers from the Contacts list that you use most frequently to the number keys (2 to 99). You can dial them easily whenever you want, simply by pressing and holding the associated number key.

### Creating Speed Dial Entries

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**.
4. Press  for **Settings**.
5. Press  for **Speed Dial**. A list of current speed dials is displayed.
6. Using the navigation keys, select a number and press the right soft key  for **Assign**.

---

**Note:** Memory location 1 is reserved for your Voice Mail server number.







---

7. Select an entry from the list and press .



## Editing Speed Dial Entries

### To replace the number assigned to a speed dial location:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**.
4. Press  for **Settings**.
5. Press  for **Speed Dial**.
6. Using the navigation keys, select the speed dial number you want to edit.
7. Press the right soft key  for **Options**.
8. Select an option:
  - **Replace:** To replace the contact with another one.
  - **Remove:** To erase the number.








## Using Speed Dial

In Idle mode, to speed dial the numbers assigned to the 2 to 99 keys, press and hold the appropriate key. See page 17 for information.

## My Name Card

This function is similar to an entry in the Contacts list, except that it contains your own contact information, like a business card. You can transfer it to another Bluetooth-enabled device or send it in messages.

### To view the name card:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**.
4. Press  for **Settings**.
5. Press  for **My Name Card**.
6. If the name doesn't exist, enter the name and press the left soft key  for **Done**.
7. Press the left soft key  for **Send Contact**. This option lets you send your name card to a recipient listed in your contacts. For more information, see "Contacts" on page 25.



# Messaging

You can send and receive a range of different message types from your phone.

Press  for **Menu**, followed by  for **Messaging**.

This menu has the following messaging options:

- **Voicemail:** allows you to access your voice mailbox and check for voice messages.
- **Text and Multimedia:** allows you to compose and send Text and Multimedia messages to other phones able to receive the messages.
- **Web Alert:** allows you to view specific Web alerts from your service provider.

## Voice Mail

### Setting Up Your Voice Mail


 
 

All unanswered calls to your phone are automatically transferred to your voice mail, even if your phone is in use or turned off. Therefore, you should set up your voice mail and personal greeting as soon as your phone is activated.

---

**Note:** You must request this feature from your service provider for it to work correctly.


---

### To set up voice mail:

1. Press  for **Menu**, followed by   .
2. Follow the system audio prompts to create your passcode, record your greeting, and record your name announcement.

### Voice Mail Notification



There are several ways your phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By displaying  at the top of your screen.

### New Voice Mail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call to check your voice mail.

### To call your voice mail immediately after receiving a message:

1. Press the  key to listen to the message.
2. Press the  key to return to the Idle screen.



## To display your Voice Mail:

- Press  for **Menu**, followed by   .

---

**Tip:** You can also press and hold the  key to set up and check your voice mail.

---

---

**Important:** When you are roaming off the network, you may not receive notification of new voice mail messages. It is recommended that you periodically check your voice mail by dialing 1 + area code + your Phone Number. You will be charged roaming rates when accessing voice mail while roaming off the network.

---

---


 

 
**Note:** Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Service Area.

---

### Retrieving Your Voice Mail Messages

You can access your voice mail from the Messaging menu.

#### To use the menu keys to access your voice mail:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voicemail**.
4. Press  for **Dial Voicemail**.

---


 

**Note:** You are charged for airtime minutes when you are accessing your voice mail from your phone.

---

### Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice messages.

#### To clear the icon from the display screen:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voicemail**.










4. Press  for **Clear Icon**.
5. Press the navigation key up to select **Yes** and press .

## Text & Multimedia Messages


### Create New

Using your phone, you can send text and multimedia messages to other mobile phones in North America and the rest of the world, depending on your carrier.


#### To create a text message:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Send New**.
5. Enter the phone number or e-mail address manually, or, to send the message to a saved contact, press the Down navigation key, highlight **Contact List** and press . Highlight the desired contact and press the  key. When you are finished adding contacts, press the left soft key  for **Done**



If you wish to send your message to multiple numbers or addresses, repeat step 5. Use the navigation keys to move up and down your list of addresses. You can send a message to a maximum of 10 numbers.

6. When you are finished entering numbers or addresses, press the left soft key  for **Next**.


---

**Tip:** For the next step, you can change text entry mode, by pressing the right soft key  and select a text entry option. See "Selecting a Character Input Mode" on page 20.



---

7. Specify a Subject and create your message using the keypad as follows.
  - To add a Subject line to your message, highlight the **Subject** box using the navigation keys. Enter the subject text. When you are finished press the left soft key  for **Done**.
  - To write the body of your message, highlight the main body box using the navigation keys. Enter the text of the message. When you are finished press the left soft key  for **Done**.



8. To send the message, press the left soft key  for **Send**. If you want to add multimedia files to the message, continue with the next procedure.



### To add sound or picture files to a message:

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Sound** or **Add Picture** using the navigation keys and press .
3. Select an option:
  - For audio files, select **Record New** or **Sound Album**.
  - For pictures, select **Take Picture** or **Image Album**.
4. The file is attached to your message. You can now finish composing and send your message.



### Adding slides to your message

Messages can contain up to 1000 characters. For lengthy messages, you can divide the message text among two slides. Each slide presents one screen of information. Each slide can contain its own sound and picture attachments.

### To add slides to a message:

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Slide** using the navigation keys and press .
3. A new body box appears below the first box. You can move between the first and second slides using the Up and Down navigation keys. You can now finish composing and send.

### Changing sending options for messages


1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
2. Highlight **Sending Options** and press .
3. Select the option you wish to change. The options available to you depend on the type of message you created.

**SMS options** (SMS messages are typically text-only messages.)



- **Callback Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** allows you to change the priority of the message between **Urgent** and **Normal**.




 

**MMS options** (MMS messages typically have multimedia attachments.)

- **Read Report:** allows you to turn Read Report **Off** or **On**. When **On**, you will be notified when your message is read by the message's recipient.
  - **Delivery Report:** allows you to turn Delivery Report **Off** or **On**. When **On**, you will be notified when your message is received by the message's recipient.
  - **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
  - **CC:** allows you to add a CC address to your message.
  - **BCC:** allows you to add a BCC address to your message.
  - **Slide Timing:** allows you set the duration (in seconds) of each slide.
4. When finished with your messaging options, press the  key to return to the message window.

## Saving messages

You can save a draft of your message prior to sending it. This is useful if you intend to send the message again in the future or if you cannot complete the message and want to do so at a later time.

### To save a draft of a message:

1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
  - Press  for **Save to Drafts**. The message is stored in the **Drafts** folder. When the message is sent, the draft is deleted.
  - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.
  - For MMS messages (which typically contain sound or photograph files) you can select  for **Save As Template**. Enter a name for the template and press . The message is now stored in your **Templates** folder. Unlike draft messages, templates are not deleted when sent.

 





2. You can now continue to compose or send your message.


## Inbox

This folder contains all your received text and multimedia messages. From this folder, you can view your messages, reply to or forward the message to another destination.

### To view a message in your inbox:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Highlight the desired message and press . The message appears on screen.

### To reply to a message:

1. With the message open, select the left soft key  for **Reply**.
2. Compose your reply message. For more information, see "To create a text message:", beginning at step 6.

---


 



**Note:** The address field is already filled in when replying to a message.

---






## Outbox/Sent

This folder contains messages you have sent and saved to your Outbox or are waiting to send. From this folder, you can select and resend messages.




 

### To forward or resend your message:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Highlight the desired message and select one of the following options:
  - If the message was successfully sent previously:
    - To forward the message to a different recipient, press the left soft key  for **Forward**, and specify the new recipient.






 
- To resend the message, press the right soft key  for **Options** and press  to **Resend**. Your message will be sent to the same recipient. See page 32 for information.
- If the message failed to be sent previously:
  - To re-send, press the left soft key  for **Resend**. Another attempt is made to send your message to the original recipient.
  - To forward the message to another recipient, press the right soft key  for **Options** and press  to **Forward**.

### To access Outbox/Sent options:


1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Press the right soft key  for **Options**.
  - **Resend**: allows you to send your message again either to the original recipient or to a different one.
  - **Move to Saved**: allows you to move the message to the Saved list.
  - **Save address**: allows you to save an address in your Contacts list.
  - **Message Details**: allows you to view information about the message, such as date and time.
  - **Message Status**: allows you to view the **Delivery Status** and **Read Status**.
  - **Erase**: allows you to delete the message.
  - **Erase Multiple**: allows you to select and delete several messages.
  - **Erase All**: allows you to delete all the messages in the list.

### Templates

This folder contains predefined messages for common occasions, as well as multimedia messages you have saved as templates. To compose a multimedia message using a template:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Templates**. Your templates appear in a list.


 





5. Select **Create New** or highlight the desired template and press .
6. Compose your message. For more information, see "To create a text message:", beginning at step 5 on page 32. You can modify the message as desired.

## Drafts

This folder contains drafts of unfinished or unsent text and multimedia messages. From this folder, you can complete and send your messages.


 



### To open a saved draft:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Drafts**. Your draft messages appear in a list.
5. Highlight the desired draft message and press .
6. Complete your message. For more information, see "To create a text message:", beginning at step 5 on page 32. You can modify the draft message as desired.

## Saved

This folder contains saved text and multimedia messages. Saved messages will not automatically expire. Delete them manually.


 
### To open a message in the Saved folder:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Saved**. Your saved messages appear in a list.
5. Highlight the desired saved message and press .




 
 



## Erase Messages

You can erase messages at anytime from the Inbox, Outbox/Send, Draft or Saved message folders.

### To erase the messages from the desired folder:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.



4. Press  for **Erase Messages**.
5. Press  for **Inbox**,  for **Outbox**,  for **Drafts**,  for **Saved**,  for **Templates**, or  for **All Messages**.
6. Press the navigation key left or right to select **Yes** and press .

## Settings

There are several options associated with messages. The Settings menu allows you to customize the options to fit your preferences.

### To access the Settings menu:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Settings**.

The following options are available:

### SMS Options

- **CallBack Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** allows you to change the priority of the message between **Urgent** and **Normal**.

### MMS Options

- **Read Report:** allows you to turn Read Receipt **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** allows you to turn Delivery Receipt **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
- **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
- **Auto Download:** allows you to turn Auto Downloading **Off** or **On**. When On, the attachments for multimedia messages will automatically be downloaded to your phone.
- **Rejection Settings:** allows you to adjust the Rejection settings for your phone. The options available are:
  - **By Size:** allows you to reject multimedia messages that over a specified size.



- **Reject Adv.:** allows you to reject multimedia messages that are labeled as advertising (Adv.)
- **Number/Email:** allows you to reject multimedia messages sent from a specific phone number (MIN) or Email address.

**Save to Outbox:** allows you to adjust whether sent messages are saved in your Outbox. Your options are:



- **Auto Save:** automatically saves a copy of the outgoing message in the filed folder.
- **Prompt:** prompts you to save a copy of the outgoing message.
- **Do not Save:** does not save a copy of the outgoing message.

**Auto Delete Inbox:** allows you to indicate whether read messages are automatically deleted from your Inbox.

**Default Entry Mode:** the Entry Method allows you to set the default character input method for new text messages. You can select between:

- **T9 Word:** is a predictive text entry mode.
- **Alpha:** is the standard keypad text entry mode.
- **Number:** is the standard numeric entry mode.

**Quick Text:** Quick Text messages are used to enter common responses to questions. A Quick Text can be selected and automatically entered into the message. Quick Text can also be customized to whatever you want by editing the 9 pre-set messages already stored in your phone.

- To edit a Quick Text message, highlight the desired Quick Text message and press . Edit the message and press the left soft key  for **Done** when finished.

 



**Auto Scrolling:** The scroll timer allows you to set the length of time a message takes to scroll across the screen. Options are **Off**, **3 Seconds**, **5 Seconds** or **10 Seconds**.

**Message Reminder:** This option allows you to configure how often you are notified of new text messages. Options are **Off**, **Once**, or **Every 2 min**.

**Alert on call:** This option allows you to indicate whether your phone alerts you to a new message during a phone call.




 

## Memory Info

Memory Info (**Menu**   ) displays how much memory is available for messages. Press the left soft key  for **Done** to return to the previous screen.

## Web Alert


Your phone is capable of receiving web alerts from online providers. Consult with your Service Provider for more details.

### To access the web alert service (if available):

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Web Alert**.
4. Follow the on-screen instructions.



# Music


Music (**Menu** ) provides a menu for accessing music.

## To access the Music menu:

1. Press  for **Menu**.
2. Press  for **Music**.
3. Follow the on-screen instructions.



# Wireless Web

Your phone comes equipped with Wireless Web access (**Menu** ) through your browser. You can view specially designed versions of popular sites including sports, weather, news, and stock quotes. When you launch the browser, the phone automatically connects to the Internet.




---

**Note:** Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

---

## Launch Web

**To launch a web connection:**

1. Press  for **Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Launch Web**. You now are connected to your service provider's Web page.

## Navigating the Web

Navigating through menus and Web sites during a web session is easy once you've learned a few basics. Here are some tips:

### Soft Keys

When browsing the Web, the bottom line of your phone's display contains one or more soft keys. These keys are shortcut controls for navigating around the Web, and they correspond to the soft key buttons directly below the phone's display screen. Depending on which Web sites you visit, the labels on the soft keys may change to indicate their function.

### Scrolling


As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.


- Press the Up and Down navigation keys to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

### Navigating Between Web Pages

Once you've learned how to use soft keys and scroll, you can start navigating Web sites.



- Select on-screen items by using the navigation key to highlight the desired item, then press the desired soft key button (or press ).

 
The left soft key  is used primarily for selecting items.

- If the items on a page are numbered, you can use your keypad (number keys) to select an item.



Links appear as underlined text and allow you to jump to different Web pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then selecting the appropriate soft key.

---

**Tip:** The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.




---

4. To go back one page, press  on your phone. (Note that  is also used to delete text.)

## Bookmarks

You can view web pages that were saved as bookmarks in a previous web session.

### To view a bookmarked web page:

1. Press  for **Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Bookmarks**.
4. Select a bookmark from the list of bookmarks. You now are connected to the web page.

## Go To URL


You can view web pages by specifying a URL.

### To launch a web connection:

1. Press  for **Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Go To URL**.
4. Enter a URL or select a URL from the displayed list. You now are connected to the web page.




## My Files

The My Files menu (**Menu** ) lets you download new ringtones and wallpaper from your service provider.

## Ringtones

### To download ringtones:

1. Press **Menu**  to access the **My Files** menu.
2. Select **Ringtones** using the navigation keys and press .
3. Select **Get New Ringtones** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.

## Wallpaper




### To download wallpaper:

1. Press **Menu**  to access the **My Files** menu.
2. Select **Wallpaper** using the navigation keys and press .
3. Select **Get New Wallpaper** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.



# Camera

## Camera

Using the Camera (**Menu**   ) in your phone, you can take photos of people or events while on the move. You can send photos to other people in a multimedia message or set one as a wallpaper.


### Taking Pictures

Taking pictures with your phone's built-in Digital Camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate Camera mode and take pictures when the phone is closed.

#### To take pictures:

1. Press **Menu**   for **Camera**.
2. Press  for **Take Photo**.

---

**Shortcut:** To activate Camera mode, you can also press the Camera button  located on the right side of the phone.




---

3. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
  - To change the brightness of the screen, press the Up or Down navigation keys.
  - To zoom in or out, press the Left or Right navigation keys.

 
---

**Note:** If your camera is set to 1.3 M resolution, you will not be able to zoom in or out.

---

4. Hold the camera steady. To take the picture, press  or the Side Camera button  until the shutter sounds.
  - The photo is automatically stored in your photo gallery. See "Image Album" on page 46 for more details.
  - If you wish to send your picture to someone via multimedia messaging, press the right soft key  for **Options** then select **Send Msg**. Your picture is embedded in a new multimedia message. See "Sending Pictures via Multimedia Messaging" on page 46 for more details.




- If you wish to discard the current picture, press the right soft key  for **Options** and then select **Erase**. You can continue to take pictures.


## Camera Options

There are several settings associated with the full-color digital camera. These settings allow you to customize how the camera operates when taking pictures. If the subject image is in reverse on the display, you can invert it using the volume keys on the left side of the phone to display the image correctly.

### To access camera settings:

1. Start the camera. For more information, see "Taking Pictures" on page 45.
2. Press the right soft key  for **Options**.
3. Use the Left and Right navigation keys to select the desired option.
  - **Self Timer:** allows you to configure a timer. Options are: **Off**, **5 sec**, or **10 sec**.
  - **Multi Shot:** allows you to select **Series Shot** or **Divided Shot**.
  - **Fun Tools:** allows you to configure **Fun Frames** and **Color Tones**.
  - **Controls:** allows you to configure **Brightness**, **White Balance**, **Night Shot**, and **Metering**.
  - **Settings:** allows you to configure camera settings (when you change these settings, they are saved for all subsequent shots).
  - **Launch:** allows you to select **Review Pictures**.

## Sending Pictures via Multimedia Messaging


 



 


1. Take your picture, as described in "Taking Pictures" on page 45. From the Taken Picture screen, press the right soft key  for **Options** then select **Send Msg** to send your picture as part of a multimedia message.
2. Specify a destination phone number or e-mail address by entering the information or selecting it from your Contacts list.
3. Compose your multimedia message. Your picture is already attached to the message. For more information, see "To create a text message:", beginning at step 6 on page 32.

## Image Album

From your Image Album, you can view all the pictures that you have stored on your phone. Stored pictures can be sent to others as multimedia messages.



## To access your saved pictures:

1. Press **Menu**   for **Camera**.
2. Press  for **Image Album**.
3. Select an album:
  -  **Photo Gallery**: displays pictures you have taken.
  -  **MMS**: displays pictures for multimedia messages.
  -  **Transferred Images**: displays pictures you have transferred from the memory card.
4. Using the navigation keys, scroll through your stored photos and highlight the desired photograph.
  - To view the highlighted picture, press the left soft key  for **Expand** (Photo Gallery only).
  - To modify your picture options, press the right soft key  for **Options**. The following options are available:
    - **Send**: sends the picture to someone via multimedia messaging. For more information, see "Sending Pictures via Multimedia Messaging" on page 46.
    - **Print**: allows you to print the picture using PictBridge. For more information, see "PictBridge Print" on page 48.
    - **Assign**: allows you to use the picture for a wallpaper, picture ID, or incoming caller. In the address book, pictures can be used to identify incoming callers by displaying the image on screen.
    - **Erase**: erases the picture from memory.
    - **Erase All**: erases all the pictures from memory.
    - **Copy/Move**: allows you to copy or move the picture to your memory card.
    - **Rename**: allows you to change the name of the picture.
    - **Info**: displays the caption, time and date, resolution, size, and upload status of the image.



## Settings

The Camera Settings menu (**Menu**   ) allows you to change the default options for common camera settings.

- **Save To:** Select either **Phone** or **Memory Card** as the default save location.

## PictBridge Print

PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA) that enables a range of digital photo solutions including direct photo printing from a digital camera to a printer without the need for a PC.

---




 




**Note:** There are many PictBridge devices in the market whose compatibility with your phone cannot be guaranteed.

---

### Printing From Your Phone

Your phone comes equipped with a built-in camera that allows you to print images directly to a printer using the PictBridge technology. A USB cable must be connected between the two devices before any printing can occur.

#### To use PictBridge to print pictures from your phone:

1. Insert one end of the accessory cable into the USB slot on the printer.  
(Printer must support PictBridge technology.)
2. Press  for **Menu**.
3. Press  for **Camera**.
4. Press  for **Camera**.
5. Press  for **PictBridge Print**.
6. Insert the USB cable into your phone.
7. Read the on-screen “Connect Printer” message and press the left soft key  for **Next**.
8. Select the image gallery (**Photo Gallery**, **MMS**, or **Transferred Images**) and press .
9. Highlight the desired image and press the left soft key  for **Next**.  
(To select multiple images, press  to place a check mark next to each image selected.)
10. Highlight **Copies** and press the navigation key left or right to select the desired number of copies to print.



11. Press the navigation key down to select **Type**. Press the navigation key left or right to select one of the following:

- **Standard**: prints the standard image.
- **Index**: prints the index information.

---

**Note:** These options may vary and are dependent on the printer's capabilities.

---

12. Press the navigation key down to select **Size**. Press the navigation key left or right to select a size.

---

**Note:** These sizes are may vary and are dependent on the printer's capabilities.

---

13. Press the navigation key down to select **Date Print**. Press the navigation key left or right to make a selection.

14. Press the navigation key down to select **Border**. Press navigation key left or right to select **On** or **Off**.




 


 
15. Press the right soft key  to **Preview** the image the left soft key  to **Print** the image.

16. Select **Yes** to confirm printing and press .



## My Albums

The My Albums menu (**Menu**  ) lets you quickly view the multimedia contents of your phone:

-  **Sound Album:** see "Voice Service" on page 62.
-  **Image Album:** see "Image Album" on page 46.
-  **External Memory:** allows you to select one of the following:
  -  **Sounds:** displays sound content.
  -  **Pictures:** displays picture content.
  -  **Music:** displays music content.
  -  **Memory Info:** displays memory card status.








# Bluetooth




 
 



 
Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth®. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

## Adding New Devices


1. Press  for **Menu**.
2. Press  for **Bluetooth**.
3. Press  for **Trusted Devices**.
4. Press left soft key  for **Add New**.
5. Select **Search**.
6. A list of Bluetooth devices is displayed. Highlight a device and press  for **Add to list**.







 
### To access Bluetooth menus:

1. Press  for **Menu**.
2. Press  for **Bluetooth**.
3. Select one of the following options:
  -  for **Enable**: Select **On** or **Off** to enable or disable Bluetooth support.
  -  for **Visibility**: Select **Visible for 1min** to let other devices search for your phone; otherwise, select **Hidden**.
  -  for **Device Name**: Type in the name of your phone as it will appear to other Bluetooth devices. See "Entering Text" on page 20.
  -  for **Device Info**: Displays information about your phone's Bluetooth configuration.
  -  for **Select Device Type**: Displays default device for incoming and outgoing calls. Select **HandsFree** or **HeadSet**.
  -  for **Use In-Band Ring**: Enable or disable use of in-band ring.
  -  for **Voice commands**: Enable or disable voice commands.



## Options

After a device is added to your list of Trusted Devices, press the right soft key  to select from the following options:

-  **Add New:** adds another device to your Trusted Devices list.
-  **Edit name:** shows the name given to your phone for Bluetooth® purposes. You can edit the name if needed.
-  **Erase:** lets you delete the highlighted trusted device.
-  **Erase all:** lets you delete all the trusted devices.
-  **Auto-accept:** lets you accept trusted device transfers automatically.
-  **Info:** lets you view information about the highlighted trusted device.
-  **Settings:** Select **Enable**, **Visibility**, **Device Name**, **Device Info**, or **Select Device Type**.

---

**Note:** The software in this handset supports Bluetooth profiles: HSP, HFP, DUN, OPP, A2DP, and AVRCP. However, the software does not support the transfer of data files.




---




# Voice Memo

You can use your phone to record brief memos to remind you of important events, phone numbers, or other items.

## Recording Voice Memos



1. Press  for **Menu**.
2. Press  for **Voice Memo**.
3. If you have not previously recorded a voice memo, press the left soft key  for **Record New**.

If you have previously recorded a voice memo, press the right soft key  for **Options** and press  for **Record New**.


 
To hear a previously recorded voice memo, press the left soft key  for **Play**.

4. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

Press the left soft key  to **Pause** the memo. (When a memo is paused, press the left soft key  again to **Resume** recording.)

5. Press the right soft key  to **Finish** the recording prior to the countdown completion.
6. The memo is saved to your phone. Press the left soft key  to **Play** your message for review.

## Recording Phone Call Conversations


1. During a call, press the right soft key  for **Options**.
2. Press  for **Voice Memo**. (A one minute counter is displayed on the screen to indicating the amount of time a single voice memo can be recorded.)


Press the left soft key  to **Pause**. (When a memo is paused, press the left soft key  again to **Resume** recording.)

3. Press the right soft key  for **Done** to stop and save the phone call conversation.




## Voice Memo Options

After recording a voice memo, you can select the following options by pressing the right soft key  for **Options** in the Voice Memo menu.

- **Record New:** Record a new voice memo. See "Recording Voice Memos" on page 53.
- **Send:** Send the selected voice memo in a multimedia text message or via Bluetooth. See "Messaging" on page 30 for more information on sending multimedia messages.
- **Erase:** Select the individual memos to erase by highlighting them and pressing .
- **Erase All:** Erase all the voice memos.
- **Copy/Move:** Allows you to Copy or Move the memo to your memory card.
- **Rename:** Change the description of the voice memo.
- **Info:** Displays information about the selected voice memo, such as length, size and recording date.



# Tools


 
 


 



Tools (**Menu** ) provides helpful software applications to help you perform common functions, such as:

- setting an alarm so that the phone rings at a specific time, to remind you of an appointment, for example
- viewing a calendar and organizing your schedule
- using the phone as a calculator for basic mathematical equations or currency exchange operations
- viewing times in different parts of the world

## Alarm

Your phone comes with a built-in alarm clock with multiple alarm times.

### To use the alarm clock:


 





1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Alarm**.
4. Press , , or  to select an alarm.
5. Press the navigation key left or right and select **On**.
6. Press the navigation key down once and then use the keypad to enter the alarm time.
7. Press the right soft key  to select **AM** or **PM**.
8. Press the navigation key down once and press  to select an alarm tone from **Ring Tones**, **Melodies**, or **My Content**. See "Ringer Type" on page 71.
9. Press the navigation key down once and then press it right or left to select the Repeat interval: **Once**, **Mon to Fri**, **Sat & Sun**, or **Daily**.
10. Press the navigation key down once and then press it right or left to select the Snooze interval: **Off**, **5 minutes**, **10 minutes**, **15 minutes**, or **20 minutes**.
11. Press the left soft key  for **Done**.

## Calculator

Your phone comes with a built-in calculator.





 
 

 

## To access the calculator:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calculator**.
4. Enter a number with the keypad. (Press  to insert a decimal point and  to make the number negative or positive. To clear the input box, press the right soft key .)
5. Use your navigation key to select a mathematical function:
  - **Left** to subtract
  - **Up** to multiply
  - **Right** to add
  - **Down** to divide
6. Enter the next number using the keypad. Repeat steps 5 to 7 as necessary.
7. Press  to view the results.

## Calendar

Your Calendar helps organize your time and reminds you of important events.

### To add an event to today's schedule:


1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Select a Planner type:
  -  **Today**: displays today's events.
  -  **Scheduler**: displays a calendar from which you can select a day.
  -  **Task List**: displays a to-do list.
  -  **Countdown**: displays a countdown to a specific time.

### Using Today Entries

You can use the Today menu (**Menu**   ) to display all the **Schedule**, **Task**, and **Countdown** entries for the current day:

- Press the Left and Right navigation keys to switch between the **Schedule**, **Task**, and **Count** tabs.


 









- Press the **Options** soft key  and select **Jump to date** to view a different day.

### Using Scheduler Entries




The Scheduler menu contains a calendar to keep track of your schedule and lets you set alarms to act as reminders.

#### To create a Scheduler entry:

1. Display the Scheduler (**Menu**   ).
2. Press the navigation keys to select a day and press the left soft key  for **View**, then press the left soft key  for **Add New**. Enter a description of the event.
3. Press the left soft key  for **Next**.
4. Use the navigation keys to select the type of event, the amount of warning given before the event, and how often the event occurs.
5. Press the navigation key down once and press  to select an alarm tone. See "Ringer Type" on page 71.
6. Use the navigation keys and keypad to enter the **Start** and **End** times.
7. Press the navigation key down once and press  to select a contact.
8. Press the left soft key  to select **Done**.

#### To view Scheduler options:

You can select the following options in the Scheduler (**Menu**   ) by pressing the right soft key  for **Options**:







- **Add New**: allows you to create a new Scheduler event.
- **View Type**: allows you to switch the Scheduler view to **Monthly** or **Weekly**.
- **Jump to date**: allows you to view the events for a specific day. Press the Left or Right navigation key to select an option. Then press the Down navigation key to enter the date information:
  - **Jump By Date**: allows you to enter a date to jump to. Press the left soft key  for **OK**.
  - Press the right soft key  to go to today's date.
  - **Jump By Term**: allows you to enter a range. Select either **Before** or **After**, press Down, and use the keypad to enter the number of days. Press the left soft key  for **OK**.
- **Erase All**: allows you to erase all events. Use the Up or Down navigation key to select either **Yes** or **No**.



 




 

## Using the Task List

You can use the Task function in the same way you would use a to-do list. When the task has been completed, you can check it off as done.

### To enter a Task:

1. Display the **Task List** (Menu   ).
2. If this is the first entry, enter a description of the task. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 20.
3. Press the left soft key  for **Next**.
4. Use the navigation keys to select a **Priority** for the task.
5. Use the navigation keys and keypad to set a **Due Time** and **Due Date**.
6. Press the left soft key  for **Done**.

### To view or edit existing Tasks:

1. Display the **Task List** (Menu   ).
2. Highlight a task and select one of the following options:
  - To set the state of the task, press the right soft key  for **Options**. Select **Set State** followed by **To Do**, **In Process**, or **Completed**.
  - To edit the task, press  to display the task details and then press the left soft key  for **Edit**.
  - To delete task, press the right soft key  for **Options** and select **Erase**.

---





**Note:** To delete all the tasks, from the **Task List** menu, press the right soft key  for **Options** and select **Erase All**.

---




## Using Countdown

You can use the Countdown function to remind you how much time is left until a specific event.

 

 



### To enter a Countdown:

1. Display the **Countdown** menu (Menu   ).
2. If this is the first entry, enter a description of the countdown. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 20.



3. Press the left soft key  for **Next**.
4. Use the keypad to enter the countdown Time.
5. Press the right soft key  to select **AM** or **PM**.
6. Press the Down navigation key once.
7. Use the keypad to enter the countdown Date.
8. Press the left soft key  for **Done**.

### To view or edit existing Countdowns:

1. Display the **Countdown** menu (**Menu**   ).
2. Highlight a countdown and select one of the following options:
  - To edit the countdown, press  to display the countdown details and then press the left soft key  for **Edit**.
  - To delete countdown, press the right soft key  for **Options** and select **Erase**.

---

**Note:** To delete all the countdowns, from the **Countdown** menu, press the right soft key  for **Options** and select **Erase All**.

---





## Mass Storage

You can connect your phone to your personal computer using a USB data cable, using your phone as a portable disk drive.

### Connect to PC

You must insert a memory card into the phone in order to connect the phone to a computer. The memory card is the destination for all file transfer.

### To transfer files between your phone and your computer:

1. Connect your phone to the data cable.
2. Connect the data cable to your computer.
3. Press  for **Menu**.
4. Press  for **Tools**.
5. Press  for **Mass Storage**.
6. Press  for **Connect to PC**. The phone now appears as a removable disk on your computer.



---

**Warning:** Call is disabled when the device is connected as a mass storage device.


---

7. Using your computer's navigation systems, transfer your files between the computer and the phone.

---

**Warning:** Do not disconnect the phone from the data cable while transferring files! Please follow proper shutdown procedure for removable storage device to avoid file corruption.

---


 


8. When you are finished transferring files, press the right soft key  for **Disconnect** and the right soft key  to confirm.

It is now safe to remove the phone from the data cable.

### Format

Use this menu to format a memory card that has been inserted into the card slot. Your handset is capable of supporting memory cards with a maximum memory of 8 GB.

#### To format an inserted memory card:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Mass Storage**.
4. Press  for **Format**.
5. Enter your lock code.

---

**Tip:** If you can't recall your lock code, try using the last four digits of your Mobile Directory Number or try 1234. If none of these work, call Customer Service at 1-800-Samsung.

---

6. Press left soft key  for **Format** or press right soft key  for **Cancel**.

---



 


**Note:** Do not remove your memory card while it is being formatted.


---



## Memory Info.

**To view the amount of storage space used on your phone:**

 



1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Mass Storage**.
4. Press  for **Memory Info..**
5. Using the navigation keys, highlight **ALL**, **Phone** or **Card** and press .  
The amount of storage space used and available is displayed on-screen.

When you are finished, press the left soft key  for **Done**.

 



## Memo Pad

Your phone comes with a memo pad you can use to compose and store reminders and memos to help keep yourself organized.





### Creating Memos

1. Display the **Memo Pad** menu (**Menu**  ).
2. Press the left soft key  for **Add New**. See "Entering Text" on page 20.
3. Enter up to 512 characters in the memo using the keypad and press the left soft key  for **Done**.

### Viewing and Editing Memos

1. Display the **Memo Pad** menu (**Menu**  ).
2. Use the navigation keys to highlight a memo. Press  to display the memo details and then select one of the following options:
  - To edit the memo, press the left soft key  for **Edit**.




### Deleting Memos

1. Display the **Memo Pad** menu (**Menu**  ).
2. Highlight the memo you wish to delete using the navigation keys.
3. Press the right soft key  for **Options**.
4. Select **Erase** or **Erase All**.
5. Highlight **Yes** with the navigation key and press  to confirm.

## World Time

World Time displays what time it is in twenty-four different time zones around the world together with one or more major cities, states, regions, or countries in a time zone.



1. Display **World Time** (Menu  ).
2. Press the navigation key up/left, or down/right to display the different time zones.
3. Press the left soft key  to set Daylight Saving Time (DST).

## Voice Service

### Activating Voice Recognition

Voice recognition allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-designated command displayed on your screen in a normal tone of voice to perform the desired function.

#### To activate voice recognition:

1. Press the Voice Services key on the right side of the phone. (The phone prompts you to say a voice command.)
2. Wait for the beep and then say one of the following commands:
  - **Call**
  - **Send Text**
  - **Lookup**
  - **Go To**
  - **Check**

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.

### Call

Call allows you to dial any valid 7, 10 or 11 digit North American phone number by speaking the number naturally, without pausing between the digits.



Tips for using voice Dial:

- Call works best in quieter environments.
- When saying a number, speak at a normal speed and say each digit clearly. There is no need to pause between digits.
- The phone recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and oh. The phone does not recognize numbers such as “one eight hundred” for “1-800”. Instead, say “one-eight-zero-zero”.
- The phone recognizes only valid 7, 10 or 11 digit North American phone numbers.
- If your phone does not usually recognize you correctly when you are using voice Call, try adapting Call to your voice, which can significantly improve



accuracy for some speakers. (See "Configuring Voice Adaptation" on page 65 for details.)

### To place a call using voice Call:

1. Activate voice recognition by pressing the Voice Services key on the right side of the phone. (The phone prompts you for a command.)
2. Say **Call**. (The phone prompts you to say the number.)
3. Say either a name stored in your Contacts or a valid 7, 10 or 11 digit North American phone number naturally and clearly.
  - If the phone asks you, "Did You Say," followed by the correct number, say **Yes**. (You can also select the correct number from those displayed on the screen by pressing  on the correct number. The phone will then dial the number.)
  - If the phone asks you, "Did You Say," followed by an incorrect number, say **No**. (If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation key up or down to select the correct number from the Choice List, and then press  to dial.)
  - If you said a name listed in your Contacts that has more than one number associated with it, the phone displays the different locations (**Mobile, Home, Work, Pager, Fax, Others**) and asks you which one to dial. Say one of the location names and the phone will dial the number for the location you specified.

---

**Note:** In some cases, the phone might ask you to repeat a name or number. Make sure that the number is a valid 7, 10 or 11 digit North American phone number, and then say the number again. If the number isn't valid, or if the phone still doesn't understand the number on the second try, it will not place a call.

---

### Send Text

The Send Text option allows you to quickly send a text message to a person in your Contacts by saying the full name of the person.

1. Activate voice recognition by pressing the Voice Services key on the right side of the phone. (The phone will prompt you for a command.)
2. Say the person's full name, exactly as it is entered in your Contacts. (The phone will play the name it recognized through the earpiece, and then open the contact information for that name.)



If the phone says, “Did You Say,” followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say “Sorry, no match found.”

3. The Send To page opens. If the correct contact is displayed, press the **Next** soft key, and create your message. For more information on creating messages, see “Text & Multimedia Messages” on page 32.

## Lookup

Lookup lets you retrieve contact information for any person in your Contacts by saying the full name of the person.

### To retrieve information using Lookup:

1. Activate voice recognition by pressing the Voice Services key on the right side of the phone. (The phone will prompt you for a command.)
2. Say **Lookup**. (The phone will prompt you to say the name.)
3. Say the person’s full name, exactly as it is entered in your Contacts. The phone will play the name it recognized through the earpiece, and then open the contact information for that name.

If the phone says, “Did You Say,” followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say “Sorry, No Match Found.”

## Go To

The Go To option allows you to quickly launch a menu item.

### To use the Go To feature:

1. Activate voice recognition by pressing the Voice Services key on the right side of the phone. (The phone will prompt you for a command.)
2. Wait for the beep and say **Go To** followed by one of the following: **Missed Alerts, History, Contacts, Messaging, Music, More Options (Wireless Web, My Files, Camera, Bluetooth, Voice Memo, Tools, or Settings** under the **More Options** menu).

## Check

The Check option gives you an update on the general status of your phone including signal and battery strength, network, and your phone number.

### To view the phone status information:

1. Activate voice recognition by pressing the Voice Services key on the right side of the phone. (The phone will prompt you for a command.)





 



2. Wait for the beep and say **Check** followed by one of the following: **Status**, **Time**, **Signal Strength**, **Network**, **Battery**, or **My Phone Number**.

### Configuring Confirmation

You can configure your phone's confirmation setting for voice-based commands.









#### To configure confirmation:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **Confirmation**.
6. Highlight one of the following options: **Automatic**, **Always Confirm**, or **Never Confirm**.
7. Press the left soft key  for **OK**.

### Configuring Voice Adaptation

You can configure your phone to adapt to your voice when using voice-based commands.

#### To configure voice adaptation:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **Adaptation**.
6. Press  for **Adapt Voice**.
7. Press the left soft key  for **Start**.
8. You will be prompted to record a series of commands. To reject a recording, press the right soft key  for **Back** and record again.






### Changing Audio Guidance Mode

By default, your phone is set to prompt mode and provides audio prompts such as "Please say a command".

#### To change the audio guidance mode:

1. Press  for **Menu**.



 





2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **Audio Modes**.
6. Highlight one of the following:
  - **Expert Mode**: Audio guidance is provided by beeps only.
  - **Prompt Mode**: Prompts for the required information.
7. Press the left soft key  for **OK**.

### Displaying Voice Recognition Software Version


You can view information about the Voice Recognition Software on your phone.

#### To display voice recognition software version:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **About**. Press the right soft key  for **Back** to exit.



# Settings

With the Settings (**Menu** ) , you can customize your phone's display, sound and other settings to your suit your preference.





 

## Display

### Changing the Main Screen

Your phone offers options for what you see on the display screen when in standby mode and when there are incoming calls.







### Wallpaper

**To change the wallpaper of the main screen:**


1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Wallpaper**.
6. Select one of the following:
  - **Preset Images**: contains images preloaded on your phone.
  - **My Content**: contains downloaded DRM (Digital Rights Management) image files from your service provider.
  - **My Pictures**: contains images from your Image Album.
7. Press the navigation key left or right to view the image.
8. Press  to select the image.

### Greeting

**To change the greeting of the main screen:**

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Greeting**.
6. Select one of the following:
  - **Koodo Mobile**: Uses Koodo greeting. Press  to save and exit.






 





- **Custom:** Enter text to define your Custom greeting. Press the left soft key  for **Done** to save and exit.

## Incoming Calls

The Incoming Call option (**Menu**    ) lets you specify the image to be displayed for two call types: callers With Caller ID and those with No Caller ID. The respective images are displayed depending on the type of call received.






### To configure incoming call settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Incoming Call**.
6. Press  for **With Caller ID**, or press  for **No Caller ID**.
7. Select one of the following and press :
  - **Preset Animation:** displays the preloaded, default image for incoming calls.
  - **My Content:** contains downloaded DRM image files from your service provider.
  - **My Pictures:** contains images from your Image Album.
8. Use the navigation keys to select the image or photo you want to assign to the type of call you selected. Press the left soft key  to **Assign** the selected image or photo.

## Changing the Display Brightness Settings

You can increase or decrease the level of brightness of the LCD display.

### To change the brightness settings:





1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Brightness**.
5. Using the navigation keys, select the level of brightness and press the left soft key .



## Changing the Backlight Settings

The Backlight setting lets you specify how long you want the display screen to remain illuminated after you open the handset or press a key.

### To modify the Backlight setting:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select an option to change.
6. Select a backlight setting.

---




 
**Note:** Long backlight settings reduce the battery's talk and idle times.

---

## Changing the Dialing Font

Your phone allows you to select the size and colour of the font displayed on the screen when you dial numbers.






### To change the dialing font:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Dialing Font**.
5. Select an option to change.
6. Select a dialing font setting.

## Changing the PowerSave Mode Setting

You can turn on or off your phone's automatic power save feature.

### To change the PowerSave Mode setting:






1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **PowerSave Mode**.
5. Select **On** or **Off** and press .



## Changing the Keypad Light Settings




 

The Keypad Light setting lets you specify how long the keypad remains illuminated after you open the handset or press a key.

### To modify the Keypad Light settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Keypad Light**.
5. Use the navigation keys to select the length for the keypad light.
6. Press  to save and exit.

## Changing the Language

Your phone can display text in English or French. Language selection changes all menus and voice message settings.




 
1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Language**.
5. Press the navigation key up or down to select **English** or **Français**.
6. Press  to save and exit.

## Sounds

### Volume

You can adjust the volume of your phone using either the Menu or the volume keys on the side of your phone. You can adjust the sound settings for Ringer, Earpiece, Headset, Speakerphone, Text and Multimedia, Voicemail, Alarms, and Application.

### To adjust the volume from the menu:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Volume**.
5. Select an option to change.



 
 
6. Select a volume setting.

---

**Tip:** You can adjust the ringer volume in Idle mode (or the earpiece volume during calls) using the volume key on the side of your phone.

---

## Ringer Type









Different ringer types help you identify incoming calls and messages. With the Ringer Type options (**Menu**  , you can assign ringer types to individual Contacts entries, types of calls, schedules, types of alarms, and types of messages. Ringer types available for assignment include:

- **Ring Tones:** include a variety of standard ringer types and musical melodies.
- **Melodies:** includes a variety of short songs.
- **My Content:** includes all the ringtones you have previously downloaded.
- **My MMS Content:** includes MMS content you have previously downloaded.

## Voice Calls

You can select a different ringer type for each type of received call: those with Caller ID, no Caller ID, and calls while roaming:

### To assign unique ringer types to different types of calls:








1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **With Caller ID** or  for **No Caller ID**.
7. Press the navigation key up or down to select **Ring Tones**, **Melodies**, **My Content**, or **My MMS Content**.
8. Press the navigation key up or down to select desired ringer.
9. Press  to save and exit.

## Roam Ringer

You can set your phone to provide a normal or a distinctive ringer type when roaming.











## To select a ringer type for incoming roam calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **Roam Ringer**.
7. Select **Normal** or **Distinctive**.
8. Press  to save and exit.






## Messages

### To select a ringer type for received messages:


1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Messages**.
6. Press  for **Voicemail** or  for **Text and Multimedia**.
7. Press the navigation button up or down to select **Ring Tones**, **Melodies**, or **My Content**.
8. Press the navigation key up or down to select desired ringer.
9. Press  to save and exit.

## Schedule

### To select a ringer type for scheduled events:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Schedule**.





 



6. Press the navigation button up or down to select **Ring Tones, Melodies,** or **My Content**.
7. Press the navigation key up or down to select desired ringer.
8. Press  to save and exit.

## Meeting / Silent Mode

You can disable the ringer during meetings or in movie theaters.

### To enable or disable silent mode:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Meeting / Silent Mode**.
6. Press the navigation key up or down to select **On** or **Off**.
7. Press  to save and exit.





## Alerts

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

 


 


The different actions available are:

- **Minute Beep:** an alert tone is sounded every minute that you are connected.
- **Out of Service:** an alert tone is sounded when you come in or out of your coverage area.
- **Connect:** an alert tone sounds when a call connects.
- **Signal Fade/Call Drop:** an alert tone is sounded when the signal fades and the connection is lost.
- **Power On/Power Off:** an alert tone is sounded when the power turns on or off.

### To enable or disable alert sounds:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Alerts**.
5. Select an option:



-  for **Minute Beep**
-  for **Out of Service**
-  for **Connect**
-  for **Signal Fade/Call Drop**
-  for **Power On**
-  for **Power Off**

6. Select **On** or **Off** using the navigation key.

7. Press  to save and exit.







## Key Tone

This menu allows you to select the tone that the phone sounds when you press a key.

### Tone Type

Your phone offers a number of different types of key tones (the sounds you hear when you press a key) to suit your preferences.





#### To change the key tone:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Type**.
6. Select **Xylophone**, **DTMF**, or **Voice**.
7. Press  to save and exit.


### Tone Length

Your phone offers a number of options for the audible tones that accompany a key press. Voice mail or other automated systems may require long or short time lengths to activate different features.

#### To select a tone length:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.




 




5. Press  for **Tone Length**.
6. Select **Short** or **Long**.
7. Press  to save and exit.

## Key Tone Level

The Key Tone Level allows you to set the tone volume that accompanies a key press.








### To select a key tone level:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Key Tone Level**.
6. Press the navigation key right to increase or left to decrease the volume.
7. Press  to save and exit.





## Text Entry

The Text Entry menu allows you to customize how T9 text entry mode functions on your handset. For more information, see "Entering Text" on page 20.

### To change your Text Entry options:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Text Entry**.
4. Using the navigation keys, select one of the following options and press :
  - **Auto-Capital**: when activated, capitalizes the first word of a sentence. Highlight **On** or **Off** and press .
  - **Auto-Space**: when activated, adds a space after you select a word in T9 Mode. Highlight **On** or **Off** and press .
  - **Dual Language**: when activated and you are in T9 Mode, allows you to display choices from both the English and French dictionaries. Highlight **None** or **French** and press .
  - **Personal Dictionary**: allows you to add words to your personal dictionary.



 






- **Used Word Dictionary:** when activated, adds the words used to the phone's dictionary. Highlight **Yes** or **No** and press .
- **Display Candidate:** when activated and you are in T9 Mode, displays possible word choices on the screen. Highlight **Display On** or **Display Off** and press .
- **Prediction Start:** sets the number of letters required to activate the Display Candidate feature. Highlight the numbers of letters you wish to start Display Candidate and press .
- **Help:** provides additional information on using T9 text entry mode. Scroll up or down using the navigation keys. When you are finished, press the left soft key  for **OK**.

## Nav. Key Shortcuts

When in Idle mode, you can use the left and right navigation keys to launch an often-used function. The center navigation key cannot be changed.

### To change the feature launched by a navigation key:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Nav. Key Shortcuts**.
4. Press  for **Left Nav Key**,  for **Right Nav Key** or  for **Down Nav Key**.
5. Press the navigation key up or down to select one of the following functions:
 





• Inbox	• My Files
• Send Text	• Music
• Missed Alerts	• Display
• Contacts	• Alarms
• Scheduler	• Calculator
• Messaging	• Web
• Ringer Type	• Recent Calls
6. Press  to save and exit.








## Phone Info

The Phone Info screen displays information about your handset's current hardware and software. The Icon Glossary option can help you identify a display icon whose function you have forgotten.

### To access Phone Information:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Info**.
4. Select an option: **Phone Number**, **Icon Glossary**, **Version**, or **Advanced**.
  - When you are finished, press the right soft key  to **Cancel**.

### To access Memory Info:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Info**.
4. Press  for **Memory Info**.
5. Select an option: **Total Usage**, **Multimedia**, **My Albums**, or **Messaging**.
6. When you are finished, the left soft key  for **Done**.

## More...

### Accessibility

#### TTY Mode





Your phone is Text Telephone-compatible. Connect the TTY equipment to the headset jack, which is located on the left side of the phone. Before you can use your phone with a TTY device, you'll need to enable TTY.

---




**Note:** Enabling TTY may impair headset use and non-TTY accessory performance.

---

### To enable TTY:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Accessibility**.








5. Press  for **TTY**.
6. Press the left soft key  for **OK**.
7. Press the navigation key up or down to select **TTY Full**, **TTY + Hear**, **TTY + Talk**, or **TTY Off**.
8. Press  to save and exit.

## Voice Service

You can customize your Voice Service settings.







### To change your Voice Service settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Accessibility**.
5. Press  for **Voice Service**.
6. Select **Confirmation**, **Adaptation**, **Audio Modes**, or **About**.

## Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Memo Pad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. All incoming calls will be sent directly to your voice mail box.

### To enable or disable Airplane Mode:









1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Airplane Mode**.
5. Press the left soft key  for **OK**.
6. Press the navigation key up or down to select **On**, **Off**, or **On Power Up**.
7. Press  to save and exit.

## Browser

The Browser settings allow you to clear History, Cache and Cookies.



## To clear your browser settings:




 


1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Browser**.
5. Select an option:
  -  **Clear Web History:** select **Yes** or **No**.
  -  **Clear Web Cache:** select **Yes** or **No**.
  -  **Clear Web Cookies:** select **Yes** or **No**.
6. Press  to save and exit.

## Call Setup

### Auto Answer

Auto Answer lets you specify an amount of time in seconds after which your phone will automatically answer incoming phone calls. This is useful when your phone is connected to an optional hands-free car kit or headset, for example.

## To set up automatic answering:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.
5. Press  for **Auto Answer**.
6. Press the navigation key up or down to select **Yes** or **No**.
7. Press  to save and exit.


 



### Abbreviated Dialing

Abbreviated dialing allows you to program a five or six digit prefix for commonly used phone numbers. When abbreviated dialing is on, you can enter the last four or five digits and the handset will prepend the six or five digit prefix to the sequence you have entered to complete the dialing number.


## To set up abbreviated dialing:

1. Press  for **Menu**.
2. Press  for **Settings**.



3. Press  for **More....**
4. Press  for **Call Setup.**
5. Press  for **Abbreviated Dialing.**
6. Select **On** or **Off** and press .
7. If you selected **On**, input the five or six digit prefix (for example, area code and prefix) and press .




 


### To make an Abbreviated Dial call:

1. Enter the last four or five digits of the prefix phone number. Abbrev. Dial is displayed in the lower left corner with the prefix digits displayed.
2. Press  to make the call.


## Call Answer

You can specify the ways in which you can answer incoming phone calls.




 

### To set the actions required to answer an incoming call:

1. Press  for **Menu.**
2. Press  for **Settings.**
3. Press  for **More....**
4. Press  for **Call Setup.**
5. Press  for **Call Answer.**
6. Using the navigation keys, select **Any Key** or **Talk Key.**
7. Press  to save and exit.

## Contacts Match

With the Contacts Match feature On, you can dial the last few digits and press . A list of Contacts entries appear whose last few digits match the sequence you dialed.



### To set up Contacts Match:

1. Press  for **Menu.**
2. Press  for **Settings.**
3. Press  for **More....**
4. Press  for **Call Setup.**
5. Press  for **Contacts Match.**



6. Select **On** or **Off** and press .




 





### **Making a call using Contacts Match:**

1. Dial the last few digits of the desired number and press . A list of Contacts entries appear whose last few digits match the sequence you dialed.
2. Use the up or down navigation key to select the Contact you want to call and press .

### **Auto Prepend**

When enabled, Auto Prepend prefixes any number you dial with the prefix (Auto Prepend #) you configure. For example, if you edit the Auto Prepend number to read \*76, and you turn Auto Prepend on, then all phone numbers you dial will begin with \*76.




 
#### **To enable and configure Auto Prepend:**

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.
5. Press  for **Auto Prepend**.
6. Ensure **Set** is highlighted and press .
7. Select **On** and press  to save.
8. Press the navigation key down to select **Edit** and press .
9. Enter the digits you want to prepend to dialed phone numbers and press  to save and exit.




### **Plus Dialing**

When enabled, Plus Dialing allows you to dial international numbers with the prefix you configure.




 



#### **To enable Plus Dialing:**

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.






 


5. Press  for **Plus Dialing**.
6. Press  for **Plus Code**.
7. Select **Enable** and press  to save.

#### To configure an International Dial Prefix:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.
5. Press  for **Plus Dialing**.
6. Press  for **Int'l Dial Prefix**.
7. Enter the international dialing prefix number and press  to save.

### Voice Caller ID





#### To configure Voice Caller ID:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.
5. Press  for **Voice Caller ID**.
6. Select **On** or **Off** and press  to save.

### Headset Mode

The Headset Mode menu provides you with the option of identifying to the handset whether the earpiece is to be treated like a stereo earpiece or a mono earpiece. You can also direct audio to either the headset exclusively or to both the headset and the phone's speaker.

#### To change Headset mode settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Headset Mode**.
5. Select from the following option:









- **Ringer Sound:** select either **Phone Only** or **Headset Only** and press .







## Restrict and Lock

You can change the Restrict and Lock settings to prevent all incoming and outgoing calls, restrict calls to Contacts only or to allow only special numbers such as 911 or Customer Service. You can also lock your phone and/or camera.

### To modify the restrict and lock settings of voice calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Voice**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select an option:
  - **Restrict:** select **Outgoing Call** followed by **Allow all**, **Contacts Only**, or **Special# Only**.
  - **Lock:** select **Lock** or **Unlock**.
8. Press  to save and exit.






### To modify the lock settings of your camera:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Camera/Pictures**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlock** or **Lock**.
8. Press  to save and exit.

### To modify the lock settings of your phone:

1. Press  for **Menu**.








2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Lock my Phone**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlocked**, **On Power-Up**, or **Lock Now**.
8. Press  to save and exit.

## Roaming

Your Roaming screen allows you to control your ability to roam (access other compatible service provider networks).





### To modify roaming behavior:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Roaming**.
5. Select an option:
  - **Set Mode:** controls which networks you can access. Select **Automatic** to have the phone search for an alternate system when your Home system is not available, or select **Home only** to prevent your phone from roaming on other networks.
  - **Set NAM:** select **NAM 1** or **NAM 2**.
  - **Call Guard:** select **On** or **Off**.
6. Press  to save and exit.

## Security

 






The Security screen allows you to lock your phone and camera, erase contacts, set restrictions, and other security options.

### To access the Security option settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Security**.







5. Enter your user lock code. Select one of the following options:

-  **Change Lock Code:** changes the lock code for your phone. Enter the new number and press the left soft key  for **Next**. You will be asked to confirm the new number. After you re-enter the lock code, press the left soft key  for **Done**.
-  **Special #:** allows you to enter special phone numbers which can be called even if the phone is locked. Select one of the slots and press . Type in the new number and press  to save.
-  **Erase/Reset:** Select one of the following options:
  - **Erase Web Cookies:** deletes your web browser's cookies.
  - **Erase Web History:** deletes your web browser's history.
  - **Erase Web Cache:** deletes your web browser's cache.
  - **Erase Contacts:** deletes the contents of your Contacts.
  - **Erase My Files:** deletes the contents of My Content.
  - **Erase Pictures:** deletes the contents of your Image Album.
  - **Default Settings:** resets all settings.
  - **Reset Phone:** returns all phone options to their factory defaults.

## Keypad Lock

The Keypad Lock feature helps to prevent accidental key presses when the handset is in your pocket or purse. When the Keypad Lock is on, the buttons are disabled until the handset is unlocked.

### To change the Keypad Lock settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Keypad Lock**.
5. Press the navigation keys up or down to select **5 Seconds**, **15 Seconds**, **30 Seconds**, or **Never Lock**.



# Landscape Mode

## Landscape View of Your Phone






## Opening Your Phone to a Landscape View

1. Change the phone from portrait to landscape mode by turning the phone on its side so that the display screen is on the left.
2. Carefully press the display screen of the phone and slide it up.

## Answering a Call - Landscape Mode

Normally you will make calls in portrait mode with the phone closed, however, you may be in landscape mode when you receive an incoming call. When you receive an incoming call in landscape mode, the Incoming screen appears in the display.

1. Press one of the following options:
  - Right landscape softkey  for **Ignore** to send the call to voicemail.
  - Left landscape softkey  for **Silence** to silence the call.
  -  to answer the call. If a message was being composed it will automatically be saved to the Drafts folder.





 

 







---

**Note:** To change the answer options, see "Call Answer" on page 80.


---

## Creating and Sending Messages - Landscape Mode

1. Slide open your phone to Landscape mode.
2. At the Idle screen, press the left landscape softkey  for **Send Msg.**
3. Enter the phone number or e-mail address manually, or, to send the message to a saved contact, press the Down navigation key, highlight **Contact List** and press . Highlight the desired contact and press the  key. When you are finished adding contacts, press the left landscape soft key  for **Next**.
4. Use the QWERTY keyboard and special function keys to create your message.
  - Press  to delete characters behind the blinking cursor.
  - Press  to insert spaces between words or characters.
  - Press  to lock/unlock text entry mode **123**.
  - Press  to cycle between upper case (ABC), lower case (abc), or initial caps (Abc) for characters in **ABC** mode.
  - Press  to move the insertion point to the next line in a message.
5. Press the left landscape softkey  for **Done** when finished.
6. Press the left landscape softkey  to **Send**. If you wish to change your text message, press the right landscape softkey  for **Options**.

## Accessing the Menus in Landscape Mode

To use the menus in landscape mode:

1. In Idle mode, press .
2. Using the navigation keys select: **Missed Alerts, History, Contacts, Messaging, Music, Wireless Web, My Files, Camera, Bluetooth, Voice Memo, Tools, and Settings**.

---

**Note:** You can also access the menus by using the landscape numeric keypad. The numbers correlate to the numbers used in portrait mode.

---



# Safety

## Getting the Most Out of Your Reception

### Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

### Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Try not to cover the phone's antenna.



- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

---

**Note:** For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

---

### **Maintaining Safe Use of and Access to Your Phone**

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN Canada, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

#### **UL Certified Travel Adapter**

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTIONS TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN THE A VERTICAL OR HORIZONTAL OR FLOUR MOUNT POSITION.

### **Using Your Phone While Driving**

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.



When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

### **Following Safety Guidelines**

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

### **Using Your Phone Near Other Electronic Devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.



---

**Note:** Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

---

### **Turning Off Your Phone Before Flying**

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

### **Turning Off Your Phone in Dangerous Areas**

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

**Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:**

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

---

**Note:** Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

---

### **Restricting Children's Access to your Phone**

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.



## Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

## Caring for the Battery

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and travel adapters. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
  - Less than one month:  
4° F to 140° F (-20° C to 60° C)
  - More than one month:  
4° F to 113° F (-20° C to 45° C)

### Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.



---

**Note:** For safety, do not handle a damaged or leaking Lilon battery.

---

### Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

### Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

### Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



## Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCH-u450 are:

**0.456 W/kg CDMA Head SAR**

**0.727 W/kg PCS Head SAR**

### Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCH-u450

Serial No.:

### User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		



T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.



# Warranty

## STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone 1 Year

Batteries 1 Year

Leather Case/Pouch/Holster 90 Days

Game Pad 90 Days

Other Phone Accessories 1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (I) any of the seals on the battery are broken or show evidence of tampering; or (IA) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If



SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR



OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2009 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342



# Index

## A

- Accessibility
  - TTY (Text Telephone) 77
- Accessing the Menus in Landscape Mode 87
- Airplane Mode 78
- Alert Notification 73
- Auto-Answer 79

## B

- Battery
  - Charging 4
  - Disposal 92
  - Installing 3
  - Removing 4
- Bluetooth
  - Using 51

## C

- Calculator 55
- Calendar 56
- Call History
  - Options 24
  - Viewing 24
- Call Options 18
- Call Settings, incoming 68
- Call Waiting 22
- Caller ID 22
- Camera 45
  - Camera Options 46
- Creating and Sending Messages in Landscape Mode 87

## D

- Display Language 70
- Display Screen Symbols 10

## E

- Emergency Numbers 15

- Entering Text
  - ABC Mode 21
  - Selecting a Character Input Mode 20
  - Symbols and Numbers 21
  - T9 Text Input 21

## G

- Groups 27
  - Options 28
  - Sending Messages To 27

## H

- Handsfree use 23

## I

- Icons 10
- Images
  - Downloading 44
- Inbox 35
- Incoming Call Settings 68

## K

- Keypad
  - Sounds 74

## L

- Locking the Phone
  - Changing Lock 85

## M

- Making Calls 15
- Mass Storage 59
- Meeting / Silent Mode 73
- Memo Pad 61
- memory card 13
- Messaging 30
  - Default Text Entry Mode 39
  - Erasing Text Messages 37
  - Forwarding Messages 35
  - Message Setup Options 38



- Options for Sending 33
- Micro SD card 13
- Missed Call Notification 18
- Multimedia Messages 32
- My Albums 50

## N

- Name Card 29

## O

- Outbox 35

## P

- Phone Book (Contact List)
  - Adding a Contact 25
  - Adding an Entry 25
  - Calling a Number From 16
  - Finding Entries 25
- Phone Number
  - Displaying 15
- Phone Numbers
  - Saving 20
  - With Pauses 16
- PictBridge Print 48

## R

- Recording Conversations 53
- Redial 15
- Ringers 71
- Ringtones
  - Downloading 44

## S

- Security Settings 84
- Sent Messages 35
- Settings 67
- Silent Mode 73
- Speakerphone 23
- Speed Dialing 17
- Speed Dials
  - Configuring 28
  - Editing 29

## T

- T9 Text Input 21
- Text Messages 32
- Text Telephone (TTY) 77
- Tools 55
- TTY 77
- Turning Your Phone On and Off 5

## V

- Viewing Your Files 50
- Voice Dial
  - Changing Audio Guidance Mode 65
- Voice Mail
  - Clearing 31
  - Notification 30
  - Retrieving 31
  - Setting Up 30
- Voice Memo
  - Options 54
- Voice Memos 53
  - Recording Conversations 53
- Voice Recognition
  - Activating 62
- Volume 15, 70

## W

- Web Alert 40
- Wireless Web
  - Bookmarks 43
  - Go To URL 43
  - Launch Web 42
  - Navigating 42
- World Time 61