

TRI BAND EDGE Series
SGH-p207
Portable Digital Telephone
User Manual

Please read this manual before operating your phone, and keep it for future reference.



Printed in Korea
Code No.: GH68-07011A
English 06/2005. Rev. D5

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

©2005 Samsung Electronics Canada, Inc.. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

Table of Contents

Important Safety Precautions	1
Your Phone	5
Phone Layout.....	5
Display.....	8
Camera.....	11
Getting Started	12
Installing the SIM Card.....	12
Charging the Battery.....	14
Switching the Phone On or Off.....	16
Call Functions	17
Making a Call.....	17
Adjusting the Volume.....	19
Answering a Call.....	19
Viewing Missed Calls.....	20
Quickly Switching to Silent Mode.....	21
Selecting Functions and Options	23
Options During a Call	24
Putting a Call on Hold.....	24
Using the Menu Functions.....	24
Switching the Microphone Off (Mute).....	25
Muting or Sending Key Tones.....	26
Sending a Sequence of DTMF Tones.....	26
Searching for a Number in Address Book.....	26
Using Text Messages.....	27
Call Waiting.....	27
Making a Multi-party Call.....	28
Entering Text	30
Changing the Text Input Mode.....	30
VoiceMode™.....	31
Using T9 Mode.....	46
Using Alphabet Mode.....	48
Using Number Mode.....	50
Using Symbol Mode.....	50

Using the Menus	51
List of Menu Functions.....	52
Recent Calls	66
Missed Calls.....	66
Calls Received.....	66
Calls Made	67
Delete All.....	67
Call Time	67
Data Volume.....	68
Messaging.....	69
Create New Message.....	69
My Messages	75
Voice Mail	79
Templates	80
Delete All.....	81
Settings.....	81
Memory Status.....	85
Games.....	86
Memory Status.....	88
Applications	89
Alarm	89
Calendar	90
To Do List	92
Calculator	95
Currency Exchange	95
Media Services	96
Download Ring Tunes	96
Download Games.....	96
Download Graphics.....	96
Download Video	96
View Online Album.....	97
navigate Home	97
Multimedia.....	98
Camera.....	98
Record Audio	107

Memory Status.....	108
Fun & Tunes.....	109
Go To Internet.....	109
Ring Tune.....	112
Graphics.....	112
Video.....	113
Memory Status.....	114
Address Book	115
Storing a Number with a Name	115
Using Address Book Entry Options	117
Dialing a Number from the Address Book	119
Speed Dialing	119
Searching for and Dialing a Number in Address Book.....	121
Editing a Caller Group	122
Deleting All Address Book Entries	123
Checking the Memory Status	124
Using the Service Dialing Numbers.....	125
Phone Settings	126
Sound Settings.....	126
Display Settings	128
Phone Settings.....	130
Connection Settings.....	132
Time and Date.....	133
Network Services	134
Security.....	139
Reset Settings.....	143
Solving Problems.....	144
Access Codes.....	147
Phone Password	147
PIN.....	147
PUK.....	148
PIN2.....	148
PUK2.....	149
Health and Safety Information	150
Exposure to Radio Frequency (RF) Signals	150

For Body Operation	151
Precautions When Using Batteries	152
Operating Environment	153
Electronic Devices	153
Potentially Explosive Environments.....	154
Emergency Calls.....	155
Other Important Safety Information	156
Care and Maintenance.....	156
FCC Notice	157
Appendix A: CERTIFICATION INFORMATION (SAR).....	158
Appendix B: Safe and Responsible Wireless Phone Use	160
Appendix C: Consumer Update on Wireless Phones	164
STANDARD LIMITED WARRANTY	172
Index	177

Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.


Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features before you can make an emergency call. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water-resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.


Qualified Service

Only qualified service personnel may repair your phone. For more detailed safety information, see “Health and Safety Information” on page 150.




Your Phone



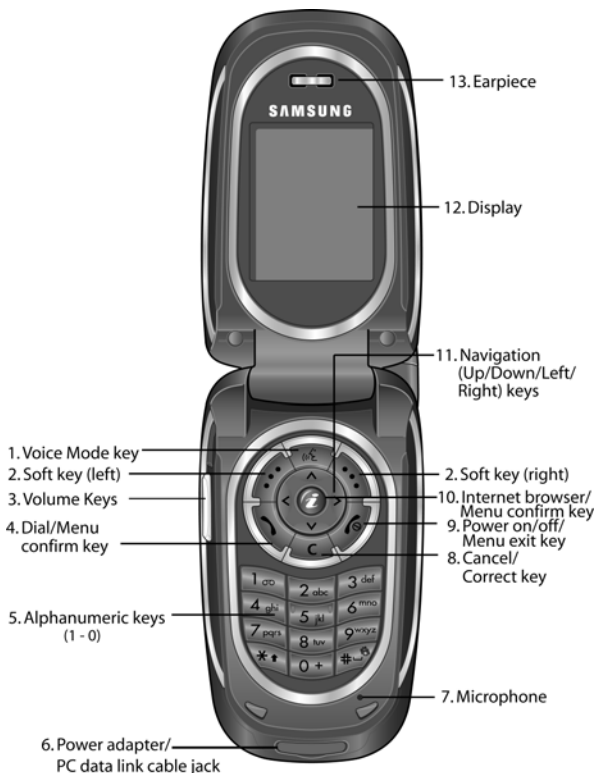


 


Phone Layout



The following illustrations show the main elements of your phone:





Key(s)	Description
	<ul style="list-style-type: none"> ◆ In Menu mode, the up and down navigation keys scroll through the menu options. ◆ In Idle mode, the up and down keys accesses favorite menu options directly. For further details about shortcuts, see “Using the Menus” on page 51.
	<ul style="list-style-type: none"> ◆ In Menu mode, the left navigation key returns to the previous menu level and the right navigation key selects the current menu or menu function. ◆ When entering text, moves the cursor to the left and right respectively. ◆ In Idle mode, the left and right navigation keys allow you to access your favorite menu options directly. For further details, see “Using the Menus” on page 51.
 (soft keys)	<ul style="list-style-type: none"> ◆ Performs the functions indicated by the text above them, on the bottom line of the display.


Key(s)	Description (Continued)
	<ul style="list-style-type: none"> ◆ In Idle mode, launches your Internet browser. ◆ In Menu mode, selects the current menu or menu function. Pressing this key acts the same as pressing the left soft key.
	<ul style="list-style-type: none"> ◆ Makes or answers a call. ◆ In Idle mode, displays your Call Log, showing the last number dialed, received or missed. ◆ In Menu mode, selects a menu function or stores information that you have entered, such as a name in the SIM card or phone's memory.
	<ul style="list-style-type: none"> ◆ Ends a call. Also switches the phone on and off when held down. ◆ In Menu mode, cancels your input and returns to Idle mode.
	<ul style="list-style-type: none"> ◆ In the text Input mode, deletes characters from the display. ◆ In Menu mode, returns to the previous menu level.
	<ul style="list-style-type: none"> ◆ In Idle mode, quickly accesses your voice mail when held down.
 	<ul style="list-style-type: none"> ◆ Enters numbers, letters and some special characters.
	<ul style="list-style-type: none"> ◆ Enters pauses when dialing. ◆ Changes case during text entry.

Key(s)	Description (Continued)
	<p>(on the right side of the phone)</p> <ul style="list-style-type: none"> ◆ In Standby mode, turns the camera on when held down. ◆ In Capture mode, works as a camera shutter. ◆ In Voice Memo mode, used to take dictation.
	<p>(on the left side of the phone)</p> <ul style="list-style-type: none"> ◆ During a call, adjusts the earpiece volume. ◆ In Idle mode with the folder open, adjusts the keypad tone volume. With the folder closed, turns the external display on when held down. ◆ In Menu mode, scrolls through the menu options and Address Book.

Display





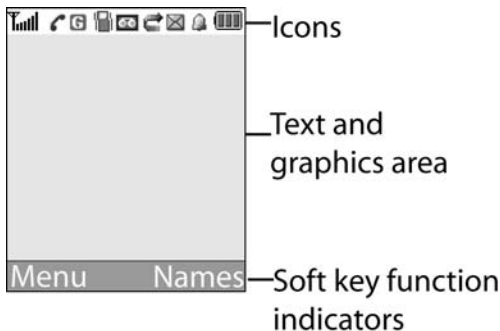



Display Layout






The display has three areas:



Area	Description
Icons	Displays various icons. See page 9.
Text and graphics area	Displays messages, instructions and any information that you enter, such as the number you are dialing.
Softkey indicators	Shows the current functions assigned to the two soft keys.

Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the stronger the signal.
	Appears when a call is in progress.
	Appears when you are out of your service area. When it displays, you cannot make or receive a call.
	Appears when you are in a data transmit/receive mode. Examples include using the WAP browser, or are sending or receiving multimedia messages, etc.
	Appears when you are out of your home area and have logged onto a different network; for example, when traveling in other countries.
	Appears when a new text message has been received.
	Appears when a new multimedia message has been received.
	Appears when the Call Forwarding feature is activated.

Icon	Description (Continued)
	Appears when a new voice mail message has been received.
	Appears when you set an alarm to ring at a specified time.
	Appears when Silent mode is active or when you set the Alert Type menu (Menu 9.1.4) to Vibration. For further details, see page 21.
	Appears when Mute mode is active.
	Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

The backlight illuminates the display and the keypad. When you press any key or open the folder, the backlight turns on and remains on for a given period of time, depending on your setting in the Back Light menu (**Menu 9.2.5**). When no keys are pressed, the display dims and turns off after a specified length of time to conserve your battery power.

- ◆ To specify the length of time the backlight is active, use the Back Light menu (**Menu 9.2.5**). See “Back Light” on page 130 for further details.

External Display

Your phone has an external LCD display on the folder. It indicates when you have an incoming call or a message. At the specified time it also alerts you when you have set an alarm by flashing the service lights and showing the corresponding icon on the display.

You can also select the image to be displayed in the Front LCD menu (**Menu 9.2.2**). See “Front LCD Display” on page 129 for further details.

- ◆ To turn the display on with the folder closed, press and hold one of the Volume keys on the left side of the phone. With the folder closed, you can take photos using the external display by pressing the Camera key on the right side of the phone. For further details, see See “Taking a Photo with the Folder Closed” on page 102..

Camera

The embedded camera module on the front of your phone allows you to take a photo or record a video while on the move. For further details about the Camera feature, see page 98.


Getting Started

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and so on.

Caution: The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.


Keep all SIM cards out of the reach of small children.

1. If necessary, switch the phone off by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Slide the battery lock towards the top of the phone and hold it in that position.
 - ② Lift the battery away, as shown.




3. Slide the SIM card into the SIM card socket, as shown, so that it locks the card into position.

Make sure the metal contacts of the card face into the phone.

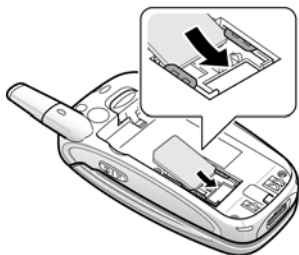


When you need to remove the SIM card, slide it upwards, as shown, and take it out of the socket.

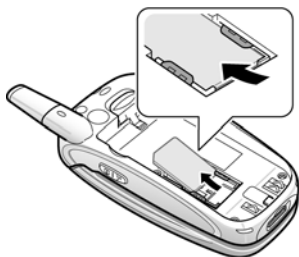

4. Replace the battery so that the tabs on the end align with the slots at the bottom of the phone.



5. Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching the power on.

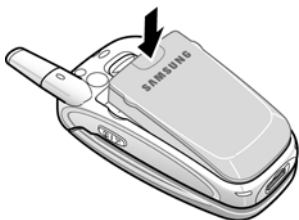

Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A travel charger comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.


The travel charger allows you to use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel charger into the jack at the bottom of the phone.



2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.

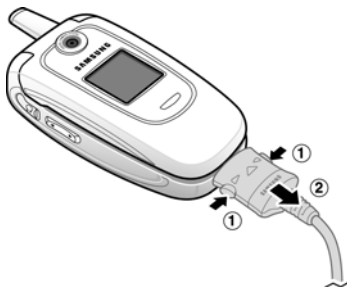

Note: Always unplug the adapter before removing the battery from the phone during charging; otherwise, the phone could be damaged.


Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, the display dims to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.


Check the battery indicator icon periodically and recharge as needed to make sure the phone has enough battery power when needed.

Switching the Phone On or Off

1. Open the folder.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter the phone password, enter the password and press the **OK** soft key. It is preset to “00000000” at the factory. For further details, see “Change Password” on page 141.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key. For further details, see “PIN Check” on page 140.


The phone searches for your network and, after finding it, the idle screen appears on the display. You can now make or receive a call.

The display language is preset to Automatic and is dependent on the setting in the SIM as determined by your service provider. To change the language, use the Language menu (**Menu 9.3.2**). For further details, see “Language” on page 131.

5. When you wish to switch the phone off, press and hold the  key until the power-off image displays.


Call Functions

Making a Call




When the idle screen displays, enter the area code and phone number, then press the  key.

Note: When you activate the Auto Redial option in the Extra Settings menu (**Menu 9.3.4**), the phone automatically redials up to ten times when the person does not answer the call or is already on the phone. For carriers that automatically divert unanswered call to voice mail, the Auto Redial feature will not provide useful service. See “Reset Settings” on page 143 for further details.


Making an International Call

1. Press and hold the **0** key. The **+** character appears.
2. Enter the country code, area code and phone number and press the  key.

Correcting the Number

To clear	Press the
the last digit displayed	 key.
any other digit in the number	Left or Right key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also insert a missing digit simply by pressing the appropriate key.
the whole display	 key and hold it for more than one second.



Ending a Call


When you want to end your call, briefly press the  key or close the folder.

Redialing the Last Number

The phone stores the numbers you have dialed, received or missed if the caller is identified. See “Recent Calls” on page 66 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press either the **Exit** soft key or the  key to return to Idle mode.
2. Press the  key to display a list of the last numbers in the order you made, received or missed them.
3. Use the Up and Down keys to scroll through the numbers until the number you want is highlighted.

To	Press the
dial the number	 key.
edit the number	Options soft key and select Edit. For further details, see “Correcting the Number” on page 17.
delete the number	Options soft key and select Delete.
delete all of the numbers on the Call Log list	Options soft key and select Delete All. For further details, see “Delete All” on page 67.

Making a Call from Address Book

You can store the phone numbers that you use regularly in the SIM card or the phone’s memory, which are collectively called Address Book. Simply select a name to recall the associated number. For further details, see “Address Book” on page 115.

Adjusting the Volume





During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

- ◆ Press the ▲ key to increase the volume level and the ▼ key to decrease the level..
- ◆ In Idle mode, you can also adjust the keypad tone volume using these keys.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image. When the caller can be identified, the caller's phone number or name, if stored in your Address Book, displays.

To answer a call

1. If necessary, open the folder.
2. Press the  key or the **Accept** soft key to answer the incoming call.
 - ◆ When the **Anykey Answer** option in the **Extra Settings** menu (**Menu 9.3.4**) is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. See “Reset Settings” on page 143.
 - ◆ When the **Active Folder** option in the **Extra Settings** menu (**Menu 9.3.4**) is activated, you can answer the call simply by opening the folder. See “Reset Settings” on page 143.
 - ◆ To reject the call, press and hold one of the Volume keys, or press the **Reject** soft key or  key.
3. End the call by pressing the  key.

Note: You can answer a call while using Address Book or menu features. After ending the call, the phone returns to the function screen you were using.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who called you so that you can call the person back.

The number of calls you missed displays on the idle screen immediately after a call is missed.

To view the missed call immediately:

1. If necessary, open the folder.
2. Press the **View** soft key.

The number for the most recent missed call displays, if available.

To	Press the
scroll through the missed calls	Up or Down key.
call the number displayed	 key.
edit or delete a missed call number	Select soft key. See below.

Saving a Missed Call Number

Note: When the number for the missed call is not available, the Edit option does not display.


1. Press the **View** soft key.
2. Press the Up or Down key to highlight the number and press the **Select** soft key.
3. Press the **Options** soft key.
4. Select the **Edit** soft key. Enter your edits and press the **Save** soft key.

5. Use the right and left keys to select the phone category and press the **Select** soft key.
6. Choose between the SIM and Phone location options and press the **Select** soft key.
7. Enter the Name or choose from the provided list and press the **OK** soft key.

For more options on this function, see “Using Address Book Entry Options” on page 117.

Deleting a Missed Call


1. Press the **Options** soft key.
2. If necessary, press the Up or Down key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the **Missed Calls** menu (**Menu 1.1**). For further details, see “Missed Calls” on page 66.

Quickly Switching to Silent Mode


Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

- ◆ In Idle mode, press and hold the **#** key until the “Silent Mode” message and the Vibration icon () display.
- ◆ In Silent mode, your phone changes the sound settings as follows:

Option	New Setting
Alert Type (Menu 9.1.4)	Vibration

Option	New Setting
Keypad Tone (Menu 9.1.5)	Off
Message Tone (Menu 9.1.6)	Vibration
Folder Tone (Menu 9.1.7)	Off
Power On/Off (Menu 9.1.8)	Vibration*
Extra Tones (Menu 9.1.0)	Off

Note: Menu 9.1.8 Power On/Off vibration occurs only during power on.

- ◆ To exit and reactivate the previous sound settings, press and hold the **#** key again until “Exit Silent Mode” appears. The Vibration icon () no longer displays.


To view and select the desired function or option:

1. Press the appropriate soft key.


To	Press the
select the displayed function displayed or option	Select soft key or the Right key.
view the next function or highlight the next option on a list	Down key or the ▼ volume key on the left side of the phone.
move to the previous function or option on a list	Up key or the ▲ volume key on the left side of the phone.

Selecting Functions and Options



Your phone provides left and right soft keys that provide context-sensitive functions.

The **Left soft key**  can be used in several different ways.

- ◆ In Idle mode, press to access the **Menu**.
- ◆ When using other features, such as the web browser, the left soft key performs a context-sensitive action. This action is shown in the bottom left corner of the Display Screen.

The **Right soft key**  can also be used in several different ways.

- ◆ In Idle mode, press to access your Address Book
- ◆ In text entry mode, press to change the character input type.
- ◆ When using other features, such as the web browser, the right soft key performs a context-sensitive action. This action is shown in the bottom right corner of the Display Screen.

To	Press the
move up one level in the menu tree	Left key, C key or  soft key.
exit the structure without changing the settings	 key.

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key.

Note: When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold


You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

- ◆ To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.


To make a call while you have a call in progress:

1. Put the current call on hold by pressing the **Hold** soft key.
2. Enter the phone number that you wish to dial or look it up in Address Book.

For details about searching for a number in Address Book, see page 121.

3. Press the  key to dial the second call.
 - ◆ When you have an active call and another call on hold, you may switch between the two calls, placing the active call on hold. Simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other person.

4. When you want to finish, end each call by pressing the  key.

Using the Menu Functions

During a call, you can access the main menu functions.

1. Press the **Options** soft key.
 2. Press the **OK** soft key when the **Menu** option highlights.
 3. Press the Up or Down key to scroll through the menu list.
-

Note: You cannot use some menus during a call. They are deactivated on this list.

4. When the menu you want highlights, press the **Select** soft key.
5. If the selected menu has sub-options, repeat steps 3 and 4.

For further details about the menu functions available, see the “List of Menu Functions” on page 52.

Switching the Microphone Off (Mute)

You can temporarily switch your phone’s microphone off so that the other person on the call cannot hear you. For example, you wish to say something to another person in the room but do not want the person on the call to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other person can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key.
2. If necessary, press the Down key to highlight the **Unmute** option.
3. Press the **OK** soft key.

The other person can hear you again.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute Keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems using DTMF tones, the **Send Keys** option must be selected.

Sending a Sequence of DTMF Tones

You can send the DTMF tones after entering the entire number you need to send. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

To send the DTMF tones:

1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the Down key to highlight the **Send DTMF** option.
3. Press the **OK** soft key.
4. Enter the number you want to send and press the **OK** soft key. The tones are sent.

Searching for a Number in Address Book

You can search for a number in Address Book during a call.

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Address Book** option.

3. Press the **OK** soft key.

The Address Book entries are listed.


4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Address Book entries are listed, starting with the first entry matching your input.

5. To view the highlighted entry, press the **Select** soft key.

For further details about the Address Book feature, see “Address Book” on page 115.


Using Text Messages


If you receive a text message during a call, the Message icon () flashes on the display. You can use the **Text Messages** menu (**Menu 2.1.1**) to write new text messages. For further details about text messaging, refer to “Creating a Text Message” on page 69.

Call Waiting

You can answer an incoming call while you have a call in progress, if your network supports this service and you have set the **Call Waiting** option (**Menu 9.6.3**) to **Activate**. For further details about call waiting, see “Call Waiting” on page 79.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.
3. To end the call being held, press the **Options** soft key and select the **End Held Call** option.

To end the current call, press the  key.

Making a Multi-party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

Note: Please contact your service provider to determine if multi-party calling is supported.

Setting up the Multi-party Call


1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **OK** soft key.
4. To add a new person to the multi-party call, call the person in the normal way and press the **Options** soft key. Select the **Join** option and press the **OK** soft key.

You can also add incoming callers by answering the call, pressing the **Options** soft key, and selecting the **Join** option. Repeat as required.

Having a Private Conversation with One Participant

1. Press the **Options** soft key and choose the **Select One** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key, and press the **Select** soft key or the  key.
3. When the **Private** option highlights, press the **OK** soft key.

You can now talk privately to that person. The other participants can still converse with each other.


4. To return to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **OK** soft key.

All the multi-party call participants can now hear each other.


Dropping One Participant

1. Press the **Options** soft key and choose the **Select One** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key, and press the **Select** soft key or the  key.
3. Press the Down key to select the **Remove** option and press the **OK** soft key.

The call ends with that participant, but you can continue to talk to the others.

4. When you want to end the multi-party call, press the  key.

Entering Text

When using your phone, you will often need to enter text, such as when storing a name in Address Book, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:




- ◆ **VoiceMode:** this mode allows you to simply speak words into your phone and have your phone convert them to text. Press the side camera/voice button on right side of the phone and speak into the microphone.
- ◆ **T9 mode:** This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, when you press the **5** key once, J, K or L displays. T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional Alphabet mode.
- ◆ **Alphabet mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three or four times until the desired character displays.
- ◆ **Number mode:** this mode allows you to enter numbers.
- ◆ **Symbol mode:** this mode allows you to enter various symbols and special characters.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message



To select	Press the right soft key until
T9 mode	 displays. See page 46.
Alphabet mode	 displays. See page 48.
Number mode	 displays. See page 50.
Symbol mode	the symbol list displays. See page 50.
VoiceMode	VoiceMode™ displays.


VoiceMode™


VoiceMode™ from VoiceSignal Technologies is the fastest, and most convenient way to compose text messages on a mobile phone.

VoiceMode lets you use your voice to dictate words, names, punctuation, and even abbreviations (like LOL and TTYL), instead of keying them in by hand.

VoiceMode is seamlessly integrated into your phone's text messaging application, so you can switch from keypad text entry to voice dictation with the push of a button.

Note: VoiceMode supports English only. All the voice prompts and text will be English only even when the handset is configured for French display.

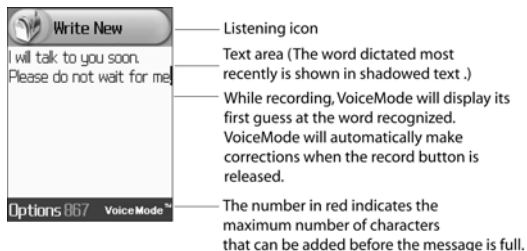





To use VoiceMode when composing a text message, you simply hold down the voice button of your phone. A listening icon  flashes to show that VoiceMode is listening for your voice. Start dictating, pausing briefly between each word. While you are dictating, you will see the words recognized appear in your message. These initial words that appear on the screen are VoiceMode's first guess at what you dictated. When you release the record button, VoiceMode automatically makes corrections based on the context of the phrase, and display its best guess of the words recognized.

Adapting VoiceMode

- ◆ Before you can use VoiceMode, you must adapt it to recognize the special characteristics of your voice. The adaptation process takes a few minutes and involves reading a list of 122 words, one word at a time.

To Adapt VoiceMode

1. Find a quiet place for adaptation.
2. Start VoiceSignal by pressing the  Navigation key.




3. Press the Settings soft key or the  key.
4. Select VoiceMode. Highlight Adapt VoiceMode and press the Select soft key or the  key.
The Adapt VoiceMode screen displays to verify the start of the adaptation. Press the OK soft key or the  key.
5. When you are ready to start adaptation, select OK.

(If you or someone else has completed adaptation earlier, the phone will ask if you want to start from scratch or continue adapting the existing models. Select Yes to discard existing adaptation data and start from scratch, or select No to continue adapting the existing data.)
6. Wait for the beep and then say each word as it appears on the screen. Speak each word clearly and distinctly, using a normal tone and volume. If the adaptation process doesn't detect a word, it will prompt you again to speak the same word.
7. If you want to take a break, press the Pause key to pause the adaptation process. When paused, continue adaptation by pressing the Continue key.
8. After you say all 122 words, the phone will adapt VoiceMode to your voice. This process should take about one minute to complete.

Note: If you press **C** during adaptation, the phone will ask if you want to save the adaptation data. Press Yes to save the data, or No to exit without saving. If you do not complete adaptation, be sure to go back and finish adapting to improve dictation recognition.

If you ever need to reset adaptation to its original state, use the following procedure.





To Reset Adaptation

1. Start VoiceSignal by pressing the  key.
2. Press the Settings soft key or the  key.
3. Select VoiceMode and highlight Reset VoiceMode. Press the Select soft key or the  key.
4. When prompted, press OK to reset adaptation, or Cancel to exit without resetting the adaptation data.

Using VoiceMode

After adapting VoiceMode, you can start using it when composing text messages.



To Start VoiceMode

1. Create a new text message by selecting Menu. Highlight Messaging and press the Select soft key or the  key.
2. Select Create New message and highlight Text Message. Press the Select soft key or the  key.
3. Press the  soft key to select VoiceMode. A VoiceMode Tutorial message appears. Press the View soft key to proceed or Cancel to return.
4. To activate VoiceMode, press and hold the  button on the right side of the phone.

VoiceMode beeps and animates the Listening icon at the top right of the screen to indicate that you can begin speaking.

To dictate text using VoiceMode

1. Speak clearly and pause distinctly between each word.
"When... speaking... COMMA... pause... briefly... between... each... word... PERIOD"

2. When you are done or want to pause, release the  button to stop the phone from listening. Although the phone is not listening, the text message application will remain in VoiceMode. To switch to another mode, press the  soft key.

Using VoiceMode Advanced Features

Using Choice Lists


Every time you dictate a word using VoiceMode, it maintains a list of alternatives that closely resemble the recognized word. These choice lists let you quickly change a word that was not recognized correctly.

To use choice lists

1. Use the left and right navigation keys to highlight a word you want to change, and then press 0.

A choice list appears with possible matches for the word.



2. Use the Up and Down navigation key to highlight a word, then press the Select soft key or the  key.

Spelling a Word

If a word is not recognized and does not appear in the choice list, it might be because that word is not in the dictation dictionary. In this


case, you can spell out the word manually. When you spell a word that is not part of the dictation dictionary, the new word is added to the dictionary. This enables VoiceMode to recognize the new word the next time it is spoken.

To Spell a Word

1. Display the choice list for the word you want to spell out.
2. Select [Spell Word].


You will see an empty text box, where you can manually spell the word using the keypad.



3. As you start typing letters, you will see words with similar spellings appear below the text box. Use the up and down navigation keys to scroll the dictionary. While scrolling the dictionary, the words will populate the text box. Use the  key to edit the entry in the text box.

, comma) close-paren	. point
? question-mark	[open-bracket	/ slash
! exclamation-point] close-bracket	\ backslash
: colon	{ open-brace	:-) happy-face
; semicolon	} close-brace	:-(sad-face
- hyphen	< open-angle-bracket	< less-than
-- em dash	> close-angle-bracket	> greater-than
... ellipsis	vertical-bar	= equal
' apostrophe	# pound-sign	@ at-sign
's apostrophe-s	\$ dollar-sign	^ caret
" open-quote	% percent	_ underscore
" close-quote	& ampersand	' back-quote
' open-single-quote	* asterisk	~ tilde
' close-single-quote	+ plus	

Starting VoiceSignal

To start VoiceSignal, press the  on your phone.

VoiceSignal prompts you to "Say a command" and displays the available commands at the bottom of the screen.



Note: When you first start VoiceSignal, it voice-activates the names stored in your contact list. While reading your contacts, VoiceSignal displays the following message: Please wait while VoiceSignal voice-activates your contacts.

You can change VoiceSignal settings by starting VoiceSignal and then selecting the "Settings" soft key. See the appendix "VoiceSignal Settings" for a description of the settings you can change.

Calling a Name or Number

Use the Call command to place a call. If the number you want to call is stored in your contact list, you can say the contact name and, optionally, which number (home, mobile, etc.) you want to call. If the number is not in your contact list, you can say the number itself.

To Call A Name Or Number

1. Start VoiceSignal.

You hear "Say a command."

2. Say "Call" followed by the name of a person in your contact list, and optionally, the number location (home, work, mobile, etc.) to call, or...

◆ Say "Call" followed by a valid telephone number, or...

◆ Say "Call" by itself to be prompted for a name or number.

Examples:

Call Angela Martinez

Call Tom Stewart at Work

Call Donna Harper's Mobile

Call 781-555-5200

3. After you say a name or number, you might be prompted "Did you say Call?" followed by the first of up to three names or numbers.



4. To confirm a name or number, wait for the beep and then say "Yes."
5. You can also choose the correct name or number from the choice list by pressing the number next to the preferred choice, or by selecting it using the phone's navigation keys. For information on turning off choice lists, or customizing their behavior, see the appendix, "VoiceSignal Settings."
6. If the phone recognizes a name that has more than one stored number, it might prompt you "Which number?" Say the label for the number you want, for example "Work," "Home," or "Mobile."



Hints for Using Call

- ◆ Wait for the beep before saying the command.
- ◆ When saying a name, speak clearly and say the name of a person in your contact list, first name followed by last name.
- ◆ When saying a telephone number, pronounce each digit clearly and distinctly but do not pause between the digits. VoiceSignal recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and "oh." It does not recognize expressions such as "one eight hundred." Instead, say "one eight zero zero."
- ◆ If VoiceSignal doesn't recognize numbers correctly, try adapting digit dialing to your voice. To adapt digit dialing, choose Digit Dialing's Adapt Digits from the VoiceSignal Settings menu.

Sending a Message

Use the Send Text command to send a text message to a specified name in your contact list or a specified number.

To Send A Message

1. Start VoiceSignal.

You hear "Say a command."

2. Say "Send Text" or...

Say "Send Text" followed by a name or number

You can say...

Send Text (To be prompted to say the name or number)

Send Text to Kevin Harper

Send Text Angela Martinez at home

Send Text to 781 970-5200

3. If you did not specify a name or number, VoiceSignal prompts you "Say the name or number." Say a name in your contact list, or say a valid telephone number.

4. After you say a name or number, you might be prompted, "Did you say?" To confirm a name or number, wait for the beep and then say "Yes."

You can also choose the correct name or number from the choice list using the phone's navigation keys.

Hints for using Send Text

- ◆ Wait for the beep before saying the command.
- ◆ When saying a name, speak clearly and say the name of a person in your contact list, first name followed by last name.
- ◆ If you say a name for which there are multiple phone numbers stored, by default VoiceSignal assumes you want to send the message to the mobile phone number. If you want to send a message to a different number (home, work, etc.) you can say the label. For example, you can say "Send Text Chris Wells at Home."

Looking Up a Contact

Use the Lookup command to look up contact information for any person stored in your contact list.

To Look Up Contact Information

1. Start VoiceSignal.
You hear "Say a command."
2. Say "Lookup" followed by the name of a person in your contact list.

Examples:

Lookup Angela Martinez

Lookup Tom Stewart

3. After you say a name, you might be prompted "Did you say Lookup?" followed by the first of up to three names. To confirm a name, wait for the beep and then say "Yes." You can also choose

the correct item from the choice list using the phone's navigation keys.

Hints for using Lookup

- ◆ Wait for the beep before saying the command.
- ◆ When saying a name, speak clearly and say the name of a person in your contact list, first name followed by last name.

Opening an Application

- ◆ Use the "Go To" command to open an application or access a menu on your phone.

To Open An Application Or Access A Menu

1. Start VoiceSignal.

You hear "Say a command."

2. Say "Go To" or...

Say "Go To" followed by the application you want to open or...

Say "Go To" followed by a menu item.

Examples:

Go To (To see a list of applications you can open)

Go To Calendar

Hints for using Go To

Wait for the beep before saying the command.

- ◆ To see a list of applications/menu items you can open, say "Go To" but do not specify a destination. VoiceSignal displays a list of valid destinations and prompts you with "Please Choose." You can then say the name of the application you want to open.
- ◆ If the list is too long to fit on one screen, the screen will contain the choice "Next Menu." You can say one of the application or menu names on the list, or say "Next Menu" to view the next screen

Checking Phone Status

- ◆ Use the Check command to see and hear status information from your phone, including its phone number, current signal strength, network coverage, and battery level.

To Check Phone Status

1. Start VoiceSignal.

You hear "Say a command."

2. Say "Check" followed by one of items listed in the table below:

Examples:

Check battery

Check signal

Check status (To obtain status information for all of the above)

Check my phone number

The phone reads back the information you requested and also displays it on the screen.



VoiceSignal Settings

Choice Lists

If VoiceSignal is not absolutely confident that it has correctly identified a name or number, it can display a choice list of up to three possibilities, and prompt you to confirm the correct one.

You can control when choice lists appear by changing the Choice Lists setting to Automatic, Always On, or Always Off.

- ◆ **Automatic:** VoiceSignal displays a choice list when it is not confident it has identified the correct choice from among multiple alternatives.
- ◆ **Always On:** When there are multiple alternatives, VoiceSignal always displays a choice list.
- ◆ **Always Off:** VoiceSignal never displays a choice list. Instead, the application picks the best from among the possible choices.

Sensitivity

In VoiceSignal, "sensitivity" controls the balance between rejecting too much, which means the phone frequently does not recognize names, numbers, or commands, and rejecting too little, which means it frequently recognizes something even if nothing was said.

When VoiceSignal rejects an utterance, it displays a message such as "Please repeat..." or "No match found." If you frequently experience these messages, you might be able to get better recognition by adjusting the Sensitivity setting toward **Reject Less**.

If you frequently experience false activations (VoiceSignal detects a wrong match), you might be able to get better performance by adjusting the Sensitivity setting toward **Reject More**.

Digit Dialing

Use the Digit Dialing menu to adapt digit dialing to your voice.

- ◆ **Select Location:** Lets you improve the accuracy of digit dialing by specifying your current location. Select Other if your present location is not listed, or if you want digit dialing to recognize any number sequence.

- ◆ **Adapt Digits:** Lets you adapt digits, which can improve voice recognition of phone numbers. Adaptation takes about 60 seconds.
- ◆ **Reset Digits:** Erases any digit adaptation you have done and resets digit recognition to the factory default. If you have not adapted digits, this option is grayed out.

Sound

You can customize the VoiceSignal user interface by turning playback on or off for prompts, names, and numbers. You can also change the speed and volume of name playback.

- ◆ **Prompts:** Turns playback on or off for prompts such as "Please say a command."
- ◆ **Digits:** Turns playback on or off for digits, for example, when confirming a phone number.
- ◆ **Names:** Turns playback on or off for names.
- ◆ **Names Settings:** Adjusts the speed and volume of name playback.

VoiceMode

Use the VoiceMode menu to adapt VoiceMode to your voice. You must adapt VoiceMode before you can use the VoiceMode option in the text-messaging client.

- ◆ **Adapt VoiceMode:** Lets you adapt VoiceMode, which improves voice recognition of VoiceMode in the text-messaging client.
- ◆ **Tutorial:** Provides a tutorial for the VoiceMode software. This option will step you through the functions and options available in VoiceMode.
- ◆ **Reset VoiceMode:** Erases any VoiceMode enrollment data that is currently stored. If you have not adapted VoiceMode, this option is grayed out.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using a single keystroke. This text input mode is based on a built-in dictionary. Your phone will select the most likely word based on your keystroke combinations.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the 2 to 9 keys. Press each key only once for each letter.

Example: To enter “HELLO” in T9 mode, press the 4, 3, 5, 5 and 6 keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word displayed is not the one you want, press the **0** key or the Up or Down key repeatedly to display alternative word choices for the keys that you have pressed.



 
4. Insert a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the **0** or Down key to display the alternative words.
2. When you press the **0** or Down key on the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key.
3. If necessary, clear the word using the **C** key and enter the word you want using Alphabet mode. See page 48.
4. Press the **OK** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypresses.

- ◆ To enter periods, hyphens or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that the correct punctuation is used.

- ◆ To shift the case in T9 mode, use the * key. There are three cases; Initial Capital (), Capital lock () and Lower case ().
- ◆ You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Alphabet Mode

Use the 0 to 9 keys to enter your text.

1. Press the keys labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Refer to the table below for further details about the characters available:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	. , - ? ! @ : () / 1 _	. , - ? ! @ : () / 1 _
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	+ = < > € £ \$ % & ¥ ¤ 0	+ = < > € £ \$ % & ¥ ¤ 0
#	space	


- ◆ To shift the case in Alphabet mode, use the * key. There are three cases; Capital lock (**AB**), Lower case (**ab**) and Initial Capital (**Ab**).
- ◆ You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols into a text message.

To	Press the
select a symbol	corresponding number key.
display more symbols	Up or Down key.
clear the symbol(s)	C key. When the input field is empty, this key returns the screen to the previous mode.
insert the symbol(s) into your message	OK soft key.
cancel your input and return to the previous mode	 soft key.

Using the Menus



The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

- ◆ To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next menu by pressing the navigation key.
- ◆ As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing the **Select** soft key, the Right key or the center navigation key.

Accessing a Menu Function

1. In Idle mode, press the **Menu** soft key to access Menu mode. From the Menu, do one of the following:
 - ◆ Scroll using the Up or Down key to reach a main menu, **Settings** for example. Press the **Select** soft key, the center navigation key or the Right key to enter the menu.
 - ◆ Press the # beside the desired menu option. For example, for **Settings**, press **9**.
2. If the menu contains sub-menus, **Language** for example, you can access them by scrolling using the Up or Down key and pressing the **Select** soft key, the center navigation key or the Right key. Alternatively, press the # beside the desired sub-menu option.

If the menu that you have selected contains further options, repeat this step.

To	Press the
scroll through the menus	Up or Down key, or use the Volume keys.
confirm the chosen setting	Select soft key or, center navigation key.
return to the previous menu level	C key or  soft key.
exit the menu without changing the settings	 key.

List of Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option and the page where you can find a description of each feature.

Note: If you use a SIM AT card that provides additional services, the **SIM AT** menu displays when you press **Menu 4** for Applications. For further details, see your SIM card instructions.

1. Recent Calls (see page 66)

1. Missed Calls
2. Calls Received
3. Calls Made
4. Delete All
 1. All Calls
 2. Missed Calls
 3. Calls Received
 4. Calls Made
5. Call Time
 1. Last Call
 2. Total Received

3. Total Made
4. Reset Timers
6. Data Volume
 1. Recent Volume
 2. Total Volume
 3. Reset Volume
7. Data Call Time
 1. Recent Time
 2. Total Time
 3. Reset Timers

2. Messaging (see page 69)

1. Create New Message
 1. Text Message
 2. Multimedia Message
 3. Email
2. My Messages
 1. Inbox
 2. Email Inbox
 3. Sent
 4. Outbox
 5. Draft
 6. My Folders
3. Voice Mail
 1. Connect to Voice Mail
 2. Voice Mail Number
4. Templates
5. Delete All
 1. All Messages
 2. Inbox
 1. Read
 2. Unread
 3. Email Inbox
 1. Read
 2. Unread
 4. Sent
 5. Outbox
 6. Draft
6. Settings

1. Text Message
 - 1.Sending Profile
 - 2.Reply Path
 - 1.Off
 - 2.On
 - 3.Delivery Report
 - 1.Off
 - 2.On
 - 4.Bearer Selection
 - 1.GSM
 - 2.GPRS
 - 5.Preferred Memory (Sent,Outbox, Draft)
 - 1.In Card
 - 2.In Phone
2. Multimedia Message
 - 1.Delivery Report
 - 1.Off
 - 2.On
 - 2.Read Reply
 - 1.Off
 - 2.On
 - 3.Auto Download
 - 1.Off
 - 2.On
 - 4.Message Acceptance
 - 1.All
 - 2.Personal
 - 3.Information
 - 4.Advertisement
 - 5.Anonymous
 - 5.Expiry Date
 - 1.Maximum
 - 2.1 Hour
 - 3.12 Hours
 - 4.1 Day
 - 5.1 Week
 - 6.Delivery Time
 - 1.Immediately
 - 2.1 Hour later

- 3.12 Hours later
- 4.1 Day later
- 5.1 Week later
- 7.Priority
 - 1.High
 - 2.Normal
 - 3.Low
- 8.Report Allowed
 - 1.Off
 - 2.On
- 9.Page Duration
- 0.Profile
 - 1.RW WAP
 - 2.Rogers Wireless
 - 3.Rogers Email
- 3. Email
 - 1.Account
 - 1-10. Account #
 - 1.Account Name
 - 2.Display Name
 - 3.Email Address
 - 4.Protocol Type
 - 1.POP3
 - APOP USE
 - 1.Yes
 - 2.No
 - 2.IMAP4
 - Download Option
 - 1.With Attachment
 - 2.Without Attachment
 - 3.Number of Emails
 - 5.Incoming Server
 - 6.User ID
 - 7.Password
 - 8.Outgoing Server
 - 9.SMTP Auth.
 - 1.Yes
 - 2.No
 - 3.Same as POP3

- 0.Reply-to-Address
 - 1.Yes
 - 2.No
- * Secure Mode
 - 1.SECURE MODE
 - 2.NON-SECURE MODE
- 2.Polling Interval
 - 1.Never
 - 2.1 Hour
 - 3.3 Hours
 - 4.6 Hours
 - 5.12 Hours
- 3.Signature
 - 1.Yes
 - 2.No
- 4.Send Copy to Self
 - 1.Yes
 - 2.No
- 5.Delivery Report
 - 1.Yes
 - 2.No
- 6.Read Reply
 - 1.No
 - 2.Select
 - 3.Always
- 7.Download Method
 - 1.Header Only
 - 2.Normal
- 8.Keep on Sever
 - 1.Yes
 - 2.No
- 9.Block Email
 - 1.By Address
 - 2.By Subject
- 0.Profile
 - 1.RW WAP
 - 2.Rogers Wireless
 - 3.Rogers Email
- 4. Push Message

- 1.Receive
 - 1.Never
 - 2.Always
 - 3.Only White List
- 2.White List
5. Broadcast
 - 1.Receive
 - 1.Disable
 - 2.Enable
 - 2.Channel List
 - 1.Select
 - 1.All Channels
 - 2.Index
 - 2.Add Channel
 - 3.Delete
 - 4.Edit
 - 3.Language
 - 1.All
 - 2.English
 - 3.Francais
6. Default Text Input Mode
 - 1.VoiceMode
 - 2.Predictive Text Mode
 - 3.Alphabet Mode
7. Memory Status

3. Games

1. Download Games
2. Freekick

4. Applications (see page 89)

1. Alarm
 1. Single Use Alarm
 2. Daily Alarm
 3. Wake-up Call
 4. Remove Alarm
 5. Autopower
2. Calendar

3. To Do List
4. Calculator
5. Currency Exchange
6. Rogers Apps (if an application has been found on the SIM)

5. Media Services (see page 96)

1. Download Ring Tunes
2. Download Games
3. Download Graphics
4. Download Video
5. View Online Album
6. navigate Home

6. Multimedia

1. Camera
 1. Photo
 2. Video
 3. View Online Album
 4. Photo Album
 5. Video Album
 6. Delete All
 - 1.All
 - 2.Photo Album
 - 3.Video Album
2. Record Audio
 1. Record
 2. Audio List
 3. Delete All
3. Memory Status

7. Fun & Tunes (see page 109)

1. Go To Internet
 1. navigate Home
 2. Settings
 3. Clear Cache
2. Ring Tunes
3. Graphics
4. Video

5. Delete All
6. Memory Status

8. Address Book(see page 115)

1. Search
2. New Entry
3. Group Search
4. Group Edit
5. Speed Dial
6. Delete All
7. My Mobile Number
8. Memory Status
9. SDN

9. Settings (see page 126)

1. Sound Settings
 1. Ring Tune
 - 1.Default
 - 2.Downloads
 2. Ring Volume
 3. Download Ring Tunes
 4. Alert Type
 - 1.Light Only
 - 2.Melody
 - 3.Vibration
 - 4.Vibration+Melody
 5. Keypad Tone
 6. Message Tone
 - 1.Text Messages
 - 1.Tone
 - 2.Mode
 - 1.Off
 - 2.Tone
 - 3.Vibration
 - 4.Light Only
 - 3.Repetition
 - 1.Once
 - 2.Periodic

- 2.Multimedia Messages*
 - 1.Tone
 - 2.Mode
 - 1.Off
 - 2.Tone
 - 3.Vibration
 - 4.Light Only
 - 3.Repetition
 - 1.Once
 - 2.Periodic
- 3.Email
 - 1.Tone
 - 2.Mode
 - 1.Off
 - 2.Tone
 - 3.Vibration
 - 4.Light Only
 - 3.Repetition
 - 1.Once
 - 2.Periodic
- 4.Broadcast Messages
 - 1.Tone
 - 2.Mode
 - 1.Off
 - 2.Tone
 - 3.Vibration
 - 4.Light Only
 - 3.Repetition
 - 1.Once
 - 2.Periodic
- 7. Folder Tone
 - 1.Off
 - 2.Future
 - 3.Crystal
- 8. Power On/Off
 - 1.Off

*. Shows only if supported by your SIM card.

- 2. Mystic
- 3. Exciting
- 9. Alerts On Call
 - 1. Off
 - 2. On
- 0. Extra Tones
 - 1. Error Tone
 - 2. Minute Minder
 - 3. Connect Tone
- 2. Display Settings
 - 1. Wallpaper
 - 1. Wallpaper List
 - 1. Default
 - 2. Downloads
 - 2. Text Display
 - 1. Disable
 - 2. Enable
 - 3. Text Color
 - 2. Front LCD Display
 - 1. Digital Clock
 - 2. Analog Clock
 - 3. Download Graphics
 - 4. Menu Style
 - 1. Grid Style
 - 2. Page Style
 - 3. Bar Style
 - 5. Back Light
 - 1. On
 - 1. 15 Seconds
 - 2. 30 Seconds
 - 3. 1 Minute
 - 4. 3 Minutes
 - 5. 10 Minutes
 - 2. Dim
 - 1. Off
 - 2. 15 Seconds
 - 3. 30 Seconds
 - 4. 1 Minute
 - 5. 3 Minutes

6. Service Light
 1. Off
 - 2-7. Service Light#
7. Graphic Logo
 1. Off
 2. On
3. Phone Settings
 1. Greeting Message
 2. Language
 1. English
 2. Francais
 3. Automatic
 3. Short Cut
 1. Up Key
 1. None
 2. Camera
 3. Video
 4. Fun & Tunes
 5. Media Services
 6. Calendar
 7. Ring Tune
 8. To Do List
 9. Sound Settings
 10. Address Book
 11. My Messages
 12. Voice Mail
 13. Create New Message
 14. Missed Calls
 15. Calls Received
 16. Wallpaper
 17. Security
 18. Alarm
 19. Calculator
 20. Record Audio
 21. Games
 2. Down Key (as Up Key)
 3. Right Key (as Up Key)
 4. Left Key (as Up Key)
4. Extra Settings

- 1.Auto Redial
- 2.Active Folder
- 3.Anykey Answer
4. Connection Settings
 1. RW WAP
 - 1.Profile Name
 - 2.Homepage
 - 3.Bearer
 - 1.GPRS
 - 2.DATA
 - 4.Proxy Setting
 - 5.User Name
 - 6.Password
 - 7.APN
 - 8.Proxy Status
 - 1.Deactivate
 - 2.Activate
 - 9.Primary DNS
 - 0.Seconday DNS
 2. Rogers Wireless
(same sub-menus as RW WAP)
 3. Rogers Email
(same sub-menus as RW WAP)
 4. Profile 4
(same sub-menus as RW WAP)
 5. Profile 5
(same sub-menus as RW WAP)
 6. Profile 6
(same sub-menus as RW WAP)
5. Time & Date
 1. Set Time
 2. Set Date
 3. World Time
 4. Time Format
 5. Auto Update
6. Network Services
 1. Call Forwarding
 - 1.Forward Always
 - 2.Busy

- 3.No Reply
- 4.Unreachable
- 5.Cancel All
- 2. Call Barring
 - 1.All Outgoing
 - 2.International
 - 3.International Except to Home
 - 4.All Incoming
 - 5.Incoming While Aboard
 - 6.Cancel All
 - 7.Change Barring Password
- 3. Call Waiting
 - 1.Voice Calls
 - 2.Data Calls
 - 3.Cancel All
- 4. Network Selection
 - 1.Automatic
 - 2.Manual
- 5. Caller ID
 - 1.Default
 - 2.Hide Number
 - 3.Send Number
- 6. Closed User Group
- 7. Band Selection
 - 1.GSM 1800
 - 2.GSM 850/1900
- 7. Security
 - 1. PIN Check
 - 1.Disable
 - 2.Enable
 - 2. Change PIN
 - 3. Phone Lock
 - 1.Disable
 - 2.Enable
 - 4. Change Password
 - 5. Privacy
 - 1.Disable
 - 2.Enable
 - 6. SIM Lock


- 1.Disable
- 2.Enable
- 7. FDN Mode*
 - 1.Disable
 - 2.Enable
- 8. Change PIN2*
- 8. Reset Settings

*. Shows only if supported by your SIM card.

Recent Calls

In this menu, you can:

- ◆ view calls you missed, received or dialed
 - ◆ view the length of your calls made and received
 - ◆ check your voice mail
-


Note: You can access the most recent numbers in the three types of call records by pressing the  key in Idle mode.

Missed Calls

This menu lets you view the last 20 numbers of the calls you received, but did not answer. Use the navigation key to scroll through the list, and press the **Select** soft key to view call details.

The number or name, if available, displays together with the time and date when the call was received.

By pressing the **Options** soft key, you can:


- ◆ edit the number, if available, and dial it or save it in Address Book.
- ◆ delete the call from the list.
- ◆ You can also dial the number by pressing the  key.

Calls Received

This menu lets you view the last 20 numbers of the calls you received.

- ◆ Use the navigation key to scroll through the list, and press the **Select** soft key to view call details. The number or name, if available, displays together with the time and date when the call was received.

By pressing the **Options** soft key, you can:


- ◆ edit the number, if available, and dial it or save it in Address Book.
- ◆ delete the call from the list.
- ◆ You can also dial the number by pressing the  key.

Calls Made

This menu lets you view the last 20 numbers you dialed. Use the navigation key to scroll through the list, and press the **Select** soft key to view call details.

The number or name, if available, displays together with the time and date when the call was made.

By pressing the **Options** soft key, you can:

- ◆ edit the number and dial it or save it in Address Book.
- ◆ delete the call from the list.
- ◆ You can also dial the number by pressing the  key.

Delete All

This menu allows you to delete all of the records in each call record type. You can also delete all of your call records at one time.

To	Press the
select a call record type to clear	Up or Down key. To delete all of your call records, select All Calls.
add or remove a check mark	center navigation key.
delete the marked records	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Call Time

This menu lets you view the timers for calls you made and received.

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so on.

The following timers are available:

- ◆ **Last Call:** length of the last call.
 - ◆ **Total Received:** total length of all calls you received since the timer was last reset.
 - ◆ **Total Made:** total length of all calls you made since the timer was last reset.
 - ◆ **Reset Timers:** option used to reset the call timers. You must first enter the phone password and then press the **OK** soft key.
-

Note: The password is preset to “00000000” at the factory. To change this password, see “Change Password” on page 141.

Data Volume

This menu lets you track how much data you have transmitted and received. The following options are available:

- ◆ **Recent Volume:** the amount of data sent and received since the last time the Data Volume tracker was reset.
- ◆ **Total Volume:** the total amount of data you have transmitted or received.
- ◆ **Reset Volume:** option used to reset the data volume trackers. You must first enter the phone password and then press the **OK** soft key.

Data Call Time

This menu lets you view the timers for data calls you made and received. The following timers are available:

- ◆ **Recent Time:** length of the last data call.
- ◆ **Total Time:** total length of all data calls you made since the timer was last reset.
- ◆ **Reset Timers:** option used to reset the data call timers. You must first enter the phone password and then press the **OK** soft key.

Messaging

You can send and receive a range of different message types from your mobile phone, including:

- ◆ **Text messages** allows you to send text messages to another text messaging-capable phone.
- ◆ **Multimedia messages** can be sent to another multimedia message capable phone or an email address. Multimedia messages can contain text, photos, videos and voice attachments.
- ◆ **Email** allows you to send and receive email messages to an email address.
- ◆ **Push messages** allow you to receive useful information updates, such as sports scores, weather updates and stock prices automatically.
- ◆ **Broadcast messages** allows you to receive specific information related to a specific area (cell) from your service provider.
- ◆ **Voice mail** allows you to access your voice mailbox and check for voice messages.

Create New Message


Creating a Text Message

1. Press **Menu 2.1.1** for **Text Message**.
2. Create your message.

For further details about entering characters, see “Entering Text” on page 30.

3. When you finish entering the message, press the **Options** soft key. Choose one of the following options:
 - ◆ **Send to Number**: allows you to select from Save and Send or Send Only to the specified number.
 - ◆ **Send to Email**: allows you to Save and Send or Send only to the specified email address.

For further details about Text Formatting, Add Objects, Add Templates, Add Address Book, and Add Language options, see “Creating a Message Using the Options” on page 70.

4. Select Send Only or Save and Send, and press the **Select** soft key.
5. Enter a destination number and press the **OK** soft key. If you want to send the message to multiple destinations, repeat this step.
6. When you have finished entering destination numbers, press the **Options** softkey, followed by **Send Message**. Alternatively, press the  key.

Creating a Message Using the Options

1. Create a message.
2. Press the **Options** soft key.
3. Select one of the following options by using the Up and Down keys and pressing the **Select** soft key:
 - ◆ **Send to Number**: allows you to select from Save and Send or Send Only to the specified number.
 - ◆ **Send to Email**: allows you to Save and Send or Send only to the specified email address.
 - ◆ **Insert**: allows you to add text from the Templates folder, an entry in Address Book, or a URL address in the Favorites folder.
 - ◆ **Add Media**: allows you to add one from various default media items, such as Pictures, Animations, Melodies and Downloads.
 - ◆ **Attach**: you can add entries from the Name Card (vCard) and an vEvent or vTodo from the Calendar (vCalendar).
 - ◆ **Save Message to**: allows you to save the message to Draft or to My Folder.
 - ◆ **Language Select**: allows you to change the language to be used.

- ◆ **Text Style:** allows you to format the style of the text. For the Size attribute, Medium, Large, and Small sizes are available. For the Bold, Italic, Underline and Strike through attributes, select Off or On.
4. Complete the message, and send or save it by following the procedure from “Creating a Text Message” on page 69.

Creating a Long Text Message

When you write a text message, the phone automatically splits it into several messages if the message exceeds the maximum number of characters allowed in a single message. The number of split messages to be sent is shown each time your message is split. Depending on your service provider, the maximum number of characters may vary.

Creating and Sending an Multimedia Message

1. Press **Menu 2.1.2** for **Multimedia Message**.
2. When **Add Here** highlights, press the **Options** soft key and add the message contents using one of the following options:
 - ◆ **Add Text:** enter the message text and press the center navigation key. While entering text, you can add a message template or an entry in Address Book, or change the input language by pressing the **Options** soft key.
 - ◆ **Add Graphics:** allows you to add an image or photo. You can take a new photo or add one of the photos stored in the phone’s memory. Select **Take Photo** to take a new photo, or **Photo Album** to add one of the photos stored in the phone’s memory, or **Downloads** to add one of the graphics stored in your graphics folder. For further details about using the camera, see “Using the Camera” on page 132.
 - ◆ **Add Video:** allows you to add a video clip. You can record a new video clip or add one of video clips stored in the phone’s memory. Select **Record Video** to take a new video, or **Video Album** to add one of the video’s stored in the phone’s memory, or **Downloads** to

add one of the videos stored in your video folder. For further details about using the camera, see "Using the Camera" on page 132.

- ◆ **Add Audio:** allows you to add a sound file. You can record a new audio clip or add an existing audio clip, or select one of sound clips stored in the Audio folder. Select **Record Audio** to record a new voice memo or **Audio List** to add one of the voice memos or sound clips stored in the phone's memory. You can add downloaded sounds if they are in correct format and your service provider allows it.
- ◆ **Add Subject:** allows you to enter text for the subject.
- ◆ **Send:** allows you to send the message.
- ◆ **Send to Online Album:** allows you to upload the video or photo to the online album immediately.
- ◆ **Save to:** saves the message to Draft or My Folder.
- ◆ **Settings:** allows you to change the message settings. After changing the settings, press the  soft key or the **C** key to go back to the message screen. The following options are available:
 - **Delivery Report:** when this option is enabled, the network informs you whether or not your message has been delivered.
 - **Read Reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
 - **Expiry Date:** you can select the length of time your messages are stored in the message center after they are sent.
 - **Delivery Time:** you can set a delay time before the phone sends your messages.
 - **Priority:** you can select the priority level of your messages.
- ◆ **Add Destination:** allows you to enter destination numbers or addresses. After adding them, press the  softkey or the **C** key to go back to the message screen.
- ◆ **Preview:** shows the message you created.

Note: You can add text, an image, a video clip and a sound only once for each page.

3. If you need to add another page for additional information, use the **Up** or **Down** Navigation keys to highlight Page **1/x**. Press the

Options soft key and select **Add Page**. Repeat this step until you have finished creating your message.

4. If you want to change the added items, scroll to the one you want and press the **Options** soft key.
5. When you have finished creating the message, press the **Options** soft key and choose **Send**.
6. Select a destination type, **To**, **Cc**, or **Bcc**.
7. Choose one of the following options:
 - ◆ **Phone Number**: allows you to enter the phone number you want.
 - ◆ **Email Address**: allows you to enter the email address of the recipient.
 - ◆ **Address Book**: allows you to retrieve a number from your Address Book.
8. Enter a Phone Number or an Email Address, or select a number from the Address Book and press the **OK** soft key.
9. To enter additional numbers or addresses, select **Add Destination** and repeat steps 7 and 8. You can enter up to 10 destinations (**To**, **Cc**, or **Bcc**).
10. When you have finished entering the destinations, select **Send Message**. Your phone sends the message.

Creating and Sending an Email

1. Press **Menu 2.1.3** for **Email**.
2. Enter the subject of your email and press the **OK** soft key.
3. Enter the email text.
4. Press the **Options** soft key to select any of the following Options:

- ◆ **Add Attachments** to attach a file to your email:
 - **Add vCard:** allows you to attach a vCard from your Address Book to the email.
 - **Add vCalendar:** allows you to attach the a memo from the Personal Organizer.
 - **Add Graphics:** allows you to attach a photo recently taken, or from your **Photo Album**, or an attachment stored in the **Downloads** folder.
 - **Add Video:** allows you to add a video recently taken, from your **Video Album**, or an attachment stored in the **Downloads** folder.
 - **Add Audio:** allows you to add a Voice Memo you've recorded or previously recorded audio stored in the **Audio List**, or audio stored in the **Downloads** folder.
After selecting the file type you want to add, choose an item from the list. You can add up to 9 items. After adding, press the **C** key to go back to the email screen.
 - **View Attachment:** allows you to view the information included in the email attachment . If you want to remove an attached item, select **Attachment View** soft key and then the **Discard** soft key.
 - ◆ **Insert** to add a message text from the Text Templates folder, an entry in Address Book, or a URL address in the Favorites folder.
 - ◆ **Language** to change the language used.
 - ◆ **Send Only** to send the email.
 - ◆ **Save and Send** to save the email to the Sent folder and also sends it to the recipient.
 - ◆ **Save to** to save the email to the Draft or My folder.
 - ◆ **Add Destination** to allow you to add destination addresses.
After adding, press the **C** key to go back to the email screen.
 - ◆ **Properties** to show the email subject, the list of the recipients you added, if any, and message text.
5. When you are finished composing your email, press the **Options** soft key and select either **Send Only** or **Save and Send**.




6. Select **To**, **Cc**, or **Bcc** to add an email destination for your message. Choose one of the following options:
 - ◆ **Direct Enter**: allows you to directly enter the email address you want.
 - ◆ **Address Book**: allows you to retrieve an email address from your Address Book.
 - ◆ **History**: allows you to send your message to an email address that you have already received an email from.
7. When you are finished adding the destinations, select **Send Email**. Your phone sends the email.

My Messages

The My Messages screen provides 6 message folders:

- ◆ **Inbox**: stores incoming text and multimedia messages
- ◆ **Email Inbox**: stores incoming emails.
- ◆ **Sent**: stores the messages your phone has successfully sent.
- ◆ **Outbox**: stores the messages and emails your phone is attempting to send temporarily.
- ◆ **Draft**: stores the messages and emails you have saved without sending or tried to send.
- ◆ **My Folders**: allows you to create a folder that is used to store messages. You can create up to 5 message folders to manage your messages and emails.

Viewing a Message

1. In Idle mode, press **Menu 2.2.1**. The message list opens. The icons on the left of the number indicates the message type
 - ◆ : indicates SMS
 - ◆ : indicates MMS
 - ◆ : indicates email


The icons on the right of the message subject indicate the memory location and the lock status.

2. Select a message on the list. The message content displays.

For a Multimedia message, the display presents the message and then switches to the message view screen.

3. Press the Up or Down key to scroll through the message screen. For a Multimedia message, press the Left or Right key to scroll to other pages, if the message has more than one page.

You can access the message options by pressing the **Options** soft key.

- ◆ **View**: allows you to view the message received.
 - ◆ **Delete**: deletes the message.
 - ◆ **Move to Myfolder**: allows you to move your messages to a folder you have defined.
 - ◆ **Sort by**: allows you to sort this message by Date, name, Subject, Size and Type.
 - ◆ **Protection**: allows you to set the protection for a message.
4. Press the * or # key to scroll to the previous or next message.
 5. When you have finished, press the  key.

Using Message Options

While viewing a message, press the **Options** soft key to access the following options:

Options for SMS Messages

- ◆ **Reply**: allows you to reply to the message received
- ◆ **Forward**: allows you to forward the message to another destination.
- ◆ **Delete**: deletes the currently selected message.
- ◆ **Callback**: allows you to dial the number that the message has listed.
- ◆ **Move to Myfolder**: allows you to move the message to a specific folder. You must create a folder in the My Folders option.

- ◆ **Move to Phone/SIM:** allows you to move the message to the Phone or SIM card's memory.
- ◆ **Save Address:** allows you to save the address from which the message originated.
- ◆ **Save Media/Attach:** allows you to move the attachment to a specific folder.
- ◆ **Protection:** allows you to set the protection for the message.

Options for Multimedia Messages

- ◆ **Reply:** allows you to reply to the destination from which the message originated. Choose from **Reply via Text Message** or **Reply via Multimedia Message**.
- ◆ **Reply All:** allows you to reply to all addresses listed in the recipient list.
- ◆ **Forward:** allows you to forward the message to another destination. You may **Add Subject** or simply **Send**.
- ◆ **Delete:** deletes the message.
- ◆ **Callback:** allows you to dial the number from which the message was originated.
- ◆ **Move to Myfolder:** allows you to move this sent message to a folder you have previously created.
- ◆ **Save Address:** allows you to extract the recipient or sender's number or address, and URL, email addresses or phone numbers from the message text so that you can make a call, send an SMS message, or save them in your phone's memory.
- ◆ **Save Contents:** allows you to save the picture, video clip, or audio clip from the message received.
- ◆ **Properties:** shows you information about the message.

Options for Email Messages

- ◆ **Reply:** allows you to reply to the message.
- ◆ **Forward:** allows you to forward the message to other Email addresses or phone numbers.
- ◆ **Delete:** deletes the message.
- ◆ **Callback:** allows you to call the phone numbers from the message text.
- ◆ **Move to Myfolder:** allows you to move the message to one of the folders you have defined.

- ◆ **Move to Phone/SIM:** moves the message to the phone's memory or SIM card.
- ◆ **Save Address:** allows you to save the recipient or sender's number and URL, Email addresses or phone numbers from the message text.
- ◆ **Save Media/Attach:** allows you to save media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message.
- ◆ **Protection:** allows you to lock the message keeping it from being deleted or unlocks the message.

Managing Your Own Message Folders

You can create up to 5 message folders to store messages separately from the default message folders.

Creating a Message Folder

1. From the Idle menu, select **Menu 2.2.6** for **My Folders**.
2. If you have not previously created a folder, select the **Yes** soft key for Create Folder.
Otherwise, Press the **Options** soft key and select **Create Folder**.
3. Enter a folder name and press the **OK** soft key.

Moving a Message to a Folder

1. From any message list, select the message you want to move and press the **Options** soft key.
2. Select **Move to Myfolder**.
3. Select one of the folders you have defined. The message is moved to the folder.

Renaming a Message Folder

1. From the Idle menu, select **Menu 2.2.6** for **My Folders**.

2. Scroll to the folder you want to rename.
3. Press the **Options** soft key and select **Rename Folder**.
4. Clear the current name and enter a new name.
5. Press the **OK** soft key.

Deleting a Message Folder

1. From the Idle menu, select **Menu 2.2.6** for **My Folders**.
2. Scroll to the folder you want to delete.
3. Press the **Options** soft key and select **Delete Folder**.
4. Press the **Yes** soft key to confirm the deletion.

Voice Mail

This menu allows you to access your voice mailbox, if your network supports this service.

The following options are available:

- ◆ **Connect to Voice Mail:** before using the Voice Mail feature, you must have a valid voice server number configured in your phone. Your service provider may have configured the number for you already or you have to enter the voice server number obtained from your service provider; see **Menu 2.3.2**. You can then select this option and press the **OK** soft key to listen to your messages. You can quickly connect to the voice server by pressing and holding the **1** key in Idle mode.
- ◆ **Voice Mail Number:** allows you to change the voice mail server number, if necessary.

To	Press the
enter the server number	corresponding numeric keys.
correct a digit	C key.

To	Press the
move the cursor to the left or right without clearing a digit	Left or Right key.

Note: Voice Mail is a network feature. Please contact your service provider for further details.

Templates

Using this menu, you can preset a maximum of ten messages that you use most frequently.

Select the message template you want and press the **Options** soft key.

The following options are available:

- ◆ **Edit:** allows you to edit the currently-highlighted message.

Note: For further details about entering characters, see “Entering Text” on page 30.

- ◆ **Send Message:** allows you to compose a message with the template already inserted into the body of the message. Once you have completed your message, you can send, save and send, or simply save it. For further details about how to send a message, see page 69.
- ◆ **Delete:** allows you to delete the message. You are asked to confirm the deletion by pressing the **Yes** soft key.
- ◆ **Add New** allows you to create a new template message.

Delete All

This menu allows you to delete all of the text messages in each message box. You can also delete all of your messages at one time.

To	Press the
select a message box	Up or Down key. To delete all of your messages, select All Messages .
place or remove a check mark	Center navigation key.
delete the marked messages	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Settings

You can set up various options for using messaging services.

1. In Idle mode, press the **Menu 2.6** for **Settings**.
2. Select the type of messages for which you want to change. Press the **Select** soft key.

Text Message

The following options are available:

- ◆ **Sending Profile:** allows you to set the options for sending text messages.
- ◆ **Reply Path:** allows the recipient of your message to send you a reply through your message center, if your network supports this service.

- ◆ **Delivery Report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- ◆ **Bearer Selection:** allows you to select either GSM or GPRS, depending on your network.
- ◆ **Preferred Memory (Sent, Outbox, Draft):** allows you to select a default memory where your outgoing or incoming messages are stored. Choose from In Card or In Phone.

Multimedia Message

The following options are available:

- ◆ **Delivery Report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- ◆ **Read Reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- ◆ **Auto Download:** you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications.
- ◆ **Message Acceptance:** you can specify the category of messages you want to receive.
- ◆ **Expiry Date:** you can select the length of time your messages are stored in the message center after they are sent. The actual expiry date is determined by your service provider's configuration.
- ◆ **Delivery Time:** you can set a time delay before the phone sends your messages.
- ◆ **Priority:** you can select the priority level of your messages.
- ◆ **Report Allowed:** when this option is enabled, the sender of an incoming message receives a delivery report from the network.
- ◆ **Page Duration:** you can set the length of time one page of an outgoing message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.
- ◆ **Profile:** you can select a connection profile to be used for sending and receiving MMS messages.

Email

The following options are available:

- ◆ **Account:** You can configure up to 10 email accounts using different service providers. The last account you accessed is automatically activated for sending or receiving email messages.

For each account, the following options are available:

- **Account Name:** enter a name for the current account.
 - **Display Name:** enter the name to be displayed in your outgoing messages as the sender name.
 - **Email Address:** enter your email address.
 - **Protocol Type:** specify an email protocol type for the incoming server, either POP3 or IMAP4. Contact your email service provider for more information.
-

Note: For the IMAP4 protocol, you can set whether or not the phone retrieves emails with attachments. You can also select the number of email headers you want to retrieve.

- **Incoming Server:** enter the IP address or domain name of the server to be used for receiving messages. Your email service provider can give you this information.
- **User ID:** enter your email account's user ID.
- **Password:** enter your email account's password.
- **Outgoing Server:** enter the IP address or domain name of the server to be used for sending messages. Your email service provider can give you this information.
- **SMTP Auth.:** specify a protocol type for the server used.
- **Reply-to Address:** enter the reply to address for email address.
- ◆ **Polling Interval:** you can select how often the phone checks the server for incoming messages.
- ◆ **Signature:** you can attach your name, phone number, simple memo or tag line as a signature to your email.
- ◆ **Send Copy to Self:** you can set whether or not your phone sends a copy of the outgoing email to your email address.
- ◆ **Delivery Report:** you can activate or deactivate the report function. When this function is activated, the network informs you whether or not your email has been delivered.

- ◆ **Read Reply:** you can set whether or not your phone sends a request for a reply along with your message to the recipient.
- ◆ **Download Method:** you can choose the display of the email message. You can select Header Only or Normal.
- ◆ **Keep on Server:** you can set whether or not your emails are deleted from the server after retrieval.
- ◆ **Block Email:** you can set up the mail filter to block spam mails. You can enter email address or subject.
- ◆ **Profile:** you can select a connection profile to be used for sending and receiving emails.

Push Message

The following options are available:

- ◆ **Receive:** you can select whether the phone receive or reject push-messages from the WAP server. Choose from Never, Always, or Only White List.
- ◆ **White List:** allows only users on your contact list to push messages.

Broadcast

The following options are available:

- ◆ **Receive:** allows you to enable or disable the reception of broadcast messages.
- ◆ **Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:
 - ◆ **Select:** use to enable or disable channels on the list by marking or unmarking them, respectively. A check mark displays in front of each selected channel.
 - ◆ **Add Channel:** use to enter the ID and title for a new channel.
 - ◆ **Delete:** use to remove a channel from the list.
 - ◆ **Edit:** use to change the ID and title of an existing channel.
 - ◆ **Language:** allows you to select your preferred language in which to display cell broadcast messages.


Please contact your service provider for further details.

Default Text Input Mode

- ◆ **VoiceMode:** allows you to set the VoiceMode option as your default input method for text messages.
- ◆ **Predictive Text Mode:** allows you to set the default setting for text messages to T9.
- ◆ **Alphabet Mode:** allows you to set the default setting for text messages to Alphabet mode.

Memory Status

You can check the memory amount available and remaining for storing the messages.

1. From the Idle menu, select **Menu 2.7** for **Memory Status**.
2. Press the **Next** soft key to scroll through the Memory status display.
3. When you have finished, press the  key.

Games

You can download and play video games already stored on your phone.

Downloading a New Game

You can download more games from the network. A charge may apply. Once you have downloaded games, they are added to your phone's list of games.


Note: Game services may not be available depending upon your service provider.


Launching a Game

Note: The procedures explained below are for the default games. For downloaded games, the procedure may be different.

1. Scroll to the game you want on the Games list and press the **Options** soft key.
2. Select **Launch**.
3. On the startup screen of the game, scroll to an option using the Navigation keys.

The following options are available:


- ◆ **START GAME:** starts a new game.
 - ◆ **CONTINUE:** allows you to continue the last game you were playing.
 - ◆ **HIGH SCORE:** shows the high score table. This option may not be available for some games.
 - ◆ **HOW TO PLAY:** shows how to play the game and the key functions for the game.
 - ◆ **OPTION:** allows you to switch the game sound on or off.
4. Press the  key to confirm your selection.

While you are playing a game, to	Press the
adjust the sound volume	Volume keys
stop the game and return to the startup screen	C key.
exit the game	 key.

Viewing Game Information

1. Scroll to the game you want and press the **Options** soft key.
2. Scroll to **Properties** and press the **Select** soft key.

The display shows information about the game, such as the file size, application version and its vendor.

3. To exit and return to the Options screen, press the  soft key or the **C** key.


Deleting Games

1. Scroll to the game you want to delete and press the **Options** soft key.
2. Scroll to **Delete** and press the **Select** soft key.
3. Confirm that you want to delete the game by pressing the **Yes** soft key.

Note: When you select the default games from the list, the **Delete** option is not available, so that you cannot delete them.

Entering Text

If you need to enter text while using a game, you can use the following input modes:

- ◆ **Upper-case character mode (A)**: allows you to enter upper-case English characters.
- ◆ **Lower-case character mode (a)**: allows you to enter lower-case English characters.
- ◆ **Number mode (1)**: allows you to enter numbers.
- ◆ **Symbol mode**: allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the  key to insert it.
- ◆ **T9 mode (T9)**: allows you to enter English characters by pressing one key per letter. In this mode, you can change the case by pressing the **0** key.

To change the text input mode, press the ***** key until the appropriate indicator appears.

Memory Status

You can check the amount of memory being used and the memory remaining for games, ring tones and graphics.

- ◆ **Games**: the display shows the total, free and used space and the number of games downloaded.

Applications

The Applications feature enables you to:

- ◆ set an alarm so that the phone rings at a specific time, such as to remind you of an appointment.
- ◆ view the calendar and organize your schedule.
- ◆ use the phone as a calculator for basic mathematical equations or currency exchange operations.
- ◆ define a list of things to do.

Alarm

Press **Menu 4.1** to start the Alarm feature. This feature allows you to:

- ◆ set the alarm to ring at a specific time.
- ◆ set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- ◆ **Single Use Alarm:** this alarm type goes off once and is then deleted.
- ◆ **Daily Alarm:** this alarm type repeats daily.
- ◆ **Wake-up Call:** this alarm type repeats daily on a specified range of days in the week.
- ◆ **Remove Alarm:** deletes all alarm settings
- ◆ **Autopower:** when this option is set to Enable, the alarm rings at the specified time, even if the phone is switched off. If the menu option is set to Disable and the phone is switched off at the specified time, the alarm does not ring.

To set an alarm:

1. Choose the type of alarm to be set and press the **Select** soft key.
2. Enter the time for the alarm to sound.

Your phone is preset to use 12-hour format. To change the format, see page 95.

If you want to use the alarm options, press the **Options** soft key. The following options are available:

- ◆ **Remove Alarm:** deactivates the current alarm.
 - ◆ **Alarm Tone:** allows you to select the alarm melody.
3. Press the **OK** soft key.
 4. Select AM or PM for 12-hour format and press the **Select** soft key.
 5. If you select Wake-up Call in step 1, choose the repeat option, Monday to Friday or Monday to Saturday, and press the **Select** soft key.
 6. To stop the alarm when it rings, open the folder and press the **Exit** soft key.

Calendar

With the Calendar feature, you can:

- ◆ consult the calendar to check your memos.
- ◆ write memos to keep track of your schedule.
- ◆ set an alarm to act as a reminder.

Consulting the Calendar

When you select the Calendar menu (**Menu 4.2**), the calendar appears with today's date highlighted. The following options are available when you press the **Options** soft key:

- ◆ **Search All:** displays all of the memos, starting with the oldest regardless of the day. To scroll through the memos, press the Up or Down key.
- ◆ **Delete All:** allows you to delete all of the memos. You are asked to confirm your action.
- ◆ **Go to Date:** allows you to go to a specific date.

Writing a Memo

You can create up to 30 memos. To write or edit a memo on a specific date:

1. Select a date on the calendar, using the Navigation keys.
To skip to the previous or next month, press the Volume keys on the left side of the phone.
2. Press the Center navigation key.
An empty memo screen displays allowing you to enter your memo.
3. Enter your memo and then press the **OK** soft key.
For further details, see “Entering Text” on page 30.
4. If you want the alarm to ring on the chosen day, press the **Yes** soft key. Otherwise, press the **No** soft key. The memo is saved.
If you press the **Yes** soft key, set the time for the alarm and press the **OK** soft key.
Your phone is preset to use 12-hour format. To change the format, see page 95.
You can set the melody for the alarm by pressing the **Melody** soft key.
5. Select AM or PM for 12-hour format and press the **Select** soft key.
The color of the date on the calendar changes to green to indicate that a memo exists for that date.

Viewing a Memo

When you select a day for which a memo already exists on the calendar, the latest memo for the day displays.

If more than one memo is stored, press the Up or Down key to scroll to the previous or next memo. You can use the following options by pressing the **Options** soft key:

- ◆ **Edit**: allows you to change the memo text.
- ◆ **Alarm**: allows you to set an alarm to ring at a specified time to remind you of the memo. If you set the alarm earlier, you can change or delete it.
- ◆ **Delete**: allows you to delete the memo.
- ◆ **Copy to**: allows you to copy the memo to another date.
- ◆ **Move to**: allows you to change the date of the memo.

To Do List

This feature (**Menu 4.3**) allows you to:

- ◆ enter a list of tasks to be done.
- ◆ assign a priority and a deadline to each task.
- ◆ sort the tasks by priority and status mark.




Creating the To Do List

1. Press the **New** soft key.
2. Enter the first task.


 

For further details about entering characters, see “Entering Text” on page 30.
3. Press the **OK** soft key.
4. Select a priority status of high, normal or low using the Up and Down keys and press the **Select** soft key.
5. Enter your deadline and press the **OK** soft key.

If you do not want to set a deadline, press the **Skip** soft key.

Editing the To Do List

When you select the To Do List menu, the current contents display with the status mark if the task has been done and priority;  for High,  for Normal and  for Low.

You can use the following options:

Action	Procedures
View the details for a specific task	<ol style="list-style-type: none">① Highlight the task. Scroll through the tasks using the Up and Down keys, if necessary.② Press  to view the task.
Change the status of a specific task	<ol style="list-style-type: none">① Highlight the task.② Press the  key to mark the task as completed as of the current time and date. <p><u>or</u></p> <ol style="list-style-type: none">① Highlight the task.② Press the Options soft key.③ Select the Mark option.④ Select the appropriate status (Done or Undo).
Create a new task	<ol style="list-style-type: none">① Press the Options soft key.② Select the New option.③ Enter the text and select OK when finished.④ Select a priority and press . Enter a deadline for the task and select OK.
Edit an existing task	<ol style="list-style-type: none">① Highlight the task.② Press the Options soft key.③ Select the Edit option.④ Change the text, priority and/or deadline as described for “Create a new task”.

Action	Procedures (Continued)
Sort the existing tasks by priority or status	① Press the Options soft key. ② Select the Sort option. ③ Select the sort criterion (High, Low, Done or Undo).
Copy a task	① Highlight the task. ② Press the Options soft key. ③ Select the Copy option. ④ Change the text, priority and/or deadline as described for “Create a new task”.
Copy a task to the calendar	① Highlight the task. ② Press the Options soft key. ③ Select the Copy to Calendar option. ④ Change the text, priority and/or deadline as described for “Create a new task” and set the alarm.
Delete a task	① Highlight the task. ② Press the Options soft key. ③ Select the Delete option. ④ Confirm the deletion by pressing the OK soft key.
Delete all tasks	① Press the Options soft key. ② Select the Delete All option. ③ Confirm the deletion by pressing the OK soft key.
Exit the To Do list	① Press the Options soft key. ② Select the Exit option.

Calculator

With this feature (**Menu 4.4**), you can use the phone as a calculator. The calculator provides basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.
 - ◆ To delete mistakes or clear the display, press the **C** key.
 - ◆ To include a decimal point or a bracket, press the left soft key until the symbol you want displays.
2. Use the navigation key to select the operations that you want: **+** (addition), **-** (subtraction), ***** (multiplication), **/** (division).
3. Enter the second number.
4. To view the result, press the center navigation key.
5. Repeat steps 1 to 4 as many times as required.

Currency Exchange

Using the Currency Exchange menu (**Menu 4.5**), you can easily determine many currency conversions.

1. Enter the current Exchange Rate for your base currency and press the **OK** soft key.

You can insert a decimal point by pressing the **#** key.

2. Enter the amount of Local Currency that you want to convert and press the **OK** soft key.

The Exchange Rate, Local Currency amount, and the Foreign Currency amount display.

3. Press the **Exit** soft key to quit the exchange calculator.

Media Services

The Media Services menu provides a convenient place to download all your ring tunes, games and graphics. In addition, you can view photos that you have put online and surf the Internet.

Download Ring Tunes

This menu allows you to download ring tunes from your service provider. Follow the online instructions shown on your display screen. Once you have downloaded ring tunes, they are added to your phone's list of ring tunes. See "Ring Tune" on page 112.

Download Games

This menu allows you to download video games from your service provider. Follow the online instructions shown on your display screen. Once you have downloaded games, they are added to your phone's list of games.

Note: Game services may not be available depending upon your service provider.

Download Graphics

This menu allows you to download new wallpapers from your service provider. Follow the online instructions shown on your display screen. Once you have downloaded graphics, they are added to your phone's list of wallpapers.

Download Video

This menu allows you to download new video clips from your service provider. Follow the online instructions shown on your display screen. Once you have downloaded the video clips, they are added to your phone's list of videos.

View Online Album

This menu allows you to view pictures that you have taken with your camera and post them online. Follow the online instructions shown on your display screen.

navigate Home

This menu takes you to an online homepage provided by your service provider.

Multimedia

Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in a multimedia message or set one as a wallpaper.

You can also record videos using your phone as a video camcorder. The video clip can be send to other video multimedia message capable phones.


Note: You can quickly enter the **Camera** menu by pressing the side Camera key.

Caution: Do not take photos of people without their permission. Do not take photos in a place where cameras are not allowed or where you might interfere with another person's privacy.

Photo

This menu allows you to take a photo. Your camera produces JPEG photos.

Taking a Photo with the Folder Open

1. Press **Menu 6.1.1** to start the camera. Alternatively, press and hold the Camera key () on the right side of the phone in Idle mode.

The image to be captured appears on the display.

2. Adjust the image by aiming the camera at the subject.


3. Apply the desired effects and options

To	Press the
adjust the brightness of the image	Left and Right navigation keys.
zoom in or out	Up and Down navigation keys.
flip vertically or horizontally	Volume keys.
use the camera options	left soft key.
toggle between camera and video modes	1 key.
change the display size	2 key.
change the image quality	3 key.
change the shot mode	4 key.
apply effects	5 key.
switch between day and night shooting mode	6 key.
use a frame	7 key.
set a delay time	8 key. Press the center navigation key to start the timer countdown.
move to the My Photos	9 key.
activate Night mode	0 key.

4. Press the **Camera** key on the right side of the phone or the center navigation key to take the photo.

5. Press the **Save** soft key.

To discard the photo and return to the capture mode, press the **C** soft key. To send the photos immediately, press the **Send** soft key.


To	Press the
use the photo options	Options soft key. For further details, see page 101.
return to Capture mode	Preview soft key or C key.
return to Idle mode	 key.

When you press the **Options** soft key after saving a photo, the following options are available:

- ◆ **Take Another** allows you to take another photo immediately.
- ◆ **Send**: allows you to send the photo using a multimedia message. For further details, see page 70.
- ◆ **Send to Online Album**: send photo to online album immediately.
- ◆ **Set as Wallpaper**: allows you to set the photo as your wallpaper for the idle screen.
- ◆ **Set as Caller ID**: allows you to set the photo as a caller ID image for Address Book entries.
- ◆ **Delete**: deletes the photo.
- ◆ **Rename**: allows you to change the name of the photo.
- ◆ **Go to Photos**: views the photo album in the handset.
- ◆ **Protection**: prevents a photo in your photo album from being accidentally deleted. You must unprotect a photo before it can be deleted.
- ◆ **Properties**: shows the properties of the photo, such as the time and date it was saved, file size, photo size, protection status, file format and file name.

Using the Camera Options

In Capture mode, you can use various options by pressing the left soft key.

To	Press the
scroll to an option	Up or Down key.
select the highlighted option	Select soft key or the Right key.
return to Capture mode	C key or  soft key.

The following options are available:

- ◆ **Shooting Mode:** allows you to switch camera modes.
 - **Single shot:** the default for the camera
 - **Multi shot:** allows you to take a series of action stills. Select the capture speed, High Speed or Normal Speed, and the number of photos the camera will take. When you press the Camera key, the camera takes photos successively. After taking photos, press the **SaveAll** soft key to save all of them or the **Save** soft key to save the selected one.
 - **Mosaic shot:** allows you to take a series of photos successively and arrange them in a grid. Select the number of photos in the grid and whether the camera automatically takes the pictures or whether each picture is taken manually.
 - **Night shot:** allows you to take pictures under low-light conditions.
- ◆ **Effects:** allows you to change the color tone or apply special effects to the photo.
- ◆ **Frames:** allows you to use a decorated frame. Select a frame from the list using the Navigation keys and press the **Select** softkey.
- ◆ **Timer:** allows you to have a delay time before the camera takes the photo. Select the length of time you want. When you press the Camera key, the camera takes the photo after a specified time.

- ◆ **Go to Photos:** allows you to view photos stored in your **Photo Album**.
- ◆ **Settings:** allows you to change the options for taking a photo.
 - **Size:** allows you to select a photo size. Once you change this setting, it is saved for the next shots.
 - **Quality:** allows you to change the image quality. Once you change this setting, it is saved for the next shots.
 - **Viewfinder Mode:** allows you to change between a **Full screen** and **Standard ratio** display on your LCD screen.
 - **Shutter sound:** allows you to change your camera's shutter sound.
- ◆ **Short Cut:** shows an illustration of the key commands used in Camera mode.

Taking a Photo with the Folder Closed

1. Close the folder.
2. To turn the camera on, press and hold the Camera key on the right side of the phone.

The image to be captured appears on the external display.

3. Adjust the image by aiming the camera at the subject.
4. Press the Camera key to take the photo.

The photo is automatically saved in the **My Photos** menu (**Menu 4.3**).

Video

This menu allows you to take video clips.

Taking a Video with the Folder Open

1. Press **Menu 6.1.2** to start the video camera.

2. Apply the desired effects and options

To	Press the
adjust the brightness of the video	Left and Right navigation keys.
zoom in or out	Up and Down navigation keys.
flip vertically or horizontally	Volume keys.
use the video options	left soft key.
toggle between camera and video modes	1 key.
change the display size	2 key.
apply effects	5 key.
activate/deactivate speaker	7 key.
set a delay time	8 key. Press the center navigation key to start the timer countdown.
move to the My Photos	9 key.
toggle between Full screen and Standard ratio	* key

3. Press the **Camera** key on the right side of the phone or the center navigation key to start the video.
4. When you are finished, press the **Camera** key on the right side of the phone or the center navigation key to stop the video.

5. Press the **Save** soft key.

Using the Video Options

In Record mode, you can use various options for the camera by pressing the left soft key. The following options are available:

- ◆ **Effects:** allows you to change the color tone or apply special effects to the video.
- ◆ **Timer:** allows you to set a time delay before the camera starts recording a video. Select the length of delay you want. When you press the key. The camera begins recording a video after the specified time.
- ◆ **Go to Videos:** allows you to go to the **Video Album** menu. For more options information, see "Video Album Options" on page 140.
- ◆ **Settings:** allows you to change the image settings.
 - **Size:** allows you to set the image size to either (176x144) or (128x96). The icon for the selected image size displays on the capture screen.
 - **Screen Mode:** allows you to set the screen display. Choose from Full screen or Standard ratio.
 - **Audio Record:** allows you to turn the audio On or Off.
- ◆ **Short Cut:** shows an illustration of the key commands used in Video mode.


View Online Album

This menu allows you to view pictures that you have taken with your camera and post them online. All pictures sent or received via MMS or send to the online album directly can be viewed via this menu. Follow the online instructions shown on your display screen.

Photo Album

When you access this menu, your phone displays your photos in Thumbnail mode, which shows all your photos as smaller images.

1. Use the Navigation keys to scroll through the photos.

2. To view photos on the full screen, select the photo you want to view and then press the center navigation key. In this mode, you can scroll through the photos by using the Left and Right keys. To go back to Thumbnail mode, press the  soft key.
3. Press the **Options** soft key to use the following options:
 - ◆ **View:** displays the currently highlighted photo.
 - ◆ **Display mode:** allows you to display the pictures in your photo album in either **List** or **Thumbnail** mode.
 - ◆ **Send:** allows you to send the photo using a multimedia message. For further details, see page 70.
 - ◆ **Send to Online Album:** send photo to online album immediately.
 - ◆ **Set as Wallpaper:** allows you to set the photo as your wallpaper on the idle screen.
 - ◆ **Set as Caller ID:** allows you to set the photo as a caller ID image for Address Book entries.
 - ◆ **Delete:** allows you to delete the photo.
 - ◆ **Rename:** allows you to change the name of the photo.
 - ◆ **Protection:** prevents a photo in your photo album from being accidentally deleted. You must unprotect a photo before it can be deleted.
 - ◆ **Properties:** shows the properties of the photo, such as the time and date it was saved, file size, photo size, protection status, file format and file name.

Video Album

When you access this menu, your phone displays your videos.

1. Use the Navigation keys to scroll through the videos.
2. To play the videos, select the video you want to view and then press the center navigation key. You can rewind using the Left navigation key and fast forward using the right navigation key. The center navigation key starts and pauses the video.
3. Press the **Options** soft key to use the following options:

- ◆ **Play** the video.
- ◆ **Display mode** allows you to view your video collection in list format or as a group of thumbnails.
- ◆ **Send**: allows you to send the video using a multimedia message. For further details, see page 70.
- ◆ **Send to Online Album**: send video clip to online album immediately.
- ◆ **Set as Wallpaper**: allows you to set the video as your wallpaper on the idle screen.
- ◆ **Delete**: allows you to delete the video.
- ◆ **Rename**: allows you to change the name of the video.
- ◆ **Protection**: prevents a video in your photo album from being accidentally deleted. You must unprotect a video before it can be deleted.
- ◆ **Properties**: shows the properties of the video, such as the time and date it was saved, file size, resolution, protection status, file format and file name.

Delete All

This menu allows you to delete photos and videos saved in your phone. You can also delete all of your photos and videos at once.

To	Press the
select a media type to clear	Up or Down key. To delete all of your photos, select All .
add or remove a check mark	Center navigation key.
delete the marked media types	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Record Audio

You can record audio clips (**Menu 6.2.1**). After recording, you can send the audio clip to other people using Multimedia Messaging.

Record

This menu allows you to record a new audio clip. When you select this option, the display shows the 30-second timer.


1. To start recording, press the **Record** soft key.
2. Record a memo by speaking into the microphone.
3. When you press the **Stop** soft key or if the recording time expires, the following options display:
 - ◆ **Replay**: plays back your audio clip.
 - ◆ **Re-record**: discards the audio clip and enables you to record another one.
 - ◆ **Save**: allows you to save the audio clip.
 - ◆ **Quit**: cancels your recording and exits the **Record** menu.
4. To save the memo, choose **Save** from the options and press the **Select** soft key.
5. Press the **C** key to clear the default name, if necessary, and enter a name for the audio clip.

For further details, see “Entering Text” on page 42.

6. Press the **OK** soft key.

The voice memo is saved and then the display shows the audio clip information.
7. Press the **Options** soft key to use the following audio clip options:
 - ◆ **Send**: allows you to send the memo to other people as part of a multimedia message. Follow the procedure on page 69.
 - ◆ **Rename**: allows you to change the audio clip’s name.

◆ **Delete**: deletes the audio clip.

8. To exit, press the **C** or  key.

Audio List

This menu shows all your audio clips. Scroll to an audio clip and press the **Options** soft key. The following options are available:

◆ **Play**: plays the audio clip.

◆ **Send**: allows you to send the audio clip to other people by using Multimedia Messaging feature. Follow the procedure on page 69.

◆ **Rename**: allows you to change the audio clip's name.

◆ **Properties**: displays information about the audio clip, such as the name, date when the audio clip was made, recording duration and memory size.

◆ **Delete**: allows you to delete the audio clip.

Delete All

In this menu, you can delete all of your audio clips. When a confirming message appears, press the **Yes** soft key. To cancel the deletion, press the **No** soft key.

Memory Status

You can check the amount of memory for photographs, video clips and audio clips.

The display shows you the total, free and used space including the number of multimedia files you recorded and the total number of multimedia files you can additionally create.

Fun & Tunes


The Fun and Tunes menu contains several entertainment options.

Go To Internet

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.

navigate Home

This menu takes you to an online homepage provided by your service provider.

Selecting this menu connects the phone to the network and loads the homepage of the Wireless Web service provider. You can also press the  key in Idle mode.

The content of the Internet Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

Note: To access the startup homepage from any other screen in the Internet browser, use the **Home** option. For further details about the Internet Browser menus, see page 111.


Exiting the Internet Browser

To exit the browser at any time, simply press the  key.


Navigating the Internet Browser

To	Press the
scroll through and select browser items	Up or Down key until the item is highlighted, and then press the Select soft key to confirm the selection.
select a numbered item	corresponding numeric key.
return to the previous page	Back soft key or the C key.
return to the startup homepage	press the Menu softkey and select Home . For further details about this option, see page 111.

Entering Text in the Internet Browser

When you are prompted to enter text, the current text input mode is indicated on the screen. To change text input mode, press the  key one or more times.

The following modes are available:

- ◆ **Upper-case character mode (A)**: allows you to enter upper-case English characters.
- ◆ **Lower-case character mode (a)**: allows you to enter lower-case English characters.
- ◆ **Number mode (1)**: allows you to enter numbers.
- ◆ **Symbol mode**: allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the  key to insert it.
- ◆ **T9 mode (T9)**: allows you to enter English characters by pressing one key per letter. In this mode, you can change the case by pressing the **0** key.

Note: You can enter special characters in Upper-case or Lower-case Character mode. For details about available characters, see “Using Number Mode” on page 46.

Selecting and Using Browser Menu Options

Various menu options are available when you are using the Internet Browser to navigate the Wireless Web.

To access a menu option:

1. Press the **Menu** softkey. A menu list displays.
2. Highlight a menu by pressing the Up or Down key.
3. Select an option by pressing the **Select** soft key.
4. If necessary, select a secondary option using the Up and Down keys, and press the **Select** soft key to confirm.

The following options are available:

- ◆ **Favorites:** allows you to bookmark and go to your favorite pages.
- ◆ **Reload:** reloads the current page.
- ◆ **Home:** takes you back at any time to the home page of the Wireless Web service provider.
- ◆ **Goto URL:** allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** soft key to go there directly.
- ◆ **Show URL:** displays the URL address of the Web page to which you are currently connected. It also enables you to set the current site as the startup home page or add it to your favorites.

To	Press the
set the current page as your startup home page	Option soft key and select the Save to Home option.
set a bookmark for the current page	Option soft key and select the Save to Bookmark option
cancel your setting	Back soft key.

Clear Cache: deletes the information stored in the cache, which stores the most recently accessed Web pages.

Inbox: allows you to read messages received from the web server.

Show Images: displays the images on the web page alone.

Text Message: allows you to compose a text message.

Settings

This menu allows you to select the profile used by the Internet browser. Contact your service provider for details about your Settings options.

Clear Cache

You can clear the information stored in the cache, the phone's temporary memory which stores the most recently accessed Web pages.

◆ Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

Ring Tune

In this menu, you download more ring tunes from your service provider. A charge may apply. You can set the downloaded sounds as the current ring tune or send them to other phones.

By pressing the **Options** soft key, you can use the following options:

◆ **Rename:** allows you to change the name of the sound.

◆ **Delete:** deletes the sound.

◆ **Set as Ring Tune:** sets the sound as your ring tune.

Graphics

In this menu, you can download more wallpapers from your service provider. A charge may apply. You can set the downloaded pictures as the current background image or send them to other phones.

If you set a photo as your wallpaper, it displays as My Photo on the list.

By pressing the **Options** soft key, you can use the following options:

- ◆ **Rename:** allows you to change the name of the image.
- ◆ **Delete:** deletes the image.
- ◆ **Set as Wallpaper:** sets the image as your wallpaper for the idle screen.

Video

In this menu, you can download new video clips from your service provider. A charge may apply. You can set the video clips as the current wallpaper or send them to other phones.

By pressing the **Options** soft key, you can use the following options:

- ◆ **Rename:** allows you to change the name of the video clip.
- ◆ **Delete:** deletes the video clip.
- ◆ **Set as Wallpaper:** sets the video clip as your wallpaper for the idle screen.
- ◆ **Properties:** displays the properties of the video clip.

Delete All

This menu allows you to delete all of the downloaded items in the Games, Ring Tunes or Graphics folders. You can delete all of the items at one time.

To	Press the
select a folder to clear	Up or Down key. To delete all of your items, select All .
add or remove a check mark	Center navigation key.
delete the marked items	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Memory Status

You can check the amount of memory being used and the memory remaining for ring tones and graphics.

Address Book

You can store phone numbers and their corresponding names in both your SIM card and phone's memory. They are physically separate but are used as a single entity, called Address Book.

Storing a Number with a Name

There are two ways to store a number:

- ◆ Using the **Save** soft key in Idle mode
- ◆ Using the **New Entry** option in the Address Book menu




Storing a Number in Idle Mode

As soon as you start to enter a number, Save appears above the left soft key to allow you to store the number in Address Book.

1. Enter the number you want to store.

Note: If you make a mistake while entering a number, correct it using the **C** key. For further details, see page 17.

2. When you are sure that it is correct, press the **Save** soft key.
3. Select the category of the number to be stored. Three categories are available:

	Mobile Number
	Work Number
	Home Number


To select the category, press the Left or Right key and press the **Select** soft key.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key.

Note: When you change phones, any numbers stored in your SIM card memory are automatically available with the new phone, whereas any numbers stored in the phone's memory must be reentered or transferred using the optional data kit accessory.

5. Enter a name and press the **OK** soft key.

For further details about entering characters, see page 30.

To	Press the
use the entry options	Options soft key. For further details, see page 117.
return to the idle screen	 key.

Storing a Number Using the Address Book Menu


1. When the idle screen displays, press the **Names** soft key.
2. Scroll to **New Entry** by pressing the Up or Down key and press the **Select** soft key.
3. Select the category of the number to be stored by pressing the Left or Right key, and press the **Select** soft key.

Note: You can also store e-mail addresses in your Address Book by selecting the e-mail category.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key. Email address can only be saved in the phone.
5. Enter a name and press the **OK** soft key.

For further details about entering characters, see “Entering Text” on page 30.

6. Enter the number you want to store and press the **Save** soft key.

To	Press the
use the entry options	Options soft key. See the next section for the options available.
return to the idle screen	 key.


Using Address Book Entry Options

While accessing any Address Book entry, press the **Options** soft key to access the options for the entry.

To	Press the
select the highlighted option	Left key.
highlight a different option	Up or Down key until the option you want highlights.

The following options are available:

- ◆ **Edit:** allows you to edit the name and/or number.
 - Select One Entry to change the name and/or number for the selected entry.
 - Select All Entry to change only the name of the entry.
- ◆ **Send Message** allows you to send a message to the currently selected contact.
- ◆ **Multimedia Caller ID:** allows you to assign a distinctive image and/or audio prompt to be displayed when you receive a call from the selected number.
 - **Graphics:** allows you to select from the following options:

- **Take Photo:** allows you to launch the camera and take a new photo.
- **Photo Album:** allows you to choose from photos stored in the Photo Album.
- **Downloads:** allows you to choose from the graphics you have downloaded.
- **View:** if you choose to take a photo during this step, this option becomes enabled for you to view and save or delete.
- **Audio:** allows you to select a ring tune from the **Default**, **Downloads**, or **Listen** option.
- **Delete Caller ID:** allows you to cancel the Caller ID settings for the number. Choose from **All Caller ID**, **Picture Caller ID**, and **Audio Caller ID**.
- ◆ **Paste:** allows you to paste the number into the normal dialing mode. Use this option to dial a number similar to one in Address Book, such as a different extension in the same office. Use the **C** key to change the number as required; see page 17 for further details. When you are ready to dial, press the  key.
- ◆ **Delete:** allows you to delete the selected number from Address Book. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.
- ◆ **Copy:** allows you to copy the number to another location. You can select the memory location.
- ◆ **Caller Group:** allows you to organize your Address Book entries in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the ten groups available.
 - To remove an entry from a group, select the **No Group** option.
 - For further details about how to change caller group properties, see “Editing a Caller Group” on page 122.
- ◆ **Add Entry:** allows you to add a new number to the currently selected name.


Dialing a Number from the Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by using the location numbers that were assigned to them in the Address Book.

Dialing a Number from the SIM Card

1. In Idle mode, enter the location number of the number you want to dial and press the # key.


The list of the entries in the SIM card appears. If necessary, scroll through the list using the Up or Down key.

2. When the number displays, press the **Dial** soft key or  key.

Dialing a Number from the Phone's Memory

1. In Idle mode, press and hold the **0** key. A + appears.
2. Enter the location number of the number you want and press the # key.
3. The list of the entries in the phone's memory appears.

If necessary, scroll through the list using the Up or Down key.

4. When the number displays, press the **Dial** soft key or  key.

Speed Dialing

You can assign up to eight phone numbers from Address Book that you use most frequently to the number keys (2 to 9), and then dial them easily whenever you want, simply by pressing and holding the associated number key.



Setting up Speed-dial Entries

1. When the idle screen displays, press the **Names** soft key.

2. Scroll to **Speed Dial** by pressing the Up or Down key and press the **Select** soft key.
3. Select a number between 2 to 9 to assign the speed dialling number, and press the **OK** soft key.

Note: Memory location 1 is reserved for your Voice Mail server number.

If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to step 6.

4. Select an entry from the list and press the **View** soft key.
5. Press the **Select** soft key to save this entry in the speed dial list.
6. When you are finished, press the  soft key or the  soft key or to edit the number use the following options by pressing the **Options** soft key:
 - ◆ **Change:** allows you to assign a different number to the key.
 - ◆ **Delete:** allows you to clear the setting so that no number is assigned to the key.
 - ◆ **Delete All:** allows you to clear the settings for all keys so that no numbers are assigned to keys 2 through 9.
 - ◆ **Number:** allows you to view the number assigned to the key. You can dial the number by pressing the key.

Speed-dialing from Address Book

- ◆ To speed-dial the numbers assigned to the 2 to 9 keys, press and hold the appropriate key.


Searching for and Dialing a Number in Address Book

After storing numbers in Address Book, you can search for them in two ways; by name and by caller group.

Searching for a Number by Name

1. When the idle screen displays, press the **Names** soft key.
2. Press the **Select** soft key when **Search** highlights. You are asked to enter a name.
3. Enter the first few letters of the name that you want to find. The Address Book entries are listed, starting with the first entry matching your input.

To	Press the
view the highlighted entry	View soft key.
select a different entry	Up or Down key until the entry you want highlights.
look for a name starting with a different letter	key labeled with the letter you want.


4. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Address Book entry options; for further details, see page 117.

Searching for a Number by Caller Group

1. When the idle screen displays, press the **Names** soft key.
2. Scroll to **Group Search** by pressing the Up or Down key and press the **Select** soft key. You are asked to enter a group name.

3. Enter the first few letters of the group name that you want to find. The caller groups are listed, starting with the first group matching your input.
4. If necessary, scroll to a group by pressing the Up or Down key and press the **View** soft key. The Address Book entries in the caller group are listed.

To	Press the
view the highlighted entry	View soft key.
select a different entry	Up or Down key until the entry you want highlights.

5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Address Book entry options; for further details, see page 117.



Editing a Caller Group

1. When the idle screen displays, press the **Names** soft key.
2. Scroll to **Group Edit** by pressing the Up or Down key and press the center navigation key.
3. Scroll through the group list by pressing the Up or Down key.
4. When the group you want highlights, press the **Options** soft key.
5. Select each option and change the settings, as you want.

The following options are available:



- ◆ **Call Ring Tune:** allows you to set a ring tune to be used when you receive a call from a person in the group.

- ◆ **SMS Tone:** allows you to set a ring tone to be used when you receive a message from a person in the group.
- ◆ **Graphics:** allows you to set a graphic icon to be displayed when you receive a voice call from a person in the group.
- ◆ **Group Name:** allows you to assign a name to the group. For further details about entering characters, see page 30.

6. When you are finished, press the  or  key.

Speed-dialling from the SIM Card

To speed-dial the numbers saved in the SIM card:

1. Enter the location number and press the  or **#** key.
2. The display shows the information about the entry, such as name, phone number and memory location.
3. If necessary, press the Up or Down key to scroll to the previous or next entry.
4. Press the  key or **Dial** soft key.

Deleting All Address Book Entries

You can delete all of the entries in the selected memory or both memories.

1. When the idle screen displays, press the **Names** soft key.
2. Scroll to **Delete All** by pressing the Up or Down key and press the **Select** soft key.
3. To place a check mark by the memory you want to empty, **All**, **SIM** or **Phone**, press the center navigation key.

You can remove the check mark by pressing the center navigation key.


4. When you are finished marking, press the **Delete** soft key to delete the entries in the selected memory.

5. Enter the phone password and press the **OK** soft key.

The password is preset to “00000000” at the factory. To change this password, see “Change Password” on page 141.


6. When a confirming message appears, press the **Yes** soft key.

To cancel the deletion, press the **No** soft key.

7. When you are finished, press the **C** or  key.

Checking the Memory Status

You can check how many names and numbers are stored in Address Book, in both the SIM card and phone’s memory. You can also see the capacity of both memories.

1. When the idle screen displays, press the **Names** soft key.
2. Select the **Memory Status** option by pressing the Up or Down key and press the **Select** soft key.
3. Press the Up or Down key to view the number of existing and total entries available in the SIM card and phone’s memory.
4. When you are finished, press the **C** or  key.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, directory enquiries and voice mail numbers.

1. When the idle screen displays, press the **Names** soft key.
2. Select the **SDN** option by pressing the Up or Down key and press the **Select** soft key.
3. Scroll through the numbers by using the Up or Down key.
4. To dial the number displayed, press the **Dial** soft key.

Note: This option is available only when your SIM card supports Service Dialing Numbers.

Phone Settings

Many different features of your phone can be customized to suit your preferences. All of these features are accessed in the Phone Settings menu.

Sound Settings

You can use the Sound Settings feature to customize various settings, such as the:

- ◆ ring melody, volume and type.
- ◆ sounds made when you press a key, receive a message, open/close the folder or switch your phone on or off.
- ◆ alert tone made every minute during a call, when you make an error or when your call is connected.

Ring Tunes

This menu allows you to select a ring melody.

You can choose between many different melodies. If you have downloaded additional ring tunes, you can access them in this menu.

Ring Volume

This menu allows you to adjust the ring volume to one of five levels. Use the Up and Down keys or the Volume keys on the left side of the phone to increase or decrease the volume.

Download Ring Tunes

This menu allows you to download ring tunes from your service provider. Follow the online instructions shown on your display screen. A charge may apply.

Alert Type

This menu allows you to specify how you are to be informed of incoming calls or alarms you set.

The following options are available:

- ◆ **Light Only:** the service lights flash; the phone neither rings nor vibrates.
- ◆ **Melody:** the phone rings using the selected ring tune.
- ◆ **Vibration:** the phone vibrates but does not ring.
- ◆ **Vibration then Melody:** the phone first vibrates three times and then starts ringing.

Keypad Tone

This menu allows you to select the tone that the phone sounds when you press a key. To turn the sound off, select **Off**.

Message Tone

This menu allows you to select how the phone informs you that a new message has been received. You can select a different type of tone for different kinds of messages.

For each message tone, the following options are available:

- ◆ **Tone:** you can select a message tone.
- ◆ **Mode:** you can select a type of message alert.
 - **Off:** the phone does not use the message tone.
 - **Tone:** the phone sounds the selected message tone.
 - **Vibration:** the phone vibrates.
 - **Light Only:** the service light, the backlight of the keys on the top of the phone flashes.
- ◆ **Repetition:** you can select how often the phone informs you of a new message.
 - **Once:** the phone alerts you to a new message just once at the time of its receipt.
 - **Periodic:** the phone alerts you to a new message every 2 minutes until you open the message.

Folder Tone

This menu allows you to select the tone that the phone sounds when you open or close the folder. Select either **Future** or **Crystal**. To turn the sound off, select **Off**.

Power On/Off

This menu allows you to select the melody that the phone sounds when it is switched on and off. Select either **Mystic** or **Exciting**. To turn the sound off, select **Off**.

Alerts On Call

This menu option allows you to turn off alert tones during a call. The default setting is **On**. To turn off this setting, select the **Off** setting and press the **Select** soft key.

Extra Tones

You can customize additional tones used for the phone.

To turn a given tone	Press the
on	On soft key. A check mark displays in front of the option.
off	Off soft key. The check mark no longer displays.

The following options are available:

- ◆ **Error Tone:** sets whether or not the phone informs you when you make a mistake.
- ◆ **Minute Minder:** sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- ◆ **Connect Tone:** sets whether or not your phone beeps when your call is connected.

Display Settings

In this menu, you can change various settings for the display or backlight.

Wallpaper

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

- ◆ **Wallpaper List:** you can select a background image to be displayed on the idle screen.
- ◆ **Text Display:** you can specify whether or not the phone displays the time and date on the idle screen.
- ◆ **Text Color:** you can select the color of the text to be displayed on the idle screen.

To change the background image:

1. Scroll through the list by pressing the Up or Down key.

You have various preset images available. You can also select any images downloaded from the Internet or received in a multimedia message.

2. Press the **Select** soft key when the image you want highlights.
3. When the image displays, press the **Select** soft key to display it on the idle screen.

Front LCD Display

This menu allows you to select either the analog clock or the digital clock to be displayed on the external display.

Downloaded Graphics

This menu allows you to download new wallpapers from your service provider. Follow the online instructions shown on your display screen. Once you have downloaded graphics, they are added to your phone's list of wallpapers.

Menu Style

This menu allows you to select the menu display style. You can choose either Grid Style, Bar Style or Page Style.

Back Light

You can select the length of time the backlight is on for. The backlight turns on when you press a key or receive a call or message and remains on for the specified length of time.

Service Light

This menu allows you to select whether or not the service lights are used. It also allows you to select a color in which the service lights flash.

1. Select one of the seven color settings. When the phone is ready for use, the service lights flash in the appropriate color.
2. If you do not wish to use the service light, select Off.

Graphic Logo

This menu allows you to display your service provider's logo instead of its name.

- ◆ **Off:** the service provider's name displays in Idle mode.
- ◆ **On:** the service provider's logo stored in your phone displays in Idle mode; if no logo has been stored, the service provider's name displays.

Phone Settings

Greeting Message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

To	Press the
clear the existing message	C key and hold it down until the message is cleared.
enter a new message	appropriate alphanumeric keys.

To	Press the
change the text input mode	right soft key.

For further details, see “Entering Text” on page 53.

Language

You can select a display language. When the language option is set to Automatic, the language is automatically selected according to the language of the SIM card used.

Short Cut

The Navigation keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the Up or Down key and press the **Select** soft key.
2. Select the menu to be assigned to the key by pressing the Up or Down key.

To deactivate a shortcut key, select the None option.

3. Press the **Select** soft key to save the selection.

Extra Settings

You can turn the automatic redialing or answering features on or off.




To turn a feature	Press the
on	On soft key. A check mark displays in front of the option.
off	Off soft key. The check mark no longer displays.

The following options are available:

◆ **Auto Redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two attempts varies.

◆ **Active Folder:** when this option is checked, you can simply open the folder to answer a call. When it is unchecked, you must open the folder and press a key to answer a call, depending on the setting of the Anykey Answer option. See below.

◆ **Anykey Answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key. When this option is unchecked, you can only press the  key or **Accept** soft key.

Connection Settings

You can customize the profiles containing the settings for connecting your phone to the network. These settings are used for the WAP browser, sending MMS messages or emails.

Note: Your phone connects to the network by default. If you change the MMS settings without first checking with your service provider, the WAP, MMS and Email features may not work properly.

1. In Idle mode, press **Menu 9.4** for **Connection Settings**.
2. Select the profile you want to change.

For each profile, the following options are available:

- ◆ **Profile Name:** enter a name that you wish to assign to the profile.
 - ◆ **Homepage:** enter the address of the WAP homepage of your service provider.
 - ◆ **Bearer:** select the network bearer type for data transmission, either GPRS or DATA.
 - ◆ **Proxy Setting:** enter the IP address of the proxy server.
 - ◆ **User Name:** enter the user ID required to connect to the network.
 - ◆ **Password:** enter the password required to connect to the network.
 - ◆ **APN:** enter the access point name used for the address of the network.
 - ◆ **Proxy Status:** activate or deactivate the proxy server.
 - ◆ **Primary DNS:** enter the primary DNS (Domain Name System) address.
 - ◆ **Secondary DNS:** enter the secondary DNS address.
4. When you have finished, press the **OK** softkey.

Time and Date

You can change the settings for the time and date display.

1. In Idle mode, press **Menu 9.5** for **Time & Date**.
3. Select the setting you wish to change:
 - ◆ **Set Time:** You can enter the current time. You can choose the time format in the Time Format menu.

Note: Before setting the time, you must specify your time zone in the World Time menu.

- ◆ **Set Date:** You can enter the month, day, and year.

- ◆ **World Time:** You can find out what time it is in another part of world, using the Left and Right Navigation keys. The screen shows the: city name and time difference between the selected city and the city you have set your home time zone, current time and date and the city selected as your home time zone

Selecting the Home Time Zone

From the world map, select the city corresponding to your time zone by pressing the Left or Right Navigation key. The local date and time in the selected city display. Press the **Set** soft key.

- ◆ **Time Format:** You can change the time format to 12 Hours or 24 Hours.
- ◆ **Auto Update:** You can receive time information from your service provider's network.
 - **Off:** you need to manually set the time and date according to the current time zone using the Set Time menu.
 - **On:** the phone automatically updates the time and date according to the current time zone using the network service.
 - **Confirm First:** the phone asks for a confirmation before the update.

Note: Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.

Network Services

You can customize the settings for network features, such as call forwarding, call barring, and call waiting.

Call Forwarding

Call forwarding enables incoming calls to be rerouted to a number that you specify. For example, you could forward your business calls to a colleague while you are on holidays.

You can use the following options to forward voice calls and/or data calls:

- ◆ **Forward Always:** all calls are forwarded.
- ◆ **Busy:** calls are forwarded when you are already on another call.
- ◆ **No Reply:** calls are forwarded when you do not answer the phone.
- ◆ **Unreachable:** calls are forwarded when you are not in an area covered by your service provider.
- ◆ **Cancel All:** all call forwarding options are canceled.

To set your call forwarding options:

1. Select a call forwarding option by pressing the Up or Down key, and then press the **Select** soft key.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.

To	Press the
activate call forwarding	Activate soft key.
change the number to be called	Change soft key.
deactivate call forwarding	Remove soft key.

3. Enter the number to which the calls are to be forwarded and press the **OK** soft key.

To enter an international code, press the **0** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

You can deactivate all call forwarding settings by selecting the Cancel All option.

Call Barring

The Call Barring service allows you to restrict different types of calls from being made or received. For example, you could restrict all voice calls being made to International phone numbers. For each option, you can restrict whether to ban voice calls or data calls. The following call-barring options are available:

- ◆ **All Outgoing:** bars this phone from making outgoing calls.
- ◆ **International:** bars this phone from making calls to international numbers.
- ◆ **International Except to Home:** bars this phone from making international calls except to home.
- ◆ **All Incoming:** blocks all incoming calls.
- ◆ **Incoming While Aboard:** blocks all incoming calls when aboard
- ◆ **Cancel All:** clears your call barring options.
- ◆ **Change Barring Password:** allows you to change the password used to set your call barring options.

To set your call barring options:

1. Select the type of calls you want to bar by pressing the Up or Down key, and then press the **Select** soft key.
2. Select whether you want to bar **Voice Calls** or **Data Calls**, and then press the **Select** soft key.

The screen informs you whether call barring is activated or deactivated.

3. Activate or deactivate the call barring feature as necessary by using the **Activate** or **Deactivate** soft key respectively.
4. Enter your phone password. For more details about your phone's password, see See "Change Password" on page 141.
 - ◆ To return to the previous screen, press the **Exit** soft key.
 - ◆ You can also deactivate all call barrings by selecting the **Cancel All** option.

Call Waiting

The Call Waiting service informs you when someone is trying to reach you during another call.

You can specify individual call waiting option for voice calls and/or data calls:

To set your call waiting options:

1. Select the type of calls, voice or data, to which you want to apply the call waiting option by pressing the Up or Down key, and then press the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.

Network Selection

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between them.

To automatically or manually connect to a network when roaming:

1. When Network Selection displays, press the **Select** soft key.
2. Press the Up or Down key until the appropriate option highlights and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to step 3.

3. Press the Up or Down key until the network you want highlights and then press the **OK** soft key.

You are connected to that network.

Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available:

- ◆ **Default:** the default setting provided by the network is used.
- ◆ **Hide Number:** your number does not display on the other person's phone.
- ◆ **Send Number:** your number is sent each time you make a call.

Closed User Group

This network service allows incoming and outgoing calls to be restricted to a selected user group. You can create up to ten user groups. For details on how to create and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

Activating a Closed User Group

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key:

To	Press the
scroll through the existing CUG indexes	Up or Down key
add a new CUG index	Options soft key, select the Add option and enter the index.
delete a CUG index	Options soft key and select the Delete option.
activate a CUG index	Options soft key and select the Activate option.

- ◆ **Index List:** lets you list, add or delete CUG index numbers. The list of current CUG indexes appears. Add a new CUG index as advised by your service provider or delete a selected group.
- ◆ **Outside Access:** lets you enable or disable calls to numbers other than those in the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.
- ◆ **Default Group:** you may set a default CUG with your service provider. If you have done so, you can enable the Default Group option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.
- ◆ **Deactivate:** deactivates the CUG function. This option appears only when the default group is enabled or a CUG index is selected.

Security

The Security feature enables you to restrict the use of your phone to others and the types of calls.

Various codes and passwords are used to protect the features of your phone. They are described in the following sections. Also see pages “Access Codes” on page 147.

PIN Check

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- ◆ **Disable:** the phone connects directly to the network when you switch it on.
- ◆ **Enable:** you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone Lock

When the Phone Lock feature is enabled, the phone is locked and you must enter an 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see the **Change Password** menu (**Menu 9.5.4**) below.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

- ◆ **Disable:** you are not asked to enter the phone password when you switch the phone on.
- ◆ **Enable:** you are required to enter the phone password when you switch the phone on.

Change Password

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy

Using this menu, you can lock your contents, such as multimedia messages, photos, voice memo, downloaded images and sounds. Once you have locked the contents, you must enter the phone password to access the associated menus.

To	Press the
select an item to lock	Up or Down key. To lock all of your contents, select All.
add or remove a check mark	Center navigation key
lock the marked items	OK soft key.

When the phone asks for the phone password, enter the password and press the **OK** soft key.

Note: The password is preset to “00000000” at the factory. To change this password, see page 141.

SIM Lock

When the SIM Lock feature is enabled, your phone only works with the current SIM card.

- ◆ To enable the SIM lock, you must enter the current SIM lock code. Once you have entered the SIM lock code, you must confirm by entering it again.
- ◆ To unlock your SIM card, you must re-enter the SIM lock code.

FDN Mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- ◆ **Disable:** you can call any number.
- ◆ **Enable:** you can only call phone numbers stored in the FDN address book. The FDN address book is a separate address book and is managed separately from the normal Address Book. Address Book. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display. Furthermore, PIN2 is specific to a SIM card and you will need to ask the issuer of the SIM card for the PIN2 code.

Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Reset Settings

You can easily reset your phone to its default settings. To reset your phone:

1. Select the Reset Settings menu.
2. Enter the 8-digit phone password and press the **OK** soft key.

Note: : The password is preset to “00000000.” To change this password, see page 141.

Solving Problems

If you are experiencing problems with your phone, perform the following simple checks before contacting a service professional. This may save you the time and expense of an unnecessary service call.

When you switch your phone on, the following messages may appear:

Insert SIM Card

- ◆ Check that the SIM card is correctly installed.

Phone Locked Enter Password

- ◆ The automatic locking function has been enabled. You must enter the phone's password before you can use the phone. The factory preset code is "00000000".

Enter PIN

- ◆ You are using your phone for the first time. You must enter the Personal Identification Number (PIN) supplied with the SIM card.
- ◆ The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN Check** menu (**Menu 9.7.1**).

Enter PUK


- ◆ The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your service provider. There is a PUK1 and a PUK2 code. Please make sure you know which one is locked and apply the correct PUK code.

“No service,” “Network failure” or “Not done” displays


- ◆ The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.

- ◆ You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- ◆ Have you pressed the  key?
- ◆ Are you accessing the right cellular network?
- ◆ Is Call Barring turned on? (see “Call Barring” on page 78 for more details)

Your correspondent cannot reach you

- ◆ Is your phone switched on (the  key pressed for more than one second)?
- ◆ Are you accessing the right cellular network?
- ◆ Is Call Barring turned on? (see “Call Barring” on page 78 for more details)
- ◆ Has your phone been call forwarded to another number?




Your correspondent cannot hear you speaking

- ◆ Have you switched off the microphone?
- ◆ Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

The phone starts beeping and “**Warning** Low Battery” flashes on the display

- ◆ Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- ◆ Check the signal strength indicator on the display (); the number of bars indicates the signal strength from strong () to weak ().
- ◆ Try moving the phone slightly or move closer to a window if you are in a building.

No number is dialed when you recall an Address Book entry

- ◆ Check that the number has been stored correctly, by using the Address Book Search feature.
- ◆ Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- ◆ the model and serial numbers of your phone
- ◆ your warranty details
- ◆ a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

When requested for any of the codes explained below, enter the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the **C** key one or more times until the incorrect digit is cleared and then continue entering the correct code. The access codes, except for the PUK and PUK2 codes, can be changed using the Security menu (**Menu 9.7**). See page 139 for further details.

Important! Avoid using access codes resembling emergency numbers, such as 911, so that you do not accidentally dial an emergency number.

Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorized use. The phone password is supplied with the phone and is preset to “00000000” at the factory.

To	See
activate/deactivate the Phone Lock feature	“Phone Lock” on page 140 (Menu 9.7.3).
change the phone password	“Change Password” on page 141 (Menu 9.7.4).

PIN

The Personal Identification Number or PIN (4 to 8 digits) protects your SIM card against unauthorized use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To	See
activate/deactivate the PIN Check feature	page 140 (Menu 9.7.1).
change the PIN	page 140 (Menu 9.7.2).

PUK

The 8-digit PUK (PIN Unblocking Key) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN:

1. Enter the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the Confirm New PIN message displays, enter the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

PIN2

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, see page 142 (**Menu 9.7.8**).

PUK2

The 8-digit PUK2 (PIN Unblocking Key 2), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Enter the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the Confirm PIN2 message displays, enter the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the FCC is 1.6W/kg.*

SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

-
- *. In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Before a new model phone is available for sale to the public, it must be tested and certified by the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

For Body Operation

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung-supplied or approved accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum from the body.

The minimum distance from the body for this model phone is written in the FCC certification information. Non-compliance with the above conditions may violate FCC RF exposure guidelines.

For more Information concerning exposure to radio frequency signals, see the following websites:

- ◆ Federal Communications Commission (FCC)
 - <http://www.fcc.gov>
- ◆ Cellular Telecommunications Industry Association (CTIA):
 - <http://www.wow-com.com>
- ◆ U.S. Food and Drug Administration (FDA)
 - <http://www.fda.gov/cdrh/consumer>

- ◆ World Health Organization (WHO)
 - <http://www.who.int/peh-emf/en>

Precautions When Using Batteries

- ◆ Never use any charger or battery that is damaged in any way.
- ◆ Use the battery only for its intended purpose.
- ◆ If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ◆ Battery charging time depends on the remaining battery charge, the type of battery and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- ◆ If left unused, a fully charged battery will discharge itself over time.
- ◆ Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source.
- ◆ Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ◆ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ◆ Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- ◆ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Shortcircuiting the terminals may damage the battery or the object causing the short-circuiting.
- ◆ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ◆ should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- ◆ should not carry the phone in a breast pocket.
- ◆ should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage

and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions.

Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the <Send> key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other Important Safety Information

- ◆ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ◆ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ◆ Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- ◆ For vehicles equipped with an air bag, remember air bag inflates with great force. Do not place installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed, and the air bag inflates, serious injury could result.
- ◆ Switch your phone off before boarding an aircraft. The use of wireless phones in aircraft is illegal unless permitted and may be dangerous to the aircraft's operation.
- ◆ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, legal action, or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions help you fulfill any warranty obligations and allow enjoy this product for many years:

- ◆ Keep the phone and all its parts and accessories out of reach of small children.
- ◆ Keep the phone dry. Precipitation and humidity contain minerals that may corrode electronic circuits.
- ◆ Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.

- ◆ Do not use or store the phone in dusty or dirty areas. Moving parts may become damaged or clogged.
- ◆ Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- ◆ Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- ◆ Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- ◆ Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- ◆ Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- ◆ Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- ◆ Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- ◆ If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

FCC Notice

Cautions

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/ TV technician for help.

Appendix A: CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on safety

standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg^{**}. SAR Tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified by the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR values of this model phone as reported to FCC are:

◆ Head: 0.681 W/kg and Body-worn: 0.802 W/kg in GSM 850

◆ Head: 0.774 W/kg, Body-worn: 0.629 W/kg in GSM 1900.

Body-worn operations are restricted to Samsung-supplied, approved or non-Samsung designated accessories that have no metal and must provide at least 1.5cm separation between the device, including its antenna whether extended or retracted, and the user's body. Non-

^{**}. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

compliance to the above restrictions may violate FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone (P207) is on file with the FCC and can be found under the Display Grant section of [http:// www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid).

Appendix B: Safe and Responsible Wireless Phone Use

Cellular Telecommunications & Internet Association

“Safety is the most important call you will ever make.”

A Guide to Safe and Responsible Wireless Phone Use

Tens of millions of people in North America today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice-almost anywhere, anytime with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, North Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense-keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the

speed limit. It means using seat belts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need. When it comes to the use of wireless phones, safety is your most important call.

Wireless Phone “Safety Tips”

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a to do list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip-dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix-they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a Good Samaritan in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted an educational outreach program to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely. The wireless industry reminds you to use your phone safely when driving.

Cellular Telecommunications & Internet Association For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

Appendix C: Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell, mobile, or PCS phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

2. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers

have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

3. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- ◆ Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- ◆ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ◆ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ◆ National Institute for Occupational Safety and Health
- ◆ Environmental Protection Agency Federal Communications Commission
- ◆ Occupational Safety and Health Administration
- ◆ National Telecommunications and Information Administration
- ◆ The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

4. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies

and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

5. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

6. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

7. Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

8. Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free”

kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

9. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

10. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

11. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is

directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

12. Which other federal agencies have responsibilities related to potential RF health effects?

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations.

FCC RF Safety Program:

<http://www.fcc.gov/oet/rfsafety/>

Environmental Protection Agency (EPA):

<http://www.epa.gov/radiation/>

Occupational Safety and Health Administration's (OSHA):

<http://www.osha-slc.gov/SLTC/radiofrequencyradiation/index.html>

National Institute for Occupational Safety and Health (NIOSH):

<http://www.cdc.gov/niosh/emfpg.html>

World health Organization (WHO):

<http://www.who.int/peh-emf/>

International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

National Radiation Protection Board (UK):

<http://www.nrpb.org.uk>

Updated 4/3/2002: US Food and Drug Administration

<http://www.fda.gov/cellphones>

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG ELECTRONICS CANADA INC. (SAMSUNG) warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-SAMSUNG. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG

MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- ◆ THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- ◆ WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- ◆ DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- ◆ THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- ◆ COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS

OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2004, 2005 Samsung Electronics Canada, Inc.. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

Index

A

- Alarm •, 89
- Alert type •, 96, 97, 126
- Alphabet mode, text input •, 48
- Answering
 - call •, 19
 - second call •, 27
- Anykey answer •, 132
- Auto redial •, 132

B

- Background image •, 129
- Backlight
 - description •, 10
 - time, set •, 130
- Battery
 - caring •, 152
 - charging •, 14
 - installing •, 14
 - low indicator •, 16
 - removing •, 12
- Brightness, display •, 130
- Browser, WAP •, 109

C

- Calculator •, 95
- Calendar memos
 - copying •, 92
 - deleting •, 92
 - viewing •, 91
 - writing •, 91
- Call records
 - missed •, 20, 66
- Call time •, 67
- Caller groups
 - editing •, 122
 - searching •, 121
- Caller ID •, 138
- Calls
 - answering •, 19, 27

- barring •, 136
- ending •, 17
- forwarding •, 134
- holding •, 24
- making •, 17
- redialing •, 18
- waiting •, 27, 137

- Camera
 - recording videos •, 105
 - taking photos •, 98
 - viewing photos •, 104
- Characters, enter •, 30
- Charging battery •, 14
- Closed User Group, 138
- Conference call •, 28
- Connect tone •, 128

D

- Dangerous areas •, 154
- Deleting
 - calendar memos •, 92
 - Phone Book •, 118
 - photos •, 105, 106
 - tasks •, 94
 - voice memos •, 108
- Delivery reports, message •, 72
- Display
 - backlight •, 10
 - external •, 11
 - icons •, 9
 - layout •, 8
 - settings •, 128
- Downloaded Graphics, 129
- DTMF tones, send •, 26

E

- Earpiece volume •, 19
- Error tone •, 128
- External display •, 11

F

- FDN (Fixed Dial Number) mode •, 142

Folder tone •, 127
Forwarding
 calls •, 134
Front LCD Display •, 11
Funbox •, 109

G

Games •, 86, 88, 113
Graphic logo •, 130
Graphics, 88, 113

H

Health and safety •, 150
Holding, calls •, 24

I

Icons, description •, 9
International calls •, 17

J

Java service •, 86

K

Key volume •, 19
Keypad tones
 selecting •, 127
 sending •, 26
Keys
 description •, 6

L

Language, select •, 131
Last number, redial •, 18
Locking
 phone •, 140
Low battery indicator •, 16

M

Memory status

 downloaded items •, 88, 114
 Phone Book •, 124
 voice memos •, 108
Menu style •, 129
Menus
 accessing •, 51
 list •, 52
Message tone •, 127
Messages, 69
Messaging, 69
Minute minder •, 128
Missed calls •, 20, 66
Multi-party calls •, 28
Muting
 all sounds •, 25
 key tones •, 26
 microphone •, 25

N

Names
 entering •, 30
 searching/dialing •, 121
Navigation keys
 short cuts, 131
Network selection •, 137
Network services •, 134
Numbers, phone
 searching/dialing •, 121
 storing •, 115

O

On/off switch, phone •, 16
Online Album, 104

P

Password, phone •, 141, 147
Phone
 display •, 8
 icons •, 9
 keys •, 6
 layout •, 5
 locking •, 140
 password •, 147

- resetting •, 143
- switching on/off •, 16
- Phone Book
 - copying •, 118
 - deleting •, 118, 123
 - editing •, 117
 - options •, 117
 - searching/dialing •, 121
 - storing •, 115
- Phone while driving •, 153
- Photos
 - deleting •, 100
 - taking •, 98
- PIN
 - changing •, 140
 - description •, 147
- PIN2
 - changing •, 142
 - description •, 148
- Power on/off tone •, 128
- Privacy •, 141
- PUK •, 148
- PUK2 •, 149

R

- Radio frequency •, 150
- reception, 158
- Recording
 - videos •, 105
 - voice memos •, 107
- Redialing
 - automatically •, 132
 - manually •, 18
- Resetting phone •, 143
- Ring tone •, 126
- Ring type •, 96, 126
- Ring volume •, 126
- RingtonesSounds
 - Ringtones, 112
- Roaming •, 137

S

- Safety
 - information •, 150

- precautions •, 5
- Schedule •, 90
- SDN (Service Dialing Numbers) •, 125
- Searching, Phone Book •, 121
- Security, 139
 - Changing Passwords, 141
 - Locking
 - media contents •, 141
 - Phone Lock, 140
 - PIN Check, 140
 - SIM Lock, 142
- Security, calls •, 139
- Service light •, 130
- Short Cut, 143
- Silent mode •, 21
- SIM card
 - installing •, 12
- SIM Lock, 142
- Soft keys •, 23
- Sound settings •, 126
- Switching on/off
 - microphone •, 25
 - phone •, 16

T

- T9 mode, text input •, 46
- Tasks, to do list
 - creating •, 92
 - editing •, 93
- Text input mode •, 30
- Text, enter •, 30
- Time format •, 95
- Tone
 - connect •, 128
 - error •, 128
 - keypad •, 127
 - message •, 127
 - minute minder •, 128
 - power on/off •, 128
 - ring •, 126
 - slider •, 127
- Travel charger•, 14

U

uses, 158

V

Vibration •, 21, 127

View, 97

Voice memos

deleting •, 108

playing •, 108

recording •, 107

Voice server •, 79

VoiceMode, 31

Adapt, 32

Reset Adaptation, 34

Volume, adjust

earpiece •, 19

keypad tone •, 19

ring •, 126

W

Waiting call •, 27, 136, 137

Wallpaper •, 129


WAP browser






cache, clear •, 112

favorites •, 112

Tri-Band SGH-P207 EDIGE Telephone Quick Reference Card



Access the Menu Functions	<ol style="list-style-type: none">1 Press the Menu softkey.2 Scroll using the Up and Down keys through the list of the menus until you reach the menu you want.3 Press the Select softkey.4 Scroll using the Up and Down keys through the list of the options until the one you want is selected.5 Press the Select softkey.
---------------------------	---

Each of the two softkeys ( and ) perform the function indicated by the text above it on the bottom line in the display.

Switch On/Off	Press and hold the  key.
Make a Call	<ol style="list-style-type: none">1 Enter the number.2 Press the  key.
End a Call	Briefly press the  key.
View Missed Calls Immediately After Missing Them	<ol style="list-style-type: none">1 Open the phone and press the View softkey.2 Scroll using the Up and Down keys through the missed calls.3 To return the call, press the  key.
Answer a Call	Open the phone or Press the  key.



Adjust the Volume	Press the Λ or V key on the left side of the phone.
Choose the Alert Type	<ol style="list-style-type: none"> Select the Alert Type menu option (Menu 9.1.4). Select an option: <ul style="list-style-type: none"> Light Only Melody Vibration Vibration+Melody Press the Select softkey.
Take a Photo	<ul style="list-style-type: none"> With the folder open <ol style="list-style-type: none"> Press and hold the Camera key to start Preview Mode. Press the center navigation key or Camera key to take a picture. Press the Save softkey. With the folder closed <ol style="list-style-type: none"> Press and hold the Camera key to start Preview Mode. Press the Camera key to take a picture.

Store Numbers in Address Book	<ol style="list-style-type: none"> Enter the number and press the Save softkey. Select an icon. Press the Select softkey. Select a memory. Press the Select softkey. Enter the name. Press the OK softkey. Press the  key to return to Idle Mode.
Search for a Number in Address Book	<ol style="list-style-type: none"> Press the Names soft key. Select the Search option. Enter the first few letters of the name. To scroll through the names, press the Up or Down key. Press the Select softkey. To scroll through the numbers, press the Up or Down key. Press the  key to dial.