

SGH-A237 Series

**P O R T A B L E Q u a d - B A N D
M O B I L E P H O N E**

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

| | |
|-----------------------|-----------------------|
| Headquarters: | Customer Care Center: |
| 1301 E. Lookout Drive | 1000 Klein Rd. |
| Richardson, TX 75082 | Plano, TX 75074 |
| Toll Free Tel: | 1.888.987.HELP (4357) |

Internet Address: <http://www.samsungusa.com>

© 2008 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungwireless.com/support

GH68-18834A v1

Printed in China

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started 4

| | |
|------------------------------|---|
| Activating Your Phone | 4 |
| Low Battery Indicator | 6 |
| Powering On or Off the Phone | 7 |
| Setting Up Your Voice Mail | 7 |

Section 2: Understanding Your Phone 9

| | |
|---------------------------------|----|
| Features of Your Phone | 9 |
| Open View of Your Phone | 9 |
| Closed View of Your Phone | 11 |
| Internal Display Layout | 12 |
| Selecting Functions and Options | 12 |
| Command Keys | 13 |

Section 3: Call Functions 15

| | |
|---------------------------|----|
| Making a Call | 15 |
| Adjusting the Call Volume | 16 |
| Answering a Call | 16 |
| Recent Calls | 17 |
| Call Time | 17 |
| Data Volume | 18 |
| Data Call Time | 18 |
| Silent Mode | 18 |
| Options During a Call | 18 |

Section 4: Menu Navigation 21

| | |
|-----------------|----|
| Menu Navigation | 21 |
| My Menu | 22 |

Section 5: Entering Text 23

| | |
|------------------------------|----|
| Changing the Text Input Mode | 23 |
| Using T9 Mode | 24 |
| Using Alphabet Mode | 25 |
| Using Symbols | 26 |
| Using Numbers | 26 |

Section 6: Messaging 27

| | |
|-------------------------------------|----|
| Types of Messages | 27 |
| Creating and Sending New Messages | 27 |
| Retrieving New Messages | 30 |
| Using Message Options | 31 |
| Using Instant Messenger (IM) | 31 |
| Starting your Instant Messenger | 32 |
| Using the Instant Messenger Options | 32 |
| Using Message Templates | 32 |
| Message Settings | 33 |
| Used Space | 34 |

Section 7: Understanding Your Address Book 35

| | |
|-----------------------------------|----|
| Using Contact List | 35 |
| Adding a New Contact | 36 |
| Group Settings | 38 |
| Speed Dial List | 38 |
| Finding My Own Phone Number | 39 |
| Reject List | 40 |
| Service Number | 40 |
| FDN Contacts | 40 |

Section 8: Changing Your Settings 42

| | |
|------------------------|----|
| Quick Tips | 42 |
| Sound Profile | 42 |
| Set Display | 44 |
| Set Time & Date | 46 |
| Set Phone | 47 |
| Set Calls | 50 |
| Bluetooth | 52 |
| Set Applications | 53 |
| Reset Settings | 54 |
| Used Space | 54 |

Section 9: My Stuff 56

| | |
|----------------------|----|
| Audio | 56 |
| Graphics | 58 |
| Used Space | 59 |
| Games & Apps | 59 |
| Camera | 59 |
| Alarms | 61 |
| Calendar | 62 |
| Notes | 65 |
| Calculator | 65 |
| Tip Calculator | 66 |
| Converter | 66 |
| Timer | 66 |
| Stopwatch | 66 |
| World Time | 67 |

Section 10: WAP 68

| | |
|------------------------------------|----|
| Launching the WAP Browser | 68 |
| Access a WAP Site | 68 |
| Using Favorites | 69 |
| Downloading Multimedia Files | 70 |
| Clearing the Cache | 71 |

| | |
|--|-----------|
| Section 11: Accessibility | 73 |
| TTY Settings* | 73 |
| Section 12: Health and Safety Information | 74 |
| Health and Safety Information | 74 |
| Samsung Mobile Products and Recycling | 75 |
| UL Certified Travel Adapter | 75 |
| Consumer Information on Wireless Phones | 76 |
| Road Safety | 81 |
| Responsible Listening | 83 |
| Operating Environment | 84 |
| Using Your Phone Near Other Electronic Devices | 85 |
| Potentially Explosive Environments | 86 |
| Emergency Calls | 86 |
| FCC Notice and Cautions | 87 |
| Other Important Safety Information | 87 |
| Product Performance | 88 |
| Availability of Various Features/Ring Tones | 89 |
| Battery Standby and Talk Time | 89 |
| Battery Precautions | 89 |
| Care and Maintenance | 90 |
| Section 13: Warranty Information | 92 |
| Standard Limited Warranty | 92 |
| Index | 96 |

Section 1: Getting Started


This section describes how to start using your phone by activating your service and setting up your voice mail.

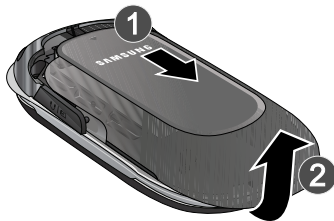 
Activating Your Phone

When you subscribe to a cellular network, a plug-in SIM card is provided loaded with your subscription details, such as your PIN and other optional services.

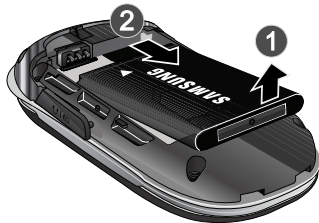 
Removing the Battery

Note: If the battery is removed from the phone, you may need to reset the time and date.

1. If necessary, power-off the phone by holding down the  key until the power-off image displays.
2. Remove the battery cover by pressing the battery cover lock down and sliding the cover away, as shown.



3. Remove the battery by lifting the battery end at the bottom of the phone and pulling outward, as shown.



Installing the SIM Card

Important: The plug-in SIM card and its contacts can be easily damaged by scratches or bending. Use caution when inserting or removing the card and keep all SIM cards out of reach of children.

With the battery cover and the battery removed, make sure the gold contacts of the SIM card face into the phone, then slide the SIM card into the socket.



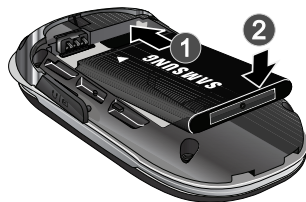 
Removing the SIM Card

To remove the SIM card, slide it away from socket. See the following illustration.



Installing the Battery

1. Align the battery tabs with the slots at the bottom of the phone.
2. Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.



3. With the battery in position on the phone, place the cover back on the handset and slide it in until it clicks.



Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. Use the travel adaptor to charge the battery, and use only Samsung approved batteries and chargers.

Note: You must fully charge the battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.

Note: For connection to an electrical supply not located in the U.S., you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

1. Plug the connector of the wall charger into the jack on the side of the phone.







2. Plug the adaptor into a standard AC wall outlet. When charging is finished, unplug the adaptor from the power outlet.
3. Remove the adaptor from the charger port.

Note: You must unplug the adaptor before removing the battery from the phone during charging to avoid damage.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Battery Low” message repeats at regular intervals on the display. The backlight turns off to conserve the remaining battery power. When the battery level becomes too low, the phone automatically turns off.

Powering On or Off the Phone




1. Open the phone.
2. Press and hold the  key or the  key until the phone power-on screen displays.
3. If the phone asks you to enter a password, enter a password and press the **OK** soft key or the  key. For more information, refer to “*Change Phone Password*” on page 49.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For more information, see “*Check PIN Code*” on page 48.

The phone searches for your network and after finding it, the Idle screen displays. Now, you can make or receive calls.

Note: The display language is preset to Automatic at the factory. To change the language, use the Language menu. For more information, refer to “*Language*” on page 47.

5. When you wish to switch off the phone, press and hold the  key until the power-off image displays.



Setting Up Your Voice Mail


1. In Idle mode, press the **Menu → Messaging → Messaging Settings** and press **Select** soft key or the  key.
2. Highlight **Voice Mail** and press the  key.
3. Highlight **Connect to Voice Mail** and press the **Select** soft key or the  key.
4. When connected, follow the voice prompts from the voice mail center.

Tip: To quickly access your Voice Mail, press and hold the  key.

Changing the Voice Mail Number

Your SIM card gives your default service number of the voice mail center. However, you may need to change the number. Use the following procedures to change your voice mail number.

1. In Idle mode, press the **Menu → Messaging → Messaging Settings → Voice Mail** and press the **Select** soft key or the  key.
2. Highlight **Voice Mail Number** and press the **Select** soft key or the  key.

3. Highlight **Voice Mail** and press the **Options** soft key and highlight **Edit**. Press the **Select** soft key.
4. In the **Change Name** field, enter the new name and use the **Down** Navigation key to move to the next field.
5. **Edit Number** is highlighted. Enter your new Voice Mail number and press the **Options** soft key and highlight the **Save** option. Press the **Select** soft key to save.
6. Press the  key to return to **Idle** mode.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

User friendly, menu driven access to features and options.

- Instant Messenger capability
- Multimedia capability
- Speakerphone capability
- Featured applications provide alarms, calendar, calculator, record audio, converter, timer, stopwatch, and world time.

Open View of Your Phone

 
The following illustrations show the main elements of your phone:



Keys

The following list correlates to the open and front view illustrations.

1. **Display:** This screen displays useful information needed to operate your phone.

2. **Soft key:** Performs the functions indicated by the screen text on the bottom of the display
3. **Send key:** Allows you to place or receive a call and to power On when your phone is off. In standby mode, press the key once to access the Recent Call log. If you press and hold the key down, you will initiate the most recent call from the Recent Call log. When your phone is turned off, press and hold this key for a few seconds to power your phone On.
4. **Voicemail key:** Press and hold the  key to automatically dial your voicemail.
5. **Alphanumeric keypad:** Use these keys to enter numbers, letters and characters.
6. **Microphone:** The Microphone allows the other callers to hear you clearly when you are speaking to them.
7. **Special Function keys:** Asterisk/Shift key-enters the [*] character for calling features. In text mode, press to change the character input type. Pound/Space/Silent Mode key-enters the pound [#] character for calling features. In text entry mode, press to enter a space between characters. Press and hold to place handset in Silent mode.
8. **Clear key:** Deletes characters from the display when you are in text entry mode. When in a main menu, press to return to the previous menu. Press briefly in idle mode to display the calendar in month view.
9. **Power on/off/Menu Exit key:** Ends a call. Press and hold this key for a few seconds to power your phone On or Off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to reject call.
10. **WAP Browser/Menu confirm key:** If you press once in Idle mode, the WAP browser will launch. When navigating through a menu accepts the highlighted choice in the menu.
11. **Navigation keys:** This key allows you to scroll through phone menu options and provides a shortcut to phone functions from standby mode.
12. **Earpiece:** Used to listen to audio from your phone.

Closed View of Your Phone



3. **Front LCD:** Your phone has an external display on the front of the phone. It indicates when you have an incoming call or message. It also displays date, time, reception, battery power, and any icons associated with alerts, such as messages, or a set alarm.
4. **Power Interface Connector/headset jack:** The power interface connector is used to plug in the charging accessories and the headset cord.

Keys

The following list correlates to the open and front view illustrations.

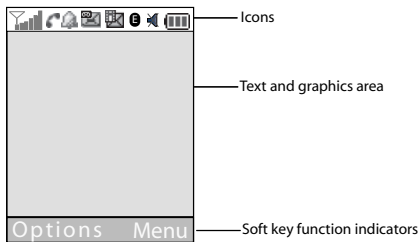 
1. **Camera lens:** the camera lens is used for taking photos.
2. **Volume/Menu Navigation key:** Allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down. You can reject the call by pressing and holding the down key.

Backlight

A back light illuminates the display and the keypad when you press any key or open the phone. It turns off when no keys are pressed within a given period of time, and/or dims the light, depending on the settings in the **Backlight** menu.

Internal Display Layout

The display has 3 areas:



Icons



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Appears when a new text message has been received.



Appears when a new voice mail has been received.



Appears when a new multimedia message has been received.



Appears when you set an alarm to ring at a specified time. For more information, refer to “Alarms” on page 61.



Appears when there is no network coverage available.



Appears when a call is in progress.



Appears when you are connected to a Edge service.



Appears when the Call Forwarding feature is active. For more information, refer to “Call Forwarding” on page 51.



Appears when Silent, Vibration or Mute is active.



Appears when Bluetooth wireless technology is active.




Shows the level of your battery. The more bars you see, the more power you have remaining.

Selecting Functions and Options

Your phone offers a set of functions that can be customized for your ease and specific needs. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each





menu and sub-menu allows you to view and alter the settings of a particular function.

In some functions, you may be asked for a password or PIN. Enter the code and press the **Select** soft key or the  key.



When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Selecting Options

To view the various functions and options available and to select the one you want:

- Press the appropriate soft key.
- To select the function displayed or the option highlighted, press the **Select** soft key or the  key.
- To view the next function or highlight the next option on a list, press the **Down** Navigation key or the  key on the left side of the phone.
- To move back to the previous function or option on a list, press the **Up** Navigation key or the  key on the left side of the phone.
- To move back up one level in the menu structure, press the **Back** soft key.
- To exit the menu structure without changing the settings, press the  key.

Command Keys



Functions for the soft keys are defined by what appears above each in the display. There are two soft keys, the left soft key  and the right soft key .

Soft Keys

The roles of the soft keys vary depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.



Left Soft Key

Some functions of the left soft key are as follows.

 

- In the Idle screen, press the **Left** soft key  to access **Options**.
- When in a menu mode the **Left** soft key  function is **Select**.

 
 
 

Right Soft Key

Some functions of the right soft key are as follows.


- In the Idle screen, press the **Menu** soft key  to open the **Menu** screen.
- When in a menu mode the right soft key  function is **Back**.




Clear Key

- The **CLR** key  is used to erase or clear numbers, text, or symbols from the display. You can also use  to return to a previous menu or to return to standby mode from any menu.


- If you enter an incorrect character, briefly press  to backspace (and delete) the character.
- To erase the entire sentence, press and hold .
- To back up one menu level, briefly press .
- In the Idle mode, you can access Calendar by pressing the  key.







End Key

The **End** key  is used to turn on/off your phone, disconnect calls, and return to the standby mode.

- Press and hold the **End** key  to turn on your phone.
- Briefly press  once to disconnect a call.
- Press  to return to standby mode from any menu, or to cancel the last input.

Send Key

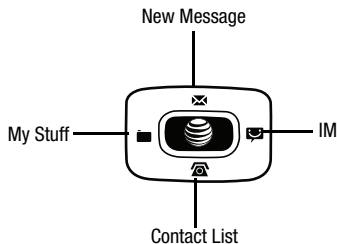 
The **Send** key  is used to turn on your phone, answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

- Press  and hold to turn on your phone.
- Press  once to answer calls.
- Enter a number and briefly press  to make a call.
- Briefly press  in standby mode to display a list of recent calls to and from your phone.
- Press  twice in standby mode to call the most recent number.
- Press  to pick up a waiting call.


Navigation Key

Use the directional keys on the navigation key to browse menus, sub menus, and lists. Press the **Up** or **Down** Navigation when jumping to highlighted links on the web.

Each key also acts as a shortcut to launch applications.




Speakerphone Key

During a call, press the  key to enable the speakerphone option. Use the volume keys (located on the left side of your phone) to adjust the volume.

Section 3: Call Functions



This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

Making a Call

When the Idle screen displays, enter the area code and phone number, and press the  key.

Note: When you activate the Auto Redial option in the **Set Calls > Voice Call > Auto Redial**, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “Set Calls” on page 50.

 
 
 
Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number.
Press the  key.


Correcting a Dialed Number

Use the following steps to correct a mis-typed entry when dialing.

1. After dialing a number
 - To clear the last digit displayed, press the  key.

- To clear another digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to be cleared. Press the  key.
 - To enter a missing digit press the **Left** or **Right** Navigation key until the cursor is in position and enter the digit.
 - To clear the whole display, press and hold the  key.
2. Press the  key to return to the Idle screen.

Ending a Call


When you want to finish your call, briefly press the  key or simply close the flip.

Redialing the Last Number

All incoming, outgoing and missed calls are listed in the **Recent Calls** Menu. If the number or caller is listed in your Address Book, the name associated displays.

To access the **Recent Calls** menu:

1. In Idle mode, press **Menu → Recent Calls**.
2. Use the **Up** and **Down** Navigation keys to scroll through the **Recent Calls** options.
 - All Calls
 - Missed Calls

- Calls Made
 - Calls Received
 - Delete All
 - Call Time
 - Data Volume
 - Data Call Time
3. Use the **Up** and **Down** Navigation keys to scroll through the numbers until the number you want highlights.
 4. To dial the number, highlight the number and press the  key.

Making a Call from the Address Book



You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.

Once you have stored a number in the **Address Book**, you can dial it by pressing a few keys using the **Speed Dial** feature.

For further details about the **Address Book** feature, see “*Finding an Address Book Entry*” on page 35.

Adjusting the Call Volume



During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.

Press the  key to increase the volume level and the  key to decrease the level.


In Idle mode, you can also adjust the ringer volume using these keys.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Address Book.

1. From the Idle Screen press the  key or the **Accept** soft key to answer the incoming call.
2. If the **Any Key** option in the **Call Answer** menu is activated (**Menu** → **Settings** → **Set Calls** → **General** → **Call Answer**), you can press any key to answer a call except the  key and the **Reject** soft key.

Note: To reject an incoming call, press and hold either the up or down volume key on the left side of the phone before opening the phone. A quick press of side volume key silences ringer on incoming call.

3. End the call by closing the phone or by pressing the  key.

Note: You can answer a call while using the Address Book or menu features. After ending the call, the phone returns to the function screen you were using.

Recent Calls

The phone stores the numbers of the calls you've dialed, received, or missed in the **Recent Calls** menu. If the number or caller is listed in your Address Book, the name associated displays.

Viewing Missed Calls

The number of calls you have missed displays on the Idle screen when a call is missed. To view the number details, use the following steps:

1. If the phone is closed, open the phone.
2. Press the **View** soft key. The most recent missed call displays.


Note: If there is a voicemail sent by the same number, associated icons display and can be selected.

3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.




Deleting a Missed Call

To delete a missed call entry, use the following steps:



1. Immediately after missing a call, press the **View** soft key.
2. Press the **Options** soft key and select **Delete**.

3. Choose from **Selected** or **All** and press the **Select** soft key, or the  key.
4. At the “**Delete?**” prompt, press the **Yes** soft key to confirm deletion or **No** to cancel.



Call Time

1. From the Idle Screen, press **Menu** → **Recent Calls**. Press the **Select** or the  key.
2. Highlight **Call Time** and press the **Select** soft key or the  key.
3. The following options are available.
 - **Last Call Time:** shows the length of time for the last call.
 - **Total Sent:** shows the total length of time for the calls made.
 - **Total Received:** shows the total length of time for the calls received.
4. Press the **Reset** soft key.
5. At the “**Are you sure?**” prompt, press the **Yes** soft key to confirm the reset or **No** to cancel.
6. Enter your password. At the “**Confirm New Password**”, re-enter the same password and press the **OK** soft key.
7. Press the **Back** soft key or the  key to end.

Data Volume

1. From the Idle Screen, press **Menu** → **Recent Calls** → **Data Volume** and press the **Select** soft key or the  key.
2. Use the **Up** and **Down** Navigation keys to view the following information:
 - **Last Sent Data:** shows the **Total** for the data last sent.
 - **Last Received Data:** shows the last **Received** data.
 - **Total Sent Data:** shows the total **Sent** and data from the phone.
 - **Total Received Data:** shows the total **Received** data from the phone.
3. Press the **Back** soft key or the  key to end.

Data Call Time



1. From the Idle Screen, press **Menu** → **Recent Calls** → **Data Call Time** and press the **Select** soft key or the  key.
2. Use the **Up** and **Down** Navigation keys to view the following information:
 - **Last Data Call:** shows the total for the data last sent.
 - **Total Data Call:** shows the total **Sent** and **Received** data from the phone.
3. Press the **Back** soft key or the  key to end.

Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the  key until the “Silent profile on” message and the  Silent Mode icon displays.

In Silent mode, your phone will vibrate and light up the external LCD display or just light the external LCD display depending on the setting in the **Silent Mode** feature.

To exit and reactivate the previous sound settings, press and hold the  key again until “Normal profile On” displays. The  Silent Mode icon no longer displays.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold


You can place the current call on hold whenever you want. You can also make another call while you have a call in progress if your network supports this service.

To put a call on hold:

1. While on a call, press the **Options** soft key. Highlight **Hold** and press the **Select** soft key. The call is on hold.

2. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Place the call on hold using the previous procedures, and enter the phone number that you wish to dial or look it up in the Contact List.
2. Press the  key to dial the second call.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold. To switch between the two calls, press the **Options** soft key. Highlight **Swap** and press the **Select** soft key. The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

In Call Options


During a call, press the **Options** soft key to access the following:

- **Hold:** Places the call on hold.
- **New Call:** places the current call on hold and allows you to enter and dial another number.
- **Contact List:** accesses the Address Book information.
- **Message:** allows you to create and send a message from your Inbox, Outbox (**My Messages**), or to create a new text message.

- **Calendar:** launches the calendar and allows you to create events while on a call.
- **Mute Keypad Tone:** Silences the key tones when on the call.
- **Send DTMF:** Sends DTMF (Dual Tone Multi-Frequency) tones to the contacts you have selected.

If you have are in a multi-party call, the following options also display.

- **Swap:** allows you to switch between the two active calls.
- **Join:** Joins the calls you have established with your phone.
- **End Held Call:** Ends the call that is placed on hold.


 
When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room, but do not want the person on the phone to hear you.

During a call, to switch the microphone off temporarily:

1. Press the  **Mute**. **Unmute** displays.
2. Press the  **Unmute** to deactivate the **Mute** function.



Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute Keypad Tone** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the Send Keys option must be selected.

Searching for a Number in Address Book

You can search for a number in Address Book during a call.





1. Press the **Options** soft key.
2. Press the **Down** key to highlight the **Contact List** option.
3. Press the **Select** soft key or the  key. Contact List is highlighted.
4. Enter the first few letters of the name to display entries listed starting with the first entry matching your input or use the navigation keys to select an entry.
5. Press the **Options** soft key and press the  **View** soft key.


For further details about the **Contact List** feature, see “Finding an Address Book Entry” on page 35.

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you have set the **Call Waiting-Voice Calls** Menu to **Activate**. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key or the **Accept** soft key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key and highlight **Swap**. Press the **Select** soft key or the  key.
3. To end a call on hold, press the **Options** soft key or the  key and select the **End Held Call** option. Press the  key.

To end the current call, press the  key.



Section 4: Menu Navigation


 

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

Menus and sub-menus can be accessed by scrolling using the navigation keys or by using the shortcut keys.

Accessing a Menu Function by Scrolling




1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the navigation keys to reach a main menu function, such as Settings. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Set Phone** for example, you can access them by highlighting the option and pressing the **Select** soft key or the  key. If the menu that you have selected contains further options, repeat this step.

4. To scroll through the menus, press the **Up** or **Down** Navigation key or the **Volume** key (located on the left side of your phone). Press the **Select** soft key, or the  key to make your selection.
5. To return to the previous menu level, press the **Back** soft key or the  key.
6. To exit the menu without changing the settings, press the  key.

Using Shortcuts

Numbered menu items, such as menus, sub-menus, and options can be quickly accessed by using their shortcut numbers. In Menu mode, Main Menu can be accessed by pressing the number keys (1 to 9) corresponding to their location on the screen.

Example: Accessing the Language menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Set Phone**.
4. Press the  key for **Language**.

The available languages are displayed.

My Menu


The My Menu option is another way to access applications from the idle mode without navigating through the main menu icons and sub menus. There are twelve available shortcuts, Seven preassigned (Camera, Bluetooth, Mobile Email, Airplane Mode, Tools, Alarms, and Calendar) and five empty shortcuts (8-#) you can assign.

To navigate to My Menu shortcuts:

1. In Idle mode, press the **Options** soft key, and select a short cut application.
2. Press the **Options** soft key and select one of the following:
 - **Open:** open the selected shortcut and displays the submenus, launches the selected application, or displays a screen.
 - **Change:** changes the currently selected shortcut and assigns another shortcut to this field.
 - **Remove:** removes the selected shortcut from this field.

- **Remove All:** removes all the shortcuts from the fields in this menu.

- Or -


Press the  key to access the selected option.


Section 5: Entering Text

 

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the amount of key strokes associated with entering text.

Changing the Text Input Mode

The **Text Input** option allows you to change the text entry functions from T9 Mode to ABC Mode, Numeric Mode, or Symbols Mode.

Press and hold the  key to toggle between the T9 Mode and the ABC Mode.

Short press the  key while in either the T9 Mode or the ABC Mode to toggle from All Caps to Initial Caps, to Lower Case, or to Numeric entries.

Press and hold the  key to go into Symbols Mode. To exit Symbols Mode, press either the **Cancel** soft key, the **OK** soft key or the  key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the 5 key can enter

J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three, or four times until it displays.

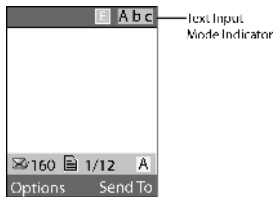 
Numeric Mode






This mode allows you to enter numbers.



Symbols Mode


This mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.



1. To toggle the text input mode between the ABC mode and the T9 mode, press and hold the  key.
2. Choose from the following options:
 - ABC : In ABC mode, short press the  key to toggle between **Abc**, **ABC**, **abc** and **123** modes.
 - T9  Ab: In T9 mode, short press the  key to toggle between **T9EAb**, **T9EAB**, **T9Eab** and **123** modes.
 - 123 : Numeric mode. Short press the  key to see the indicator for Numeric mode in the display.

SYM : Symbol mode. Press and hold the  key to change to Symbol mode. Press either the **Cancel** soft key, the **OK** soft key or the  key to exit Symbol mode

Note: Press and hold the  key to access Symbol mode. Press the number key corresponding to the symbol you want to enter. Use the **Up** and **Down** Navigation keys to scroll through the available symbols.

Using T9 Mode

T9 Predictive Text input mode is based on a built-in dictionary.

Enter a Word in T9 Mode

In T9 mode, begin entering a word by pressing the **2** to **9** keys. Press each key only once for each letter. The built-in dictionary lists words that match the keystrokes you have entered.


Example: To enter "Hello", press






The word that you are typing appears in the display. It may change with each key that you press.

3. Enter the whole word before editing or deleting the keystrokes.




4. When the word displays correctly, go to step 5.

If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the  and  keys. The phone displays the most commonly used choice first.



 
 
5. Insert a space by pressing the  key and start entering the next word.

Add a New Word into the T9 Dictionary



1. After pressing the keys corresponding to the word you want to add, press the  key to display the alternative words.
2. When the last alternative word is displayed, the **Spell** soft key displays. Press the **Spell** soft key or the  key.
3. Enter the word you want to add using ABC mode.
4. Press the **Add** soft key or the  key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, colons, or parenthesis, press the  key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- Short press the  key to change text cases: Initial caps, All caps, and Lower case. A fourth option allows Numeric entry.
- Using the Left and Right keys to move cursor. Press the  key to delete characters. Press and hold the  key to clear the display.


 
Using Alphabet Mode

To use the Alphabet Mode, use the keys  through .

1. Press the key labeled with the letter you want to enter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.


 
Note: The cursor moves to the right when you enter another character. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then enter the next letter.


Keys

-  ., ' - ? ! @ : / 1
-  A B C 2 a b c
-  D E F 3 d e f
-  G H I 4 g h i
-  J K L 5 j k l
-  M N O 6 m n o
-  P Q R S 7 p q r s
-  T U V 8 t u v
-  W X Y Z 9 w x y z
-  + = < > € £ \$ % & ¥ □ 0

Using Symbols



Symbol mode enables you to insert symbols and punctuation marks into text.

1. To enter symbol mode, press and hold the  key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To select a symbol, press the corresponding number key.
4. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.

5. To insert the symbol(s) into your message and return the display to the previous mode, press the **OK** soft key or the  key.

Using Numbers

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

To access the Numbers mode, short press the  key while in either the T9 mode or the ABC mode. Continue to short press the  key until you see the 123 Numbers mode indicator on the display.

Section 6: Messaging

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages


Your phone provides the following message types:


- IM Messages
- Text Messages
- Multimedia Messages

Creating and Sending New Messages

Text Messages


Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones and email addresses.

The Message icon  displays when you have received new text messages. When the memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in each message box to delete obsolete messages.

1. In Idle mode, press **Menu** → **Messaging** → **Create New Message**.
Using the **Up** or **Down** Navigation key, highlight **Text Message** and press the **Select** soft key or the  key.
2. When you have finished writing your message, press the **Options** soft key. Choose from the following options:
 - **Insert:** allows you to insert from the predefined Text Templates options. Select Address Book to add the contact to the message, or Favorites to insert URLs for My Account, Chat Group, News, Sports, Weather, MEdia Net, or any other Favorites you have defined.
 - **Save to:** allows you to save the text message to your Drafts or your My Folder.
 - **Select Language:** allows you to set the language to English, French, or Spanish.
 - **Input Mode:** allows you to set the default input mode for the text messaging screen. Choose from ab, Ab, AB, T9ab, T9Ab, T9AB, 123, Symbols.
 - **Back:** allows you to save the settings and the text you've entered to the Draft folder.

3. Enter the phone number or phone numbers or press the **Options** soft key to find contacts stored on your phone in these lists: Contact List, Recent Recipients, Group, FDN Contacts.
4. Highlight your number selection and press the **Check** soft key to select. Press the **Add** soft key to select additional numbers.
5. When you have selected your recipients, press the **Send** soft key to send the message.

Multimedia

1. In Idle mode, press the **Menu** softkey and select **Messaging → Create New Message → Multimedia Message** and press the **Select** soft key or the  key.
2. Press the **Options** soft key to view the following options:
 - **Subject**
 - **Add:** allows you to add a subject to the message.
 - **Preview:** allows you to preview your messages before sending.
 - **Save to:** allows you to save the message to Drafts or My Folder.
 - **Add Page:** allows you to add additional pages to your message.
 - **Delete Page:** allows you to delete any additional pages you have added.

- **Edit Page:** allows you to edit the Duration, Move Page Forward, Move Page Backward.
 - **Background Color:** allows you to edit the background color of the message.
 - **Attach:** allows you to attach a file to the message.
 - **Send settings:** allows you to select the Delivery Report, Read Reply, Priority, Expiry, and Delivery After.
3. Using the **Up** or **Down** Navigation key, highlight **Graphic** and press the **Options** soft key and highlight **Add** to add a picture. Highlight **Take Photo** to launch the camera or select **My Photos** to select a photo previously taken. Select **Downloaded Graphics** to choose from the downloaded graphics folder.
 - **Graphic**
 - **Add:** allows you to add a graphic, take a photo, add from My Photos, or a photo you have downloaded.
 - **Preview:** allows you to preview your messages before sending.
 - **Save to:** allows you to save the message to Drafts or My Folder.
 - **Add Page:** allows you to add additional pages to your message.
 - **Delete Page:** allows you to delete any additional pages you have added.
 - **Edit Page:** allows you to edit the Duration, Move Page Forward, Move Page Backward.

- **Background Color:** allows you to edit the background color of the message.
- **Attach:** allows you to attach a file to the message.
- **Send settings:** allows you to select the Delivery Report, Read Reply, Priority, Expiry, and Delivery After.

4. Using the **Up** or **Down** Navigation key, highlight **Audio** and press the **Options** soft key and highlight the **Add** option to add an audio file. Highlight **Record Audio** to launch the Audio Recorder or select **Recorded Audio** to select a audio previously recorded. Select **Downloaded Tones** to choose from the downloaded audio files.

- **Audio**

- **Add:** allows you to add newly Record Audio file, a previously recorded audio, or a downloaded Tones file.
- **Preview:** allows you to preview your messages before sending.
- **Save to:** allows you to save the message to Drafts or My Folder.
- **Add Page:** allows you to add additional pages to your message.
- **Delete Page:** allows you to delete any additional pages you have added.
- **Edit Page:** allows you to edit the Duration, Move Page Forward, Move Page Backward.
- **Background Color:** allows you to edit the background color of the message.
- **Attach:** allows you to attach a file to the message.

- **Send settings:** allows you to select the Delivery Report, Read Reply, Priority, Expiry, and Delivery After.

- **Message**

- **Add:** allows you to add a message.
- **Preview:** allows you to preview your messages before sending.
- **Save to:** allows you to save the message to Drafts or My Folder.
- **Add Page:** allows you to add additional pages to your message.
- **Delete Page:** allows you to delete pages to your message.
- **Edit Page:** allows you to edit the Duration, Move Page Forward, Move Page Backward.
- **Background Color:** allows you to edit the background color of the message.
- **Attach:** allows you to attach a file to the message.
- **Send settings:** allows you to select the Delivery Report, Read Reply, Priority, Expiry, and Delivery After.

5. Press the **Send To** soft key to enter a contact. Press the **Options** soft key to choose from:


- Contact List
- Group
- FDN Contacts
- Recent Recipients
- Common Address
- Send
- Save to the Drafts or My folder


- Change Recipients to Cc or Bcc
6. When you have finished entering destination numbers, press the **Send** key.


Retrieving New Messages


While text messages from other phones are delivered directly to your phone, Multimedia messages will be stored in the Inbox of the message server and the server will alert you to new messages. Therefore you need to retrieve new messages to your phone and read them on the phone.

Retrieving an Multimedia Message


When a new Multimedia message comes in, the display shows the Multimedia Message icon () and a text notification along with the sender's number.

1. Press the **View** soft key to view brief information about the message, such as the sender's number, the message size, and the subject.
If you want to view the message later in the Inbox, press the **Back** soft key.
2. To view the message, press **Options** → **Retrieve** soft key or the  key.

3. Press the **Options** soft key or the  key to access the following options:


- **View:** allows you to view to the message.
 - **Retrieve:** retrieves messages from the network.
 - **Delete:** allows you to delete the selected message or Multiple messages.
 - **Sort by:** allows you to sort by Date, Read/Unread, Sender, Type, Size, or Subject.
 - **Lock/Unlock:** allows you to lock the message to prevent deletion.
4. To scroll through the message, press the **Up** or **Down** key.
 5. When you have finished, press the  key.

Viewing a Message

1. In Idle mode, press the **Menu** soft key and highlight **Messaging**. Press the **Select** soft key or the  key.
2. Highlight **Inbox** and press the **Select** soft key. The message list opens.

The icons on the left of the number indicates the message type.

-  : indicates SMS
-  : indicates Multimedia Message

3. Select a message on the list. The message content displays.
4. Press the **Up** or **Down** key to scroll through the message screen. For an Multimedia message, press the **Up** or **Down** key to scroll to other pages, if the message has more than one message.
5. When you have finished, press the  key.

Using Message Options

While viewing the content of a message, press the **Options** soft key to access the following options:

Options for SMS Messages

- **Reply:** allows you to reply to the message.
- **Call Back:** allows you to dial the originating message number.
- **Forward:** allows you to forward the message.
- **Delete:** deletes the message.
- **Move to Phone/Move to SIM Card:** If a message is stored in the SIM card, it is saved to the phone's memory. If a message is stored in the phone's memory it is saved to the SIM card.
- **Add to Block List:** adds the number the message was sent from to the blocked list.
- **Extract Address:** allows you to save the recipient or sender's number and URL, Email addresses or phone numbers from the message text.

- **Lock/Unlock:** allows you to lock the message to prevent deletion.

Options for Multimedia Messages

- **Reply via:** allows you to reply to the Text message and Multimedia message.
- **Reply to All:** reply to all the message recipients.
- **Call Back:** allows you to call back the originator of the message.
- **Forward:** allows you to forward the message.
- **Delete:** allows you to delete the message.
- **Move to My Folder:** moves message to My Folder.
- **Extract Address:** extracts information from the text message such as: home number, email address, or URL and then provides that information in a listing.
- **Save Media:** saves the multimedia attachments (Graphic, Audio, vCard and vCalendar).
- **Add to Reject List:** allows you to add the number to the caller Block List.
- **Lock/Unlock:** allows you to lock and unlock the message to prevent deletion.
- **Properties:** shows date from/to CC, size, priority and class for the message.

Using Instant Messenger (IM)

Instant Messenger is a way of sending short, simple messages that are delivered real time to users online.



Before using this feature, you need to subscribe to a messenger service. Your handset has 3 pre-loaded messenger services (AIM, Windows Live, and Yahoo!).

Note: Contact AT&T customer service for further details.



Starting your Instant Messenger

1. In Idle mode, press **Menu** → **Messaging** → **IM** and press the **Select** soft key or the  key to enter the menu.

Tip: To quickly access your Instant Messenger service, short press the **Right** Navigation key

2. Highlight the messenger service that you have previously subscribed to by using the **Left** or **Right** Navigation key and press the **Select** soft key or the  key.
3. Highlight the New Account option and press the **Select** soft key or the  key.
4. Enter the required sign on information such as ID and password, then press the **Down** Navigation key.

Note: The information required for sign on varies depending on the Instant Messenger provider you use.

5. Fill in all the appropriate fields and press the **Sign In** soft key or the  key.
6. Agree to the terms and conditions of use for this service and press the I agree soft key or the  key.
7. Follow the on-screen instructions to read, reply to, compose, send, and manage your Instant Messenger account.

Using the Instant Messenger Options



After selecting an Instant Messenger service, the following options display:

- **New Account:** allows you to login to your Instant Messenger as new account.
- **Settings:** allows you to change your Settings.
- **Help:** provides helpful information about IM providers such as: Sign up, Sign on, Buddies, Sending IMs, Receiving IMs, Privacy, and Away.

Using Message Templates



Your phone has message templates to allow you to retrieve them when creating a message. You can change the templates as your preferences or send a message immediately.

1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Select **Messaging** → **Templates** and press the **Select** soft key or the  key.
3. Highlight a template and press the **Options** soft key to access the following options:
 - **Send via**: allows you to send an SMS and MMS message using the template.
 - **Edit**: allows you to change the template.
 - **Delete**: deletes the Selected or Multiple template.
4. When you have finished, press the  key.

Message Settings

You can set up various options for using messaging services.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging** → **Messaging Settings**. Press the **Select** soft key or the  key.
3. Select the type of messages for which you want to change. Press the **Select** soft key or the  key.

Text Message

The following options are available:

- **Send Settings**: allows you to set the options for sending text messages. Choose from the following options: Reply Path, Delivery Report, Validity Period, Message Type, Service Center or Email Gateway.
- **Block Number**: allows you to block a number from being received on your handset.

Multimedia Message

The following options are available:

- **Send Settings**:
 - **Delivery Report**: when this option is enabled, the network informs you whether or not your message has been delivered.
 - **Read Reply**: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
 - **Priority**: you can select the priority level of your messages.
 - **Expiry**: select the length of time you wish the message to remain on the MMS server.
 - **Delivery After**: you can set a time delay before the phone sends your messages.
- **Receive Settings**: you can specify the category of messages you want to retrieve. Allows you to set the following:
 - **Anonymous Reject**: allows you to automatically reject messages with a category of anonymous.
 - **Ads allowed**: allows you to automatically reject messages with a category of advertisement.

- **Report Allowed:** allows messages with a report.
- **Send Read Report:** allows read report to be sent.
- **Message Reception:** allows you to set the message receipt options. Choose from Manual, Automatic, or Reject.
- **Profiles:** you can select a connection profile to be used for sending and receiving Multimedia messages.
 - **Current Profile:** allows you to select an option for sending a Multimedia message. Choose from the following options:
 - AT&T MMS
 - Profile 2
 - Profile 3
 - Profile 4
 - Profile 5
 - **Profile Settings**
 - AT&T MMS
 - Profile 2
 - Profile 3
 - Profile 4
 - Profile 5
- **Block Number:** allows you to enter numbers to be blocked from your handset.
- **Message Class:** allows you to set the message class default for your messages. Choose from Text Only, Small Imaging, Moderate Imaging,

- **Creation Mode:** allows you to set the creation mode for the message. Choose from Warning, Free, and Restricted.

Please contact your service provider for further details.

Push Message

The following options are available:

- **Receive:** you can specify whether to set Push Message reception to enable Always, Never, SMS-C Specific.
- **Service Center:** you can specify whether to load this service:

Used Space

You can check the amount of the memory being used and the memory remaining for Phone and the SIM card.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

Section 7: Understanding Your Address Book

This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Using Contact List


Dialing a Number from Address Book

Once you have stored phone numbers in the Address book, you can dial them easily and quickly by using the location numbers that were assigned to them in the Address Book.

Finding an Address Book Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Address Book.


Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may vary.

1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Contact List** and press the **Select** soft key or the  key.

Tip: In the Idle screen, press the **Down** Navigation key to quickly access your Contact List.

3. Enter the first few letters of the name.


The Address Book entries are listed, starting with the first entry matching your input.

4. To select a different entry, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Address Book entry options.

Using Address Book Entry Options

While accessing any Address Book entry, press the **Options** soft key to use the options for the entry.

The following options are available:





- **Edit:** allows you to edit the name and number. Press the  key to save.
- **Send Message:** allows you to send a text message or a multimedia message to this contact.
- **Call:** allows you to place the call from this screen.
- **Copy to Phone/SIM Card:** allows you to copy the contact information from the SIM to the phone or from your phone to your SIM.


- **Send Business Card:** allows you to send your business card information via multimedia message.
- **Assign Speed Dial:** allows you to set the speed dial key for this entry.
- **Delete:** allows you to delete the selected address book entry.

Adding a New Contact



Use the following steps to add a new Contact


Storing a Number in the Phone's Memory


1. When the Idle screen displays, press **Menu** → **Address Book**, press the **Select** soft key or the  key.
2. Scroll to **Add New Contact** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
3. Highlight **Phone** and press the **Select** soft key or the  key to display the Create Contact screen.
4. In the Create Contact screen, you will see the following options for entering data:
 - **First Name:** enter the contact's First Name.
 - **Last Name:** enter the contact's Last Name.
 - **Mobile:** assigns the number entered to the Mobile entry.
 - **Home:** assigns the number entered to the Home entry.
 - **Office:** assigns the office number entered to the Office entry.
5. When you have completed all desired fields, press the  key to save your new contact and display this information in the View screen.
6. In the View screen, press the **Options** soft key to display the following options:
 - **Edit:** allows you to edit the number assigned to this contact.
 - **Send Message:** allows you to send a text message or a multimedia message to this contact.
 - **Call:** calls the selected number.
 - **Copy to:** allows you to copy the contact information from the Phone, SIM card, and FDN.
 - **Send Business Card:** allows you to send your contact information via Multimedia Message.
 - **Assign Speed Dial:** allows you to assign a speed dial position for the contact.

- **Delete:** allows you to delete the selected contact.
7. To return to the Idle screen, press the  key.


Storing a Number in the SIM Card

1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Add New Contact** by pressing the **Up** or **Down** key and press the **Select** soft key or the  key.
3. Select **SIM Card** and press the **Select** soft key or the  key.
4. Enter the following information for the New Contact.




Note: To change text entry mode press the  key. For further details about how to enter characters, see “Using Alphabet Mode” on page 25.

- **Name:** allows you to enter a name for the number entered.
 - **Number:** assigns the number entered to the Mobile entry.
 - **Location:** allows you to assign a location number on your SIM for the number being entered.
5. Press either the **Save** soft key or the  key to save your entry.
 6. Press the **Options** soft key to display the following options:

- **Edit:** allows you to edit the name and number assigned to this contact.
- **Send Message:** allows you to send a **text message** or a **multimedia message** to this contact.
- **Call:** allows you to dial the contact from this option.
- **Copy to Phone:** allows you to copy the contact information to the Phone.
- **Send Business Card:** allows you to send your contact information via Multimedia Message.
- **Assign Speed Dial:** allows you to set a speed dial key to this contact.
- **Delete:** allows you to delete this contact entry information.



7. To return to the Idle screen, press the  key.

Dialing a Number from the SIM Card

1. In Idle mode, enter the location number for the phone number you want to dial and press the  key. The contact entry information is displayed.
2. Press the **Left** or **Right** Navigation key to find other numbers on the list.
3. Press the **Dial** soft key, the  key, or the  key when you have selected the number you want to call.

Group Settings

Editing a Caller Group

1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Group** by pressing the **Up** or **Down** key and press the **Select** soft key or the  key.
3. Highlight the group you want to edit by pressing the **Up** or **Down** Navigation key.
4. Press the **Options** soft key. The following options are available:
 - **View**: allows you to view the contacts assigned to the selected group.
 - **Add New Group**: allows you to create a new group category.
 - **Edit**: allows you to change the name of the group, assigned group image, and associated ringtone.
 - **Send Message**: allows you to create and send a new Text Message or Multimedia Message.
 - **Delete Group**: allows you to delete the selected group.
5. When you are finished, press the  key to return to Idle mode.

Note: Group assignments can only be made to contacts stored on the phone. If a contact list entry has a SIM icon located adjacent to it, then the



entry exists only on the SIM card and can not be assigned a Group category until its copied to the phone. For more details, see “*Storing a Number in the Phone’s Memory*” on page 36.

Speed Dial List

Once you have stored phone numbers from your Address book list, you can set up to 8-speed dial entries and then dial them easily whenever you want, simply by pressing the associated numeric key.



In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries





1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Speed Dial List** by pressing the **Up** or **Down** key, press the **Select** soft key or the  key.
3. Select the key in which you wish to assign the speed-dialing number (from the 2 to 9 keys), and press the **Options** soft key or the  key.

Note: Memory location 1 is reserved for your Voice mail server number.

4. Highlight **Add** and press the **Select** soft key or the  key.




5. Choose to assign a new entry (**Contact** or **FDN Contact**), and press the **Select** soft key or the  key.
6. Highlight an entry and press the  key.

Changing a Number Assigned to a Key

1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Speed Dial List** by pressing the **Up** or **Down** key, press the **Select** soft key or the  key.
3. Select the key you wish to change and press the **Options** soft key.
4. Press **Change**, select a new entry (**Contact** or **FDN Contact**), and press the **Select** soft key or the  key.
5. Highlight an entry and press the  key.
 - Select the previously created entry you would like to add by pressing the **Up** or **Down** key and press the  key to save the entry.

Deleting Speed Dial Entries

1. When the Idle screen displays, press the **Menu** soft key.



2. Highlight **Address Book** → **Speed Dial List** by pressing the **Up** or **Down** key, press the **Select** soft key or the  key.
3. Select the number assigned key you want to remove and press the **Options** soft key.
4. Select **Remove** and press the **Select** soft key or the  key.
5. Press the **Yes** soft key to confirm deletion.
6. When you are finished, press the  key to return to Idle mode.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.


You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. When the Idle screen displays, press the **Menu** soft key.

2. Highlight **Address Book** → **Address Book Settings** → **Own Number** by pressing the **Up** or **Down** key and press the **Select** soft key or the  key.
3. Enter additional numbers in the 2, 3, and 4 fields.
4. Press the  key to **Save**.


Reject List


The Reject List option shows numbers that you have set to be rejected during an incoming call.

1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Reject List** by pressing the **Up** or **Down** key and press the **Select** soft key or the  key

Service Number

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.



1. When the Idle screen displays, press the **Menu** soft key.
2. Highlight **Address Book** → **Service Number**, by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.

3. Scroll through the numbers by using the **Up** or **Down** Navigation key.
4. To dial the number displayed, press the  key.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

FDN Contacts

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

1. In Idle mode, press **Menu** → **Address Book** → **FDN Contacts** option using the navigation keys, then press the **Select** soft key or the  key.
2. The **FDN List** screen displays. Select the FDN Contact to call and press the  key.
3. If there are no FDN numbers assigned, press the **Add** soft key.
4. Enter your PIN2 code and press **OK**.

Note: If you do not know your PIN2 code, contact your service provider.

Address Book Settings

The address book Settings allow you to set default settings for your address book options.


1. When the Idle screen displays, press the **Menu** → **Address Book** → **Address Book Settings**, by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
 - **My Business Card:** allows you to add your information to attach when sending messages.
 - **Save New Contacts to:** allows you to save contacts to the Phone, SIM or Ask on Saving.
 - **View Contacts from:** allows you view the contacts stored on All, Phone or SIM Card.
 - **Sort Contacts by:** allows you to sort the contact list by the First Name or the Last Name.
 - **Own Number:** allows you to view the number assigned to the phone, and any other numbers you choose to enter in the Empty fields.
 - **Copy All to:** allows you to copy all contacts to the Phone or to the SIM Card.
 - **Delete All:** allows you to delete All, Phone, SIM Card, and FDN Contacts.
 - **Used Space:** allows you to view the space allocated for the Phone, SIM Card, and the FDN contact list.

Section 8: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes display settings, security settings, and extra settings associated with your phone.

Quick Tips

Quick Tips is a browser-based information service, provided by AT&T. It contains frequently asked questions about features and applications and their answers.

1. In Idle mode, press the **Menu** → **Settings** menu.
2. Select the **Quick Tips** option, and press the **Select** soft key or the  key.


The phone opens the MEdia Net browser, and takes you to the Quick Tips page, which is a free service for AT&T customers.

Sound Profile

You can customize various sound profiles for your phone by changing the sound settings.


1. When the Idle screen displays, press the **Menu** soft key to access Menu mode.
2. Select **Settings** → **Sound Profile**.
3. Highlight one of the following sound profiles:

- **Normal**
- **Silent**
- **Driving**
- **Outdoor**

4. To view the current settings for the highlighted profile, press the  key.
5. To change the settings for the highlighted profile, press the **Edit** soft key.

Normal Profile

To access the available options for this sound profile, press the **Edit** soft key.

- To move between the various tabs, use the **Left** and **Right** Navigation keys.
- To highlight individual options, use the **Up** and **Down** Navigation keys.
- To change the setting for a highlighted option, press **Change** (.
- To save your changes, press the **Save** soft key.

Sound Settings

This list describes the sound settings for the following categories (tabs):

- **Call:**

- **Call Alert Type:** allows you to select the way in which the selected ringtone is played when a call comes in on the phone.
 - **Melody:** the phone sounds the selected melody.
 - **Increasing Melody:** the phone sounds the selected melody, which increases in volume until the call is answered, rejected, or goes to voice mail.
 - **Vibration:** the phone vibrates.
 - **Melody and Vibration:** the phone plays the melody and vibrates.
 - **Increasing Melody and Vibration:** the phone plays the melody, which increases in volume until the call is answered, rejected, or goes to voice mail, and also vibrates.
 - **Vibration then Melody:** the phone vibrates initially, but then plays the melody.
- **Voice Call Ringtone:** allows you to select a ringtone from your My Stuff (Phone) folder which contains not only the default phone ringtones, but also any new ringtones which have been downloaded from the Internet.
- **Ringtone Volume:** allows you to select the volume that the ringtone is played. The range is from 1-7.

- **Message:**

- **Message Alert Type:** allows you to select the way in which the selected alert is played when a new text or multimedia message is received.
 - **Mute:** the phone neither vibrates nor plays a ringtone. The only indication of a message is an alert on the display.
 - **Melody:** the phone sounds the selected melody.

- **Vibration:** the phone vibrates.

- **Vibration then Melody:** the phone vibrates initially, but then plays the melody.

- **Message Alert Tone:** allows you select the tone played on receipt of a message.
- **Message Alert Repetition:** allows you choose how the tone is repeated: Once, Every 1 Min, Every 2 Min.


- **Phone:**

- **Keypad Tone:** allows you to choose between **Beep**, **Xylophone**, and **Off** (no tone) for keystrokes on the phone.
- **Power On/Off Tone:** allows you to select whether an alert is played when the phone is powered on or off.
- **Volume:** allows you to set the volume of the phone.

Other Available Profiles



The phone can be set to additional audio profiles which are available via the Profiles menu. Although each profile has similarities, they have each been preset to use different audio parameters for incoming phone call alerts, message alerts, and phone usage. (For more information, refer to “Icons” on page 12.).

To access the available options for these sound profiles, highlight the profile and press the **Edit** soft key.

- To move between the various tabs, use the **Left** and **Right** Navigation keys.
- To highlight individual options, use the **Up** and **Down** Navigation keys.
- To change the setting for a highlighted option, press the **Change** () key.
- To save your changes, press the **Save** soft key.



The **Silent** profile causes the speaker to be muted and the phone only vibrates or displays information on its LCD. This icon is accompanied on screen by the Vibrate or Mute icon.

Note: The Silent profile can also be activated by pressing and holding the  key or by reducing the volume to 0. An on screen message notifies you that the Silent profile is now active. To deactivate this profile, press and hold the  key again or increase the volume using the volume key.




The **Driving** profile keeps the speaker active. In this case, the speaker is active and will launch the currently selected ringtone or melody when the associated notification is activated.



The **Outdoor** profile keeps the speaker active, the volume settings are raised to their highest levels, any currently active ringtones or melodies are activated, and the phone's vibrate feature is activated. This icon is accompanied on screen by the Vibrate/Audio icon.



Set Display


In this menu, you can change various settings for the display or backlight.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** → **Set Display** and press the **Select** soft key or the  key.

The following options are available. Use the **Up** or **Down** Navigation key to scroll to and set options:

Main Display

- **Wallpaper:** allows you to set the wallpaper for the main display. Press the  key to access this option. Choose from the Shop Graphics, Downloaded Graphics, My Photos, or the Default Wallpapers. Use the **Left** or **Right** Navigation keys to view all wallpapers. Press the **Select** soft key or the  key to make your selection.

- **Theme:** allows you to choose from 2 patterns for your handset's theme.
- **Menu Style:** allows you to choose from **Grid Menu** or **List Menu** styles.
- **Pop up List Menu:** allows you to turn On or Off the pop-up menus, which will display some of the sub menu options.
- **Idle Screen Display:** allows you select the settings for the following:
 - **Text Position:** allows you to select the position of the text displayed in Idle mode. Press the **Left** or **Right** Navigation keys to make your selection. Choose from Top, Bottom, or Off. Press the **Save** soft key or the  key to make your selection.
 - **Text Style:** allows you to set the text style for your handset. Choose from Normal, Outline, or Shadow. Press the **Left** or **Right** Navigation keys to make your selection. Press the **Save** soft key or the  key to make your selection.
 - **Text Color:** allows you to select the color of the text to be displayed on the Idle screen. Press the **Left** or **Right** Navigation keys to make your selection. Press the **Save** soft key or the  key to make your selection.
- **Dialing Display:** Allows you to set the Font Size, the Font Color, and the Background Color.
- **Greeting Message:** allows you to set a greeting to be displayed briefly when the phone is switched on.

Front Display

The front display allows you to set the following settings

- **Clock:** displays the clock.
- **My Image:** allows you to set an image to display on the front display.
- **Screen Slogan:** shows the title displayed on your handset. This text can be changed by the user. Press the **Options** soft key to select **Save**, **Select Language**.

Light Settings

Warning! Modifying light settings for brightness or backlight time can affect the battery life of the phone.


Brightness

You can adjust the display brightness for the LCD to see it better in different lighting conditions.

Press the **Left** or **Right** Navigation key or press the **Volume** keys to adjust the brightness. Press the **Save** soft key or the key to save selection.

Backlight Time

In this menu, you can select the length of time for the Main LCD backlight On and the Main LCD Dim.

- **Main Display On:** Settings available are: 10 seconds, 30 seconds, 1 minute, 3 minutes, and 10 minutes. Press the **Save** soft key or the  key to save selection.
- **Main Display Dim:** Settings available are: 5 seconds, 30 seconds, 1 minute, 3 minutes, and Off. Press the **Save** soft key or the key to save selection.

Front LCD Contrast

You can adjust the display contrast for the Front LCD to see it better in different lighting conditions.


Press the **Left** or **Right** Navigation key or press the **Up** or **Down** Volume keys to adjust the contrast. Press the **Save** soft key or the key to save selection.

Set Time & Date

This menu allows you to change the current time and date displayed. You can also find out what time it is in another part of the world.

Note: Before setting the time, you must specify your time zone in the World time menu. For more information, refer to “*World Time*” on page 67.



1. In Idle mode, press the **Menu** soft key to access Menu mode.


2. Select **Settings** → **Set Time & Date** and press the **Select** soft key or the  key.

The following options are available. Use the **Down** Navigation key to scroll to and set options:

- **Time Zone Updating:** allows you to choose from the following options, **Automatic**, or **Manual Only**.

Tip: If Manual Only is selected, the following options are enabled:


- **Home Zone:** allows you to set your a time zone for the handset. Press the  to access the different time zones. When you have made your selection, press the OK soft key.
- **Time:** allows you to enter the current time using your keypad. Press the **Save** soft key to save. Use the **Up** or **Down** Navigation key to access the AM/PM option. Use the **Left** or **Right** Navigation key to select **AM** or **PM**. Press the **Select** soft key or the  key to save selection.
- **Date:** allows you to enter the current date using your keypad. Press the **Save** soft key to save.
- **Time Format:** allows you to change the time format to 12 hours or 24 hours. Use the **Left** or **Right** Navigation key to select Time Format. Press the **Select** soft key to save.
- **Date Format:** enter the date format you wish to use when display the date. Choose from MM/DD/YYYY, DD/MM/YYYY or YYYY/MM/DD

3. Press the **Save** soft key or the  to save your Time & Date settings.

Note: Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.


Set Phone

To customize the settings of your phone use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** → **Set Phone** and press the **Select** soft key or the  key. The following options are available:

Language

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. Depending on your country, service provider, or the software version of the phone, the Automatic option may not display.

Press the **Save** soft key or the  key to save selection.

Shortcuts

Navigation Keys

The Shortcuts menu option allows you to change the options assigned to the navigation Keys. Press the **Options** soft key to Change the assigned shortcut key.

My Menu

In Idle mode, press the **Options** soft key to access **My Menu**. You can quickly access frequently used phone features, Camera, Bluetooth, Mobile Email, Airplane Mode, Tools, Alarms, Calendar, and you can choose up to five other functions to assign shortcuts in **My Menu**.


Own Number

The **Own Number** menu shows you the number assigned to the SIM in your phone. It will allow you to change that number, but entering another number will prevent you from making or receiving calls on the handset. You may also add other names and numbers into your phone for easy referral.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** → **Set Phone** → **Security** and press the **Select** soft key or the  key.

The following options are available. Use the **Up** or **Down** Navigation key to scroll to and set options:

Lock Phone

When the Phone lock feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.

To change the phone password, see “*Change Phone Password*” on page 49.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

- **Off:** you are not asked to enter the phone password when you switch on the phone.
- **On:** you are required to enter the phone password when you switch on the phone.

Lock SIM Card

When the **Lock SIM Card** feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code to unlock the SIM so you can use a different SIM card.

Once you have entered the lock code, you are asked to confirm your password. Reenter your password and press the **OK** soft key.

The following options are available:

- **Off:** you can use different AT&T SIM cards on your phone.
- **On:** your phone only works with the current SIM card.

Check PIN Code

When the Check PIN Code feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Off:** you must enter the PIN each time the phone is switched on.
- **On:** the phone connects directly to the network when you switch it on.

Lock Applications

Using this menu, you can lock the following categories:

- All
- Messaging
- Recent Calls
- Audio
- Graphics
- Address Book

Once you have locked the contents, you must enter the phone's password to access the associated menus.

Set FDN Mode

Set FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Off:** you can call any number.
- **On:** you can only call phone numbers stored in the FDN list. You must enter your PIN2. The following options are available:
 - Full length entries or wild cards can be entered in to the FDN list.
 - A full length number with a specific contact name can be entered into the FDN list.
 - Wildcard entries allow a range of numbers to be dialed with a single entry: ex. 555 – All dialed numbers that begin with 555 will be allowed. Numbers that do not match the conditions in the FDN list will be restricted. Note: Entering an asterisk (*) is not required for wild card entries.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Change Phone Password

The Change Phone Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one. The first time you will be prompted to create a password.

Once you have entered a new password, you are asked to confirm it by entering it again.

Change PIN Code

This feature allows you to change your current PIN, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Change PIN2 Code

The Change PIN2 Code feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: if you do not know your PIN or PIN2 code, contact your service provider.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Airplane Mode

The Airplane Mode disables the wireless communications capabilities of your phone preventing voice and data from being transmitted.


Network Selection (SIM Dependent)

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.


To set your phone to automatically select a roaming network, or to manually select the network to be used when roaming, perform the following steps:

1. From the **Set Phone** menu screen, select **Network Selection**.

2. Press the **Up** or **Down** key until the appropriate option highlights, then press the **Select** soft key or the  key.

If you select Automatic, you are connected to the first available network when roaming.


If you select Manual, go to step 3.

3. Press the **Up** or **Down** key until the network you want highlights and then press the **Select** soft key or the  key.

The phone will scan for that network and you will be connected.

Set Calls

This menu option provides the options to answer a call, display a number, alerts and notifications during calls.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** → **Set Calls** and press the **Select** soft key or the  key.

General

Show My Number

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow you to change this setting.

The following options are available:

- **Set by Network:** the default setting provided by the network is used.
- **Hide Number:** your number does not display on the other person's phone.
- **Show Number:** your number is sent each time you make a call.

Press the **Save** soft key to apply changes.


Call Answer

The following options are available to answer a call on your handset.

- **Flip Open:** allows you to answer the call when you open the phone.
- **Any Key:** allows you to answer the call when you press any key.

Press the **Save** soft key to save the selection.


Call Status Tones

The Call Status Tone options are used to notify you for the **Minute Minder** or the **Call Connect Tone**. Use the  key to enable or

disable these functions. Press the **Save** soft key to save the selection.

- **Minute Minder:** allows you to activate an alert tone that sounds every minute the call is active.
- **Call Connect Tone:** allows you to activate an alert tone when a connection has been made.

Alerts on a Call

Use this option to turn On or Off the Alerts on Call option. Press the  key and press the **Save** soft key to save the settings.


Voice Call


Call Forwarding

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on vacation.

To set your call forwarding options:

1. From the Voice Call menu, select **Call Forwarding**.
2. Select a call forwarding option by pressing the **Up** or **Down** key and then press the **Select** soft key or the  key. The following options are available:

- **Forward Always:** allows you to forward **Voice Calls** and **Data Calls**. Press the **Select** soft key and press the **Activate** and enter the forwarding number. To deactivate, follow the same steps and press the **Deactivate** soft key.
 - **Busy:** allows you to forward **Voice Calls** and **Data Calls** to the designated number instead of your voice mail number if you are on another phone call.
 - **No Reply:** allows you to forward **Voice Calls** and **Data Calls** to the designated number instead of your voicemail number when there is no answer on your phone. You can choose the time setting from 5, 10, 15, 20, 25, and 30 seconds).
 - **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel All:** all call forwarding options are canceled.
3. Select the call type, **Voice Calls** or **Data Calls**, by pressing the **Up** or **Down** key, and then press the **Select** soft key or the  key.
 4. Using the **Left** or **Right** Navigation key select **Activate**. Select **Deactivate** to turn off call forwarding.
 5. Scroll to **Forward To**, enter or change the number to be called.

To enter an international code, press the **0** key until the **+** sign displays.

6. Press the **Select** soft key to save changes.

Call Barring (SIM Dependent)


The call barring network service allows you to restrict your calls. This option is SIM dependent and requires a subscription. For more information, contact your service provider.

Call Waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. From the Network Services menu screen, select **Call Waiting**.
2. Select the call type, **Voice Calls** or **Data Calls**, to which the call waiting option is to be applied by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the  key.

The screen informs you whether call waiting is activated or deactivated.

Select **Cancel All** to cancel all call waiting features.

- Using the **Up** or **Down** Navigation key you can **Activate** or **Deactivate** the call waiting feature respectively.
- Press the **Select** soft key to apply selection.

Auto Redial

This option allows you to turn **On** or **Off** the Auto Redial function. Press the **Save** soft key to save the settings.


Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to view and change the device name.

- In Idle mode, press the **Menu** soft key to access Menu mode.



- Select **Settings** → **Bluetooth** and press the **Select** soft key or the  key.

Turn Bluetooth On/Off

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset.


My Devices


This menu provides a list of Bluetooth wireless technology devices discovered by your handset.

- Highlight **My Devices** and press the **Select** soft key or the  key.
- To search for the Bluetooth device(s), highlight **Search for New Device** and press the **Select** soft key or the  key.

Connecting to a Bluetooth Device


From the Device list,


- Highlight the device and press the **Select** soft key or the  key.

2. Enter the PIN for the device.
If connecting to a Bluetooth wireless device consult your Bluetooth device user manual for your assigned PIN.
Press the **OK** soft key or the  key.
3. If you are unable to pair with the device a popup appears in the display. Press the **Yes** soft key to retry.

Set Applications



The Set Applications feature allows you to configure the functional parameters for most of the on board applications. These applications are described in more detail within other sections of this manual.

1. When the Idle screen displays, press the **Menu** soft key.
2. Select **Settings** → **Set Applications** and press the **Select** soft key or the  key.
3. Select the type of application which you want to change.
 - **Messaging Settings (page 33)**
 - **Browser Settings (page 69)**
 - **Camera Settings (page 60)**
 - **Record Audio Settings (page 57)**
 - **Calendar Settings (page 62)**
 - **Address Book Settings (page 41)**

4. Press the **Select** soft key or the  key.

Reset Settings

You can easily reset your phone to its default settings. To reset your phone:

1. When the Idle screen displays, press the **Menu** soft key.
2. Select **Settings** → **Reset Settings** and press the **Select** soft key or the  key.
3. The following options are available. Use the **Up** or **Down** Navigation key to scroll to and set options. Choose from the following:
 - **All**
 - **Sound Settings**
 - **Display Settings**
 - **Phone Settings**
4. Press the  key to make your selection by placing a checkmark adjacent to the option and pressing the **Reset** soft key.


5. At the “**Reset Settings?**” prompt, press the **Yes** soft key to reset, or the **No** soft key to cancel. Once your phone has been reset to its default settings for those selected options, it will restart itself in order to incorporate the new settings.
6. Enter your phone password, if prompted.

- **My Stuff**
- **Address Book**

Note: To completely remove any personal information stored on your device, see “*Precautions for Transfer and Disposal*” on page 95.

Used Space

You can easily check the amount of memory being used for storing data, such as messages, media, calendar data, or contacts entries. You can also delete any selected information from your phone:



1. When the Idle screen displays, press the **Menu** soft key.
2. Select **Settings → Used Space** and press the **Select** soft key or the  key.
3. use the **Up** or **Down** Navigation key to view the memory allocation for the following options:
 - **Shared Memory**
 - **Messaging**


Section 9: My Stuff

The topics covered in this section are audio, graphics, games, calendar, schedule events, set an alarm, and perform simple math calculations.

Audio

The **Audio** menu option allows you to shop tones, answer tones, and music using the WAP browser. You can download, record new, and save to your Downloaded Ringtones folder. To access the **Audio** menu option, use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Use the navigation keys to highlight **My Stuff** and press the **Select** soft key or the  key.
3. With the **Audio → Tones** option highlighted, press the **Select** soft key or the  key.
4. Highlight the **Shop Tones** menu option to launch the WAP browser and select a file to download. Follow the on-screen options. These files are downloaded and stored in the **Downloaded Tones** folder.

5. From the **Audio → Tones** menu, highlight **Default Tones** to select from the pre-loaded ringtones on your phone.
6. Highlight an available entry, press the **Options** soft key and select **Set as** to save the selected ringtone as one of the following:
 - **Ringtone**
 - **Caller Ringtone**
 - **Alarm Tone**
7. Once you have chosen from one of the above options, press the **Select** soft key or the  key.
8. At the “**Set as Ringtone?**” screen, press either the **Yes** soft key (to make the assignment) or press the **No** soft key to cancel the selection and return to the previous screen.

Answer Tones

You can shop and download Answer Tones, manage your Answer Tones, and access Help files. To access the **Answer Tones** menu option, use the following steps:

1. In Idle mode, press the **Menu** soft key, then select **My Stuff → Audio → Answer Tones**.


The following options display:


- **Shop Answer Tones:** Launches the WAP browser. Select a file to download and follow the on-screen options.
- **Manage Answer Tones:** Launches the WAP browser. You can assign Answer Tones to Callers and Groups, turn your greeting on or off, and shop for more Answer Tones.
- **About Answer Tones:** Launches the WAP browser. You can navigate through the frequently asked questions regarding Answer Tones.


2. Follow the on-screen options.

Record Audio

Record Audio allows you to record voice memos. It also allows you to send your audio clip to other people as an attachment of an MMS message. You can set voice memos as the voice call ringtone or as the ringtone for a contact. Recording time is limited to free memory space available.

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff → Audio → Record Audio** and press the **Select** soft key or the  key.

3. Press the **Options → Record** to start recording, or press the  key. Record a memo by speaking into the microphone.




4. Press the  key to pause. Press the **Save** soft key to save. If the recording time expires, the message is automatically saved. Press the **Options** soft key to display the following options:

- **Record:** allows you to record another.
- **Go to Recorded Audio:** allows you to go to the recorded Audio.
- **Send via Multimedia Message:** allows you to send your memo to other people by using MMS.
- **Set as:** allows you to set the audio recording as a Ringtone, Caller Ringtone, or an Alarm Tone.
- **Delete:** allows you to delete the memo.
- **Rename:** allows you to change the memo's name.
- **Lock/Unlock:** allows you to lock or unlock the recorded audio file.
- **Properties:** displays the Name, Date, Format, Length, Size, and Lock/Unlock of the voice memo.

5. To exit, press the **Back** soft key or the  key.


Recorded Audio

This menu shows a list of saved voice memos. When a voice memo is recorded and saved, it is stored in the Recorded Audio folder. To access this menu use the following steps:


1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff** → **Audio** → **Recorded Audio** and press the **Select** soft key or the  key.
3. Use the **Up** or **Down** Navigation key to select a recorded memo.
4. A list of voice memos displays. To play a recording, press the  key.
5. To exit, press the **Back** soft key or the  key.

Graphics

The **Graphics** menu option allows you to shop graphics using the WAP browser. When you download new images, they are automatically saved in your **Downloaded Graphics** folder. To access the Graphics menu option, use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu. Select **My Stuff** → **Graphics** → **Shop Graphics** and press the **Select** soft key or the  key to launch the WAP

browser and select a file to download. Follow the on-screen options. These files are downloaded and stored in the **Downloaded Graphics** folder.

2. From the **Graphics** menu, highlight **My Photos** to access the photos you have taken with your phone and press the **Select** soft key or the  key to access list of photos.
3. Highlight a photo from the list and press the **Options** soft key to access the following options:
 - **View**: allows you view the currently selected photo.
 - **Display Mode**: allows you view the photos in the list in either a **Line view** or as **Thumbnail View**.
 - **Send**: allows you to send the photo via either **via Multimedia Message** (MMS) or to an **HP's Snapfish**.
 - **Set as**: allows you to assign the current image file as either a **Wallpaper** or **Caller ID** (where the photo is assigned to a selected contact for their Caller ID).
 - **Delete**: deletes either the **Selected** file or **Multiple** image files.
 - **Rename**: allows you to rename the photo.
 - **Slide Show**: allows you to view the My Photos folder images as a slide show.
 - **Lock/Unlock**: allows you to lock the photo and prevent deletion.

- **Properties:** shows the Name, Date, Format, Resolution, Size, Quality, Lock/Unlock.
4. From the **Graphics** menu, highlight **Default Wallpapers** to select from the pre-loaded wallpaper on your phone.
 5. Use the navigation keys to view the available wallpapers and press the **Save** soft key to set the wallpaper selection.

Used Space



The Memory Status menu option allows you to view the usage and available memory for My Stuff (Graphics & Audio). **Used Space** option, use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **My Stuff → Used Space**.
3. Press the **Back** soft key to return to the **My Stuff** menu.

Games & Apps

The **Games & Apps** menu option allows you to shop games using the WAP browser. You can download new, and save to the **My Games & Apps** folder. To access the **Games & Apps** menu option, use the following steps:



1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Select **Games & Apps → Shop Games** to launch the WAP browser and select a file to download. Follow the on-screen options. The files downloaded will be stored in the **My Games & Apps** folder.
3. To access a pre-installed game, highlight **My Games & Apps** and press the  key. Select a game and press the  key.

Camera

Taking Photos

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.


1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **My Stuff → Tools → Camera** and press the **Select** soft key or the .
3. Press the  key to take the photo.

Note: Your camera produces photos in JPEG format.

4. Or before taking the photo, press the **Menu** soft key to access camera options.


Camera Options

- **Size:** allows you to set the image size. The icon for the selected image size appears on the capture screen
- **Timer:** allows you to set a time delay before the camera takes the photo.
 - Off
 - 3 Seconds
 - 5 Seconds
 - 10 Seconds
- **White Balance:** allows you to choose the white balance for the photo, choose from Automatic, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Effects:** allows you to choose a custom color tone for your photo. Choose from the following Effects Mode.
 - **No Effects:** automatically adjust the picture for the best quality available.
 - **Black & White:** removes all color and display the picture as black and white.
 - **Negative:** changes the image to a negative image display.
 - **Sepia:** adds a sepia tint to the picture. This is the common orange tint that was popular in early photography.

- **Emboss:** changes to reflect raised images.
 - **Sketch:** changes the image to appear like a sketch drawing.
 - **Antique:** changes the image to appear with an antique effect.
 - **Moonlight:** changes the image to have a moonlight effect.
 - **Fog:** changes the image to have a fog effect.
- **Viewfinder Mode:** removes the menu options when taking a picture. Press the  key to access.
 - **Camera Settings:** allows you to customize your camera settings. Choose the following options:
 - **General Settings**
 - Zoom Sound
 - Brightness Sound
 - **Camera Settings**
 - Shutter Sound
 - Viewfinder Mode
 - Scene Program
 - Metering Exposure
 - Single Shot
5. Press the **Save** soft key to save the settings, or press the **Back** soft key to return to the picture viewer.




You can use the keypad to quickly change the camera options using the camera shortcut keys.

Camera Options after a Photo is Taken

After you have taken a photo, you can use various options by pressing the **Options** soft key. Highlight an option and press the **Select** soft key or the  key. The following options are available:

- **Send**: allows you to send the photo in via a **Multimedia message** or to **HP's Snapfish**.
- **Take Another**: launches the viewfinder and allows you to take another photo.
- **Set as**: allows you to set the photo as your **Wallpaper** or as a **Caller ID** for a contact.

Accessing the Photos Folder



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Use the navigation keys to highlight **My Stuff** and press the **Select** soft key or the  key.
3. Highlight **Graphics** and press the **Select** soft key or the  key.
4. Use the **Up** or **Down** Navigation key to select the **My Photos** folder press the **Select** soft key or the  key.

Alarms






 
This feature allows you to:

- set the alarm to ring at a specific time.

To set the alarm:

1. In Idle mode, press the **Menu** soft key to access the menu mode.
2. Select **My Stuff** → **Tools** → **Alarms** and press the **Select** soft key or the  key. The following options display:
 - **Wake-up Alarm**: the alarm rings to wake you up at the specified time.
 - **Alarm 1**: first alarm setting.
 - **Alarm 2**: second alarm setting.
 - **Alarm 3**: third alarm setting.
 - **Alarm 4**: fourth alarm setting.
3. Select an alarm type and press the **Select** soft key or the  key. Set the following options:
 - **Alarm Name**: use the keyboard to assign a name to the alarm.
 - **Alarm**: use the **Left** or **Right** Navigation key to turn the Alarm On or Off.

Note: Your phone is preset to a 12-hour format. To change the time format, see “Set Time & Date” on page 46.


- **Alarm Time:** use the alphanumeric keypad enter a time for the alarm to sound.
 - **AM/PM:** use the **Left** or **Right** Navigation key to select AM or PM.
 - **Alarm Type:** press the  key to access the **Alarm Type** screen. To set the Alarm Tone, use the **Up** or **Down** Navigation key to select Melody, Increasing Melody, Vibration, Melody and Vibration, Increasing Melody and Vibration, or Vibration then Melody. Press the **OK** soft key or the  key to make your selection.
 - **Alarm Tone:** press the  key to access the **Alarm Tone** screen. To set the Alarm Tone, use the **Up** or **Down** Navigation key to select the tone. Press the **Select** soft key or the  key to make your selection.
 - **Volume:** sets the volume of the alarm sound.
 - **Alarm Day:** press the  key to access the **Alarm Day** screen. To set the days of the week you wish your alarm to sound, use the **Up** or **Down** Navigation keys to select the day and press the  to mark the day. Press the **OK** soft key to save the changes.
 - **Snooze:** use this option to turn on and set the snooze interval. Choose from Off, 1 Min, 3 Min, 5 Min, 7 Min, or 10 Min.
 - **Repeat:** use this option to set the repeat intervals. Choose from 1, 2, 3,5, or 10.
4. Press the **Save** soft key to save changes.

Note: To stop the alarm when it rings, open the phone and press any key or press the volume keys.


Note: Press the **OK** soft key Confirm to turn off the alarm, press **Snooze** soft key to silence the phone for 1,3,5,7 or 10 minutes.

Calendar

The calendar feature allows you to view the Month, Week, and Day layout views. You can also create Appointment, Anniversary, and Miscellaneous Task entries. It also shows any Missed Alarm Events that have occurred. To access the Calendar menu, use the following steps:


1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff** → **Tools** → **Calendar** and press the **Select** soft key or the  key.

Tip: To quickly access your calendar, quickly press the **C** key.

3. Press the **Options** soft key and highlight **Create**. Highlight the entry and press the **Select** soft key or the  key. Enter text in the selected screen and enter the appropriate information for that selection screen press the **Save** soft key. The following options are available:



Appointment

To schedule an appointment use the following options:

- **Subject:** enter the Memo subject using the keypad.
 - **Details:** enter the appointment details.
 - **Start Date:** enter the start date for the appointment
 - **Start Time:** enter the start time for the appointment.
 - **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the start time of the scheduled event and press the **Save** soft key.
 - **End Date:** enter the end date for the appointment.
 - **End Time:** enter the end time for the appointment.
 - **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the End time of the scheduled event and press the **Save** soft key.
 - **Location:** enter the location of the appointment.
 - **Alarm:** allows you to set an alarm for this event. Press the  key to enter an alarm time in the **before** field, enter the time increment you wish for the alarm to sound prior to the Appointment. Choose from min, hour, day, or week.
 - **Repeat:** in this field, choose to repeat the alarm every Day, every Week, or every Month. In the until field, enter the date you wish the alarm to stop.
4. When you have finished, press the **Save** soft key.

Anniversary

To schedule an anniversary use the following options:


- **Occasion:** enter the Anniversary Occasion.
- **Date:** enter the Anniversary Date.
- **Alarm:** allows you to set an alarm for this event. Press the  key to enter an alarm time. In the **before** field, enter the time increment you wish for the alarm to sound prior to the Anniversary. Choose from day or week.
- **Alarm Time:** enter the Alarm Time using the keypad and press the **Save** soft key.
- **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the End time of the scheduled event and press the **Save** soft key.
- **Repeat Every Year:** press the  key to repeat this anniversary reminder every year.

When you have finished, press the **Save** soft key.

Miscellaneous

To schedule an event use the following options:


- **Subject:** enter the Subject using the keypad.
- **Details:** enter the details applicable to the miscellaneous entry.
- **Start Date:** enter the start date for the miscellaneous entry.
- **Start Time:** enter the start time for the miscellaneous entry.

- **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the start time of the scheduled event and press the **Save** soft key.
- **End Date:** enter the end date for the miscellaneous entry.
- **End Time:** enter the end time for the miscellaneous entry.
- **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the end time of the scheduled event and press the **Save** soft key.
- **Alarm:** allows you to set an alarm for this event. Press the  key to enter an alarm time in the **before** field, enter the time increment you wish for the alarm to sound prior to the Miscellaneous. Choose from min, hour, day, or week.

5. When you have finished, press the **Save** soft key.

Task

To schedule a task use the following options:

- **Task:** enter the task using the keypad.
- **Start Date:** enter the start date for the task entry.
- **Due Date:** enter the date the task is due.
- **Priority:** enter the priority of the task, choose from High, Normal, or Low.
- **Alarm:** allows you to set an alarm for this task. Press the  key to enter an alarm time. In the **before** field, enter the time increment you wish for the alarm to sound prior to the task. Choose from day or week.

- **Alarm Time:** enter the Alarm Time using the keypad and press the **Save** soft key.
- **AM/PM:** use the **Left** or **Right** Navigation key to select **AM** or **PM** for the end time of the task and press the **Save** soft key.



6. When you have finished, press the **Save** soft key.

Event Options


The following options display when pressing the **Options** soft key after setting an event.

- **View:** allows you to view the details of the event.
- **Create:** allows you to create a new event.
- **Send via Multimedia Message:** allows you to send the event via Multimedia Message.
- **View by:** allows you to view events by Month, Week or Day.
- **Event List:** allows you to view the events by a list.
- **Delete:** this option allows you to delete the **Selected** event by **This Day** from the calendar, or **All** events scheduled.
- **Settings:** allows you to set the Starting Day for the week and the Default View by.
- **Missed Alarm Events:** allows you to view the events that have alarms that were missed.
- **Used Space:** allows you to view the space used by Appointments, Anniversaries, Miscellaneous, and Tasks.

Viewing an Event

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff** → **Tools** → **Calendar** and press the **Select** soft key or the  key.
The calendar displays with today date highlighted.
3. Select the date of the event (s) you want to view and press the  key or use the navigation keys to move to the date with an assigned event.


Note: The icon categories displayed at the bottom display any events scheduled for the day you selected.

4. Press the **Up** or **Down** Navigation key to scroll to the previous or next event.
5. When you have finished, press the  key.

Notes


This option allows you to create notes to add to your events.

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **Tools** → **Notes**. A blank screen displays.


3. Press the **Options** soft key, then select **Create**.
4. Enter your text, press the **Options** soft key and select **Save**, or press .

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.


1. In Idle mode, press the **Menu** soft key to access menu mode.
1. Select **My Stuff** → **Tools** → **Calculator** and press the **Select** soft key or the  key.
2. Enter the first number using the numeric keys.

Note: To include a decimal point or a bracket, press the left soft key until the symbol you want displays.

3. Enter the operation for your calculation by pressing the navigation keys, according to the illustration on the display.
4. Enter the second number.
5. To view the result, press the .


Tip Calculator

This tool provides an amount based upon the input entered into the following fields.

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff → Tools → Tip Calculator** and press the **Select** soft key or the  key.
 - **Bill:** enter the total bill amount.
 - **Tip(%)**: enter the percentage of tip.
 - **Tip(\$)**: the amount based upon the tip percentage and the # paying is populated.
 - **# paying**: allows you to enter the number of people contributing to the tip amount.
 - **You pay**: the amount you pay for total bill plus your tip amount.

Converter

The conversion menu provides the following conversion categories:




1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff → Tools → Converter** and press the **Select** soft key or the  key.

- Currency

- Length
- Weight
- Volume
- Area
- Temperature

Timer



You can use this menu to set a countdown timer. To enable the Timer, use the following options:

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **My Stuff → Tools → Timer** and press the **Select** soft key or the  key.
3. Press the **Set** soft key to enter the length of time.
4. Enter the time and press the **OK** soft key.
5. Press the  key to Play the timer. Press the  key to Pause the timer.

Stopwatch

1. In Idle mode, press the **Menu** soft key to access menu mode.


2. Select **My Stuff** → **Tools** → **Stopwatch** and press the **Select** soft key or the  key.

You can use this menu to measure intervals of time for 4 separate times. Press the  key to start the stopwatch. Press the  to stop the stopwatch. Press the **Reset** soft key to erase all times recorded.

World Time

World Time allows you to view the time of day or night in as many as 30 different cities around the world, within all 24 time zones. When using the World Time feature while traveling, it is possible to set not only your local time zone, but the visiting time zone as well.





Note: Be sure to set your local time zone first, and then set the visiting time zone.

1. Select **My Stuff** → **Tools** → **World Time** and press the **Select** soft key or the  key.
2. Use the **Left** or **Right** Navigation keys to browse cities and times. Press the **SetDST** soft key to save the new city time and date.

Section 10: WAP

Your phone is equipped with a WAP (Wireless Application Protocol) browser which allows you to access Internet specified for mobile phones. This section explains how to access the WAP services of your service provider and navigate the WAP browser.

Launching the WAP Browser



1. In Idle mode, press the  key to launch the WAP browser. You can also press the **Menu** soft key to access menu mode and highlight **MEdia Net** and press the **Select** soft key then the  key.
2. Select **MEdia Net Home** and press the **Select** soft key or the  key. Your phone is connected to the network and loads the homepage of the Wireless Web service provider. The content of the start-up homepage depends on your Wireless Web service provider.
3. To scroll through the screen, use the **Up** and **Down** Navigation keys.
4. To exit the browser at any time, simply press the  key.

Access a WAP Site


There are several ways to access a WAP site:

- Selecting a link on the browser
- Using a bookmark item in the Favorites folder; use the Bookmarks option on the browser menu list or Favorites menu.
- Entering a URL address manually; select **Enter URL** on the Browser Menu list.

Navigating the WAP Browser

1. To scroll through browser items, press the **Up** or **Down** Navigation keys.
2. To select a browser item, press the  key or press the **Options** soft key and choose **Select**.
3. To return to the previous page, press the  key, or press the **Options** soft key and choose **Back**.
4. To access the browser menu list, press the **Menu** soft key.
5. To return to the start-up homepage, press the **Menu** soft key and select the **MEdia Net Home** option.

Entering Text in the WAP Browser

When you are prompted to enter text, the currently active text input mode is indicated on the screen. To change the text input mode, press the  key one or more times.

The following modes are available:

Upper-Case Alphabet Mode (A): allows you to enter upper-case characters.

Lower-Case Alphabet Mode (a): allows you to enter lower-case characters.



Note: You can enter symbols in upper or lower case alphabet mode by pressing the 1 key.

T9 Mode (T9): allows you to enter characters by pressing one key per letter. In this mode, you can use only the 0 key to display alternative words. To change case, press the * key.

Number Mode (1): allows you to enter numbers.

Selecting and Using Menu Options

Various menus are available when you are using the WAP Browser to navigate the Wireless Web.

1. In Idle mode, press the  key to launch the WAP browser. You can also press the **Menu** soft key to access menu mode and highlight **MEdia Net** and press the **Select** soft key or the  key.

Note: The menus may vary, depending on your version of the WAP Browser.

2. To access a menu option, press the **Menu** soft key to display the following list of options:
 - **Enter URL:** allows you to manually enter the URL address of a WAP site. After entering an address, press the Select soft key to go there directly.
 - **Go to Favorites:** shows the bookmarks list. You can bookmark the current page or access previously bookmarked pages.
 - **Go to Messaging:** takes you to the Messages menu where you can choose to either create a new text message (using the WAP server) or access messages from one of the available folders: Inbox, Sent, Outbox, Draft, or My Folder.
 - **Go to My Stuff:** takes you to the My Stuff menu. For more information, refer to “*My Stuff*” on page 56.
 - **MEdia Net Home:** takes you back at any time to the homepage of the Wireless Web service provider.
 - **Back:** reloads the Media Net Home page.
 - **Show URL:** shows the URL address.
 - **Reload:** reloads the current page.
 - **Add to Favorites:** adds the URL to your Favorites list.

Using Favorites




While navigating the WAP browser, you can bookmark the site to quickly and easily access it at a future time. The URL addresses of the bookmarked sites are stored in the Favorites folder,

wherein you can use the preset URL addresses and store your favorite URL addresses.

Accessing a WAP Site Using Favorites



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **MEdia Net → Favorites**.
3. Select a bookmark item on the Favorite list.

Storing a URL Address



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **MEdia Net → Favorites**.
3. Select an **<Empty>** location, and press the  key.
4. Enter the name and URL and press  key.
5. When you have finished, press the  key.

Editing a Favorites

1. From the **Favorites** list, select the bookmark you want to change.
2. Select **Options** and select **Edit**.

3. Change the address and the name, as you would when storing a new one.
4. Press the  key.
5. When you have finished, press the  key.

Deleting a Favorites

1. From the **Favorites** list, select the bookmark you want to delete.
2. Select **Options** and select **Delete**.
3. Use the navigation key to choose from **Selected**. Press the **Select** soft key.
4. Press the **Yes** soft key or the  key to confirm the deletion.
5. When you have finished, press the  key.

Downloading Multimedia Files

You can buy a variety of multimedia files, such as ringtones, graphics, applications, Multimedia contents, and so on from the WAP browser and download them to your phone's memory. Your phone has embedded links to the WAP sites providing you with download services, preset by your service provider.




1. In Idle mode, press the **Menu** soft key to access Menu mode and select **MEdia Mall**.
2. Highlight **Shop Tones, Shop Games, Shop Graphics, Shop Multimedia, Shop Applications, or Shop Themes, MEdia Net Home** depending on the type of items you want to buy.
 - To access homepage of the online shopping mall, select **MEdia Net Home**.
3. Find the item you want to download and follow the on-screen instructions to purchase it.

Note: This content is delivered to you in Multimedia messages. You can retrieve the messages from the server and then save the items in your phone's memory. you cannot forward these messages to other people or add the saved items to a Multimedia message.

Clearing the Cache


The cache is the phone's temporary memory in which the most recently accessed WAP pages are stored. You can clear the cache at anytime.

1. In Idle mode, press the **Menu** soft key to access Menu mode.


2. Highlight **MEdia Net** and press the **Select** soft key or the  key.
3. Select **Clear Cache**.
4. Press the **Yes** soft key or the  key to confirm the deletion.
5. When you have finished, press the  key.

Changing the WAP Profiles

You can set up server profiles for the WAP browser.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **MEdia Net → Browser Profiles**.
3. Highlight **Profile Settings** and press the **Select** soft key or the  key.
4. Select the profile you want.

For each profile, the following options are available:

- **Profile Name:** enter a name that you wish to assign to the HTTP proxy server.
- **Home URL:** set the address of your startup homepage. When the default homepage displays, you can delete it using the  key and enter your own choice.

- **Proxy use:** place a check in the box to use the proxy server.
- **GPRS setting:** allows you to choose from the following options:
 - **Proxy Address:** enter the Proxy address of the proxy server.
 - **Proxy Port:** enter a port number or use default setting.
 - **APN:** enter the access point name used for the address of the GPRS network gateway.
 - **Login ID:** enter the User ID required to connect to the GPRS network.
 - **Password:** enter the password required to connect to the GPRS network.

Note: The WAP settings may vary depending on the service provider.

Section 11: Accessibility

TTY Settings*

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Use the following steps to access the TTY settings:

1. Obtain a TTY device with a compatible Samsung connector. For more information on insertion and connection, see *“Charging a Battery”* on page 6.
2. Temporarily remove the plastic Power Interface Connector/headset cover, located on the side of the phone.
3. Plug the TTY device’s connector into the connector jack to enable the **TTY Mode**.
4. Remove the TTY device’s connector from the phone’s connector jack to disable the **TTY Mode**.

For additional technical support you may access the following website or call
1-888-987-4357.

http://www.samsungtelecom.com/contact_us/accessibility.asp

Section 12: Health and Safety Information

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of

absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains

no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

GSM850 Head 1.07 W/Kg

Body 0.924 W/Kg

PCS1900 Head 1.14 W/Kg

Body 0.476 W/Kg

SAR information on this and other model phones can be viewed on-line at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://www.samsung.com/us/consumer/type/type.do?group=mobilephones&type=mobilephones> for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research.

In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require

the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals.

However, many of the studies that showed increased tumor development used animals that had been genetically engineered

or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can

provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones.

Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone

away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects.

Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as

advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance

requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/1/2006):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>

- National Radiation Protection Board (UK):
<http://www.hpa.org.uk/radiation>
- US Food and Drug Administration:
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.ctia.org.

Important! If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices).

Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, you noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before you hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

Hearing Aid Compatibility with Mobile Phones

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air


contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.

- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal

strength on the cellular network and the parameters set by the network operator.

- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 13: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

| | |
|-------------------------|---------|
| Phone | 1 Year |
| Batteries | 1 Year |
| Leather Case | 90 Days |
| Holster | 90 Days |
| Other Phone Accessories | 1 Year |

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number

removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service

facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG.

If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY

OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE

OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT

IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important! If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2008 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

A

Accessing a Menu Function 21

Address Book

- Finding Own Number 39
- Group Settings 38
- Searching for a Number 20
- Speed Dial 38
- Using Contacts List 35

Alarms 61

Alphabet mode 23

Answer Tones 56

Audio 56

B

Backlight 11

Barring 52

Battery

- charging 6
- installing 5
- low indicator 6
- removing 4

Bluetooth 52

C

Calculator 65

Calendar 62

Call Alert Type 43

Call Barring 52

Call Functions 15

- Adjusting the Call Volume 16
- Answering a Call 16
- Correcting the Number 15
- Making a Call 15
- Recent Calls 17
- Redialing Last Number 15

Call Settings

- Ringtone Volume 43
- Voice Call Ringtone 43

Call Time 17

Call Waiting 20, 52

Camera

- Options 60
- Photos Folder 61
- Taking Pictures 59

Charging battery 6

Clear key 13

Command Keys 13

Converter 66

D

Data Call Time 18

Data Volume 18

Dialing a Number

- Address Book 35
- Correcting a Dialed Number 15
- International Call 15

Display Settings 44

E

End key 14

Ending a Call 15

Entering Text 23

- ABC mode 23
- Changing the Text Entry Mode 23
- Numeric mode 23, 26
- Symbols mode 23, 26
- T9 Mode 24

F
Functions and Options 12

G
Games 59
Getting Started 4
 Activating Your Phone 4
 Voice Mail 7

Graphics 58

H
Health and Safety Information 74

I
International Call 15

L
Left soft key 13
Low battery indicator 6

M
Making a Call
 Address Book 16
Menu Navigation 21
Message Settings
 Message Alert Repetition 43
 Message Alert Tone 43
 Message Alert Type 43

Messaging 27
 Types of Messages 27

Missed Call
 Deleting 17
 Viewing 17

Multimedia Files
 Downloading 70

Mute 19

My Stuff
 Answer Tones 56

N
Navigation key 14
Network Selection 50

Network Services
 Call Forwarding 51
Normal Profile 42
 Call Settings 43
 Message Settings 43
 Phone Settings 43

Notes 65

Numeric mode 23

O
Options
 During a Call 18
 Putting a Call on Hold 18

Other Profiles
 Driving Profile 44
 Outdoor Profile 44
 Silent Profile 44

P
Personal Assistant 56
 Alarms 61
 Calculator 65
 Calendar 62
 Converter 66
 Notes 65
 Stopwatch 66
 Timer 66
 Tip Calculator 66

Phone
 Backlight 11
 Icons 12
 Keys 11
 Powering on/off 7
Phone Safety 84
Phone Settings
 Keypad Tone 43
 Power On Type 43
Photos 61

Q
Quick Tips 42

R
Reject List 40
Right soft key 13

S
SAR values 74
Security 47
Security Settings 47
Send key 14
Service Number 40
Settings 42
 Own Number 47
 Reset Settings 54
 Used Space 54
Shortcuts 21, 47
Silent Mode 18
SIM card
 installing 5
 removing 5
Soft Keys 13
Sound Settings 42
 Normal Profile 42
 Other Profiles 43

Space 59
Speakerphone Key 14
Speed Dial
 Setting Up Entries 38
Standard Limited Warranty
 92
Stopwatch 66
Storing a Number
 Address Book 36, 37
 Phone's Memory 36
 SIM Card 37
Symbols mode 23

T
Text Input Mode
 ABC 23
 Changing 23
 Numeric 23
 Symbols 23
Text Messages 27
Timer 66
Tip Calculator 66

U
UL Certification 75
Understanding Your Address book
 Group 38
 Own Phone Number 39
 Speed Dial 38
Understanding Your Phone 9
 Features of Your Phone 9
 Front View of Your Phone 11
 Open View of Your Phone 9

V
Viewing an Event 65
Voice Mail
 Changing number 7
 Setting up 7

W
Wall charger 6
Warranty Information 92