



SGH-S501i User's Guide





Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.



Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service







Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 115.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you can get more information on the referenced page.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
-  Indicates a key on the phone. For example, []
-  Indicates a soft key, whose function is displayed on the phone screen. For example, <Select>



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.

Special features of your phone



- **Image editor**

Crop, resize, rotate, and decorate your photos.



- **Media player**

Play media files using your phone as a media player.



- **File viewer**

Open documents in various formats on the phone without corruption.



- **Bluetooth**

Transfer media files and personal data and connect to other devices using free, wireless Bluetooth technology.



- **Photo printing**

Print your photos to preserve your best moments forever.



- **i-mode browser**

Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Get personal with photo/video caller ID**

See who's calling you when their very own photo or video displays.



- **Name card**

Create name cards with your number and profile.



- **Multimedia Message Service (MMS)**

Send and receive MMS messages with a combination of text, image, video, and audio.



- **E-mail (i-mail)**

Send and receive e-mails with image, video, and audio attachments.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Voice recorder**

Record memos or sounds.

Contents

Unpack 6

Make sure you have each item

Your phone 6

Keys, features, and locations

Get started 7

First steps to operating your phone

Install and charge the phone 7

Power on or off 9

Keys and display 9

Access menu functions 13

Customise your phone 14

Make/Answer calls 17

Step outside the phone 17

Begin with your camera, the media player, the web, and other special features

Use the camera 17

Play media 18

Browse the web 20

Use Phonebook 20

Send messages 22

View messages 24

Use Bluetooth 24

Use a memory card 26

Watch the phone display on a TV 28

Enter text 30

Stroke, T9 English, ABC, Number, and Symbol modes

Call functions 36

Advanced calling features

Menu functions 39

All menu options listed

Solve problems 112

Help and personal needs

Health and safety information 115

Overview of menu functions

To access Menu mode, press [Centre] in Idle mode.

1 Call log	p. 39	3 Applications	p. 46	5 i-mode	p. 63	7 Calendar	p. 85
1 Recent contacts	p. 39	1 Media player	p. 46	1 i-menu	p. 63		
2 Missed calls	p. 40	2 Voice recorder	p. 50	2 i-mail	p. 65	8 Camera	p. 89
3 Dialed calls	p. 40	3 Image editor	p. 51	3 Java	p. 73		
4 Received calls	p. 40	4 Java world	p. 53	4 SMS	p. 74	9 Settings	p. 97
5 Delete all	p. 40	5 Alarm	p. 53	5 Bookmarks	p. 74	1 Time and date	p. 97
6 Call time	p. 40	6 Calculator	p. 54	6 Go to internet	p. 75	2 Phone settings	p. 97
7 Call costs ¹	p. 41	7 Timer	p. 54	7 Saved Pages	p. 75	3 Display settings	p. 99
2 Phonebook	p. 41	8 Stopwatch	p. 55	8 Browser Settings	p. 76	4 Sound settings	p. 100
1 Contact list	p. 41	9 World clock	p. 55	6 My files	p. 77	5 Light settings	p. 101
2 Create contact	p. 42	10 Converter	p. 56	1 Images	p. 77	6 Network services	p. 102
3 Group	p. 43	11 SIM AT ¹	p. 56	2 Videos	p. 79	7 Bluetooth	p. 105
4 Speed dial	p. 44	4 Messages	p. 56	3 Music	p. 80	8 Security	p. 108
5 My name card	p. 44	1 Create message	p. 57	5 Sounds	p. 80	9 i-mode settings	p. 110
6 Own number	p. 45	2 My messages	p. 58	5 Frame	p. 81	10 Reset settings	p. 112
7 Management	p. 45	3 Templates	p. 60	6 My vMessages	p. 82		
8 Service number ¹	p. 46	4 Delete all	p. 61	7 Other files	p. 82		
		5 Settings	p. 61	8 Memory card ²	p. 84		
		6 Memory status	p. 63	9 Memory status	p. 85		

1. Shows only if supported by your SIM card.
2. Shows only if a memory card is inserted.

Unpack

Make sure you have each item

- Phone
- Travel Adapter
- Battery
- User's Guide

 
You can obtain various accessories from your local Samsung dealer.



- The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.
- Use the purchased accessories with only Samsung-authorized devices. The use of these accessories with other devices could cause problems and any repair costs would not be covered by the warranty.

Your phone

Keys, features, and locations

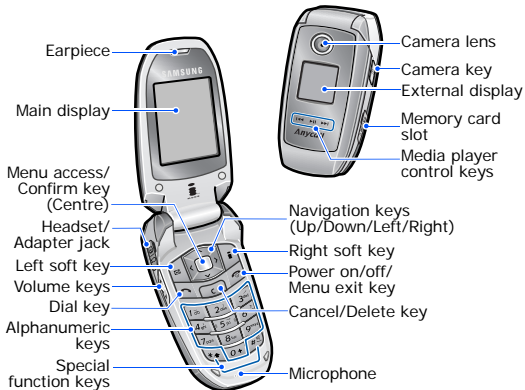

Get started

First steps to operating your phone

SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

Install and charge the phone

 
- 1 Remove the battery cover.

- ✓ If the phone is already on, first turn it off by pressing and holding [⏻].



- 2 Insert the SIM card.

- ✓ Make sure that the gold-coloured contacts on the card are face down.

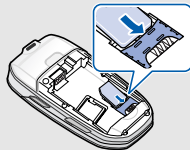


- 3 Install the battery.



- 4 Reattach the cover.



 
- 5 Plug the travel adapter into the phone.



- 6 Plug the adapter into a standard AC wall outlet.


- 7 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the wall outlet.

 - 8 Remove the adapter from the phone.



Low battery indicator


When the battery is low:

- a warning tone sounds,
- the low battery message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


Power on or off

Switch on

1. Open the phone.
2. Press and hold [].
3. If necessary, enter the PIN and press <OK>.

Do not turn on the phone when mobile phone use is prohibited.

Switch off

1. Open the phone.
2. Press and hold [].

Keys and display

Keys



In Menu mode, perform the function indicated on the bottom line of the display.



In Idle mode, access your favourite menus directly.
▶ p. 98

In Menu mode, scroll through menu options.



In Idle mode, enter Menu mode. Also, launch the i-mode browser when held down.

In Menu mode, select the highlighted menu option or confirm input.



Make or answer a call.
In Idle mode, retrieve numbers recently dialed, missed, or received.



Press and hold to switch the phone on or off.
End a call.
In Menu mode, cancel input and return the phone to Idle mode.



Delete characters from the display.
In Menu mode, return to the previous menu level.



Enter numbers, letters, and some special characters.



In Idle mode, press and hold [1] to access your voicemail server.
Press and hold [0] to enter an international call prefix.



Enter special characters.



In Idle mode, press and hold [#] to activate or deactivate Quiet mode. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.

In Idle mode, with the phone open, adjust the key tone volume. With the phone closed, press and hold to turn on the external display.

Press and hold to activate the touch keypad first before playing the media player with the phone closed.



In Idle mode, press and hold to turn on the camera.

In Camera mode, take a photo or record a video.



Press and hold to launch or close the media player.

Start playing music or pause playback.



 
Move back to the previous file during playback.



Skip to the next file during playback.

Display

Layout

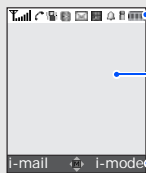

Icons

display various icons.






Text and graphics








 

 

display messages, instructions, and information you enter.





 

 

 
Soft key function indicators

show the current functions assigned to the soft keys.

Icons¹

-  Received signal strength
- 
 - Grey: a message on your phone; when a message is being retrieved, the icon blinks
 - Yellow: a message on the i-mode server
 - Red: Inbox is full
-  Connected to Java application
-  Call in progress
-  Out of your service area; you cannot make or receive calls

-  Call ringer set to vibrate
-  Quiet mode (Vibration)
-  Quiet mode (Mute)
-  Mute mode, during a call
-  Synchronised with PC
-  Music playback in progress
-  Music playback paused
-  Connected to Bluetooth hands-free car kit or headset
-  Bluetooth active
-  New SMS message
-  New voicemail

 
-  Memory card inserted
-  Alarm set
-  Roaming network
-  Home Zone, if registered for the appropriate service
-  Office Zone, if registered for the appropriate service
-  i-mode is active
 - Yellow: in a GPRS network
 - Grey: in a GSM network
-  i-mode connection is being made
-  i-mode is locked
-  Battery power level

1. Depending on your country or service provider, the icons shown on the display may vary.

Access menu functions

Use the soft keys


The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

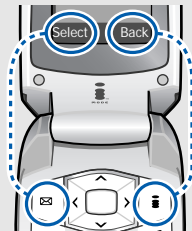

Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press <**Select**> or [Centre] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods.
 - Press <**Back**> or [C] to move up one level.
 - Press [] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press [Centre] and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

Idle mode wallpaper

You can set wallpaper for the idle screen on the main display.

1. In Idle mode, press [Centre] and select **Settings** → **Display settings** → **Wallpaper** → **Main display**.

2. Select an image or a video category.
3. Select an image or a video.
4. Press <**Select**>.
5. Press <**Save**>.

Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press [Centre] and select **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

Call ringer melody

1. In Idle mode, press [Centre] and select **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
2. Select a ringtone category.
3. Select a ringtone.
4. Press <**Save**>.

Menu shortcuts

You can set the Navigation keys as shortcuts to access your favourite menus.

1. In Idle mode, press [Centre] and select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Quiet mode

You can switch the phone to Quiet mode to avoid disturbing other people.

Press and hold [#] in Idle mode.



Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.



1. In Idle mode, press [Centre] and select **Settings** → **Security** → **Phone lock**.
2. Select **Enable**.
3. Set up a 4- to 8- digit password, and re-enter it for confirmation and press <**OK**>.

Make/Answer calls



Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [].
3. To end the call, press [].

Answer a call

1. When the phone rings, press [].
2. To end the call, press [].

Adjust the volume during a call



Press [/].

Step outside the phone

Begin with your camera, the media player, the web, and other special features

Use the camera





Take a photo

1. In Idle mode, press and hold [] to turn on the camera.
2. Aim the lens at the subject and make any desired adjustments.
3. Press [Centre] or [] to take a photo. The photo is saved automatically.
4. Press <Preview> to take another photo.

View a photo

1. In Idle mode, press [Centre] and select **My files** → **Images** → **My photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [] to turn on the camera.
2. Press [1] to switch to Record mode.
3. Press [Centre] or [] to start recording.
4. Press [Centre], < >, or [] to stop recording. The video is saved automatically.
5. Press <**Preview**> to record another video.

Play a video

1. In Idle mode, press [Centre] and select **My files** → **Videos** → **My video clips**.
2. Select the video you want.

Play media

Copy media files to the phone

Use these methods:

- Download from the wireless web ▶ p. 63
- Download from a computer using the optional Samsung PC Studio ▶ Samsung PC Studio User's Guide
- Receive via Bluetooth ▶ p. 105

- Copy to a memory card and insert the card into the phone ► p. 26

Create a play list

1. In Idle mode, press [Centre] and select **Applications** → **Media player**.
2. Press <**Options**> and select **Add media from** → **Phone** or **Memory card**.
3. Press [Centre] to select the files you want and press <**Select**>.
4. Press <**Back**> to return to the media player screen.

Play media files

1. From the media player screen, press [Centre].
2. During playback, use the following keys:
 - Centre: pauses or resumes playback.
 - Left: moves back to the previous file.
 - Right: skips to the next file.
 - Up: opens the play list.
 - ▲/▼: adjusts the volume.
 - Down: stops playback.

Browse the web

Using the i-mode browser, you can easily access the wireless web to get a variety of up-to-date services and information and to enjoy downloads of web content.

Launch the i-mode browser

In Idle mode, press and hold [Centre].

Navigate the i-mode browser

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [Centre].
- To return to the previous page, press [Left].
- To access browser options, press <Options>.

Use Phonebook

Add a contact

To the phone's memory:

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Save contact** → **Phone** → **New** → a number type.
3. Specify contact information: First name, Last name, Mobile, Home, Office, Fax, Other, Email, Caller ID, Ringtone, Group, and Note.
4. Press <Save> to save the contact.

To the SIM card:

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → **SIM** → **New**.
3. Enter a name and press **<Save>** to save the contact.

Find a contact

1. In Idle mode, press [Centre] and select **Phonebook** → **Contact list**.
2. Select a contact.
3. Scroll to a number and press [↩] to dial, or press [Centre] to edit contact information.

Create and send a name card



1. In Idle mode, press [Centre] and select **Phonebook** → **My name card**.
2. Specify your contact information.
3. Press **<Save>** to save the name card.
4. To send the name card, press **<Options>** and select **Send via** → a sending method.

Send messages





Send a text message (SMS)

1. In Idle mode, press [Centre] and select **Messages** → **Create message**.
2. Enter your message.
3. Press <**Options**> and select **Save and send** or **Send only**.
4. Enter destination numbers.
5. Press [Centre] to send the message.

Send an MMS message (MMS)

1. In Idle mode, press <**i-mail**> and select **Compose MMS**.
2. Select the  field.
3. Enter destination numbers or e-mail addresses and press [Centre].
4. Select the  field.
5. Enter the message title and press [Centre].
6. Select **SMIL** → **Media** and add text, images, sounds, and videos.
7. On the slide preview screen, press <**Options**> and select **Send** to send the message.

Send an i-mail

1. In Idle mode, press <**i-mail**> and select **Compose i-mail**.
2. Select the  field.
3. Enter destination numbers or e-mail addresses and press [Centre].
4. Select the  field.
5. Enter the mail title and press [Centre].
6. Move to the  field to add files.
7. Press <**Options**> and select **Attach File Menu**.
8. Select the attachment field and use the following options for adding files:
 - **Attach File**: add images, sounds, videos, name cards, or schedule items.
 - **Attach Melody**: add MFi (Melody Format for i-mode) melody files.
 - **Attach Bookmark**: add bookmarks.
9. Select the  field.
10. Enter the mail text and press [Centre].
11. Select **Send** to send the mail.

View messages

View a text message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press [Centre] and select **Messages** → **My messages** → **Inbox**.
2. Select a message.

View an i-mail or MMS message

1. In Idle mode, press <**i-mail**> and select **Inbox** → an Inbox folder.
2. Select a message.

Use Bluetooth

Your phone is equipped with Bluetooth technology which enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

1. In Idle mode, press [Centre] and select **Settings** → **Bluetooth** → **Activation** → **On**.
2. Select **My phone's visibility** → **On** to allow other devices to find your phone.

Search for and pair with a Bluetooth device

1. In Idle mode, press [Centre] and select **Settings** → **Bluetooth** → **My devices** → **Search for new devices**.
2. Select a device.
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press <OK>.

When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, such as **Phonebook**, **My files**, or **Calendar**.
2. Scroll to an item.
3. Press <Options> and select **Send via** → **Bluetooth** → **Search for new devices**.
4. Select a device.
5. If necessary, enter the Bluetooth PIN and press <OK>.

Receive data

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

1. When a device attempts to access your phone, press **<Yes>** to permit the connection.
2. If necessary, press **<Yes>** to confirm that you are willing to receive.

Use a memory card

You can use an optional microSD memory card to increase your phone's memory capacity.

**Important
memory
card
information**

- Frequent erasing and writing will shorten a card's lifespan.
- Do not remove a card from the phone or turn off the phone while data is being accessed or transferred. This could result in loss of data and/or damage to the card or phone.
- Do not subject cards to strong shocks.
- Do not touch card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

- Do not expose cards in a place subject to electrostatic discharge and/or electrical noise.
- Keep cards away from small children or pets.

Insert a memory card

1. Slide a memory card into the card slot, with the label side face down.



2. Press the card until it locks into place.

Remove the memory card

1. Press the card so that it is disengaged from the phone.
2. Slide the card out of the slot.

Use a card adapter

Using a card adapter and a USB card reader/writer, you can read the card on a computer.

1. Insert a memory card into a card adapter, and then the adapter into a card reader/writer.



Use a card adapter
(continued)

2. Plug the USB connector of the card reader/writer into the USB port on your computer.
3. Access the appropriate memory disk and copy to and from the card.

Watch the phone display on a TV

 
You can view the display of your phone on a TV screen by connecting the phone and TV with a TV out cable. This enables you to enjoy the photos, videos and music stored in the phone's memory with your family or friends on a larger screen.

Important TV information

- Depending on your particular TV model, the location and shape of the video input and audio output ports may vary. Match cable connector and TV port colours.
- Depending on the video system, the image may vibrate or in some other way be less than optimal.
- Depending on the video quality, some video clips may not display.
- You cannot use a Bluetooth stereo headset or the zooming feature in TV Out mode.

**Transfer
phone
display to
a TV**

1. With the TV switched on, connect your phone to the TV with a TV out cable, as shown.

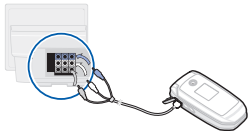

2. Switch the TV to External Input mode.
The display switches to TV Out mode and you can view the phone's display on the TV screen.

3. If necessary, set the video system for your TV in the **TV-out settings** menu.
▶ p. 100
4. Access the application you want and open files.

Enter text

Stroke, T9 English, ABC, Number, and Symbol modes

You can enter text for some features, such as Messages, Phonebook, or Calendar, by using Stroke modes for Chinese, and Quick English and English modes for English. You can also enter numbers and symbols.

Changing the text input mode

- Press the right soft key and select the text input mode you want.
Chinese T Stroke (T9 筆)
T9 English (T9 Ab)
ABC (AbAb)
Number (1 2 3)
Symbol (No indicator)
- Press and hold [*] to quickly switch to Symbol mode

Using Chinese Stroke mode

This mode allows you to enter individual Chinese strokes, in written order, from top to bottom, and from left to right.

The Chinese strokes are classified into five basic categories; heng, shu, pie, dian, and zhe. The basic strokes are printed on keys [1] to [5] on the keypad.

Refer to the following table:

Category	Key	Strokes represented in each category
一	1	一 ㇀
	2	㇁
ノ	3	ノ ㇂
丶	4	丶 ㇃
→	5	㇄ ㇅ ㇆ ㇇ ㇈ ㇉ ㇊ ㇋ ㇌ ㇍ ㇎ ㇏ ㇐ ㇑ ㇒ ㇓ ㇔ ㇕ ㇖ ㇗ ㇘ ㇙ ㇚ ㇛ ㇜ ㇝ ㇞ ㇟ ㇠ ㇡ ㇢ ㇣ ㇤ ㇥ ㇦ ㇧ ㇨ ㇩ ㇪ ㇫ ㇬ ㇭ ㇮ ㇯ ㇰ ㇱ ㇲ ㇳ ㇴ ㇵ ㇶ ㇷ ㇸ ㇹ ㇺ ㇻ ㇼ ㇽ ㇾ ㇿ ㊀ ㊁ ㊂ ㊃ ㊄ ㊅ ㊆ ㊇ ㊈ ㊉ ㊊ ㊋ ㊌ ㊍ ㊎ ㊏ ㊐ ㊑ ㊒ ㊓ ㊔ ㊕ ㊖ ㊗ ㊘ ㊙ ㊚ ㊛ ㊜ ㊝ ㊞ ㊟ ㊠ ㊡ ㊢ ㊣ ㊤ ㊥ ㊦ ㊧ ㊨ ㊩ ㊪ ㊫ ㊬ ㊭ ㊮ ㊯ ㊰ ㊱ ㊲ ㊳ ㊴ ㊵ ㊶ ㊷ ㊸ ㊹ ㊺ ㊻ ㊼ ㊽ ㊾ ㊿

Entering strokes and characters in Stroke mode

1. Press the keys that correspond to a character's component strokes. Press keys in the order that you would write the strokes, using one press per stroke.

Example: To enter 力, press [5] to enter → and [3] to enter ㇏.

If you are uncertain of the stroke order, press [6] in place of each questionable stroke. Continue entering strokes until the character displays or until you finish the character.

2. Press [Up] or [Down] to scroll through the choices.
3. To select a character and add it to your message, press the corresponding key, [7] to [✱].

Rapid character entry

Try entering the characters 中國 using the following keystrokes: [2], [8], and [7]. Even though 中國 is a fifteen stroke character, your phone allows you to enter the complete pair in only three key presses.

Tips for Stroke mode

- Press [#] to insert a space.
- Press and hold [#] to start a new line.
- Press [Left] or [Right] to move the cursor.
- Press [C] to clear letters one by one. Press and hold [C] to clear the entire display.

Using T9 English mode

This mode allows you to enter English by using T9 technology. T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 English mode

1. Press [2] to [9] to start entering a word.
Press each key once for each letter.

Example: Press [4], [3], [5], [5], and [6] to enter *Hello*.

T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting the characters.
3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed.
Example: *Of* and *Me* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

Tips for using T9 English mode

- Press [1] to enter periods or apostrophes automatically.
- Press [*] to change case.
- Press and hold [#] to start a new line.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one.
Press and hold [C] to clear the entire display.

Adding a new word to the T9 dictionary

1. Enter the word that you want to add.
2. Press [0] to display alternative words for your keys presses. When there are no more alternative words, **Add** appears on the bottom line.
3. Press <Add>.
4. Enter the word you want using ABC mode and press <OK>.

Using ABC mode

Press the appropriate key until the character you want appears on the display.

Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [*****] to change case.
- Press [**#**] to insert a space.
- Press and hold [**#**] to start a new line.
- Press the Navigation keys to move the cursor.
- Press [**C**] to delete characters one by one. Press and hold [**C**] to clear the display.

Using Number mode

Number mode enables you to enter numbers. Press the keys corresponding to the digits you want.

Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
scroll to a symbol set	the Navigation keys.
select a symbol	the corresponding number key.
clear the symbols	[C].
insert the symbols	< OK >.

Making a call

1. In Idle mode, enter the area code and phone number.



- Press [C] to clear the last digit or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold [*] to enter a pause between numbers.

2. Press [↵].
3. When you want to end the call, press [📞].

Making an international call

1. In Idle mode, press and hold [0]. The + character appears.
2. Enter the country code, area code, and phone number, then press [↵].

Redialling recent numbers

1. In Idle mode, press [↵] to display the list of recent numbers.
2. Scroll to the number you want and press [↵].

Making a call from Phonebook

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook. ▶ p. 41

You can also use the speed dial feature to assign your most frequently dialled numbers to specific number keys. ▶ p. 44

You can quickly dial a number from the SIM card using its location number assigned when stored.

1. In Idle mode, enter a location number and press [#].
2. Press [Left] or [Right] to scroll through other numbers.
3. Press <Dial> or [↩] to dial the number you want.

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <Accept> or [↩] to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key, except for [⏏] and <Reject>. ▶ p. 98
- When **Active folder** is active, you can simply open the phone. ▶ p. 98
- Press [⏏] or <Reject> to reject a call.
- Press and hold [▲/▼] to reject a call or mute the ringer, depending on the **Volume key** setting. ▶ p. 98

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <View>.
2. If necessary, scroll through the missed calls.
3. Press [↩] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone. The button on the headset works as follows:

To	Press
redial the last call	and hold the button twice.
answer a call	the button.
end a call	the button.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [**▲**/**▼**] to adjust the earpiece volume during a call.

Press [**▲**] to increase the volume level and [**▼**] to decrease the volume level.

Placing a call on hold/Retrieving

Press <**Hold**> or <**Retrieve**> to place a call on hold or retrieve the call.

Making a second call



You can make another call if your network supports it.

1. Press <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Swap**> to switch between the calls.
4. Press <**Options**> and select **End held call** to end the call on hold.
5. To end the current call, press [**⏏**].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature.

▶ p. 104

1. Press [] to answer the call. The first call is automatically put on hold.
2. Press <**Swap**> to switch between the calls.
3. Press <**Options**> and select **End held call** to end the call on hold.
4. To end the current call, press [].

Using the speakerphone feature

Use the phone as a speakerphone to talk and listen with the phone a short distance away.

Press [Centre] and then <**Yes**> to activate the speakerphone feature. Press [Centre] again to switch back to the earpiece.

Using In-call options

Press <**Options**> to access the following options during a call:

- **Speaker on/Normal:** turn on the speakerphone feature or switch back to Normal mode.
- **Switch to headset/Switch to phone:** switch the call to a Bluetooth headset or hands-free car kit or back to the phone.
- **Menu:** access the phone's menu functions.
- **Voice off/Voice on:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **Mute keys/Send keys:** switch the key tones on or off.

To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Phonebook:** access the contact list.
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to 5 people on a multi-party call.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other, but you are disconnected from the call.
- **Select one:** select one of multi-party call participants. You can then use the following options:
 - **Private:** have a private conversation with one multi-party call participant. The other participants can converse with each other. After the private conversation, select **Join** to return to the multi-party call.
 - **Removed:** disconnect one multi-party call participant.
 - **End held call:** disconnect the call currently on hold.

Menu functions

All menu options listed

Call log *(Menu 1)*

Use this menu to view the calls you have dialled, received, or missed, and the length of the calls. You can also check the cost of your calls, if your SIM card supports this function.


To access this menu, press [Centre] in Idle mode and select **Call log**.

Recent contacts *(Menu 1.1)*

This menu displays the most recent calls dialled, received, or missed.

Accessing a call log

1. Press [Left] or [Right] to move to another call type.

2. Press [Up] or [Down] to scroll through the call list.
3. Press [Centre] to view the details of a call, or press [] to dial a number.

Using call log options

While viewing call details, press <**Options**> to access the following options:

- **Call:** paste the number to the dialling screen.
- **Add to Phonebook:** save the number to Phonebook.
- **Send:** send an SMS, i-mail, or MMS message to the selected number.
- **Delete:** delete the selected call log or all logs.
- **View contact:** access contact information, if the caller is saved in Phonebook.

Missed calls (Menu 1.2)

This menu displays the most recent calls you did not answer.

Dialled calls (Menu 1.3)

This menu displays the most recent calls you have dialled.

Received calls (Menu 1.4)

This menu displays the most recent calls you have received.

Delete all (Menu 1.5)

Use this menu to delete all of the logs in each call type.

1. Press [Centre] to select the call types to be cleared.

2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Call time (Menu 1.6)

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total dialled calls:** check the total length of all the calls you have dialled.
- **Total received calls:** check the total length of all the calls you have received.

To reset the call timers, press <**Reset**>. You need to enter the phone password.

- You can set the phone's password the first time you access a menu requiring the password. You can change the phone's password. ► p. 109

Call costs *(Menu 1.7)*

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max. cost**, you must reset the counter before you can make another call.
- **Max. cost:** check the maximum cost limit set in **Set max. cost**.
- **Reset counters:** reset the cost counters.
- **Set max. cost:** set the maximum cost authorised for your calls.
- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

Phonebook *(Menu 2)*


You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.

To access this menu, press [Centre] in Idle mode and select **Phonebook**.

Contact list *(Menu 2.1)*

Use this menu to search for numbers in Phonebook.

Finding a contact

1. Enter the first few letters of the name that you want to find.
2. Select a contact from the list.
3. Scroll to a number and press [] to dial, or press [Centre] to edit contact information.

Using Phonebook options

While viewing contact details, press <**Options**> to access the following options:

- **Edit**: edit contact information.
- **Send message**: send an SMS, i-mail, or MMS message to the selected number, or to the selected e-mail address.
- **Copy to**: copy the selected number to the phone's memory or to the SIM card.
- **Send via**: send the contact via SMS, i-mail, MMS, or Bluetooth.
- **Delete**: delete the selected contact.

Create contact *(Menu 2.2)*

Use this menu to add a new contact to Phonebook.

Storing a contact in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
 - **First name/Last name**: assign a name.
 - **Mobile/Home/Office/Fax/Other**: add a number in any type.
 - **Email**: assign an e-mail address.
 - **Caller ID**: assign an image or video to alert you to a call from the person.
 - **Ringtone**: assign a ringtone to alert you to a call from the person.
 - **Group**: assign the contact to a caller group.
 - **Note**: add a memo about the person.
3. Press <**Save**> to save the contact.

Storing a contact on the SIM card

1. Select **SIM**.
2. Enter information about the contact.
 - **Name**: assign a name.
 - **Phone number**: add a number.
 - **Location**: assign a location number.

To assign a caller ID image or video, ringtone, or group, the contact must be saved to the phone's memory.

3. Press <**Save**> to save the contact.

Group *(Menu 2.3)*

Use this menu to organise your contacts in caller groups.

Creating a new caller group

1. Press <**Options**> and select **Create group**.
2. Enter a name for the group.

3. Select the caller ID line and set an image or video.
4. Select the ringtone line and set a melody.
5. Press <**Save**> to save the group.

Adding members to a caller group

1. Select a group.
2. Press <**Add**>.
3. Press [Centre] to select the contacts to be added.
4. Press <**Options**> and select **Select**.

Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View**: display the members of the selected group.
- **Create group**: add a new group.
- **Edit**: change the group properties.

- **Send message:** send an SMS, i-mail, or MMS to the group members you want.
- **Delete:** delete the selected group or all groups. Group members, however, will not be deleted from Phonebook.

Speed dial *(Menu 2.4)*

Use this menu to assign a speed dial number (2 to 9) for 8 of your most frequently dialled numbers.

Assigning speed dial numbers

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact from the contact list.
3. Select a number, if the contact has more than one number.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add:** assign a number to an unassigned key.
- **View:** check the name and number assigned to a key.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

Dialling speed dial numbers

In Idle mode, press and hold the appropriate key.

My name card *(Menu 2.5)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ► p. 42

Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit:** edit the name card.
- **Send via:** send the name card via SMS, i-mail, MMS, or Bluetooth.
- **Exchange namecard:** exchange name cards with another person via Bluetooth.
- **Delete:** delete the name card.

Own number *(Menu 2.6)*

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.


Management *(Menu 2.7)*

Use this menu to manage contacts in Phonebook.

- **Save new contact to:** select a default memory location for saving contacts. If you select **Always ask**, the phone will ask you to select a memory location each time you save a number.
- **Copy all to:** copy all of the contacts stored on the SIM card to the phone's memory, or vice versa.
- **Delete all:** delete all of the contacts from your phone's memory, your SIM card, or both.
- **Memory status:** check the number of contacts you have stored in the phone's memory and on the SIM card.

Service number *(Menu 2.8)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your SIM card supports SDN.

1. Scroll to the number you want and press **<View>**.
2. Press **<Dial>** or [].

Applications *(Menu 3)*

Use this menu to play media files, edit photos, or play Java games. You can also use convenient features, such as a voice recorder, world clock, alarm clock, calculator, converter, timer, and stopwatch.

To access this menu, press [Centre] in Idle mode and select **Applications**.

Media player *(Menu 3.1)*

Use this menu to enjoy media. First, you need to save media files into your phone's memory or on a memory card. You can play *.mp3, *.3gp, *.aac, *.wma, and *.m4a files.

To enjoy high quality media, you can use an optional Bluetooth stereo headset.



Normal headsets are not compatible with the media player.

Downloading or receiving media files

Use these methods to save media files to your phone's memory:

- Download from the wireless web ► p. 63
- Download from a computer using the optional Samsung PC Studio ► Samsung PC Studio User's Guide

- Receive via an active Bluetooth connection
▶ p. 105
- Copy to a memory card and insert the card into the phone ▶ p. 26

The downloaded or received files are stored in the **Music** or **Videos** folder. ▶ p. 80

Creating a play list

1. From the media player screen, press <**Options**> and select **Add media from** → **Phone** or **Memory card**.
2. Press [Centre] to select the files to be added and press <**Select**>.
3. Press <**Back**> to return to the media player screen.

Playing media files

1. From the media player screen, press <**Options**> and select **Play via**.

2. Select **Phone** to use the phone speaker.
Select **Bluetooth stereo headset** to use a Bluetooth stereo headset and then search for and connect the phone to the headset.

During playback, use the following keys:

Key	Function
Centre	Pauses or resumes playback.
Left	Returns to the previous file.
Right	Skips to the next file.
Up	Opens the current play list.
Down	Stops playback.
▲/▼	Adjusts the volume level.
1	Turns 3D sound on or off.
2	Changes the playback animation.

Key	Function
3	Changes the repeat mode.
4	Changes the equaliser mode.
5	Changes the skin type.
6	Turns Shuffle mode on or off.

Using media player options

During playback, press <**Options**> to access the following options:

- **Play/Pause:** begin or pause playback.
- **Transfer to Bluetooth stereo headset/ Transfer to phone:** switch sound output to a Bluetooth stereo headset or the phone speaker.
- **Open:** access the play list of the current album or album list.

- **Remove from playlist:** remove the selected file from the play list.
- **Settings:** change the default settings for playing media files:
 - Repeat mode:** select a repeat mode.
 - Shuffle:** set the media player to play media at random.
 - Music overrides other sounds:** set the media player to continue playback even if you exit it.
 - Equaliser:** select an equaliser setting.
 - 3D sound:** turn 3D sound on or off.
 - Visualisation:** change the playback animation.
 - Skin:** select a skin type.
 - Volume:** select a volume level.
- **Details:** access the file properties.

Accessing the play list

From the media player screen, press [Up].

Press <**Options**> to access the following options:

- **Play**: play the currently selected file via phone or Bluetooth stereo headset.
- **Add music from**: add files to the play list.
- **Go to album list**: access the album list.
- **Move to**: move the selected file to another play list.
- **Copy to**: copy the selected file to another play list.
- **Move track in playlist**: move the selected file to the position you want within the play list.
- **Remove**: remove the selected file or the files you want from the play list.
- **Details**: access the file properties.

Playing music files with the phone closed

1. Press and hold [**▲/▼**] to activate the touch keypad first.
2. Press and hold [**▶||**] to launch the media player.

Use the following keys to control the media player:

Key	Function
▶	Begins or pauses playback.
◀◀	Returns to the previous file.
▶▶	Skips to the next file.
▲/▼	Adjusts the volume.

Voice recorder (Menu 3.2)

Use this menu to record voice memos. A voice memo can be up to one hour long.

Recording a voice memo

1. Press [Centre] to start recording.
2. Speak into the microphone.
Press [Centre] to pause or resume recording.
3. Press <Stop> or [Down] to end recording.
The voice memo is saved automatically.
4. Press [Centre] to review the voice memo, or [Up] to record a new voice memo.

Playing a voice memo

1. From the Voice recorder screen, press <Options> and select **Go to My voice clips**.
2. Select a voice memo.

During playback, use the following keys:

Key	Function
Centre	Pauses or resumes playback.
Left	Moves backward in a memo.
Right	Moves forward in a memo.
▲/▼	Adjusts the volume.
Down	Stops playback.

Changing the recording mode

You can change the recording mode of the voice recorder. The maximum recording time is determined by this setting. Before recording a memo, press <Options> and select **Settings** → a recording mode:

- **Limit for multimedia message:** record a voice memo for adding to an MMS message.

- **Maximum 1 hour:** record a voice memo of up to one hour.

Image editor *(Menu 3.3)*

Use this menu to edit your photos using various editing tools.

Applying an effect

1. Press <**Options**> and select **New image** → **Open** or **Take photo**.
2. Select a photo or take a new photo.
3. Press <**Options**> and select **Effects** → an effect option.
4. Press <**Done**>.
5. Press <**Options**> and select **Save as**.
6. Enter a new file name and press [Centre].

Transforming

1. Select a photo or take a new photo.
2. Press <**Options**> and select **Transform** → an option:
 - **Resize:** change the photo size.
 - **Rotate:** rotate the photo 90 degrees clockwise or counterclockwise.
 - **Flip:** flip the photo.
3. Press <**Done**>.
4. Press <**Options**> and select **Save as**.
5. Enter a new file name and press [Centre].

Cropping

1. Select a photo or take a new photo.
2. Press <**Options**> and select **Crop**.
3. Move the cropping frame to the area of the image you want.
Press <**Options**> and select **Resize** to change the frame size.

4. Press <**Options**> and select **Done**.
5. Press <**Options**> and select **Save as**.
6. Enter a new file name and press [Centre].



Adding visual features

You can decorate photos by adding a frame, an image, or a note.

1. Select a photo or take a new photo.
2. Press <**Options**> and select **Insert** → a feature type.
3. Select an item or enter text to be inserted.
4. Adjust the position of the inserted item or text using the Navigation keys.
5. Press <**Done**>, or press <**Options**> and select **Done**.
6. Press <**Options**> and select **Save as**.
7. Enter a new file name and press [Centre].

Merging a stamp effect

This editing tool allows you to make an outline stamp of a photo and then merge it with another photo. You can use this tool to create your own photo postcard by taking a photo of a handwritten message and merging it with a photo.

1. Select a photo or take a new photo.
2. Press <**Options**> and select **Merge stamp**. The background photo appears in the image box next to .
3. Press <**Options**> and select **Add image**.
4. Add a photo by selecting or taking a photo. The added photo appears in the image box next to . This will be the stamp.
5. Press <**Options**> and select **Merge**. The stamp photo is added to the background photo as an outline.

6. Press <**Options**> to access the following stamp edit options:
 - **Move**: change the position of the stamp.
 - **Resize**: change the stamp size.
 - **Rotate**: rotate the stamp.
 - **Stamp colour**: change the stamp colour.
 - **Shadow on**: apply a shadow to the stamp.
7. When you have finished, press <**Options**> and select **Done**.
8. Press <**Options**> and select **Save as**.
9. Enter a new file name and press [Centre].

Java world *(Menu 3.4)*

Use this menu to access the list of the applications you have downloaded from the wireless web. ► p. 73

Alarm *(Menu 3.5)*

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake-up alarm is not affected by your sound settings.

Setting an alarm

1. Select the type of alarm.
2. Set each alarm option:
 - **Alarm**: activate the alarm.
 - **Alarm time**: enter the time for the alarm to sound.
 - **AM/PM**: set **AM** or **PM** in 12-hour time format.
 - **Repeat**: select a repeat option.
 - **Alarm tone**: select an alarm tone.
3. Press <**Save**>.

Stopping an alarm

- For a non-wake-up alarm, press any key.
- For a wake-up alarm, press <**Confirm**> or [Centre].

Press any key, except for <**Confirm**> and [Centre], to cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

Setting the alarm to sound when the phone is off

From the Alarm screen, select **Auto power-up** → **On**.

Even though phone is off when it is time for the alarm to sound, the phone sounds the alarm.

Calculator *(Menu 3.6)*

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

1. Enter the first number.
 - Press <.0> to insert a decimal point or bracket.
 - Press [*] or [#] to move the cursor.
2. Press one of the Navigation keys to access the math function you want.
3. Enter the second number.
4. Press [Centre] to view the result.

Timer *(Menu 3.7)*

Use this menu to set a period of time for the phone to count down. The phone sounds an alarm when the specified period of time has expired.

Starting the timer

1. Press <**Set**>.
2. Enter the length of time you want to count down and press <**OK**>.
3. Press [Centre] to start counting down.

Stopping the timer

- Press any key when the timer rings.
- Press [Centre] on the Timer screen to stop the timer before it rings.

Stopwatch *(Menu 3.8)*

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Press [Centre] to start the stopwatch.
2. Press [Centre] to check an interval. You can repeat this step for a total of 4 intervals.

World clock *(Menu 3.9)*

Use this menu to set your local time zone and find out the current time in another part of the world.

Viewing world time

1. From the world map, press [Left] or [Right] to scroll to the city you want. As the time line moves, the time and date of the given zone display.
2. Press [Centre] to save the city as your local time zone.

Applying daylight saving time

1. From the world map, press <**Options**> and select **Apply daylight saving time**.
2. Press [Centre] to select the time zones you want.
3. Press <**Save**>.

Converter (Menu 3.10)

Use this menu for common conversions, such as currency and temperature.

1. Select a converter.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted and press [Down].
 - Press [*] to insert a decimal point.
 - Press [#] to change the temperature to above zero (+) or below zero (-).
4. Press [Left] or [Right] to select the unit to which you want to convert.
The equivalent value for the amount you entered displays.

For the currency converter, you can view and set currency rates by pressing <**View rate**>.

SIM AT (Menu 3.11)

This menu is available if you use a SIM AT card that supports SIM Application Toolkit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

Messages (Menu 4)

Use the **Messages** menu to send and receive text messages. You can also access broadcast messages.

To access this menu, press [Centre] in Idle mode and select **Messages**.

Create message (Menu 4.1)

Short Message Service (SMS) allows you to send text messages that may include simple pictures, animated images, and melodies.

Creating and sending an SMS message

1. Enter your message and press [Centre].



- The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.
- You can use various options by pressing <Options>. ▶ next section

2. Enter a destination number.

To send the message to more than one recipient, fill in additional destination fields.

3. Press [Centre] to send the message.

Using options while composing an SMS message

While composing a message, press <Options> to access the following options:

- **Save and send:** send the message and then save it in the **Sentbox** folder.
- **Send only:** just send the message.
- **Insert:** add a template, Phonebook entry, or bookmark.
- **Add image/Add animation/Add melody:** attach a simple image, an animated image, or a melody.
- **Attach:** attach a Phonebook entry as a name card or calendar data as a data format attachment.
- **Save in:** save the message in another message folder.
- **Cancel:** cancel composing the message.

My messages (Menu 4.2)



Use this menu to access text messages you have received, sent, or which have failed in sending.

Inbox (Menu 4.2.1)

This folder stores all the text messages you have received.

Viewing a message

The following icons may appear on the message list to show the message type:

-  SMS
-  Delivery report for your sent messages

Using message options

While viewing a message, press <**Options**> to access the following options:

SMS messages

- **Reply via:** reply to the sender via SMS, i-mail, or MMS.
- **Forward:** forward the message to other people.
- **View as vivid message/View as:** view the message in 3D view mode or switch back to normal view mode. This option is available only when the message consists of a single page.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut media:** save media content from the message to your phone's memory.

- **Protection:** lock the message to protect it from being deleted, or unlock the message. You can protect only messages stored in the phone's memory.
- **Add to Block list:** add the sender's number to the Block list to reject the messages from the sender.

Delivery reports

- **Cut address:** extract URL, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** lock the message to protect it from being deleted, or unlock the message.

Drafts *(Menu 4.2.2)*

This folder stores text messages you have saved to send at a later time.

When you select a message, it opens in Edit mode so that you can edit and send the message.

Outbox *(Menu 4.2.3)*

This folder stores text messages that the phone is attempting to send or has failed to send.

The following icons are available to show the message status:

-  Failed to be sent

While viewing a message, press <**Options**> to access the following options:

- **Send again:** retry sending the message.
- **Forward:** forward the message to other people.

Menu functions

- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** lock the message to protect it from being deleted, or unlock the message.

Sentbox *(Menu 4.2.4)*

This folder stores text messages that you have sent.

While viewing a message, press <**Options**> to access the following options:

- **Forward:** forward the message to other people.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** lock the message to protect it from being deleted, or unlock the message.

My folders *(Menu 4.2.5)*

Use this menu to create new folders and organise your text messages.

Creating a new folder

1. Press <**Yes**>.
2. Enter a folder name and press [Centre].

Using folder options

On the folder list, press <**Options**> to access the following options:

- **Open:** open the selected folder.
- **Create folder:** add a new folder.
- **Rename folder:** change the folder name.
- **Delete:** delete the selected folder.

Templates *(Menu 4.3)*

Use this menu to make and use templates of frequently used messages.

Creating a template

1. Select an empty location.
2. Enter a message and press [Centre].

Using template options

From the template list, press <**Options**> to access the following options:

- **Edit**: edit the selected template.
- **Send message**: create and send a text message using the template.
- **Delete**: delete the selected template.
- **Add new**: add a new template.

Delete all *(Menu 4.4)*

Use this menu to delete messages in each message folder all at once.

1. Press [Centre] to select the message folders to be cleared.

Pressing the key twice displays the message types so that you can specify the ones to be cleared.

2. Press <**Delete**>.
3. Press [Centre] to select the check box to delete protected messages, and then press <**Yes**>.
4. Press <**Yes**> to confirm the deletion.

Settings *(Menu 4.5)*

Use this menu to set up various options for using SMS and broadcast messages.

Text messages *(Menu 4.5.1)*

You can configure SMS settings.

- **Sending options**: set up the options for sending SMS messages:
 - Send read receipt**: allow recipients to reply to you through your SMS server.

Send delivery receipt: set the network to inform you when your messages have been delivered.

Bearer selection: select either **GSM** or **GPRS preferred**, depending on your network.

- **Receiving options:** activate 3D vivid view mode for displaying received SMS messages on your phone. The phone will convert message text to 3D vivid graphics and displays it in 3D view mode. This option is available only when the message consists of a single page.
- **Block list:** store the phone numbers from which you want to reject messages.
- **Current profile:** select an SMS setting profile.
- **Profile settings:** set the properties of each profile:
Service centre: store or change the number of your SMS server.

Default destination: enter the default destination.

Default type: set the default message type. The network can convert the messages into the selected format.

Default validity: set the length of time your messages are stored in the SMS server.

Setting name: enter a profile name.

Broadcast messages *(Menu 4.5.2)*

You can change the settings for receiving broadcast messages.

- **Receive:** select to receive broadcast messages, or not.
- **Channel list:** indicate the channels from which you wish to receive broadcast messages. Please contact your service provider for further details.
- **Language:** select the preferred languages in which broadcast messages display.

Memory status *(Menu 4.6)*

Use this menu to view the amount of memory currently in use in each message folder.

i-mode *(Menu 5)*

In this menu, you can use the i-mode browser, send or receive i-mode mails and MMS messages, and access Java applications.

To access this menu, press [Centre] in Idle mode and select **i-mode**, or press <**i-mode**> in Idle mode.

i-menu *(Menu 5.1)*

Use this menu to access the i-mode browser. You can also quickly launch the browser by pressing and holding [Centre] in Idle mode.

About i-mode

In i-mode, browse through your favourite magazines, book tickets and hotels for your vacations, find your favourite club, download the best ringtones and games at the lowest price, send live e-mails with photographs. You can do all of these economically since with i-mode you are charged by the amount of data you send and receive, not by the length of time you are online.

Navigating the i-mode browser

To	Press
scroll through browser items	[Up] or [Down].
select an item	[Centre].
return to the previous page	[Left].


- ☑ • Key operations on an i-mode screen depend on the screen contents at that time.
- You can answer a call while using the i-mode feature. After ending the call, the display returns to the function screen you were using.

Using browser options

From any web page, press <**Options**> to access the following options:

- **Add Bookmark:** add a bookmark for the current page.
- **Save Page:** save the URL address of the current page.
- **Save Image:** save images from the current page.
- **Show Properties:** access the properties for the i-mode browser.
- **Bookmark List:** access the bookmark list.
- **Go to Internet:** enter a URL address or select one from the Address history list.
- **Saved Page List:** access the list of the URL addresses you have saved.
- **Browser Settings:** change the settings for the i-mode browser to suit your preferences.
 - ▶ p. 76
- **i-Menu:** access the homepage of your service provider.
- **Home:** return to the homepage.
- **Reload:** update the current page.
- **Compose Mail:** send the URL address of the current page via i-mail or MMS.
- **Save in Contacts:** save the selected phone number or e-mail address to Phonebook.
- **Play Animation:** play animations on the current page.
- **Sound Effect:** turn the sound effect on or off.

Exiting the i-mode browser

To exit the browser at any time, press [].




i-mail (Menu 5.2)

Use this menu to use i-mail and MMS message services. You can quickly access this menu by pressing <**i-mail**> in Idle mode.

Compose i-mail (Menu 5.2.1)

You can create and send a mail, attaching various types of media files.

Creating and sending an i-mail


1. Select the  field.
2. Enter e-mail address and press [Centre].
3. Select the  field.
4. Enter the mail title and press [Centre].
5. Select the  field and add files using following options:

- **Attach File:** add images, sounds, videos, name cards, or scheduled items.

According to the Digital Rights Management (DRM) system, web content may not be able to be forwarded.

- **Attach Melody:** add MFi (Melody Format for i-mode) melody files.
- **Attach Bookmark:** add URL addresses you have bookmarked.

You can delete or preview the added items by selecting **Delete Attach File** or **Play/Display File**.

6. Select the  field.
7. Enter the mail text and press [Centre].
To insert pictograms into text, press <**Options**> and select **Pictogram**.
You can use the copy and paste feature to quickly and easily enter text. ▶ next section
8. When you have finished, select **Send** to send the mail.

Copying and pasting text

1. While entering text in a mail, place the cursor next to the text you want to copy.
2. Press <**Options**> and select **Copy messages**.
3. Press <**Copy On**>.
4. Highlight the text as you want by pressing the Navigation keys and press [Centre].
5. Select **Copy** to copy the highlighted text. You can also copy all text in the message by selecting **Copy all**.
6. Place the cursor where you want to paste the copied text.
7. Press <**Options**> and select **Paste**.

Using mail options



While creating a mail, press <**Options**> access the following options:

- **Send**: send the mail.
- **Save**: save the mail in the **Draft** folder.
- **Add Address**: add destination numbers or addresses.
- **Address Menu**: edit destination numbers or addresses. You can change the selected number or address to another, or change an address type (To, Cc, Bcc).
- **Attach File Menu**: add media files, name cards, scheduled items, or bookmarks.
- **Attach Signature**: attach your signature, as specified in the **Edit Signature** option of **Mail Settings**.
- **Delete Body**: delete the body of the mail.
- **Delete Message**: cancel composing the mail.

Compose MMS (Menu 5.2.2)

Using Multimedia Message Service (MMS), you can send and receive MMS messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

Creating and sending an MMS message

1. Select the  field.
2. Enter a phone number or e-mail address and press [Centre].
3. Select the  field.
4. Enter the message title and press [Centre].
5. Select the **SMIL** field.
6. Use the following options for creating an SMIL slide:
 - **Send**: send the message.
 - **Save**: save the message in the **Draft** folder.
 - **Preview**: view the message as it will be shown on the recipient's phone.

- **Media**: add text, images, sounds, or videos.



According to the Digital Rights Management (DRM) system, web content may not be able to be forwarded.

- **Fit mode**: select the size in which the image displays:
 - Hidden**: the image displays in its actual size.
 - Fill**: the image is scaled to fit into the display area.
 - Meet**: the image is scaled so that the longer side, either the height or width, fits the corresponding side of the display area.

Slice: the image is scaled so that the shorter side, either the height or width, fits the corresponding side of the display area.

- **Options:** change the display time for each item in the message, such as a slide, text, image, or audio clip.

- **Arrange Slide:** customise slide settings:

Text Color: select a colour for the message text.

Background Color: select a colour for the slide background.

Change Region Size: change the size of the image area. Press [Up] or [Down] to move the border line.

Swap Position: switch the order of the added image and text.

- **Slide:** add or delete slides:

Add: add a new slide after the currently selected slide. Once you have added slides, you can scroll between them by pressing [Left] or [Right].

Insert: insert a new slide before the currently selected slide.

Delete: delete the selected slide.

Clear: clear the content of the selected slide.

7. When you have finished, on the slide preview screen, press <**Options**> and select **Send** to send the message.

Using message options

While creating an MMS message, you can access a variety of options by pressing <**Options**>. ▶ p. 66

Inbox (Menu 5.2.3)

Use this menu to access i-mails and MMS messages you have received.

- When the Inbox reaches its maximum limit, new i-mails or MMS messages will overwrite old messages that have already been read.

Viewing a message

1. Select a folder. The number next to a folder name indicates the number of unread messages.
2. Select a message.
3. Press [Left] or [Right] to scroll through slides.

Using message options

While viewing an i-mail or MMS message, press <**Options**> to access the following options:

- **Reply:** send a reply to the sender or all of the recipients of the message. You can also send a reply with the message included.
- **Forward:** forward the message to other people.
- **Move:** move the message to another folder.
- **Delete:** delete the message.
- **Protect On/Off:** protect the message from being deleted.
- **Save in Contacts:** save the sender's address or phone number to Phonebook.
- **Save Melody:** save the MFi (Melody Format for i-mode) melody files attached to the message.
- **Save Attached File:** save the attached files in the phone's memory.
- **Copy:** copy the message title or sender's address. You can also copy the text of the mail.
- **Play SMIL:** play the SMIL slides of an MMS message automatically.

- **Browse SMIL:** play the SMIL slides of an MMS message manually. Press [Left] or [Right] to move to the next slide.

On the message list, press <**Options**> to access the following options:

- **Move:** move the selected message to another folder.
- **Delete:** delete the selected message.
- **Selective Delete:** delete the messages you select.
- **Delete All:** delete all messages.
- **Protect On/Off:** protect the message from being deleted.
- **Sort:** sort messages by title, address, or date.
- **Filter:** set messages to be displayed by the selected filter.
- **Export:** save the selected message in the phone's memory. The message is saved in the **My vMessages** folder. ▶ p. 82

Sent (Menu 5.2.4)

Use this menu to access the i-mails and MMS messages you have sent.

While viewing a message, press <**Options**> to access the following options:

- **Edit:** edit the message and then send it.
- **Delete:** delete the current message.
- **Protect On/Off:** protect the message from being deleted.
- **Save in Contacts:** save the sender's address or phone number to Phonebook.
- **Copy:** copy the message's title or sender's address.
- **Play SMIL:** play the SMIL slides of an MMS message.
- **Browse SMIL:** play the SMIL slides of an MMS message manually. Press [Left] or [Right] to move to the next slide.

On the message list, press <**Options**> to access the following options:

- **Edit**: edit the message.
- **Delete**: delete the selected message.
- **Selective Delete**: delete the messages you select.
- **Delete all**: delete all messages.
- **Protect On/Off**: protect the message from being deleted.
- **Sort**: sort messages by title, address, or date.
- **Filter**: set messages to be displayed by the selected filter.
- **Export**: save the selected message in the phone's memory. The message is saved in the **My vMessages** folder. ▶ p. 82

Draft (Menu 5.2.5)

Use this menu to access i-mails and MMS messages you have saved or failed to send.

When you select a message in the **Draft** folder, the message opens in Edit mode so that you can edit and send the message.

Check New Mail (Menu 5.2.6)

Use this menu to check the i-mode server for new i-mails and MMS messages and then retrieve them to the phone.

Mail Settings (Menu 5.2.7)

Use this menu to change the various settings for sending and receiving i-mails and MMS messages.

- **Communication**: change the settings for sending or receiving messages:

Auto Receive: set the phone to retrieve new messages from the i-mail server as soon as they arrive at the server.

Receive Attach File: select the types of attachments you want to receive.

- **Edit:** edit your signature or a quotation of your messages:

Edit Signature: enter a tag line to be inserted at the end of your message. If you select **Auto Attach**, the signature will be automatically attached to all of your outgoing messages.

Edit Quotation: enter characters or words to be inserted at the start of your original mail when you reply to or forward a message.

- **View:** change the view settings:

Screen Scroll: select the number of lines a message displays.

Font Size: select a font size to be used for displaying messages.

List Display: select the number of lines and the type of information, for example, subject or address, to be displayed on the list.

Folder Security: locks message folders to protect them from unauthorised viewing.

Auto Play: set a sound, video, or SMIL slide to be automatically played when you open a message.

Pasted Data: set MFi (Melody Format for i-mode) melody files or links to java resources to be inserted when you are creating a message. The added data, however, will be sent as a data format attachment.

- **Check Settings:** check your current mail settings.
- **Reset Settings:** restore the default settings.
- **Check Storage:** check the total amount of memory and the amount of memory currently in use in each message folder.

Java (Menu 5.3)

Use this menu to download and play games and Java applications from various sources using the i-mode browser.

On the Java application list, press <**Options**> to access the following Java system options:

- **Create New Folder:** create a folder.
- **Delete Folder:** delete the selected folder.
- **Rename Folder:** change the name of the folder.
- **Move To Folder:** move the selected Java application to another folder.
- **Upgrade:** update the selected Java application.
- **Delete:** delete the selected Java application.
- **Delete All:** delete all Java applications.
- **Sort:** sort Java applications by name, time, used memory.
- **Properties:** access the Java application properties.
- **Certificate:** access the Java application certificate.
- **Network Setting:** select whether or not the Java application connects to the network when it runs, if the selected one is an online application.
- **Java Setting:** set whether or not the selected Java application accesses the website to run. This option is available only when the LaunchByBrowser key or the AllowPushBy key is present in the ADF.
- **Icon Info Setting:** set whether or not your phone operates the selected Java application using phone system information. This option is available only when the GetSysInfo key is present in the ADF.

Menu functions

- **AutoStart Setting:** select whether or not the Java application launches automatically when selected.
- **Show Desc Setting:** set whether or not the description of a Java application is displayed before downloading.
- **AutoStart Failure:** set whether or not the Java application launches automatically after the launch fails.
- **Trace Info:** access trace information for a Java application.
- **System Info:** access system information for a Java application.

SMS (Menu 5.4)

Use this menu to create and send text messages. ► p. 57

Bookmarks (Menu 5.5)

Use this menu to access URL addresses of websites you have bookmarked while navigating the wireless web.

Press <**Options**> to access the following options:

- **Go To:** go to the bookmarked page.
- **Title:** edit the title of the bookmark.
- **Delete:** delete the selected bookmark.
- **Selective Delete:** delete the messages you select.
- **Delete All:** delete all bookmarks.
- **Show Address:** display URL addresses you have bookmarked.
- **Copy Address:** copy the URL address of the bookmark.
- **Compose i-mail:** send the bookmark via i-mail or MMS.

Go to internet (Menu 5.6)

Use this menu to access a specific website by manually entering a URL address or selecting one from the Address history list.

Saved Pages (Menu 5.7)

Use this menu to access the web pages you have saved.

While viewing a web page, press <**Options**> to access the following options:

- **Save Image:** save images from the current page.
- **Show Properties:** access various page and server properties:
 - Address:** display the URL address of the current page.
 - Page Properties:** access the properties of the current page.

Certificates: access the server certificate.

- **Play Animation:** play animations on the current page.
- **Sound Effect:** turn the sound effect on or off.
- **Edit Title:** change the title of the page.
- **Delete:** delete the page.
- **Protect On/Off:** protect the page from being deleted.

From the web page list, press <**Options**> to access the following options:

- **Show:** open the selected page.
- **Edit Title:** change the title of the selected page.
- **Delete:** delete the selected page.
- **Selective Delete:** delete the messages you select.
- **Delete All:** delete all saved pages.

- **Show Address:** display the address of the web page.
- **Protect On/Off:** protect the page from being deleted.

Browser Settings *(Menu 5.8)*

Use this menu to change the settings for the i-mode browser to suit your preferences.

- **Home:** enable or disable the homepage of the i-mode browser.
- **View:** change the view settings for text and display on web pages:
 - Font Size:** select a font size to be used for displaying text on web pages.
 - Images:** set whether or not the phone displays images on web pages.
 - Table Layout:** select a layout for the web page.

CSS: set whether or not the phone uses a style sheet for presenting documents on a web page.

Screen Scroll: select the number of lines the web page displays.

- **Certificates:** view the list of server certificates you have received while navigating the wireless web, or switch the selected certificate from valid to invalid, or vice versa.
- **Others:** change other settings:
 - Connection Timeout:** set the phone to disconnect from the network after a specified length of time of inactivity.
 - Send Terminal Info:** set whether or not the phone sends its information to the web server while navigating the wireless web.
 - Auto Play:** set whether or not the phone automatically plays videos after downloading.

Sound Effect: turn the sound effect on or off.


Storage Device: select the default memory location, phone or memory card, for downloaded files.

- **Check Settings:** check your current settings.
- **Reset Settings:** restore the default settings.

My files *(Menu 6)*

The **My files** menu allows you to access images, videos, music files, and sound files stored in the phone's memory or on a memory card. You can also store decorative photo frames downloaded from the i-mode browser and i-mode messages downloaded from the i-mode server.

To access this menu, press [Centre] in Idle mode and select **My files**.

- ☑ According to the Digital Rights Management (DRM) system, web content may not be able to be forwarded. They are indicated by .

Images *(Menu 6.1)*

This menu displays photos you have taken and images you have downloaded, received in messages, or imported from your computer. You can also store SWF (flash animation) files you have downloaded from the i-mode browser.

- ☑ You cannot move or copy SWF files stored here to another folder or a memory card, and cannot send or receive them to/from other people.

Viewing an image

1. Select an image folder.
2. Select an image.

Viewing a slide show

You can view your photos as a slide show, a sequential presentation of each photo in the current folder.

1. Select **My photos**.
2. Press <**Options**> and select **Slide show**.
3. Select an interval option.
The slide show begins.
4. Press <**Stop**> to stop the slide show.

Using image options

While viewing an image, press <**Options**> to access the following options:

- **List**: return to the image list.
- **Send via**: send the file via i-mail, MMS, or Bluetooth.
- **Set as**: set the file as wallpaper for the displays or as a caller ID image for a Phonebook entry.
- **Edit**: edit the image using the Image editor, if it is a photo taken by the camera on the phone. ► p. 51
- **Delete**: delete the selected file.
- **Rename**: change the file name.
- **Move to**: move the file to another folder or to a memory card.
- **Copy to memory card**: copy the file to a memory card.
- **Bluetooth visibility**: share the file or all files with other Bluetooth devices.
- **Protection**: lock the file to protect it from being deleted, or unlock the file.
- **Print via Bluetooth**: print the file by connecting the phone to a printer via Bluetooth. Some printers may not be compatible with the phone.
- **Details**: access the file properties.

Videos *(Menu 6.2)*

This menu displays video clips you have recorded, downloaded, received in messages, or imported from your computer.

- Video clips recorded on other devices, such as camcorders, may not play correctly.

Playing a video clip

1. Select a video folder.
2. Select a video clip.

During playback, use the following keys:

Key	Function
Centre	Pauses or resumes playback.
Left	Returns to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.

Key	Function
▲/▼	Adjusts the volume.
Down	Stops playback.

Using video options

After playback, press <**Options**> to access the following options. Depending on the folder, some options may vary:

- **List:** return to the video list.
- **Send via:** send the file via i-mail, MMS, or Bluetooth.
- **Add to playlist:** add files to the play list.
- **Set as:** set the file as your ringtone, as a caller ID image for a Phonebook entry, or as wallpaper for the main display.

- To set a video clip as a ringtone, the video clip must be recorded with audio.
- To set a video clip as wallpaper, the video clip must be saved in 3gp format.

Menu functions

- **Delete:** delete the selected file.
- **Rename:** change the file name.
- **Move to:** move the file to another folder or to a memory card.
- **Copy to memory card:** copy the file to a memory card.
- **Bluetooth visibility:** share the file or all files with other Bluetooth devices.
- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Details:** access the file properties.

Music (Menu 6.3)

This menu displays music files you have downloaded or imported from your computer. Select a file. The media player opens. ► p. 47

Sounds (Menu 6.4)

This menu displays voice memos you have recorded, and sound files you have downloaded, received in messages, or imported from your computer. You can also store MFi (Melody Format for i-mode) melody files you have downloaded from the i-mode browser.

Playing a sound clip

1. Select a sound folder.
2. Select a sound clip. For a voice memo, see **Voice recorder.** ► p. 50

Using sound options

While playing a sound clip, press <**Options**> to access the following options:


- **List:** return to the sound list.
- **Send via:** send the file via i-mail, MMS, or Bluetooth.

- **Set as:** set the file as your ringtone or as a ringtone for a Phonebook entry.
- **Delete:** delete the selected file.
- **Rename:** change the file name.
- **Move to:** move the file to another folder or to a memory card.
- **Copy to memory card:** copy the file to a memory card, if you use.
- **Bluetooth visibility:** share the file or all files with other Bluetooth devices.
- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Details:** access the file properties.

Frame *(Menu 6.5)*

This menu displays decorative photo frames you have downloaded from the i-mode browser. You can also take a photo with one of the downloaded frames.

Taking a photo with a frame

1. Select a frame.
2. Press <**Options**> and select **Take photo** to turn on the camera.
3. Press [>] to take a photo. The photo is saved in the **My photos** folder.

Using frame options

From the frame list, press <**Options**> to access the following options:

- **View:** display the frame.
- **Take photo:** take a photo with the selected frame.
- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **Move to memory card:** move the file to a memory card, if you use.
- **Copy to memory card:** copy the file to a memory card, if you use.

Menu functions

- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Details:** access the file properties.

My vMessages *(Menu 6.6)*

This menu displays i-mails or MMS messages you have saved from the i-mode server to the phone's memory.

Using i-mode message options

From the message list, press <**Options**> to access the following options:

- **Import:** retrieve the selected message from the i-mode server and open it.
- **Send via Bluetooth:** send the message via Bluetooth.
- **Delete:** delete the selected message or all messages.
- **Rename:** change the message name.

- **Move to memory card:** move the message to a memory card.
- **Copy to memory card:** copy the message to a memory card.
- **Bluetooth visibility:** share the message or all messages with other Bluetooth devices.
- **Protection:** lock the message to protect it from being deleted, or unlock the message.
- **Details:** access the message properties.

Other files *(Menu 6.7)*

Use this menu to view various document files and files stored in the phone's memory without corruption. Available file formats are *.doc, *.xls, *.ppt, *.pdf, *.txt, *.htm, and *.html.

Viewing a file

Select a file. Pictel File Viewer runs to open the document.


- ☑ • Depending on the file size or memory capacity of Picxel File Viewer, a file may not open properly.
- If a document file contains languages unsupported by Picxel File Viewer, the content of the document will not display correctly.

Use the following keys to view the document:

Key	Function
Up/Down/ Left/Right	Pans around the page.
▲/1	Zooms in.
▼/3	Zooms out.
Centre	Fits the document to the page size.
2	Returns to the first page.
4	Returns to the previous page.

Key	Function
5	Rotates the document.
6	Moves to the next page.
8	Moves to the last page.
*	Changes the display to Full screen view or Normal screen view.

Using document options

While viewing a document, press <**Options**> or <> to access the following options:

- **Full screen view/Normal view:** change the display to Full screen view or to Normal screen view.
- **Zoom:** zoom in or out.
- **Fit to:** fit the document to the page size, screen width, or screen height.

Menu functions

- **Go to:** move to another page of the document.
- **Rotate:** rotate the document.
- **Screen panning/Normal panning:** change the panning mode to by screen or by preset pixel.
- **Hide controller/Show controller:** hide or display the shortcut tool bar in Full screen view.
- **Send via bluetooth:** send the file via Bluetooth.
- **Move to memory card:** move the file to a memory card.
- **Copy to memory card:** copy the file to a memory card.
- **Delete:** delete the selected file.
- **Rename:** change the file name.
- **Bluetooth visibility:** share the file or all files with other Bluetooth devices.

- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Details:** access the file properties.
- **Shortcuts:** view the functions of the keys you can use in PicSel File Viewer.

Memory card *(Menu 6.8)*

Use this menu to access the files stored in a memory card. This menu is shown only when a memory card is inserted into the phone.

- Your phone is preset to use FAT16-formatted memory cards. If you insert a FAT32-formatted memory card, the phone will ask you to reformat the memory card. If you do not, you will not be able to access the card from the phone.

Memory status *(Menu 6.9)*

Use this menu to view memory information for media items in the phone's memory or on a memory card. For the phone's memory, press [Left] or [Right] to view the memory status by size or number of items.

Calendar *(Menu 7)*

The **Calendar** menu enables you to keep track of your schedule.

To access this menu, press [Centre] in Idle mode and select **Calendar**.

Selecting a day on the calendar

When you enter the **Calendar** menu, the calendar in Month view appears with today's date indicated by a coloured box.

- Press [Left] or [Right] to move by day.
- Press [Up] or [Down] to move by week.
- Press [▲/▼] to move by month.

Creating an item

You can store appointments, anniversaries, memos, and tasks on the calendar. More than one item per day can be stored.

Entering an appointment

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Appointment**.
3. Enter information or change the settings:
 - **Subject**: enter a title for the appointment.
 - **Details**: enter the appointment details.

- **Start date** and **Start time**: enter the starting date and time for the appointment.
 - **AM/PM**: select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time**: enter the ending date and time for the appointment.
 - **AM/PM**: select **AM** or **PM** in 12-hour time format.
 - **Location**: enter information about the appointment location.
 - **Alarm**: set an alarm for the appointment.
 - **Before**: set how long before the appointment the alarm is to alert you.
 - **Alarm tone**: select an alarm tone.
 - **Repeat**: set the appointment to recur and select a repeat option.
 - **Until**: set the ending date, if the appointment will recur.
4. Press <**Save**> to save the appointment.

Entering an anniversary

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Anniversary**.
3. Enter information or change the settings:
 - **Occasion**: enter information about the anniversary.
 - **Date**: enter the date.
 - **Alarm**: select to set an alarm for the anniversary.
 - **Before**: set how long before the anniversary the alarm is to alert you.
 - **Alarm time**: enter the time for the alarm to sound.
 - **AM/PM**: select **AM** or **PM** in 12-hour time format.
 - **Alarm tone**: select an alarm tone.
 - **Repeat every year**: set the phone to remind you of the anniversary every year.
4. Press <**Save**> to save the anniversary.

Entering a memo






1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Memo**.
3. Enter a memo and press [Centre].

Entering a task

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Task**.
3. Enter information or change the settings:
 - **Task**: enter information about the task.
 - **Start date**: enter the starting date.
 - **Due date**: enter the ending date.
 - **Select priority**: select a priority level.
4. Press <**Save**> to save the task.

Consulting the calendar

Once you have created items, the item icons and the number of items for a specific day appear at the bottom of the calendar.

-  Appointment
-  Anniversary
-  Memo
-  Task
-  Festival

Viewing an item

1. Select a date on the calendar to display the items for the day.
2. Select an item to view its details.
3. Press [Left] or [Right] to access the other items scheduled for the selected day.

While viewing an item, press <**Options**> to access the following options:

Menu functions

- **Edit:** edit the item.
- **Create:** add a new item.
- **Send via:** send the item via SMS, i-mail, MMS, or Bluetooth.
- **View by:** change the view mode of the calendar.
- **Delete:** delete the item.
- **Memory status:** access memory information for the items stored on the calendar.

Using calendar options

On the calendar, press <**Options**> to access the following options:

- **View by:** change the view mode of the calendar. ▶ next section
- **Create:** add a new item. ▶ p. 85

- **Go to:** go to today's date or enter the specific date you want to access.
- **Event list:** sort items by type of item.
- **Delete:** delete the items stored on the calendar by using various deleting options.

You can delete recurring events in Day view only.

- **Missed alarm events:** view items whose alarms you have missed.
- **Memory status:** access memory information for the items stored on the calendar.





Viewing items in a different mode

You can change the calendar display to Day view or Week view. Press <**Options**> and select **View by** → a view mode.

Day view

You can view items for the selected date. Select an item to view its details.


The following icons may display to indicate the item status:

-  Alarm set
-  Recurring item
-  To do item priority (Red: high, Blue: normal, Grey: low)
-  Completed task

Week view

You can view items for the selected week. A cell on the timetable indicates the presence of item information. Select a cell in the day you want.

Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos. To access this menu, press [Centre] in Idle mode and select **Camera**, or press and hold [].

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Taking a photo

You can take photos in various modes. The camera produces JPEG photos.

- When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Taking a photo with the phone open

1. Access the **Camera** menu or press and hold [ⓘ] to turn on the camera.
2. Make any desired adjustments.
 - Press <👉> to access camera options.
 - ▶ next section
 - Use the keypad to change the camera settings or switch to other modes.
 - ▶ p. 91
3. Press [Centre] or [ⓘ] to take a photo. The photo is saved in the **My photos** folder.

4. To	Press
access photo options	< Options >. ▶ p. 92
return to Capture mode	< Preview >.
send the photo by i-mail or MMS	[Centre]. ▶ p. 65, p. 67

Using camera options in Capture mode

In Capture mode, press <👉> to access the following options:

- **Record video**: switch to Record mode.
- **Settings**: change the default settings for taking a photo:
 - Size**: select an image size.
 - Quality**: select an image quality setting.
 - Viewfinder**: select a preview screen.
 - Scene programs**: set whether or not to use Night shot mode.
 - Shutter sound**: select the sound that you hear when you press the shutter release key.
 - Zoom sound**: turn the sound effect for zooming on or off.
 - Brightness sound**: turn the sound effect for brightness adjustment on or off.
 - White balance**: adjust the colour balance of the image. You can make your photo appear warmer or cooler.

- ISO:** change the ISO setting, which controls the sensitivity of your camera. For low light situations, select a higher ISO number. The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may bring some distortion to an image.
- **Shooting mode:** take a photo in the following modes:
 - Single shot:** take a photo in normal mode. You can select whether or not the camera automatically saves a photo.
 - Multi-shot:** take a series of action stills. You can select the number of photos the camera will take and the shooting speed.
 - Mosaic shot:** take several stills and save them in one frame. You can select the layout.
 - **Effects:** change the colour tone or apply a special effect.

- **Timer:** set a time delay before the camera takes a photo.
- **Frames:** apply a decorative frame.
- **Go to My photos:** access the **My photos** folder.
- **Camera shortcuts:** view the functions of the keys you can use in Capture mode.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
Left/Right	Adjusts the brightness.
Up/Down	Zooms in or out.
▲	Flips the image vertically.
▼	Shows the mirror image.

Key	Function
1	Switches to Record mode. ▶ p. 93
2	Changes the image size.
3	Changes the image quality.
4	Changes the shooting mode.
5	Changes the colour tone or applies a special effect.
6	Changes the white balance.
7	Selects a decorative frame.
8	Sets the timer.
9	Changes the ISO setting.
0	Goes to the My photos folder.

Key	Function
*	Sets whether or not to use Night scene mode.
#	Changes the preview screen.

Using photo options

After saving a photo, press <**Options**> to access the following options:

- **View:** access one of the multi-shot photos.
- **Viewfinder:** return to Capture mode.
- **Send via:** send the file via i-mail, MMS, or Bluetooth.
- **Set as:** set the photo as wallpaper for the displays or as a caller ID image for a Phonebook entry.
- **Edit:** edit the photo using the Image editor.
▶ p. 51
- **Delete:** delete the file.

- **Rename:** change the file name.
- **Go to My photos:** access the **My photos** folder. ► p. 77
- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Print via Bluetooth:** print the file by connecting the phone to a printer via Bluetooth. Some printers may not be compatible with the phone.
- **Details:** access the file properties.

Taking a photo with the phone closed

1. Press and hold [].

To	Press
flip the image vertically	[▲].
show the mirror image	[▼].
adjust the brightness	[◀▶].



- | To | Press |
|----------------|-------|
| zoom in or out | [▶▶]. |
3. Press [] to take a photo. The photo is automatically saved.

Recording a video

You can record a video of what is displayed on the camera screen and save it.


Recording a video with the phone open

1. In Capture mode, press [1].
2. Make any desired adjustments.
 - Press < > to access camera options. ► next section
 - Use the keypad to change the camera settings. ► p. 95
3. Press [Centre] or [] to start recording.

4. Press [Centre], <  >, or [] to stop recording. The video is automatically saved in the **My video clips** folder.

To	Press
play back the video clip	[Centre].
access video options	< Options >. ▶ p. 96
return to Record mode	< Preview >.

Using camera options in Record mode

In Record mode, press <  > to access the following options:

- **Take photo**: switch to Capture mode.
- **Settings**: change the following settings for recording a video:
 - Recording mode**: select a video recording mode.

Select **Limit for MMS/Wallpaper** to record a video suitable for an i-mail or MMS message or for setting as wallpaper. The video clip is saved in 3gp format.

Select **Normal** to record a video within the limit of the currently available memory. The video clip is saved in mp4 format.

Size: select a frame size.

Quality: select an image quality setting.

Viewfinder: select a preview screen.

Record audio: record audio with a video clip.

Zoom sound: turn the sound effect for zooming on or off.

Brightness sound: turn the sound effect for brightness adjustment on or off.

White balance: adjust the colour balance of the image. You can make your video appear warmer or cooler.

- **Effects:** change the colour tone or apply a special effect.
- **Timer:** set a time delay before the camera starts recording.
- **Go to My video clips:** access the **My video clips** folder.
- **Camcorder shortcuts:** view the functions of the keys you can use in Record mode.

Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode.

Key	Function
Left/Right	Adjusts the brightness.
Up/Down	Zooms in or out.
▲	Flips the image vertically.
▼	Shows the mirror image.

Key	Function
1	Switches to Capture mode. ▶ p. 89
2	Changes the frame size.
3	Changes the image quality.
4	Changes the video recording mode.
5	Changes the colour tone or applies a special effect.
6	Changes the white balance.
7	Mutes or unmutes audio.
8	Sets the timer.
9	Goes to the My video clips folder.
#	Changes the preview screen.

Using video options

After saving a video clip, press <**Options**> to access the following options:

- **Viewfinder:** return to Record mode.
- **Send via:** send the file via i-mail, MMS, or Bluetooth.
- **Set as:** set the file as your ringtone, as a caller ID image for a Phonebook entry, or as wallpaper for the main display.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Go to My video clips:** access the **My video clips** folder. ▶ p. 79
- **Protection:** lock the file to protect it from being deleted, or unlock the file.
- **Details:** access the file properties.

Recording a video with the phone closed

1. Press and hold [].
2. Press and hold [] to switch to Record mode.

3. To	Press
flip the image vertically	[].
show the mirror image	[].
adjust the brightness	[].
zoom in or out	[].

4. Press [] to start recording.
5. Press [] to stop recording. The video clip is automatically saved.

Settings *(Menu 9)*

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default status.

To access this menu, press [Centre] in Idle mode and select **Settings**.

Time and date *(Menu 9.1)*

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World clock** menu. ► p. 55

- **Set time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select a time format.
- **Set date:** enter the current date.
- **Date format:** select a date format.

- **Calendar starting day:** set which day of the week the calendar starts with.
- **Auto update:** activate the auto time update feature. Your phone will read the MCC (Mobile Country Code) from the network and automatically update the current time for the country that you are in when you travel abroad.



Time information may not be updated when you move to one time zone to another within a country.

Phone settings *(Menu 9.2)*

Many different features of your phone's system can be customised to suit your preferences.

Language *(Menu 9.2.1)*

Use this menu to select a language for the display text.

Greeting message (Menu 9.2.2)

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

Shortcuts (Menu 9.2.3)

You can use the Navigation keys as shortcuts to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

Assigning a shortcut menu

1. Select a key to be used as a shortcut key.
2. Select a menu to be assigned to the key.

Using shortcut options

Press <**Options**> to access the following options:

- **Change:** assign or change a shortcut menu.
- **Remove:** deactivate the shortcut assignment to the selected key.

- **Remove all:** deactivate all shortcut assignments.

Volume key (Menu 9.2.4)

Use this menu to set whether the phone mutes the call ringer or rejects a call if you press and hold [**▲/▼**] when a call comes in.

Extra settings (Menu 9.2.5)

You can turn the automatic redialling or answering feature on or off, and lock the external keys.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Active folder:** answer an incoming call by opening the phone.
- **Anykey answer:** answer an incoming call by pressing any key, except for [**ⓞ**] and <**Reject**>.

- **Cover keypad lock:** lock the exposed keys to keep accidental presses from affecting your phone's operation when the phone is closed.

Display settings *(Menu 9.3)*

Use this menu to change settings for the display and backlight.

Wallpaper *(Menu 9.3.1)*

You can set up the idle screen on both displays.

- **Main display:** select an image or video clip to be displayed on the main display.
- **Cover display:** select an image to be displayed on the external display.
- **Text position:** select a text position. If you do not want to display text in Idle mode, select **Off**.
- **Text mode:** select a font style.

- **Text colour:** select a font colour.
- **Graphic logo:** set the phone to display a graphic icon instead of the service provider's logo on the idle screen. This is only available if a graphic icon has been received in a message.

Skin *(Menu 9.3.2)*

You can select a skin colour pattern for Menu mode.

Brightness *(Menu 9.3.3)*

You can adjust the brightness of the main display for varying lighting conditions.

Dialling display *(Menu 9.3.4)*

Use this menu to select a font colour for the numbers entered while dialling.

Show caller information (Menu 9.3.5)

Use this menu to set the phone to display missed call notifications with the most recently missed caller's information. To set the external display to show caller information, select **Show on cover display**.

TV-out settings (Menu 9.3.6)

Use this menu to select the video system for a TV.

Sound settings (Menu 9.4)

Use this menu to customise various sound settings.

Incoming call (Menu 9.4.1)

Use this menu to change the sound settings for incoming calls.

- **Ringtone:** select a ringtone to be used for the call ringer.

- **Volume:** select a ringtone volume.
- **Alert type:** specify how you are to be informed of incoming calls.

Keypad tone (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.

You can adjust the key tone volume using [▲/▼] in Idle mode.

Message tone (Menu 9.4.3)

Use this menu to change the sound settings for incoming SMS messages, i-mails, MMS messages, and broadcast messages individually.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed when a message comes in.
- **Repetition:** specify how often the phone informs you of a new message.

Power on/off (Menu 9.4.4)

Use this menu to select the melody that the phone sounds when it is switched on or off.

Folder tone (Menu 9.4.5)

Use this menu to select the tone that the phone sounds when you open or close the phone.

Time alert (Menu 9.4.6)

Use this menu to set the time alert.

- **Periodic:** you can set the phone to sound an alert every hour on the hour.
- **Current:** you can set the phone to state the current time by pressing and holding [▲] in Idle mode when the phone is closed.

Quiet mode (Menu 9.4.7)

Use this menu to set how the phone acts to alert you to a specific event while in Quiet mode.

Extra tones (Menu 9.4.8)

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when an outgoing call is connected to the system.
- **Alerts on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tone:** set the phone to beep when a pop-up window displays.

Light settings (Menu 9.5)

Use this menu to change the settings for the light.

Backlight time (Menu 9.5.1)

You can change the settings for backlight and icons.

- **Main display normal:** select the length of time the backlight stays on.
- **Main display dim:** select the length of time the display stays on in Dim mode after the backlight turns off. After a specified time, the display turns off.
- **Show cover indicators:** set whether or not the cover display icons are shown on the external display.

Keypad light (Menu 9.5.2)

Use this menu to set how the phone controls the use of the keypad light. Select one of the following options in the **Use at** line:

- **Any time:** the keypad light is always used.
- **Night time:** the keypad light is used only between 5:00 PM and 9:00 AM.

- **Custom time:** you can specify the time period that the keypad light is used.

Network services (Menu 9.6)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting (Menu 9.6.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
 - **Divert always:** divert all calls.
 - **Busy:** divert calls when you are on another call.
 - **No reply:** divert calls when you do not answer the phone.

- **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
 3. Select **Activate**. To deactivate call diverting, select **Deactivate**.
 4. Move to the **Divert to** line.
 5. Enter the number to which calls are to be diverted.
 6. If you selected **No reply**, move to the **Seconds** line and select the length of time the network delays before diverting a call.
 7. Press <**Select**>.

Call barring *(Menu 9.6.2)*

This network service allows you to restrict your calls.

1. Select a call barring option:
 - **All outgoing calls:** prohibit all outgoing calls.
 - **International:** prohibit international calls.
 - **International except home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming calls:** prohibit incoming calls.
 - **Incoming while abroad:** prohibit incoming calls when you use your phone outside of your home country.

- **Cancel all:** cancel all call barring settings, allowing calls to be sent and received normally.
 - **Change barring password:** change the call barring password obtained from your service provider.
2. Select the type of calls to be barred.
 3. Select **Activate**. To deactivate call barring, select **Deactivate**.
 4. Enter the call barring password supplied by your service provider and press <**Select**>.

Call waiting *(Menu 9.6.3)*

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which call waiting option will apply.
2. Select **Activate**. To deactivate call waiting, select **Deactivate**.

Network selection *(Menu 9.6.4)*

This network service allows you to either automatically or manually select the network to be used while roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Caller ID *(Menu 9.6.5)*

This network service allows you to hide your phone number from the person you are calling. If you select **Default**, the phone will use the default setting provided by the network.

Some networks may not allow you to change this setting.

Voice mail server *(Menu 9.6.6)*

Use this menu to store the number of the voicemail server and access your voicemails.

You must store the voicemail server number before accessing the server. Your service provider can give you the number.

- **Connect to voice server:** connect to the voicemail server to listen to your voicemails.
- **Voice server number:** change the voicemail server number.

Closed user group *(Menu 9.6.7)*

Use this menu to set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group (CUG), contact your service provider.

- **Index list:** add, delete, or activate CUG index numbers.
- **Outside access:** enable calls to numbers other than those in the closed user group. This feature depends on the nature of your CUG subscription.

- **Default group:** enable the default CUG, if you have set one with your service provider. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Bluetooth *(Menu 9.7)*

Using the Bluetooth feature, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 metres. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.

- ☑ • If there are obstacles between the devices, the operating distance may be reduced.
- It is recommended that you do not use the Bluetooth feature while using multimedia features, such as voice recorder, camera, and media player, or vice versa, for better performance.
- Some devices, especially those that are not tested or approved by SIG, may be incompatible with your phone.




Setting up the Bluetooth feature





The **Bluetooth** menu provides the following options:

- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to search for your phone.

- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth services:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the **Bluetooth** menu, select **My devices**.
2. Select **Search for new devices**.
After searching, a list of devices to which you can connect displays. The following icons indicate the type of device:
 -  Stereo headset
 -  Printer
 -  Computer

-  PDA
-  Mobile phone
-  Unknown device
-  Mono headset/hands-free car kit

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
 - Blue for paired devices
 - Red for devices that are currently connected to your phone
3. Select a device.
 4. Enter a Bluetooth PIN and press **<OK>**. This code is used just once and you do not need to memorise it.

When the owner of the other device enters the same code, pairing is complete.

- Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has a code, you must enter it.

Using device options

From the device list, press **<Options>** to access the following options:

- **Connect:** connect to a headset or hands-free car kit.
- **Disconnect:** end the connection with the connected device.
- **Browser files:** search for data from the device and import data directly to your phone.
- **Service list:** access the Bluetooth service list of the device.
- **Rename:** rename the paired device.
- **Authorise device/Unauthorise device:** determine whether or not the phone asks you to permit connection when other devices try to connect to your phone.
- **Delete:** remove the selected device or all devices from the list.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want.
4. Press **<Options>** and select **Send via** → **Bluetooth** → **Search for new devices**.
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active and its visibility must be enabled.

1. If an unauthorised Bluetooth device sends data to your phone, press **<Yes>** to allow the device to access your phone.

2. Press **<Yes>** to receive data.

Security (Menu 9.8)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- If you enter an incorrect PIN/PIN2 three times, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your service provider.

PIN check (Menu 9.8.1)

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN code (Menu 9.8.2)

Use this menu to change your PIN. The PIN check feature must be enabled to change the PIN.

Phone lock (Menu 9.8.3)

Use this menu to lock the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.



You can set the phone's password the first time you access a menu requiring the password. You can change the phone's password.

Change password (Menu 9.8.4)

Use this menu to change your phone password.

Privacy (Menu 9.8.5)

Use this menu to lock access to messages, files, i-mode access, or all menu functions on the phone, except for call functions.

When a privacy option is enabled, you must enter the phone password to access the locked items or functions.

SIM lock (Menu 9.8.6)

This menu allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

Fixed dialling mode (Menu 9.8.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

Change PIN2 code (Menu 9.8.8)

Use this menu to change your current PIN2, if supported by your SIM card.

Mobile tracker (Menu 9.8.9)

When someone tries to use your phone with another SIM card, the phone will automatically send the preset tracking message to your family or friends. You can check the phone number from which the messages are sent and then track your phone. This feature is useful when the phone is stolen or lost.

Sending of the tracking message will be billed to the user of the unauthorised SIM card. To use your phone with any other SIM card, you must first deactivate the Mobile tracker feature.

1. Enter the phone password and press <**OK**>.

2. Specify the following options:
 - **Mobile tracker:** activate the Mobile tracker feature.
 - **Recipients:** specify phone numbers to which you want to send the tracking messages.
 - **Sender:** enter the sender's name.
 - **Message:** check the preset tracking message text.
3. When you have finished, press <**Save**>.
4. Press <**Accept**> if you agree to the terms and conditions of service listed on the screen.

i-mode settings (Menu 9.9)

Use this menu to create and customise the i-mode profiles containing the settings for accessing the i-mode browser or sending i-mails and MMS messages.

Your phone is suited for connecting to the network by default. If you change the settings without first checking with your service provider, the i-mode browser, i-mail, and MMS features may not work properly.

1. Press [Left] or [Right] to select a profile.
2. Enter information for the profile.
 - **Profile name:** enter a profile name.
 - **Proxy host - i-mode:** enter the host of the proxy server for accessing the i-mode browser.
 - **Proxy port - i-mode:** enter the port number of the proxy server for accessing the i-mode browser.
 - **SSL port:** enter the port number of the SSL (Secure Sockets Layer) server.
 - **Portal URL:** enter the URL address for the startup page of the i-mode browser.
 - **Location server URL:** enter the URL address of your network cell ID.
3. Press <**Save**>.
 - **Mail server:** enter the URL address of the i-Mail server.
 - **MMS server:** enter the URL address of the MMS server.
 - **APN:** enter the access point name used for the address of the GPRS network.
 - **User ID:** enter the user ID.
 - **User password:** enter the password.

Reset settings *(Menu 9.10)*

Use this menu to reset the phone's settings you have changed.

1. Press [Centre] to select the setting categories to be reset.
2. Press <**Reset**>.
3. Press <**Yes**> to confirm the reset.
4. Enter the phone password and press <**OK**>.

You can set the phone's password the first time you access a menu requiring the password. You can change the phone's password. ► p. 109

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM"

- Be sure that the SIM card is correctly installed.

"Enter password"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.

- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


“Enter PUK”

- The PIN has been entered incorrectly three times, and the SIM card is now blocked. Enter the PUK supplied by your service provider.


“No service,” “Network failure,” or “Not done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Be sure that you have pressed [].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ( pressed for more than one second.)
- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.

Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.

Solve problems

- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and “Warning. Low battery” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (📶). The number of bars indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Phonebook entry

- Use the **Contact list** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery does not charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0W/kg.¹

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network.

1. The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

In general, the closer you are to a base station, the lower the power output of the phone.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.

3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.

Health and safety information

- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.

- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-13286A
English. 03/2007. Rev. 1.2