



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L61271BI. You'll find the answers to all your questions on the AEG-ELECTROLUX L61271BI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L61271BI
User guide AEG-ELECTROLUX L61271BI
Operating instructions AEG-ELECTROLUX L61271BI
Instructions for use AEG-ELECTROLUX L61271BI
Instruction manual AEG-ELECTROLUX L61271BI

LAVAMAT 61271 BI
LAVAMAT 61470 BI

EN WASHING MACHINE

USER MANUAL



[Your user manual](#)
[AEG-ELECTROLUX L61271BI](#)

Manual abstract:

CHILD SAFETY DEVICE · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. **INSTALLATION** · The appliance is heavy, be careful when you move it. · Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions. **ENGLISH 5** · Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts. · Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance.

This to prevent the risks of structural damage or injury. · Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet. **Water connection** · Do not connect the appliance with old hoses already used.

Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages.

· Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. · Only for UK and Ireland.

The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse. · Permanent connection. To connect the appliance permanently, install a double-pole isolating switch between the appliance and the electricity supply. It must have a minimum distance of 3 mm between the switch contacts and it must be the correct type for the necessary load. It must agree with the last electrical legislation. The switch must not break the yellow and green ground cable. Only a qualified electrician must install this type of device. **DISCARD THE APPLIANCE**

Disconnect the mains plug from the mains socket. 2.

Cut off the mains cable and discard it. 3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

1. **Electrical connection** · Make sure that the appliance is earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. **TECHNICAL INFORMATION Dimensions** Width / Height / Depth Total depth 600 / 820 / 630 mm 640 mm 6 www.

aeg.com **Electrical connection:** Voltage Overall power Fuse Frequency 230-240 V 2050 W 13 A 50 Hz **IPX4** Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture **Water supply pressure** Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 7 kg 1200 rpm (L 61271 BI) 1400 rpm (L 61470 BI) 1) Connect the water inlet hose to a water tap with a 3/4" thread. **ENGLISH 7 PRODUCT DESCRIPTION** 1 2 7 8 9 3 4 5 6 1 Detergent dispenser 2 Control panel 3 Door handle 4 Rating plate 5 Drain pump 6 Feet for the appliance level 7 Water drain hose 8 Mains cable 9 Water inlet hose 10 Feet for the appliance level 10 **ACCESSORIES** 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink..



[Your user manual](#)

[AEG-ELECTROLUX L61271BI](#)