


LAVAMAT 47380 aqua alarm

The environmentally friendly washing machine

User information

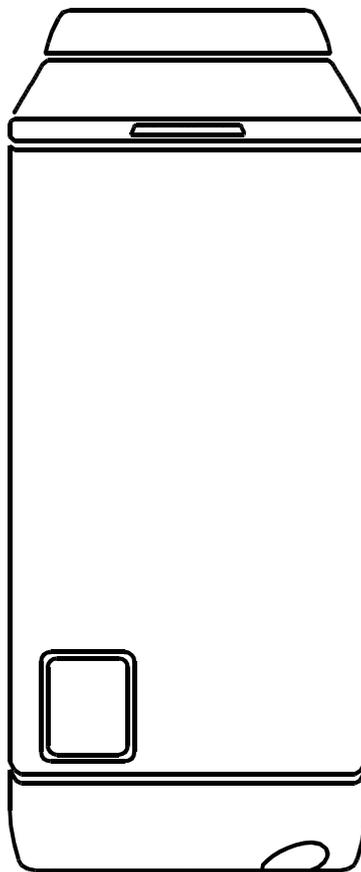

PERFEKT IN FORM UND FUNKTION

CONTENTS

Warnings.....	4
Usage	4
Precautions against frost.....	5
Scrapping.....	6
Protection of the environment	6
Washing machine description.....	7
The detergents dispenser	7
Control panel.....	8
Programme selector	8
Additional programme pushbuttons	10
DELAY START (STARTTIJDKEUZE / DEPART DIFFERE)	11
Spinning speed pushbutton / RINSE HOLD.....	12
START/PAUSE (START/PAUZE / DEPART/PAUSE) pushbutton.....	12
Programme progress display	12
Opening and closing the lid.....	13
Consumptions and programme durations	14
Washing guide	15
Sorting and preparing your washing.....	15
Washing load depending on the nature of the material	15
Detergents and additives.....	16
International symbols.....	17
How to do a wash ?.....	18
Loading the washing.....	18
Proportioning of detergents.....	18
Selecting the desired washing programme	18
Selecting the spinning speed	19
Selecting the pushbuttons.....	19
Selecting a delay start.....	19
Starting the programme.....	19
End of programme.....	20
Programmes tables	21
Washing	21
Separate rinse.....	22
Separate spinning	22

Care and cleaning	23
Descaling the washing machine.....	23
The surface	23
The detergents dispenser	23
The drain filter	24
Operating problems.....	26
Installation and connection instructions	30
Warnings.....	30
Washing machine dimensions.....	31
Installation	32
Technical characteristics.....	36
Garantee conditions and After Sales Service.....	36

FOR THE USER

Warnings

Keep this user's manual with your washing machine. If you sell your washing machine or give it away, make sure that it is accompanied by its user's manual. The new user can then be informed of how the washing machine operates and read relevant warnings.

These warnings have been written for your safety and for the safety of others. Please read these comments carefully before installing and using your washing machine. Thank you for your attention.

Usage

- When you receive your washing machine, unpack it or have it unpacked immediately. Check its general appearance. Make any reserves in writing on the delivery form and keep a copy.
- Your washing machine was designed for use by adults. Make sure that children do not touch it or use it as a toy.
- Do not modify or attempt to modify the characteristics of this washing machine. This could be dangerous for you.
- Your washing machine is intended for normal domestic use. Do not use it for commercial or industrial purposes or for any purpose other than that for which it was designed : to wash, to rinse and to spin.
- Unplug the power supply plug and close the water supply tap every time after using your washing machine.
- Only wash articles that can resist machine washing. Refer to the instructions on the label for each article.
- Do not wash underwear with bones, or any material without hems, or torn materials in your washing machine.

- Remember to remove all coins, safety pins, boraches, screws, etc., before each wash. They can cause serious damage if they are left in your washing.
- Do not put articles in your washing machine if you have used a solvent, alcohol, trichloroethylene, etc., to remove stains from them. If you must use these stain removers, wait until the product has evaporated before putting the articles in the drum.
- Collect all small articles such as socks, belts, etc., in a small cloth bag or pillow case.
- Use the quantity of detergent indicated in the «proportioning of detergents» section.
- Always unplug the washing machine before cleaning it and doing any maintenance.

Precautions against frost

If your washing machine is exposed to temperatures below 0°C, take the following precautions :

- Close the tap and disconnect the water supply pipe.
- Put the end of this pipe and the drain pipe into a bowl on the floor.
- Select the «Drain» programme and make sure it works until it is complete.
- Switch the washing machine off by putting the program selector to the «Off»* position or pressing on the «On/Off»* key.
- Unplug the washing machine.
- Screw in the water inlet pipe and install the drain pipe.

*depending on model

Water that remained in the pipes will then be evacuated, thus preventing the formation of frost or ice that can damage your washing machine.

The next time you want to use your washing machine, make sure that it is installed in a room in which the temperature is above 0°C.

Scrapping

All materials marked with the  symbol can be recycled. Put them in a waste tip (ask for information from your municipal offices) so that they can be recovered and recycled.


When you take your washing machine to the tip, make sure that everything that could be dangerous is out of service ; cut the power supply cable flush with the surface of your washing machine.

Protection of the environment

We recommend that the following instructions should be followed to achieve savings in water and energy and therefore to contribute to protection of the environment:


- If possible, use the washing machine at full capacity rather than with partial loads (however, do not overload the drum).
- Only use the Prewash or Soak function for very dirty washing.
- Use a detergent dose adapted to the water hardness (see «proportioning of detergents» section) and to the amount of washing and how dirty it is.

Washing machine description

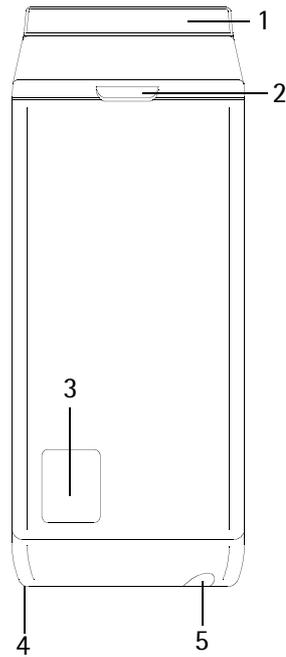

- 1 - Control panel
- 2 - Lid opening handle
- 3 - Filter door
- 4 - Leveling screws
- 5 - Lever for moving the washing machine


The detergents dispenser

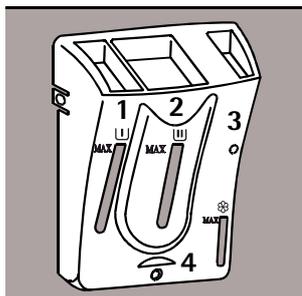

Symbols

- 1 - prewash 
 - 2 - wash 
 - 3 - softener 
- (do not exceed the MAX mark)
- 4 - softener overflow (if overfilled).


Control panel

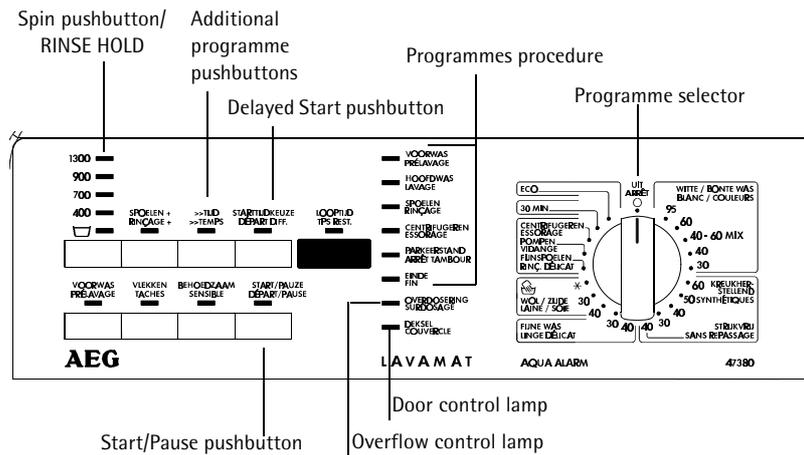

Programme selector

It is used to select the most suitable programme to the type and soiling of your laundry.

It can be turned to the right or to the left.

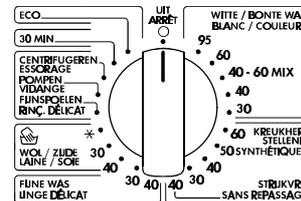

OFF (UIT/ARRET)

This position of the programme selector switches off the appliance. Moreover, thanks to this option, you can cancel a programme which has already been selected. Another programme can then be selected.

40 - 60 MIX

Programme for Cotton and Coloureds. These different nature of laundry can be washed together with temperatures from 40°C to 60°C with this 40-60 MIX programme. The drum capacity is better used and so, you can save energy. Thanks to a longer washing time, the washing result is identical to the one of a normal washing programme at 60°C. This function is not compatible with SHORT* and SAVE TIME* push-buttons.

WHITE / COLOUREDS (WITTE/BONTE WAS / BLANC/COULEURS)

Main wash for coloured or white laundry from 30°C to 95°C.

SYNTHETICS (KREUKHERSTELLEND / SYNTHETIQUES)

Main wash for lightly soiled fabrics from 30°C to 60°C.

EASY IRONING position (STRIJKVRIJ / SANS REPASSAGE)

Wash at 40°C for mixed clothes. Thanks to this programme, clothes require only light ironing or even no ironing at all.

DELICATES (FIJNE WAS / LINGE DELICAT)

Main wash for delicates fabrics at 30°C or 40°C.

WOOL (WOL / LAINE) / SILK (SIJDE / SOIE) / 

Main wash (cold to 30°C) for machine washable woollen garments and also for all other garments carrying the «hand washable» symbol.

RINSES (FIJNSPOELEN / RINCAGE DELICAT)

Separate rinse which can, for instance, be used to rinse and spin handwash garments. The appliance performs 3 rinses cycles and a short spin.

DRAIN (POMPEN / VIDANGE)

Separate drain of the water after a rinse hold (without spinning). The effect of the rinse hold function is that the washing is left to soak in the last rinse water, without spinning.

SPINNING (CENTRIFUGEREN / ESSORAGE)

Drain of the water after a rinse hold and spin or separate spin for handwashed cotton garments.


ECO

By washing normally soiled white clothes at around 60°C, this programme saves water and energy. Futhermore, it increases the wash duration and it can not be combined with the TIME (TIJD/ TEMPS) pushbutton.

*depending on model

Additional programme pushbuttons

Additional programme pushbuttons enable to adapt the washing programme to the laundry soil level. It is not necessary to use these options so as to wash normally soiled garments. The use of the different options depends on the chosen programme.

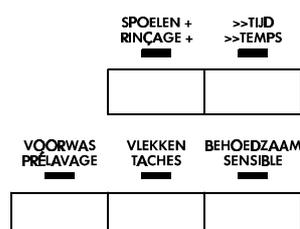

When these buttons are pressed, the corresponding lights illuminate. When pressed again, the corresponding lights extinguish.

When an additional function is not compatible with the selected programme, the corresponding light will flash for a few seconds and the «Err» message will appear in the display window.

PREWASH (VOORWAS / PRELAVAGE)

Prewash at 30°C before the main wash which starts automatically. The prewash ends by a short spin as far as the white/coloureds, synthetics programmes are concerned and by a drain of the water for the delicate garments. It is not possible to select the prewash option with the wool and handwash programmes and also with the SOAKING* and STAIN* pushbuttons. This option is recommended for very soiled clothes.

STAIN (VLEKKEN / TACHES)

This option reinforces the washing action. You can add stain removal salts into the prewash compartment in your washing machine. This option is not available with the wool and handwash programmes and with PREWASH* and SOAKING* pushbuttons.

SENSITIVE (BEHOEDZAAM / SENSIBLE)

Enhanced rinse action through an additional rinse cycle together with decreased drum movement (improved fabric care). This is ideal when frequent washes are necessary, for example, in cases of highly sensitive skin.

*depending on model

RINSE PLUS (SPOELEN + / RINCAGE +)

This option adds two rinses on Cotton, Synthetics and Delicates programs. It is advised for allergic people to detergent products and in areas with fresh water.

TIME (TIJD / TEMPS)

Shortened wash programme for lightly soiled washing. This function can not be used on the wool and handwash programmes and also with STAIN* pushbutton.

DELAY START (STARTTIJDKEUZE / DEPART DIFFERE)

This pushbutton is used to delay the start of a programme in order to take advantage of attractive night rates (for instance).

Using the delayed start :

- Select the programme and the options
- Select the required time (30, 60, 90 minutes until 23 hours) for the delayed start by pressing the DELAY START pushbutton
- Press the START/PAUSE pushbutton. The programme starts when the time has elapsed.

Modifying the delayed start :

- Press the START/PAUSE pushbutton
- Press the DELAY START pushbutton with your new choice ; if you want to cancel a delay start, move the programme selector to the OFF position.
- Press the START/PAUSE pushbutton again so as to activate the new delayed start selection or to start the programme (if the delayed start has been cancelled).

Be careful : if you use liquid detergent for a washing cycle with a delayed start, use a ball to put directly in the drum and choose a programme without prewash. If you want to realize a prewash with a delay start in the same time, please use powder detergent.

ACOUSTIC SIGNAL

An acoustic signal sounds when a washing programme or options are selected. The end of the programme is announced by several acoustic


bips. If you want to take away these alarms, because they disturb you, please proceed as follow :

- a) Choose a washing programme,
- b) Press simultaneously on the pushbuttons «DELAY START» and «START/PAUSE»,
- c) The acoustic signal is removed.

By pressing these two pushbuttons again, the acoustic signal is reactivated.

Spinning speed pushbutton / RINSE HOLD

The maximum spin speed is defined as a function of the type of washing and depending on the selected program. However, you can reduce the speed or choose the rinse hold*, drain*, or spinning suppression* positions.

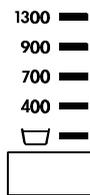

START/PAUSE (START/PAUZE / DEPART/PAUSE) pushbutton

Start:

After having selected the wash programme, press this button to start the appliance ; the corresponding light remains illuminated.

If you have selected a delay start, the timer starts.

Pause:

The programme in progress is interrupted when this button is pressed. It continues when this button is pressed again. During the pause, the light of the START/PAUSE button flashes.

Programme progress display

When you select a programme, the leds corresponding to the different steps during the programme light on. When the programme starts, only the concerned led of the programme cycle stays lighted on.

END (EINDE / FIN)

Indicate the end of the washing cycle. The laundry can be removed from the appliance.



LID / DOOR (DEKSEL / COUVERCLE)

When the appliance is switched on, the led DEKSEL/COUVERCLE indicates whether the lid can be opened.

0.1. Opening and closing the lid

If you want to open the lid when the appliance is switched on, you must set up the appliance in pause position by pressing the START/PAUSE pushbutton.



When the appliance is switched on, the led DOOR indicates whether the lid can be opened :

DOOR light	Can the lid be opened ?
is off	No
lighted in green	Yes

If :

- the START/PAUSE pushbutton flashes in red,
- and then the error code E40 appears in the display window,
- and the END light flashes 4 times and an acoustic signal is emitted 4 times,

it means there was an attempt to start a wash programme without closing the lid properly. If this happens, push the lid firmly and start the wash programme again.

Consumptions and programme durations

Timer / Temperature	Washing quantity in kg	Water consumption in liters	Energy consumption in kWh	Duration in minutes
COTON/LINEN 95	5,0	59	2,00	140-155
ENERGY SAVING ECO*	5,0	42	0,85	140-155
SYNTHETICS 60	2,5	52	1,10	85-100
DELICATES 30	2,5	53	0,35	55-70
WOOL / SILK 30	1,0	50	0,30	45-60

*Programme setting for testing in accordance with standard EN 60456.

Values given in the above table are provided as a guide and may vary depending on the water supply temperature and pressure, and your electricity power supply mains voltage.

Washing guide

Sorting and preparing your washing

- Sort the washing by type and care symbol (see chapter 5.4: International symbols for care of textiles): normal wash for strong washing that can resist energetic wash and spin; delicate wash for delicate washing that should be treated more carefully. For mixed loads composed of articles of different types of fibers, choose a program and temperature suitable for the most fragile fiber.
- Wash white washing and color washing separately. Otherwise, the white washing may be colored or look gray.
- New clothes very often have too much color. Preferably wash new clothes separately for the first time. Respect "wash separately" and "wash several times separately" care instructions.
- Empty pockets and spread out the washing.
- Take off all loose buttons, pins and hooks and eyes. Close zip fasteners, tie knots in laces and straps.
- Turn clothes made of several layers of textiles (sleeping bags, anoraks, etc.), colored hosiery and wool and textiles with add-on decorations, inside out.
- Wash small delicate items (socks, tights, bras, etc) in a washing net.
- Treat curtains with special care. Remove curtain hooks and put net curtains in a net bag or a sachet.

Washing load depending on the nature of the material

The quantity of washing that you put in your drum must not exceed the maximum capacity of your washing machine. This capacity may vary depending on the nature of your textiles. Reduce the quantity of washing if it is very dirty or if you have terry cloth type materials. Not all textiles have the same volume and the same water retention capacity. This is why in general the drum should be filled:

- completely, but without excessive pressure for cotton and linen, and for mixed washe,
- half full for treated cottons and synthetic fibers,

- about one third full for very delicate articles such as net curtains and wool.

For a mixed wash, fill the drum as required for the most delicate material.

Detergents and additives

Only use detergents and additives suitable for use in a washing machine. Read the manufacturer's instructions and respect sections about detergents dispenser and detergents.

Powder detergents can be used without restriction; liquid detergents should be poured either in the proportioning bowl directly in the drum, or in the wash compartment provided that the washing machine is started immediately; detergents in tablets or doses must be put into the wash compartment of the detergents dispenser in your washing machine.

The quantity of detergent to be used depends on the amount of washing to be washed, the hardness of the water and how dirty the washing is.

If the water is soft, you can reduce the doses slightly. Increase the doses slightly if the water is hard (it is recommended to use a water softener) or if the washing is very dirty or stained.

You can ask the water distribution company in your region or any other competent authority to find out the degree of hardness of your water.

International symbols


NORMAL WASH						
	Wash at 95°C	Wash at 60°C	Wash at 40°C	Wash at 30°C	Delicate wash by hand	Do not wash
DELICATE WASH						
						
JAVEL WATER	Bleaching with chlorine (Javel water) allowed (only cold and with a dilute solution)			Do not bleach with chlorine (Javel water)		
						
IRONING	High temperature (max 200°C)	Average temperature (max 150°C)	Low temperature (max 100°C)	Do not iron		
						
DRY CLEANING	Dry cleaning (all usual solvents)	Dry cleaning (all solvents except trichloroethylene)	Dry cleaning (only oil solvents and R113)	Do not dry clean		
						
DRYING	Dry washing spread out	Dry washing hung up	Dry washing on hanger	High temperature	Moderate Temperature	Do not dry in drum

How to do a wash ?

Before the first wash in your washing machine, we recommend that you should do a preliminary wash at 90°C with detergent but without any washing to clean the tub.

Loading the washing

- Lift the machine cover.
- Open the drum by pressing on the locking button A; the two flaps automatically separate.
- Insert the washing, close the drum and the cover of your washing machine.

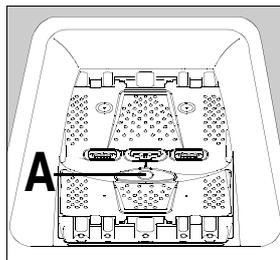

Warning : before you close the cover of your washing machine, make sure that the drum door is properly closed:

- the two flaps latched together,
- the locking button A extended.

Proportioning of detergents

Your washing machine has been produced in order to reduce water and detergents consumptions, so you can reduce the doses recommended by detergent manufacturers. Pour the powder detergent dose into the wash compartment  and into the prewash compartment  if you chose the «prewash» option. Pour in the softener into the  compartment. If you are using a different type of detergent, refer to the «detergents and additives» section in the washing guide.

Selecting the desired washing programme

Select the desired wash programme and temperature with the programme selector (for the appropriate programme, temperature and possible programme options suitable for any type of washing, see "Programme tables"). The control lamps corresponding to the programme light on.

The OFF position of the programme selector switches off the appliance (it is switched on for all other positions). This function enables also to cancel a programme and to restart the washing machine in case of error.

If the programme selector is turned when the appliance is performing wash cycle, the programme will be carried out and will ignore the new position of the selector. In order to solve this problem, re-position the programme selector on its original position.

Selecting the spinning speed

When selecting the programme or in Pause mode, the light corresponding to the maximum spinning speed illuminates. You can adjust the spinning speed which corresponds to the type of laundry and the degree of dampness required at the end of the wash depending on your drying possibilities. You can also choose the RINSE HOLD option.

If you do not modify the spinning speed, the final spinning is automatically adapted to the chosen programme. The middle spinning speed depends on the chosen programme and can not be modified.

Selecting the pushbuttons

Selecting if necessary one or several additionnal programme pushbuttons

- to change the selection, press an another pushbutton.
- to cancel a wrong selection, press again the same pushbutton.

Selecting a delay start

Select the number of hours after which you want the program to begin by pressing on the pushbutton several times.

Starting the programme

After you chose the washing program, press the "start/pause" pushbutton to start the cycle ; the corresponding light comes on con-

tinuously. It is normal that the program selector does not turn during the cycle.

The current program light is on.

If you selected a delayed start, the countdown will begin. The "Remaining time" display window displays either the program duration or the displayed start time.

End of programme

The appliance is equipped with a security which prevents the opening of the lid during the cycle. The washing machine stops automatically. "0" flashes in the display window. You will hear a double "click" in the locking device. When the DOOR light illuminates, you can open the lid.

The programmes end :

- by a spinning (for all washing programmes) if you have not selected the option RINSE HOLD
- by a rinse hold (for all washing programmes) if you have selected the option RINSE HOLD. You can then end these programmes by a spinning or by a draining by setting the programme selector on the chosen programme by the OFF position, then pushing the START/PAUSE pushbutton.

At the end of the cycle, place the programme selector on the OFF position in order to switch off the appliance.

Remove the laundry. Unplug the appliance and switch off the water inlet tap.

Check that the drum is empty : any garments left in the appliance may be damaged during the next wash (shrinkage) or their colour may run onto other garments.

Note : leave the lid opened in order to air the washing machine.

Programmes tables

Washing

This table does not include all possibilities, simply the best and most usual adjustments in practice.

Washing type	Max. washing quantity	Timer Temperature	Other possible options
Washing to be boiled	5 kg	WHITE / COLOUREDS 95	TIME * PREWASH STAIN SENSITIV RINSE PLUS
		Energy saving ** ECO	
Cotton / Coloureds	4,5 kg	40-60 MIX	TIME PREWASH STAIN *** SENSITIV **** RINSE PLUS
	5,0 kg	WHITE / COLOUREDS 30-60	
Easy care washing	2,5 kg	SYNTHETICS 30-60	TIME PREWASH STAIN *** SENSITIV **** RINSE PLUS
	1,0 kg	EASY IRONING	
Delicates	2,5 kg	DELICATES 30-40	
Wool	1,0 kg	WOOL / SILK cold - 40	
All laundry	2,5 kg	30 MIN	

*Not possible with ECO and 40-60 MIX programmes and with the STAIN pushbutton

**Programme at 60°C setting for testing in accordance with standard EN 60456.

***Not possible with programmes which temperature is below 40°C

****Not possible with the EASY IRONING programme.

Separate rinse

Washing type	Max. washing quantity (dry weight)	Timer
Washing to be boiled Coloureds	5,0 kg	RINSES
Easy care washing	2,5 kg	
Delicate washing	2,5 kg / 1,0 kg	
Wool / Handwash	1,0 kg	

Separate spinning

Washing type	Max. washing quantity (dry weight)	Timer
Washing to be boiled Coloureds	5,0 kg	SPIN
Easy care washing	2,5 kg	
Delicate washing	2,5 kg / 1,0 kg	
Wool / Handwash	1,0 kg	

Care and cleaning

Do not do any cleaning operation until you have unplugged the washing machine.

Descaling the washing machine

Normally there is no need to descale the washing machine if the detergent was correctly proportioned.

If descaling is necessary, use a special non-corrosive product specially designed for washing machines that you can find in the shops. Respect the proportion and frequency of descaling shown on your packaging.

The surface


Clean the surface of your washing machine using lukewarm water and a mild detergent. Never use alcohol, solvents or similar products.

The detergents dispenser

From time to time, you must clean the detergents dispenser in order to eliminate the possible wastes of the detergents and then to avoid an operating problem.


The detergent dispenser is very easy to remove for a light cleaning.

Disassembly:

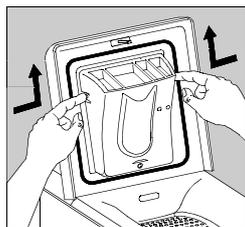


Press the clips on each side of the detergents dispenser and pull it upwards.

User information

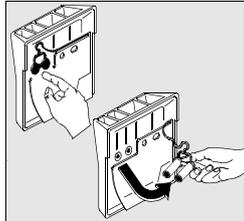

You can thus clean it using running water and a brush or a twisted cloth. Check that the siphons at the back of the detergents dispenser are not blocked.

Reassembly :


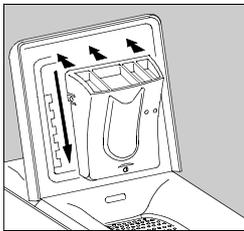


Put the detergents dispenser in the notches until they lock.

The drain filter


Clean the filter at the bottom of the washing machine regularly. The "filter"* light comes on if the filter is blocked. In this case clean it immediately. If you wash washing that is very fluffy, clean it after each wash.

Open the door, with a screwdriver for example:

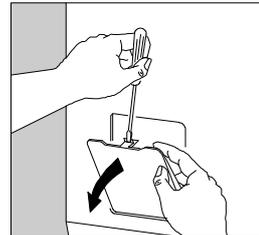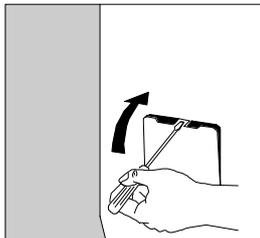


*depending on model

Drain residual water:

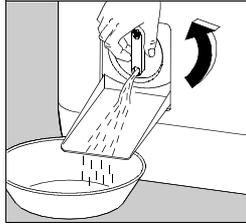

Put a receptacle under the drain. Turn the cap in the anti-clockwise direction until it is vertical to release residual water.

Remove the filter:

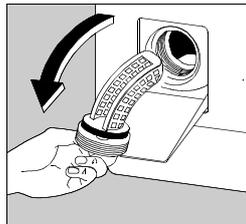

Unscrew the cap all the way and take it off. Clean it thoroughly with running water. Put the assembly back and screw it in the clockwise direction.

After cleaning the filter, you are required to closed the door. In fact, for reasons of safety, the door must be closed when the appliance is working.

Operating problems

Many checks have been carried out during the manufacture of your washing machine. However, if you face a problem with its operation, please read the following sections before calling the After Sales service.

Symptom	Cause
The washing machine will not start or will not fill	<ul style="list-style-type: none"> • the washing machine is not correctly connected, the electrical installation is not working, • the cover of your washing machine and the drum flaps are not correctly closed, • you did not control the program start correctly, • there is a power failure, • the water supply is closed off, • the water tap is closed, • the water inlet is blocked.
The washing machine fills up but empties again immediately	<ul style="list-style-type: none"> • the drain siphon is attached too low (see installation section).
The washing machine will not spin or will not empty	<ul style="list-style-type: none"> • the drain pipe is blocked or kinked, • the drain filter is blocked, • the anti-unbalance mass safety device has tripped; bad distribution of washing in the drum, • the «Drain» program or the «Rinse hold» option is selected, • the height of the drain siphon is wrong.

Symptom	Cause
There is water on the floor around the washing machine	<ul style="list-style-type: none"> • excess detergent has made too much foam that overflowed, • the detergent is not suitable for washing machine, • the drain siphon is not hooked on properly, • the drain filter was not put back into place, • the water inlet pipe is leaking.
Washing results are not satisfactory	<ul style="list-style-type: none"> • the detergent is not suitable for machine washing, • there is too much washing in the drum, • the washing program is not appropriate, • there is not enough detergent.
The machine is vibrating or noisy	<ul style="list-style-type: none"> • not all the packing was removed from the machine (see unpacking section), • the washing machine is not leveled and properly packed, • the washing machine is too close to the wall or furniture, • the washing is not well distributed in the drum, • the load is not sufficient.
The cover does not open during the cycle	<ul style="list-style-type: none"> • the «DOOR»[*] light is off, • the temperature of the washing water is too high. • the cover cannot open until 1 to 2 minutes after the washing machine has stopped*.
The washing machine stops during a washing cycle	<ul style="list-style-type: none"> • the water or electricity supply is defective, • a rinse hold was programmed.

User information

Symptom	Cause
The washing cycle is much too long	<ul style="list-style-type: none"> • the water inlet is blocked, • there was a power supply failure or the water was cut off, • the motor temperature safety device tripped, • the water inlet temperature is lower than normal, • the foam detection safety system tripped (too much detergent) and the washing machine evacuated the foam, • the anti-unbalance mass safety device tripped, an additional phase was added to distribute the washing in the drum better.
The «End» light** flashes 4 times and the error code E40 appears in the display window	<ul style="list-style-type: none"> • the cover is not correctly closed.
The «End» light** flashes 2 times and the error code E20 appears in the display window	<ul style="list-style-type: none"> • the drain filter is blocked, • the drain pipe is blocked or kinked, • the drain pipe is too high (see «installation»), • the drain pump is blocked, • the installation siphon is blocked.
The «End» light** flashes 1 time and the error code E10 appears in the display window	<ul style="list-style-type: none"> • the water tap is closed, • the water network has been cut off.
The «End» light** flashes 10 times and the error code EA0 appears in the display window	<ul style="list-style-type: none"> • the flaps of the drum door are opened.

Symptom	Cause
The «End» light** flashes 15 times, the error code EFO appears in the display window	<ul style="list-style-type: none"> • There is an internal water leak in the appliance, so : <ul style="list-style-type: none"> - close the inlet water tap, - let's the washing machine draining during two minutes before stopping the appliance, - call the After Sales Service.
Softener or Javel water flows through the overflow orifice when filling*	<ul style="list-style-type: none"> • you did not put in the right amount, • the siphons at the back of the detergents dispenser are blocked.

*depending on model.

** Eliminate the causes of the failure if you find them, and then press on the «Start/Pause» pushbutton to restart the interrupted program.

FOR THE INSTALLER

Installation and connection instructions

Warnings


- This washing machine is heavy. Take care when moving it.
- You must remove the packing on the washing machine before use. Failure to remove all transport protection devices can cause damage to the washing machine or nearby furniture. The washing machine must be unplugged while packing is being removed.
- Do not allow any one other than a qualified plumber to make the hydraulic connections necessary to install your washing machine.
- The washing machine must be plugged in to a power outlet with a conform earth.
- Call a qualified electrician if the electrical installation in your residence is such that you have to modify it before you can connect your washing machine.
- Please read the instructions in the «Electrical connection» chapter carefully before connecting your washing machine.
- After installing your washing machine, make sure that it is not standing on its electrical power supply cable.
- When your machine is installed on a carpeted floor, make sure that the carpet does not close off the ventilation openings near the bottom of the machine.
- The power supply cable may be only replaced by the After Sales Service.
- Your manufacturer cannot be held responsible for any damage resulting from a nonconform installation.

Installation


Unpacking




Packing used to protect internal parts of the washing machine during transport must be removed before the washing machine is put into service for the first time.

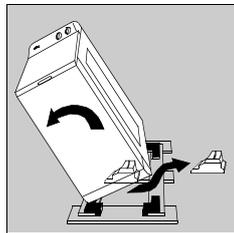


Remove all packing from the washing machine. Tilt the washing machine sideways and then remove the packing under the motor, and straighten the washing machine.

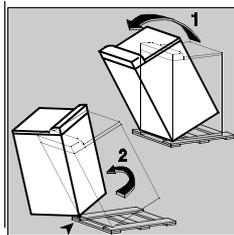

Tilt the washing machine back-wards, rotate it by a quarter of a turn on one of its corner to remove the transport base.

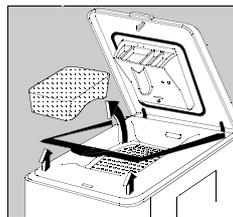


Open the washing machine lid and remove the immobilization packing and plastic films. Close the lid.

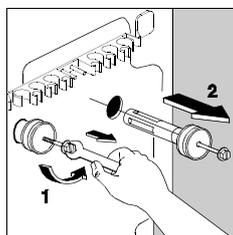


Use a 10 mm spanner to remove the two screws and spacers at the back.


User information

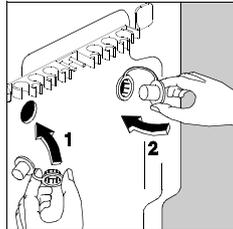

You can now see the openings that must be closed with the caches in the pack attached to the washing machine; do not forget to fold down the central capsule.

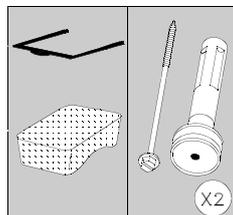

Make sure that you have removed all these parts from your washing machine and keep them so that you can use them again if you need them for future transport.

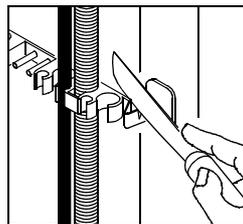


If you want to keep your washing machine aligned with the adjacent furniture, you can cut the pipe support strip at the back of your washing machine. Leave the two side closers in place.

Position

Put the washing machine on a flat hard floor in a well ventilated room. Make sure thta your washing machine does not touch the wall or any other furniture in the room.


Moving your washing machine

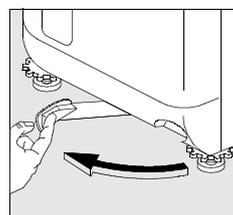


If you want to move your washing machine, lift it onto its rollers by pulling the lever at the bottom of the washing machine all the way to the left. When you have put your washing machine into the required location, put the lever back into its initial position

Leveling

Precise leveling will prevent vibrations, noise and movements of the washing machine during operation.

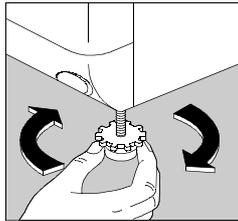

Make the washing machine level by adjusting the leveling screw that is too short. Unscrew the stand and locking collar assembly (lift the washing machine if necessary).

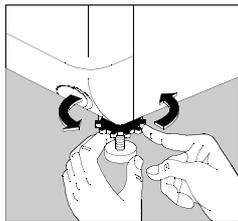

When the washing machine is stable, maintain the stand on the ground and turn the locking collar as far as possible.

Water inlet


The «aqua-stop» is a measure of protection against the damages caused by the water. Indeed, the water inlet wears away by time and it can so deteriorate. In this case, the «aqua-stop» prevents the water from going into the appliance.

The problem is indicated by the appearance of a red mark in the window «A». Close the water inlet tap and call the After Sales Service.


Screw the supply pipe connector onto the water inlet tap (20x27 mm).

Open the water inlet tap.

You cannot prolong the water inlet pipe. If it is too short, call the After Sales Service.

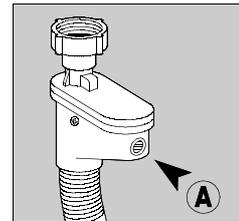

Drain

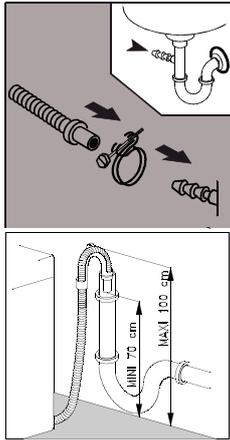

The drain siphon must be placed inside a drain pipe (or in a washbasin) at a height of between 70 and 100 cm. Make sur that it cannot fall. Secure the outlet / sink outlet joint with a hose band clip (available from your dealer).

- Important : the drain pipe must never be prolonged. If it is too short, call a professional.

Eletrical connection

You can only connect this washing machine to 230 V single phase power supply.

Check rating of the fuse line : 10 A at 230 V.

The washing machine must not be connected through an extension cable or a power bar.

Check that the earthing connection is conform with the regulations in force.

Technical characteristics

DIMENSIONS	Height	850 mm
	Width	400 mm
	Depth	600 mm
VOLTAGE / FREQUENCY		230 V / 50 Hz
TOTAL POWER		2300 W
WATER PRESSURE	Minimum	0,05 MPa (0,5 bar)
	Maximum	0,8 MPa (8 bars)
Connection to the water network		Type 20x27

CE This washing machine complies with CEE directive 89-336 about the limitation of radioelectric disturbances and directive CEE 73-23 for electrical safety.

Garantee conditions and After Sales Service

Please contact our AEG agents' of the country directly.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

©Copyright by AEG

146 6334 00 - 04/04

 **From the Electrolux Group. The world's No.1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.