



# Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para AEG-ELECTROLUX L75480WD. Encontrarás las respuestas a todas sus preguntas sobre la AEG-ELECTROLUX L75480WD en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

**Manual de instrucciones AEG-ELECTROLUX L75480WD**  
**Instrucciones de uso AEG-ELECTROLUX L75480WD**  
**Manual de usuario AEG-ELECTROLUX L75480WD**  
**Guía del usuario AEG-ELECTROLUX L75480WD**  
**Modo de empleo AEG-ELECTROLUX L75480WD**



L75480 WD

<b>EN</b> User manual	2
<b>ES</b> Manual de instrucciones	38



**AEG**  
perfekt in form und funktion



[Tus instrucciones](#)  
[AEG-ELECTROLUX L75480WD](#)

### **Manual de resumen:**

• Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean. • Do not install the appliance where the appliance door can not be fully opened. • Always be careful when you move the appliance because it is heavy. Always wear safety gloves. • Make sure that there is air circulation between the appliance and the floor. • Adjust the feet to have the necessary space between the appliance and the carpet. **WARNING! Risk of fire and electrical shock.** • The appliance must be earthed. • Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.

• Always use a correctly installed shockproof socket. • Do not use multi-plug adapters and extension cables. • Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. • Connect the mains plug to the mains socket only at the end of the installation.

Make sure that there is access to the mains plug after the installation. • Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. • Do not touch the mains cable or the mains plug with wet hands. • This appliance complies with the E.

E.C. Directives. ENGLISH 5 Water connection • Make sure not to cause damage to the water hoses. • The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused. • Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. • The first time you use the appliance, make sure that there is no leakage. • • • • • 2.2 Use **WARNING! Risk of injury, electrical shock, fire, burns or damage to the appliance.**

• Use this appliance in a household only. • Do not change the specification of this appliance. • Do not put flammable products or items that are wet with flammable products in, near or on the appliance. • Do not touch the glass of the door while a programme operates. The glass can be hot. • Make sure that you remove all metal objects from the laundry. • The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged. If you stop the appliance before the end of the drying cycle, immediately remove and spread out all items, so that the heat can dissipate. • If you use detergent, fabric softener or similar products, obey the instructions on the packaging. • Wipe away lint that has accumulated around the appliance.

• Do not dry the damaged items which contain padding or fillings. • Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles and rubber backed articles. • Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol, petrol, kero- sene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent. Do not dry items if industrial chemicals have been used for cleaning. Make sure that no gas lighters or matches have been left in the pockets of the clothing.

Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label. Do not dry not washed items in the appliance. If you have washed your laundry with a stain remover start an extra rinse cycle before you start the appliance. Plastic items are not heat resistant.

– If you use a detergent ball, remove it before you set the drying programme. – Do not use a detergent ball when you set a non-stop programme. **WARNING! Risk of injury or damage to the appliance.** • Do not sit or stand on the open door. • Obey the maximum load volume. • Do not dry dripping wet clothes in the appliance. 2.3 Care and Cleaning **WARNING! Risk of injury or damage to the appliance.** • Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. • Do not use water spray and steam to clean the appliance.

• Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects. 2.4 Disposal **WARNING! Risk of injury or suffocation.** 6 [www.aeg.com](http://www.aeg.com) • Disconnect the appliance from the mains supply..



[Tus instrucciones](#)

[AEG-ELECTROLUX L75480WD](#)