

# SIEMENS

# SIEMENS

Siemens Aktiengesellschaft,  
issued by Communications,  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2005  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens.com/ax75](http://www.siemens.com/ax75)



Designed for life

AX75

<b>Safety precautions</b> .....	2	<b>Setup</b> .....	15
<b>Overview of the phone</b> .....	3	<b>Organiser</b> .....	17
<b>Display symbols</b> .....	4	Alarm clock .....	17
<b>Getting started</b> .....	5	Calendar .....	17
<b>Switch on/off, PIN</b> .....	6	Appointments .....	17
Emergency number (SOS) .....	6	Notes .....	18
<b>General instructions</b> .....	6	Missed alarms .....	18
<b>Security</b> .....	7	Time zones .....	18
Codes .....	7	Calendar setup .....	18
<b>Calling</b> .....	7	<b>Extras</b> .....	18
<b>Text entry</b> .....	8	SIM services (optional) .....	18
<b>Default book</b> .....	10	Calculator .....	18
<b>Phonebook</b> .....	10	Currency converter .....	18
<New entry> .....	10	Stopwatch .....	19
Call (search for an entry) .....	10	Countdown .....	19
<b>Addressbook</b> .....	10	Voice command .....	19
<New entry> .....	10	<b>Fast access key</b> .....	19
Change entry .....	11	<b>Own stuff</b> .....	19
Voice dialling .....	11	<b>Customer Care</b> .....	20
<b>Records</b> .....	11	<b>Care and maintenance</b> .....	21
<b>Duration/charges</b> .....	11	<b>Product data</b> .....	22
<b>Voice message/mailbox</b> .....	11	<b>Guarantee</b> .....	23
<b>SMS</b> .....	12	<b>License Agreement</b> .....	24
<b>MMS</b> .....	12	<b>Accessories</b> .....	27
<b>Message setup</b> .....	13		
<b>Ring tones</b> .....	14		
<b>Surf &amp; fun</b> .....	14		
Internet browser .....	14		
Games & more .....	14		

This is a summarised version of the User Guide. The complete version can be found on the Internet at this address: [www.siemens.com/ax75](http://www.siemens.com/ax75)

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The ring tone (p. 14), info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 8). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and -charging devices. Otherwise you risk serious damage to health and property: The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

# Overview of the phone

## ① Display indicators

Signal strength/GPRS/battery level.

## ② Soft keys

Press the soft key to call up the function that is displayed as **Text** or icon on the grey fields above the key.

## ③ Call key

Dial displayed phone number or name, accept calls. In standby mode: Display the last calls.

## ④ On/Off/End key

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off phone.

## ⑤ Navi-key

In lists and menus:

- Scroll up and down.
- Function call.
- Back a menu level.

During a call:

- Open call menu.
- Start adjusting the volume then set volume with .

- Open Addressbook/Phonebook.

In standby mode:

- Voice control (press and **hold**).
- Open Addressbook/Phonebook.
- Open menu.
- GPRS info.



## ⑥ \* Press and hold

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: only switch off ring tones.

## ⑦ # Press and hold

In standby mode: switch key lock on/off.
















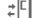





## ⑧ Plug socket








For charger, headset, camera etc.

## ⑨ Infrared interface (IrDA)






# Display symbols

## Display symbols (selection)





	Signal strength
	Charging
	Battery charge level, e.g. 50%
	Addressbook/Phonebook
	Call records
	Surf & fun/Service provider portal
	Organiser
	Messages
	Ring tones
	Extras
	Own stuff
	Setup
	Call(s) is/are diverted
	Ringer off
	Short ring (beep) only
	Ringtone only, if the caller is stored in the Addressbook/Phonebook
	Alarm set
	Alarm clock activated
	Keypad locked
	Message memory full
	No network access
ABC/ Abc/abc	Indicates whether upper or lower-case letters are active
T9Abc	Text input <b>with</b> T9

	Activated and available
	Registered
	Temporarily interrupted
	Internet online
	Internet via GPRS online
	Internet no network
	Auto answer feature on

## Organiser symbols (selection)

	Memo
	Call
	Meeting
	Birthday
	Anniversary

## Access with left soft key (selection)

	Message received
	MMS notification received
	Voice message received
	Unanswered call


Depending on the service provider, some of the symbols shown here may vary from those in the phone.

# Getting started


## Using the SIM card/battery

Your phone's display is delivered with a protective film. **Remove this film before getting started.** The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.

Press depression ① to remove the cover downwards in the direction of the arrow ②.

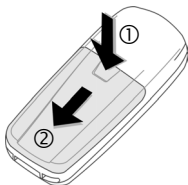


Insert SIM card ③ and push it fully into the locating slot (make sure the angled corner is in the correct position ④).

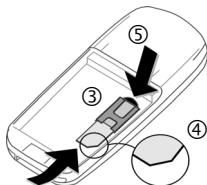


To remove the SIM card push the card here ⑤.

Insert the battery sideways into the phone ⑥, then press downwards ⑦ until it engages.

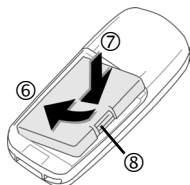

To remove, press the retaining tab ⑧ then lift the battery out.

Place cover on phone and push to the upper edge, until it clicks into place ⑨.

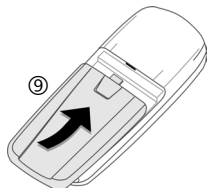



Always switch off phone before removing the battery!

Only 3V and 1.8V SIM cards are supported. Please contact your service provider if you have an older card.

## Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**. The power supply unit heats up when used for long periods. This is normal and not dangerous.

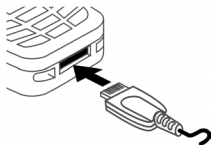

When charging is in progress  is displayed.



### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded (Operating time, p. 22).

### Charge icon not visible

If the battery has been discharged fully the charge icon is not immediately visible when the power supply unit is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3-4 hours.


### Only use the power supply unit provided! Display while in service

Charge level display during operation (empty - full):   .

A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not terminate the charging process early**.

## Switch on/off, PIN

### Switch on/off

Press and **hold** the On/Off/End key  to switch on or off.

## Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.

Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

Confirm your input with **OK**. Logging on to the network will take a few seconds.

## Emergency number (SOS)

### Only to be used in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

## Signal strength



Strong reception signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

## General instructions

### User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press navigation key on the side indicated



Displays a soft-key function.



Function depends on the service provider, special registration may be necessary.

## Menu control

The steps needed to reach a function are shown in a **condensed form** in this user guide.

E.g. to display call list for missed calls:

Press **Menu** → **☎** → **Calls missed**  
→ **Select**.

This comprises the following steps:

Open main menu, select **☎**, then select the function **Calls missed**. You have to confirm with **Select**.

## Standby mode

Very often function descriptions begin in standby mode.

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.

Press and **hold** the On/Off/End key **⏻** to return to standby mode from any situation.

## Security

**Menu** → **☎** → **Security**  
→ **Select function**.

The phone and SIM card are protected against misuse by several security codes.

**Keep these confidential numbers in a safe place where you can access them again if required.**

## Codes

### PIN control

You can stop the PIN prompt being activated when the phone is switched on, but you then risk unauthorised use of the phone.

Press **Change**. Enter PIN and confirm with **OK**.

### Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.

Enter current PIN and confirm with **OK**. Enter new PIN twice and confirm each time with **OK**.

### Change PIN2

(Display only if PIN2 is available). Proceed as with **Change PIN**.

### Change phonecode

You define the phone code (4-8 digits) when you call up a protected function for the first time. It is then valid for all phone-code protected functions.

## Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Preventing accidental activation

Even if PIN control is deactivated confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e.g. when carried in a pocket or whilst you are on an aircraft.

Press and **hold** the On/Off/End key **⏻** and confirm with **OK**. The phone switches on.


## Calling

### Dialling with number keys

The phone must be switched on (standby mode). Dial number (always with area code, if necessary with international dialling code). To dial international dialling code press and **hold 0** until a "+" is displayed. Press **Country** and select country.

**Short press** **Clear** to clear the last digit, a **long press** clears the entire phone number. To dial press the Call key **☎**.

## Accept call


The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone. Press **Answer** or .

**Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones!**

## Handsfree




You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

Activate handsfree function with **Handsfr.** and switch on with **Yes**.


Adjust the volume with . Pressing **Handsfr.** switches off "handsfree talking".

**Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!**

## Swapping between 2 calls

Make a new connection during a call with  **menu** → Hold →  (dial a new phone number). With  **menu** → Swap you can swap back and forth between both calls.


If you are called during a phone call and you can hear the "call waiting tone" (p. 15), you can accept the waiting call with **Swap**, putting the current call on hold to do so.

Swap back and forth between the calls see above or end the current call with  and accept the new call with **Answer**.


## Direct call

If this is active, only **one** number can be dialled.

**Menu** →  → Security → Direct call

Press  and enter phone code. The phone code (4- to 8-digits) is set by you and entered at the first security setting. **Please note this code down** (see also p. 7)!

Confirm code input with **OK**.

Press **Change** and enter number (press  → to select phone number from the Addressbook p. 11 or Phonebook p. 10). Confirm "On" with **OK**.

To dial, press and **hold** the right soft key.

To switch direct call off, press and **hold** **#**.

Enter phone code and confirm with **OK**.

Press **Change** and Confirm Off with **OK**.

## Text entry

### Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:

**2** Press **once briefly** to type the letter **a**, twice to type **b**, etc. Press and **hold** to write the number.

**Ä, ä, 1-9** Umlauts and numbers are displayed after the relevant letters.

**Clear** Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.

 /  Move the cursor (forwards/backwards).

**#** Press **briefly**: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**. Status shown in top line of display.

Press and **hold**: All input variants are displayed.

**\*** Press **briefly**: Special characters are shown.

Press and **hold**: Open input menu.

**0** Press **once/repeatedly**:

**., ? ! ' " 0 - ( ) @ / : \_**

Press and **hold**: Writes **0**.



**1** Writes blank. Press **twice** = jumps a line.

## Special characters

Press **\*** **briefly**. The character map is displayed:

1)	¿	¡	_	;	.	,	?	!	+
-	"	'	:	*	/	(	)	¤	¥
\$	£	€	@	\	&	#	[	]	{
}	%	~	<	=	>		^	§	Γ
Δ	Θ	Λ	≡	Π	Σ	Φ	Ψ	Ω	

1) Line break

Navigate to characters with ,  and press **Select**.

## Input menu

Press and **hold** **\*** with text input. The input menu is displayed:

Text format (SMS only), Input language, Mark text, Copy/Add

## Text entry with T9


"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Menu** →  → Message setup → T9 preferred → **Change**  
(activate/deactivate T9).

### Select Input language

Select the language in which you want to compose your message.

**Menu** →  → Message setup → Input language → **Select** (the new language is set)

### Write a word using T9

Since the display changes as you proceed, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

Press **briefly** **#** for T9Abc then **4 6 8 3 5** and **1** (the blank ends a word).

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

### Additional information

**0**

Set a full stop. A word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen: e.g. **provider.s** = provider's.



Go to the right. Ends a word.

**#**

Press **briefly**: Swap between: abc, Abc, T9abc, T9Abc, 123. Status shown in top line of display.

Press and **hold**: All input modes are displayed.




**\***

Press **briefly**: Select special characters (p. 9).

Press and **hold**: Open input menu

### T9 word suggestions


If the word you want has not been recognised, the next suggestion from T9 may be correct.



The word must be **highlighted**. Then press   . The displayed word is replaced with a different word. If this word is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary, select **Spell**. Now write the word without T9-support and accept with **Save** into the dictionary.

### Correct a word

Words written **with** T9:

With  move left or right, word by word, until the required word is **highlighted**.

With   scroll through the T9 word suggestions again. **Clear** deletes the character to the left of the cursor **and** displays a new possible word!

T9® Text Input is licensed under one or more of the following:  
 U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;  
 Canadian Pat. No. 1,331,057;  
 United Kingdom Pat. No. 2238414B;  
 Hong Kong Standard Pat. No. HK0940329;  
 Republic of Singapore Pat. No. 51383;  
 Euro.Pat. No. 0 842 463 (96927260.8)  
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;  
 and additional patents are pending worldwide.

## Default book

**Menu** → → Select function.

### Show entries

Entries in the standard directory (Addressbook or Phonebook) are shown for selection.

Select a name by entering the first letter and/or scroll . To dial press the Call key .

### <New entry>

Create new entry in standard directory.

Phonebook, Addressbook (see below).

### Default book

Select the Phonebook (only one phone number possible per entry) or the Addressbook as your standard directory (default book).

→ Phonebook / Addressbook → (set as standard)

## Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

### <New entry>

If the Phonebook is set as standard (Addressbook as standard):

Open Phonebook (in standby mode)

→ <New entry> → Select entry field (The maximum number of characters available is displayed at the top of the screen)

Press **Save** to store the new entry.

### Call (search for an entry)

Open phonebook , select name and press the Call key .

### <Special books>

<Own numbrs>: enter personal phone numbers, <VIP numbers>: assign important numbers to group, <SIM phonebook>, <Protected SIM>, <Info numbers>.

## Addressbook

The Addressbook can store up to 500 entries that are managed in the phone memory.

### <New entry>

If the Addressbook has been selected as standard:

Open Addressbook (in standby mode)

→ → (enter first and/or last name) → Select entry field → Make further entries → **Save**.

### Group

Entries can be organized by groups.

Select with **Change**.

### Picture

Press **Select**. Assign a picture to an Addressbook entry. It is displayed if you are called by the corresponding phone number.


### Birthday

After entering the date of birth, the "reminder box" can be activated. You can now enter the time for the reminder. The phone will then remind you with an acoustic tone and also with a display one day before the birthday and on the birthday.

### All fields

Press **Select**. Show all input fields if the display was previously reduced (**Options**, Field setup).

### Change entry


 → Select entry → **View** → **Edit**  
→ Make changes → **Save**.

### Voice dialling

Dial numbers by voice command. Up to 20 recorded names for voice dialling or voice commands (p. 19) can be saved on the mobile (not on the SIM card).


### Record

Open Addressbook (in standby mode).

 → Select entry (first letter and/or scroll) → **Options** → Voice dialling  
→ (Select phone numbers if there are more than one → **Record** → **Start**).

A short signal sounds. Now speak the name. After a second beep and message in the display, **repeat** the name. A beep now confirms the recording, which is saved automatically.

### Apply voice dialling

Press and hold  (in standby mode). Now speak the name. The number is dialled.

## Records

Your phone stores the phone numbers of calls for convenient redialling.

**Menu** →  → **Select** → Select call list and confirm → Select phone number  
→ .

Here you will find Calls missed, Calls received, Calls dialled, Delete records.

## Duration/charges

Display charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls. These Functions are dependent on your service provider. Please check with

your service provider for more information.

**Menu** →  → Duration/charges

Select function: Last call, All outgoing calls, All incoming calls, Remaining units, Charge setting.

## Voice message/ mailbox

**Menu** →  → Message setup → Voice message

Most service providers offer a mailbox, in which a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and Call waiting is not activated, p. 15).

You may have to register for this service with the service provider and enter the settings manually.



### Settings



The service provider supplies you with two phone numbers:



#### Save mailbox number

Call this phone number to listen to the voice messages left for you.

**Menu** →  → Message setup → Voice message →  (enter mailbox number) → **OK**.



#### Save call divert number

Calls are diverted to this phone number (see also p. 15).

**Menu** →  → Phone setup → Divert → e.g., All Unanswered → Set →  (dial divert number) → **OK** (register number at the network). Divert will be confirmed after a few seconds (see also p. 15).

## Listening to message



A new voice message can be announced as follows: An  icon with beep or  a text message announces a new voice mail or you receive a call with an automatic announcement. Dial into your mailbox and listen to your message(s).

Press and **hold 1** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

## CB services



**Menu** →  → **Message setup**  
→ **CB services**



Some service providers offer information services (info channels). If reception is activated, your "Topic list" will supply you with messages on the activated topics.

## SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

## Writing and sending

**Menu** →  → **New SMS** →   
(write text) →  →  (enter phone number or select from Address-book/Phonebook) → **OK**.

The SMS is sent to the service centre for transmission.

For Text input using "T9", p. 9. Press **Clear** briefly to delete letter by letter, press and **hold** to delete an entire word.

## Special functions

### SMS to group

You can send an SMS message as a "circular" to a recipient group.

**Options** → **Send** → **Group** → **Select group** → **Select group members and send SMS**.

### Picture&sound


Insert pictures and sounds into message.


**Options** → **Picture&sound** → select section and entry.

The menu contains:

**Fix animations, Fix sounds, Own animation, Own pictures, Own sounds**

## Receive/read SMS

An arrival of a new SMS is announced on display with . To read the SMS, press left soft key.

With  you scroll through message line by line. Select **Reply** for a direct reply.

## SMS archive

**Menu** →  → **SMS archive**

The list of SMS messages stored in the phone is displayed.

## MMS

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

## Writing/sending MMS messages

An MMS consists of the address header and the content.

**Menu** →  → **New MMS**

### Input fields:

**To:** / Phone number / e-mail address of recipient(s).

**Subject:** Enter MMS heading (up to 40 characters).

**Picture:** . The picture list is opened for selection.

**Text:** . Write text with the help of T9.

**Sound:** . Select a melody (p. 19) or record a new melody (see below).

**Slide duration:**  
Enter length of display for individual pages (minimum 0.1 seconds).

### New recording

The phone records via its microphone. Press in the Sound: field when completing the input fields. Select **Record new**. Press . The current recording duration and available time remaining are displayed. To end recording press .

Press to replay recording. Press . To give the recording its own name, the description . Confirm with .

### Attach extra pages

→ New slide

### Attach business card

→ Extras → Scroll to Business card → .

### Attach appointment

→ Extras → Scroll to Appointment → .

### Send MMS

→ Send

### Sending a photo by MMS

You can easily send a photo as an MMS immediately after taking it with the "QuickPic" camera.

→ → Camera →   
→ Send via MMS → (select the desired resolution) → (skip recording a melody p. 13).

The MMS Editor starts. Simply complete the following input fields:

**To:** / Telephone number / e-mail address of the recipient/s.

**Subject:** Title of the MMS (maximum of 40 characters).

The MMS is now ready to send:

→ Send

### Receive/read MMS

An arrival of a new MMS/notification of an MMS is announced on display with / . Press the left soft key to read the MMS or notification.

Depending on the setting, the

- complete MMS is received
- or the notification is opened. Press to receive the complete MMS, with automatic presentation of the MMS. Cancel using any key.
- Open attachments using and Attachments.
- Open images and tones using and Content.

## Message setup

→ → Message setup → SMS profiles/MMS profiles

Profiles have to be created for SMS and MMS. The transmission characteristics are defined in these. The data for these may already have been entered. If not, you can obtain this from your service provider. Additional information is available in the comprehensive operating instructions on the Internet: [www.siemens.com/ax75](http://www.siemens.com/ax75)

## Ring tones

**Menu** →  → Select function.

You can set the ring tone separately for call types/functions. You can download new ringtones from the internet via **Download new**.

## Volume

Set different volumes for types of call/functions.

**Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones.**

## Surf & fun

### Internet browser






**Menu** →  → Select function.

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

### End connection

Press and hold  to close the browser. After GPRS/CSD linterime (WAP param) the connection will also be ended.

### Additional information

-  Browser menu.
-  Offline.
-  Online.
-  GPRS Online.
-  No network.
- \* Select special characters, such as @, ~, \, see p. 9.
- 0 Press repeatedly for:  
., ? ! " ' 0 - ( ) @ / : \_

## Profiles

**Menu** →  → Internet → Profiles

### Activate profile

You can change the current profile each time you access the Internet. For this, select profile, then **Select**. The current profile is selected.

## Games & more

Applications and games can be found at **wap.siemens.com** or on the Internet at **www.siemens.com/ax75**

### Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC using the Siemens Data Exchange Software (to download from the Internet: **www.siemens.com/ax75**)

# Setup

## Profiles

Menu →  → Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

### Aircraft mode

Sound for all alarms (appointments, alarm clock) are deactivated. Alarms are only indicated on the display. This profile **cannot be modified**. The phone will switch off if you select the profile **Aircraft mode**. Confirm a security prompt.

### Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

## Display

Menu →  → Display  
→ Select function.

### Language


Set the language of the display text. When "automatic" is set, the language of your service provider is used. Reset to this language in standby mode:

\* # 0 0 0 0 # 

### More settings...

Background, Logo, Colour scheme, Screen-saver, Start up animation, Shut down animation, Own greeting, Big letters, Illumination, Contrast.

## Call setup

Menu →  → Call setup  
→ Select function.

### Hide ID

When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).



### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

### Divert



You can specify when calls should be diverted to your mailbox or other numbers.

- All Unanswered
- All calls
- Status check
- Clear all

### Minute beep

During a call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

## Clock

Menu →  → Clock → Select function.

### Time/date

The clock must be set to the right time once at start-up.

**Change** → Enter the date first, then the time.

### Time zones

Set the time zone for your area.

### Time format

Select 24h or 12h.

### Date format

DD.MM.YYYY or MM/DD/YYYY

### Buddhist year

Switch to the Buddhist year (not on all phone models).

### Show clock

Activate/deactivate time display in standby mode.

### Automatic switch off

The phone switches off each day at the set time.

## Connectivity

**Menu** → → **Connectivity**  
→ Select function.

### GPRS

**Yes / No** Switch GPRS function on/off.

### GPRS info

Display of information on connection status.

### IrDA

Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones and phonebook entries with other appliances which also have an infrared interface. The distance between two devices must not exceed 30 cm. The infrared windows in both devices must be aligned as accurately as possible with each other.

### Authentication

Activate or deactivate encrypted Internet dial-up (CSD connections only).

### Data services

**Menu** → → **Connectivity**  
→ Select function.

For the **MMS**, **WAP** and **HTTP** applications at least one connection profile must be set up and activated.

The default for the phone depends on each service provider.

If necessary, check with your service provider for details. If necessary enter **CSD settings** and **GPRS settings** (your service provider will supply you with information on this if necessary or

[www.siemens.com/mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care) in the FAQ section).

Select profile → → **Change setting**  
→ **Options** → **Edit** → (Enter data)  
→ **Save**.

## HTTP profile

Select profile with . Enter or modify settings. If necessary, check with your service provider for details.

## Security

**Menu** → → **Security**  
→ Select function.

### Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

### Direct call

(Phone-code protected)

Only **one** phone number can be dialled.

### Only

(PIN2 protected)

Restrict calls to SIM-protected numbers in the Phonebook.

### Last 10 only

(Phone-code protected)

Restrict calls to the list of "dialled numbers" (p. 11).

### Codes

**PIN control**, **Change PIN**, **Change PIN2**, **Change phonecode**, (p. 7).

### This SIM only

(Phone-code protected)

Your phone is prevented from being used with a **different** SIM card.

### Barrings

Network barring restricts the use of your SIM card.

### Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternative input in standby mode:

\* # 0 6 #

## File system

### Format

The file system memory (p. 19) is formatted and **all** data that has been saved is deleted, including e.g. ringtones, images, games etc.

### Clean up

The file system is defragmented.

### Master reset

The phone is reset to the default values (factory setting) (does not apply to SIM card or network settings).

Alternative input in standby mode:

\* # 9 9 9 9 # 

## Network

**Menu** →  → Network

→ Select function.

### Line

Choose between **two independent** telephone numbers.

### Network info

A list of GSM networks is displayed.

### Auto network selection

### Choose network

Network search is restarted.

### Preferred network

Set the service providers you prefer when you leave your home network.

### Band selection

### Fast search

### User group

Depending on service provider, you can create groups with this service.

## Accessories

**Menu** →  → Accessories

→ Select function.

### Carkit

### Auto answer

Calls are accepted automatically after a few seconds.

### Headset

Accept call with Call key or PTT key (Push To Talk), even when the keylock is activated.

### Auto answer

Calls are accepted automatically after a few seconds.

# Organiser

**Menu** →  → Select function.

## Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off. If the phone has been switched off in Aircraft mode the alarm is only shown on the display and is not indicated by sound.


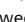
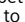

### Setting

Set the time for the alarm call (hh:mm). Confirm with **OK**.

Press **On/off** to activate/deactivate the alarm.

## Calendar

You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly (p. 15).

Page between days with  . Press  **briefly** to page between weeks, press and **hold**  to page between months. Calendar days in bold face indicate appointments on this day.

### Agenda

Press **Agenda** to call up from the monthly overview. Appointments for each individual day are shown in the agenda in chronological order.

## Appointments

**Menu** →  → Appointments

All appointment entries are displayed in chronological order. If an alarm is missed

it appears in the list of missed appointments (p. 18).

### Enter new appointment

Press .

Select the **Type** of your appointment. Add **Description**, **Date** and **Time**.

### Alarm:

Activate alarm with **ON** →  (enter start time of the alarm **before** the appointment) → **Change** (select Minutes, Hours, Days).

### Reoccurrence:

Select a timeframe for repeating the appointment: **No**, **Daily**, **Weekly**, **Monthly**, **Annual**.

Enter a parameter for repeating: **Forever**, **Until**, **Occurrences** (number).

If **Weekly** is selected, certain weekdays can be highlighted.

### Alarm

When the set date and time are reached there is an audible and a visual alarm.

Alarm type **Memo/Meeting**: the text is shown in the display.

Alarm type **Call**: The phone number is displayed and can be dialed immediately.

Alarm type **Birthday** and **Anniversary**: you will be notified one day before the event and on the birthday/ anniversary itself.

Press **Snooze**. The alarm stops for 5 minutes. Press **Off** to stop the alarm.

## Notes

**Menu** →  → **Notes**

T9 support (p. 9) makes writing short notes such as shopping lists easier.

## Missed alarms

**Menu** →  → **Missed alarms**

Events with an alarm to which you have not reacted are listed for reading.

## Time zones

**Menu** →  → **Time zones**

Set the time zone for your area.

## Calendar setup

**Menu** →  → **Calendar setup**

### Begin of week


You can set which weekday is listed first on the left in the monthly and weekly overviews.

## Extras

### SIM services (optional)


**Menu** →  → **SIM services**

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the left soft key with symbol .

For further information, please contact your service provider.

## Calculator

**Menu** →  → **Calculator** → **Enter** number (up to 8 digits) → **=+\*/** Select calculator function.

Repeat procedure with other numbers. Press **#** to display result.

### Calculator functions

**=+\*/** Press right soft key repeatedly.

**±** Toggle between "+" and "-".

**%** Convert to percentage.

 Save /Retrieve number.

**e** Exponent (max. two digits).

Special keys:

**\*** Set decimal point.

**0** Add (press **and hold**).

## Currency converter

**Menu** →  → **Currency converter**

Calculate the exchange rates. You can enter three currencies.

If no currency has yet been entered, press **OK** for the first input.

#### Otherwise:

**Options** → **New entry** → Enter symbols for the currencies → **OK** → Enter exchange rate → Save with **Options** and **OK**.

## Stopwatch

**Menu** →  → **Stopwatch**

Two intermediate times can be recorded and saved.

Press **#** for Start/stop. Press **\*** for Intermediate time. Press **Start** to start stopwatch. Press **Reset** to reset stopwatch.

## Countdown

**Menu** →  → **Countdown**

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.


## Voice command

**Menu** →  → **Voice command**

Functions can be started by a voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card!).


### Record

**Menu** →  → **Voice command**

A list with the functions available is displayed.  Select function. Press **Record**. Confirm selected function with **Yes**. Press **Start** to start recording.

A short signal sounds. Now say the command corresponding to the function and **repeat** it when prompted.

### Apply

Press and hold  (in standby mode).

A short signal (beep) sounds and a prompt appears in the display.

Now say the function. Noisy environments may affect voice recognition.

## Fast access key

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function started at the touch of a button.

### Left soft key

Assign a function/phone number to the left soft key for fast access.

#### Change (example)

**New SMS** → **Change** → Search for application (e.g., Internet, Phone number) → **Select**.


#### Apply (example)

Key assigned with Phone number/name. Press and hold **Carol**.

## Speed dialling keys

Only possible for keys 2 to 9. Key 1 is reserved for the mailbox.

### Change

 Press an unassigned numberkey (2-9) → **Set** Select application (e.g. New SMS, Phone number, Bookmarks).

### Apply

Press and hold assigned numberkey, e.g. 3.

## Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

Example:


Press **Menu**. Press e.g. 2 for Records or 1 for Calls missed.

## Own stuff

**Menu** → 

Files and folders are displayed. The following folders are provided for organising your files: Pictures, Sounds, Colour scheme, Data inbox.

## Sending files

Press  to send a highlighted picture, sound, animation etc.

## Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/  
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **More**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline:

**United Kingdom** ..... **0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 25 93
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49

Brazil .....	0 80 07 07 12 48
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
Chile .....	8 00 53 06 62
China .....	0 21 23 01 71 88
Colombia .....	01 80 07 00 66 24
Croatia .....	0 16 10 53 81
Czech Republic .....	2 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Ecuador .....	18 00 10 10 00
Egypt .....	0 23 33 41 11
Estonia .....	6 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 18 05 33 32 26
Greece .....	80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 52 74 20 10
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	+ 6 03 77 12 43 04
Malta .....	+ 35 32 14 94 06 32
Mauritius .....	2 11 62 13
Mexico .....	01 80 07 11 00 03
Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 27 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12

Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Peru .....	0 80 05 24 00
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 04 60 00
Russia .....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey .....	+ 90 21 64 59 98 98
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Venezuela .....	0 80 01 00 56 66
Vietnam .....	84 89 20 24 64
Zimbabwe .....	04 36 94 24

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.

- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres (p. 20).

### Battery quality declaration

The capacity of your mobile phone battery is reduced each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can significantly reduce the operating times of your mobile phone, even after it has been fully charged.

The battery is, however, designed to be capable of being charged and discharged for a period of six months from when the mobile phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Only purchase original Siemens batteries.

### Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original or:

[www.siemens.com/mobiledocs](http://www.siemens.com/mobiledocs)

**CE 0682**

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710-1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850-1,990 MHz
Weight:	76 g
Size:	105.6x46.8x17.5 mm (75 cm)
Li-ion battery:	600 mAh
Operating temperature:	-10 °C... +55 °C
SIM card:	3.0 V or 1.8 V

### Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....  
15-digit serial number of the phone  
(under the battery):

.....  
the customer service number of the service  
provider:

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating time

The operating time depends upon usage: Extreme temperatures considerably reduce the phone's standby time. You should therefore avoid the leaving the phone in the sun or on a radiator.

Talk time: 90 to 300 minutes.

Standby time: 50 to 220 hours.

Action taken	Time (min)	Reduces standby time by
Calling	1	30 - 90 minutes
Light *	1	60 minutes
Network search	1	5 -10 minutes

\* Keypad input, dynamic light games, organiser, etc.

# Guarantee

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall at-

tempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.

- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our on-line support on the Internet ([www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)) or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals.
- In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Siemens.

- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our on-line support on the Internet ([www.siemens.com/mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)) or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## License Agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from Siemens Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Li-

censors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. **MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO**

**SUBSTANTIAL LIABILITY.** You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. **TERMINATION.** This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. **YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.**

8. **NO OTHER OBLIGATIONS.** This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. **LIMITATION OF LIABILITY.** IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. **TECHNICAL SUPPORT.** Siemens has and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.

Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. **EXPORT CONTROL.** The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the

U.S. has restricted or prohibited the export of goods or services.

12. **APPLICABLE LAW AND FORUM.** The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

13. **MISCELLANEOUS.** This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an on-line "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

# Accessories

Available Accessories are:

## Fashion & Carry

Tour Case FCT-650

Belt Case FCL-600

## Energy

Li-Ion Battery 600 mAh EBA-670

Travel Charger EU ETC-500

Travel Charger UK ETC-510

Car Charger Plus ECC-600

Car Charger ECC-500

Desk Top Stand EDS-600

## Handsfree portable

Headset Basic HHS-500

Headset HHS-510

Headset Purestyle HHS-610

## Office

Data Cable DCA-500

Data Cable USB DCA-510

## Multitainment

Quick Pic Camera IQP-500

## Car Solutions

Car Kit Portable HKP-500

Car Kit Easy HKP-700

Car Kit Easy Upgrade HK0-700

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Siemens Original Accessories  
[www.siemens.com/shop](http://www.siemens.com/shop)