

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens-mobile.com](http://www.siemens-mobile.com)

Designed for life

**CX70**  
**CXT70**  
**CXV70**

<b>Safety precautions</b> .....	3	<b>Phonebook</b> .....	35
<b>Telephone list (schematic)</b> .....	5	New entry .....	35
<b>Display symbols</b> .....	7	Call (search for an entry) .....	36
<b>Getting started</b> .....	9	Change entry .....	36
Inserting the SIM card/ battery .....	9	<Special books> .....	37
Charging the battery .....	10	<b>Call records</b> .....	38
Changing CLIPit™ covers .....	11	<b>Durat/charges</b> .....	39
<b>Switching phone on and off/ entering PIN</b> .....	12	<b>Camera</b> .....	40
Enter PIN .....	12	Photo mode .....	40
Emergency number (SOS) .....	12	Video mode .....	41
<b>General instructions</b> .....	13	<b>Inbox</b> .....	42
Standby mode .....	13	<b>SMS</b> .....	43
Signal strength .....	13	Write/send .....	43
Digital Rights Mgmt. (DRM) .....	13	Read .....	45
Main menu .....	13	Setting .....	47
<b>Standard functions</b> .....	15	<b>MMS</b> .....	49
Highlighting mode .....	16	Create .....	49
Menu speed dialling .....	16	Templates .....	51
<b>Security</b> .....	17	Sending an MMS .....	52
Codes .....	17	Receiving an MMS .....	53
Preventing accidental activation .....	18	Reading an MMS .....	54
<b>Text entry</b> .....	19	Setting .....	55
<b>Calling</b> .....	23	<b>E-mail</b> .....	57
<b>My phone</b> .....	29	Write .....	57
<b>Default book</b> .....	30	Receive/read .....	58
<b>Addressbook</b> .....	31	Setting .....	59
New entry .....	31	<b>Inst. message</b> .....	61
Change entry .....	33	Start menu .....	61
Dialling an entry .....	33	Login .....	62
Groups .....	34	Contact lists .....	62
		Start chat .....	65
		Msg. history .....	66
		Setting .....	66

See also Index at the end of this User Guide

<b>Voice message/mailbox</b> .....	<b>68</b>	<b>Extras</b> .....	<b>107</b>
<b>CB services</b> .....	<b>69</b>	Walky Talky .....	107
<b>Surf &amp; fun</b> .....	<b>70</b>	SIM services (optional) .....	112
Internet .....	70	Alarm clock .....	112
Bookmarks .....	72	Sound recorder .....	113
Emoty .....	72	Calculator .....	114
Games and Applications .....	73	Unit converter .....	115
Downl. assist. ....	73	Stopwatch .....	116
<b>Setup</b> .....	<b>75</b>	Countdown .....	116
Profiles .....	75	Remote synchronisation .....	117
Themes .....	77	Device manag. ....	118
Dynamic light .....	78	<b>Media player</b> .....	<b>120</b>
Display .....	79	<b>My stuff</b> .....	<b>121</b>
Ringtones .....	81	<b>Mobile Phone Manager</b> .....	<b>123</b>
Phone Pilot .....	83	<b>Questions &amp; Answers</b> .....	<b>125</b>
Call setup .....	84	<b>Customer Care</b> .....	<b>128</b>
Phone setup .....	86	<b>Care and maintenance</b> .....	<b>130</b>
Clock .....	88	<b>Product data</b> .....	<b>131</b>
Connectivity .....	89	<b>Quality</b> .....	<b>132</b>
Security .....	93	<b>Accessories</b> .....	<b>133</b>
Network .....	95	<b>Guarantee certificate (UK)</b> .....	<b>135</b>
Accessories .....	97	<b>Guarantee certificate (IRL)</b> .....	<b>136</b>
<b>My menu</b> .....	<b>98</b>	<b>SAR – European Union</b>	
<b>Fast access key</b> .....	<b>99</b>	(RTTE) .....	<b>138</b>
<b>Organiser</b> .....	<b>101</b>	<b>SAR – International</b>	
Calendar .....	101	(ICNIRP) .....	<b>139</b>
Appointments .....	102	<b>Menu tree</b> .....	<b>140</b>
Tasks .....	103	<b>Index</b> .....	<b>146</b>
Notes .....	104		
Missed appts. ....	104		
Dictat.machine .....	105		
Time zones .....	106		

**See also Index at the end of this User Guide**

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Ringtones (p. 81), info tones (p. 86) and handsfree (p. 25) talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



Do not open the phone. Only replacing the battery or SIM card is permissible. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited and will invalidate the operating licence.

**Important**

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!  
These safety instructions also apply to Siemens original accessories.

**Improved data transmission**

In order for your phone to be able to transmit data at higher speeds, it is necessary to have a good connection to the network. Transmitting data can be delayed by the process of establishing a connection. To comply with guidelines on the effects of radio waves, you should keep the phone a distance of 22 mm from your body while transmitting data.

# Telephone list (schematic)


## ① Call key

Dial phone number/name displayed/highlighted, take calls. Show last phone numbers dialed in standby mode.






## ② On/Off/End key

- Switched off: **Press and hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: **Press** briefly to go back a level. **Press and hold** to go back to standby mode.
- In standby mode: **Press and hold** to switch off phone.



## ③ Joystick

-  Press the joystick down vertically to start an application or function (p. 14).



### In standby mode:


-  Open main menu.
-  Open user profiles.
-  Open Phonebook/Addressbook.
-  Inbox open
-  Start the camera.

### In lists, messages and menus:


-  Scroll up and down.
-  Back one level.

### During a call:


-  Set volume.
-  Call options.

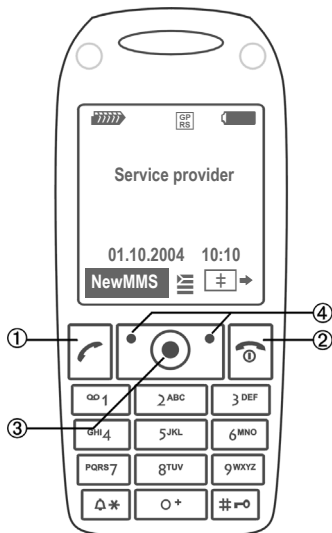

## ④ Soft keys

 The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g. )

- ⑤ Additional key for WAP access (if required, and no other default setting is made).

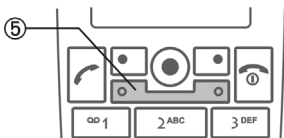

① **Integrated antenna**

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② **LED for Dynamic Light** (p. 78)

③ **Loudspeaker**

④ **Display**

⑤ **Infrared interface (IrDA)**

⑥ **Input keys**

⑦  **Ringtone**

- **Press and hold** in standby mode: Switch all audible signals on/off (except alarm).
- **Press and hold** on incoming call: Switch off ringtone for this call only.

⑧  **Key lock**

**Press and hold** in standby mode: Switch key lock on/off.



⑨ **Connection socket**

For charger, headset, flash, etc.

⑩ **Connection for external antenna**

⑪ **Camera lens**

⑫ **Mirror** (depending on telephone model)

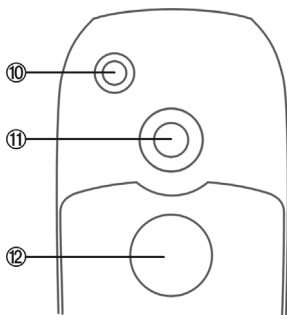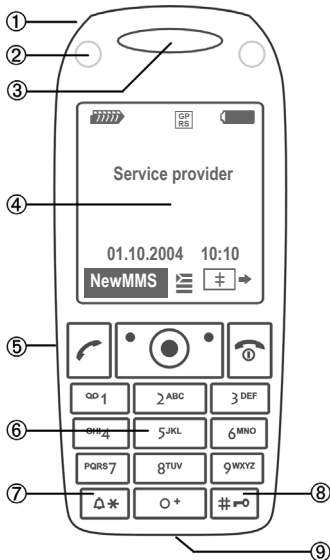

# Display symbols

## Display symbols (selection)



Signal strength



Charging



Battery charge level, e.g. 50 %



Phonebook



Records

Surf & fun  
Service supplier portal

Organiser



Messages



Camera



Extras



File management



Settings



All calls are diverted



Ringing tone off



Short ring (beep) only

Ringer only if the caller is stored  
in the Phonebook.

Alarm set



Keypad locked



Auto answer feature on

T9Abc

Text input **with** T9

Activated and available



Registered



Temporarily interrupted



Browser Offline



Browser online



Browser via GPRS online



Browser no network



IrDA activated



IrDA transmission

## Events (selection)



SMS memory full



MMS memory full



Phone memory full



No network access



Missed call



Memory assistant



**Message symbols (selection)**

Unread



Read



Draft



Sent



MMS not sent



MMS received



MMS read



MMS with DRM contents (p. 13)



E-mail forwarded



E-mail with attachment



Voice mail received

**Camera symbols**

Switches between photo and video



Brightness



Zoom factor



White balance



Flash connected

# Getting started

## Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


### Additional information

Please switch off your phone before removing the battery!


Only 3 V SIM cards are supported. Please contact your service provider if you have an older card.

SIM card problems .....p. 126

- Press the grooved area ①, then push cover towards the front in the direction indicated by the arrow ②.

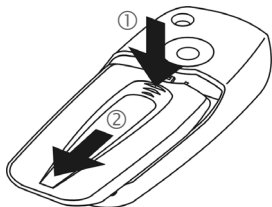


- Place the SIM card in front of the slot with the contact surface facing **downwards**. Then press the SIM card slightly to push it in ③ (ensure that the chamfered corner is in the correct position).

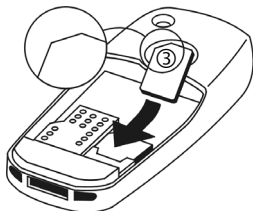

- Insert the battery sideways into the phone ④, then press it downwards ⑤ until it engages.



- To remove, press the retaining tab on the side of the battery, then lift the battery out.
- Place the battery cover, then push it towards the front ⑥, until it clicks into place.

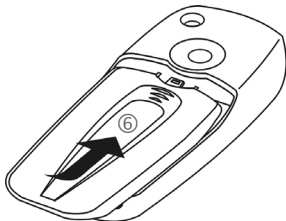


## Charging the battery

### Charging the battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

As an alternative, the battery can be charged via the USB port (see Accessories, p. 133).

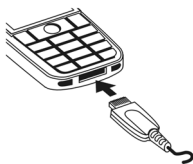

Display during charging.

### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

### Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures considerably

reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 100 to 330 minutes

Stand-by time: 60 to 300 hours

### Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

**Only use the plug-in power supply included in delivery!**

### Display while in service

Charge level display during operation (empty–full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

#### Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.


## Changing CLIPit™ covers

You can use CLIPit™ covers (accessories) to adjust the appearance of your phone according to your personal taste.

Please switch the phone off before changing the keypad mat or faceplate.


## Dismantling the phone

Remove battery cover (see p. 9). To remove the faceplate, insert the key into the opening, apply slight pressure ① and turn it at the same time ② to open the lock.

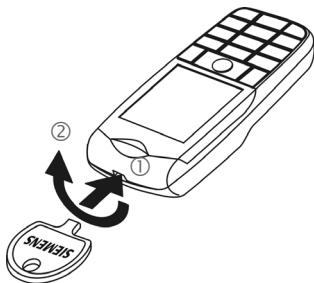


## Assembling the phone

Remove the old keypad mat and insert the new keypad mat ③ into the faceplate. Take care that it is correctly positioned.

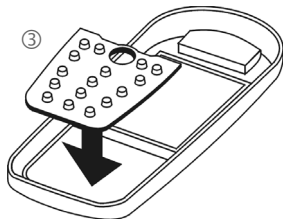

Insert the phone into the bottom of the faceplate ④ and then push it in carefully until it clicks into position ⑤.

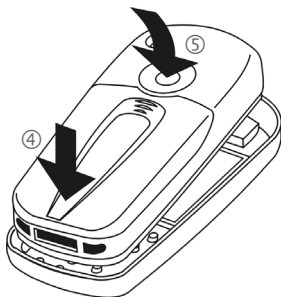

### CLIPit™ Covers

The new keypad has an additional key beneath the joystick to permit direct access to the Internet information from the service provider.

# Switching phone on and off/entering PIN

## Switching phone on and off



Press and hold the On/Off/End key.

## Enter PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correction with **⏮**.



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

### Additional information

Change PIN.....p. 17

Clear SIM card barring .....p. 18

## Emergency number (SOS)

**Only to be used in real emergencies!**

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

## Switching on your phone for the first time

### Time/date

During commissioning, set the clock so that it displays the correct time. You will not have to make this setting again.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press this key. The time and date are updated.

### Time zones



Set the time zone you are in.



Select a city in the desired time zone .

### Options

Use **Set time zone** to save.

## Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 36).

# General instructions

## Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



**Press and hold** the On/Off/End key to return to standby mode from any situation.

## Signal strength



Strong signal strength.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

## Digital Rights Mgmt. (DRM)

Remember that your telephone has digital rights management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 74).

## Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

## Main menu options

### Options

Open menu.

Different functions are available depending on the context:

Big letters	Selection between two font sizes.
Illumination	Set display light brighter/darker.
Help	Display of a help text.
Search	List output of the menu. Entering letters will access a function directly.





## User guide

### Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to display call list for missed calls in condensed form:



This comprises the following steps:

-  Open the main menu.
-  Select , then function **Calls missed**.
-  Confirm.

## Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key



Soft keys



Displays a soft-key function.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.








Function dependent on service provider, may require special registration.



### Press joystick


The symbol in the centre of the lower line of the display shows the current function when the joystick is pressed down vertically.

-  Display menu
-  Take photos
-  Zoom
-  Call, accept call
-  OK

# Standard functions

## Option menus

Functions which appear repeatedly in the options menu are listed here.

<b>Options</b>	Open menu.
<b>Edit</b>	Open the entry to edit.
<b>View</b>	Display entry.
<b>Delete/ Delete all</b>	Delete entry/delete all entries after confirmation.
<b>New entry</b>	Create new entry.
<b>Send...</b>	Select transmission service and medium for sending or printing.
<b>Reply/ Reply to all</b>	The sender becomes the recipient, "Re." is placed in front of the subject matter and the received text is transferred into the new message.
<b>Save</b>	Store entry.
<b>Save to</b> 	Save recipients in the current address directory.
<b>Sort</b>	Set sort criteria (alphabetical, type, time).

<b>Text input</b> (p. 19)	<b>T9 preferred:</b> Activate/deactivate T9 input. <b>Input language:</b> Select language for text.
<b>Rename</b>	Rename selected entry.
<b>Capacity</b>	Display memory capacity.
<b>Attributes</b>	Display properties of the highlighted object.
<b>Help</b>	Display help text.



## Highlighting mode

With some applications (e.g. Phone-book/Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

**Options** Open menu.

**Mark** Activate highlighting mode.

If a **non-highlighted** entry is selected, this can be highlighted:

**Mark** The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

**Unmark** Dehighlight the current entry.

Additional highlighting functions:

<b>Mark all</b>	Highlight all entries.
<b>Unmark all</b>	Delete highlighting on all marked entries.
<b>Delete marked</b>	All selected entries are deleted.

## Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., write new SMS (from standby mode):



Press this key to display the main menu.



Press this key for **Messages**.



Press this key to **Write message**.



Press this key for **SMS**.

# Security

The phone and SIM card are protected against misuse by several security codes.

**Keep these confidential numbers in a safe place where you can access them again if required.**

## Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

-  →  → Security
- Codes
- Select function.

## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

**Select** Press this key.



Enter PIN.



Confirm input.

**Change** Press this key.



Confirm.

## Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.



Enter **current** PIN.





Press this key.



Enter **new** PIN.



Re-enter **new** PIN.

-  →  → Security
- Codes
- Select function.

## Change PIN2

(Display only if PIN2 is available).

Proceed as with **Change PIN**.

## Chg.phonecode

(Change phone code)

You define the phone code (4–8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, p. 27). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. Contact the Siemens Service (p. 128).

## Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Preventing accidental activation

Even if PIN use is deactivated (p. 17) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press **down**.



Press. The phone switches on.



Press or take no action. The phone does not switch on.

## Connecting to Windows® PCs

You can connect your phone using IrDA or a data cable (accessories, p. 133) to a Windows® PC. The Windows® PC program MPM (Mobile Phone Manager, p. 123) enables you to backup data on your Windows® PC and to synchronise the Addressbook with Outlook®, Lotus Notes™ and other Siemens phones (as well as Gigaset). You can download the Mobile Phone Manager from the Internet at [www.siemens-mobile.com/cx70](http://www.siemens-mobile.com/cx70)

# Text entry

## Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance.

Example:



Press once **briefly** to type the letter **a**, twice to type **b** etc.

**Press and hold** to write the number.

Ä, ä, 1–9

Umlauts and numbers are displayed after the relevant letters.



Press **briefly** to delete the letter before the cursor, **press and hold** to erase the whole word.



Move the cursor (forwards/back).



Press **briefly**: Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*. Status shown in top line of display.

**Press and hold**: All input-variants are displayed.



Press **briefly**: Special characters are shown.

**Press and hold**: Open input menu.



Press **once/repeatedly**:

.,?!' "0+-()@/!:\_

**Press and hold**: Writes 0.



Writes blank. Press twice = jumps a line.

## Special characters



Press **briefly**. The symbols chart is displayed

1)	¿	i	_	;	!	?	,	.
+	-	"	'	:	(	)	/	*
¤	¥	\$	£	€	&	#	\	@
[	]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Confirm.

## Input menu

With text input:



Press **down**: The input menu is displayed:

Text format (SMS only)

Input language

Mark

Copy/Insert

## Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Options** Open text menu.

**Text input** Select.

**T9 preferred**

Select.

**Change** Activate T9.

### Select input language

Select the language in which you want to compose your message.

**Options** Open text menu.

**Text input** Select.

**Input language**

Select.

### Select

Confirm, the new language is set. Languages with T9 support are marked with the T9 symbol.

## Writing with T9

Since the display changes as you proceed,

**it is best if you finish a word without looking at the display.**

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Press **briefly** for T9Abc then



A blank ends a word.

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;

Canadian Pat. No. 1,331,057;

United Kingdom Pat. No. 2238414B;

Hong Kong Standard Pat. No. HK0940329;

Republic of Singapore Pat. No. 51383;

Euro.Pat. No. 0 842 463 (96927260.8)


DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;


and additional patents are pending worldwide.

## T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must **highlighted** be displayed. Then press

 again. The displayed word is replaced with a different word. If this word is also incorrect, press

 again. press until the correct word is displayed.


If the word you want is not in the dictionary, it can also be written without T9.


To add a word to the dictionary:


**Spell** Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

## Correct a word


 Move left or right, word by word, until the required word is **highlighted**.

 Scroll through the T9 word suggestions again.


 Deletes the character to the left of the cursor **and** displays a new possible word!


### Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to rewrite the complete word.


 Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.

 Moving the cursor to the right ends the word.

 Press **briefly**: Switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status shown in top line of display.

**Press and hold**: All input modes are displayed.

 Press **briefly**: Select special characters (p. 19).

**Press and hold**: Open input menu (p. 20).

## Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

### Write text modules



→ Text modules

**Options**

Select **New text**.



Write text module.

**Options**

Open menu and select **Save**. Accept the specified name or allocate a new one.



Save.

## Use text modules



Write message (SMS, MMS, e-mail).

**Options**

Open text menu.

**Insert**

Select.



Select **Text modules**.



Select text module from the list.

**Select**

Confirm. The text module is displayed.



Confirm. The text module is inserted in the message to the right of the cursor.


# Calling

## Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix/international dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

## End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

## Set volume



Regulate the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

## Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key **once**.



Pick out the phone number from the list.



Press this key to select the phone number.



## If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

### Auto redial

**Auto dial** The phone number is automatically dialed ten times at increasing time intervals. End with:



End key.

Or

### Call back

**Call back** Your phone rings when the busy number is free. Press the Call key to dial the number.



## Reminder

**Prompt** A beep reminds you to redial the displayed phone number after 15 minutes.

### Additional information

→ Store phone number in the Addressbook/Phonebook.

**Handsfr.** Handsfree switch on (playback from loudspeaker).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!



**Press and hold** to switch microphone off.

### International dialling codes



**Press and hold** until a "+" is displayed.

### Country

Press and select country.

### Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

## Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number and the name of the caller transmitted by the network will be displayed if the number is saved in the Phonebook/Addressbook. A picture of the caller may also be displayed (p. 32).

## Reject call

**Reject** Press.

Or



Press **briefly**.

### Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

### Additional information



**Press and hold** to switch off the ringing tone and vibration.



Missed call display.

## Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

**Handsfr.** Activate handsfree talking.



Switch on.



Use the joystick to adjust the volume.

**Handsfr.** Deactivate.

### Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

## Swapping between 2 calls



### Establish a second connection

You can call another number during a call.

**Options** Open call menu.

**Hold** The current call is put on hold.



Now dial the new phone number or

**Options**, select the Phonebook, Addressbook, or phone number.

When the new connection is established:

**Swap** Swapping between calls.

## Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 84). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call in addition to the first**

**Swap** Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

- **Reject the waiting call**

**Reject** Press.

Or

**Divert** The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**



End the current call.



Accept new call.

## Ending call(s)



Press the End key.

After the **Return to held call?** display, you have the following selection:

**Yes** You accept the call on hold.

**No** You end the 2nd call.

## Conference



Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:

**Options** Open menu and select **Hold**. The current connection is maintained.



Now dial a new number. When the new connection is established ...

**Options** ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

## End

 



All calls in the multiparty conversation are ended when the End key is pressed.

## Call options

The following functions are only available during a call:


**Options** Open menu.

<b>Hold</b>	Maintain current call.
<b>Microphone on</b>	If switched off, the person on the other end of the line cannot hear you (muting). Also: <b>Press and hold</b>  .
<b>Handsfree</b>	Call via the loudspeaker.
<b>Volume</b>	Adjust handset volume.
<b>Default book</b>	Phonebook/Addressbook.
<b>Conference</b>	(p. 26)
<b>Time/charge</b>	Display duration of call up to now and (if set) the charges incurred while the call is in progress.
<b>Send DTMF</b>	Enter tone sequences (numbers) for remote inquiries to an answering machine.
<b>Call transfer</b> 	Connect current call to a second call. For you, both calls are now ended.
<b>Main menu</b>	Access to the main menu.
<b>Call status</b>	List all held and active calls (e.g. participants in a conference).


## Direct call

 If this is active, only **one** number can be dialled.

### Switch on




Confirm selection.

 


Enter phone code.

 When first prompted you define and enter the phone code (4–8 digits).



Confirm selection.

### Please do not forget this code (p. 17)!

 

Select phone number from the Phonebook/Addressbook or enter it.



Confirm.


### Apply

 **Carol** To dial the phone number (e.g. Carol's phone number), **press and hold** the right display key.

### Switch off



Press **down**:



Enter phone code.



Confirm input.

## Tone sequences (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine **while another connection exists**. These entries are transmitted directly as DTMF codes (control codes).

**Options** Open menu.

**Send DTMF**  
Select.

## Using the Phonebook/ Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.

**Save**

Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

# My phone

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

## **Ringtones (p. 81)**

Assign individual ringtones to caller groups or special dates

## **Pictures (p. 121)**

Assign individual pictures or photos to your Addressbook entries.

## **Animations (p. 80)**

Choose a start-up and closing animation as well as a personal greeting.

## **Screensaver (p. 79)**

Choose an analogue or digital clock, or a personal picture.

## **(Operator) Logo (p. 79)**

Choose an individual picture (to be displayed in standby mode)

## **Wallpaper (p. 79)**

Choose your own permanent background image.

## **Colour scheme (p. 79)**

Select a colour scheme for the user interface.

## **Applications (p. 73)**

Download your own applications from the Internet.

## **Where do I get what?**

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

## **Service supplier portal**

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

## **Siemens Mobile Portal**

You will find additional ringtones, logos, animations and screensavers as well as more application, games and services in the Internet at this address:

**[www.siemens-mobile.com](http://www.siemens-mobile.com)**

Or you can download them directly via WAP:

**[wap.siemens-mobile.com](http://wap.siemens-mobile.com)**

You will also find a service for saving data here as well as a list of the countries in which these services are available.

## **My menu**

Create your own menu with frequently (p. 98) used functions, phone numbers or WAP pages.

## Default book



→  → Select function.

### Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

### New entry

Create new entry.

**Addressbook** (see also p. 31)

**Phonebook** (see also p. 35)

## Default book

You can set a particular directory as your preferred one to use.

The selected standard book is opened in standby mode with the joystick.



Open Phonebook or Addressbook.

### Addressbook

In the Addressbook, a lot of data can be recorded for each entry and additional functions such as pictures, birthdays, chat can be used.

### Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different telephone.

### Business card

Create your own business card to sent to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

**Save**

Press.

#### Additional information

The content of the business card corresponds to international standards (vCard).



→ Copy numbers from Addressbook/Phonebook.

### Groups

See p. 34.

### <Info numbers>

See p. 37.

# Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

## New entry

The address book is set as standard:



Open Addressbook  
(in standby mode)



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with prefix.

## Possible input fields

Last name:	URL:
First name:	Com. services >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-mail address:	
E-mail 2:	All fields

## Additional information

**Group:** Allocation to a group (p. 34).

**Address:** Extension to enter the complete address:

Street:, Post code:, City:,  
Country:

## Com. services

Information if the entry is being used as a chat room contact (p. 61) or for Walky talky (p. 107) :

Nickname:, Walky Talky ID:,  
Walky Talky type:,  
WV user ID:, ICQ number:,  
AIM screen name:



**Birthday:** After activation, the date of birth is entered.

**Reminder:** The telephone reminds you one day before the birthday at the time entered.

**Picture:** Assign a picture to the entry. It is displayed if you are called by the corresponding phone number.

#### All fields/Reduced fields

Display of number of input fields.

#### Save

Save the entry.

#### Additional information



Temporary switch to Phonebook.

#### Synchronisation

The Siemens MPM (Mobile Phone Manager, p. 123) makes it possible to manage the Addressbook using Windows® PCs.

Using **Remote syncr.** you can synchronise your mobile with an organiser stored on the Internet (see also p. 117).

## Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.








## Display options

### Options






The options menu only ever offers the functions for the currently selected input field.

<b>Move to ...</b>	Allocate current or highlighted entries to a group.
<b>View</b>	Display an allocated picture.
<b>Copy to SIM</b>	Copies name and <b>one</b> phone number to the SIM card (Phonebook).
<b>New SMS, New MMS, New e-mail</b>	Create a message with the selected entry.
<b>Browser</b>	Start WAP browser and visit URL.
<b>Inst. message</b>	Begin chat p. 61.
<b>Talk to</b>	Start Walky Talky session (p. 108).
(For standard functions see p. 15)	

## Change entry

-  Open Addressbook (in standby mode).
-  Select required entry.
-  Press.
-  Select input field.
-  Open entry.
-  Make changes.
-  Save.

## Dialling an entry

-  Open Addressbook (in standby mode).
  -  Select a name with the first letter and/or scroll.
  -  The number is dialled.
- If there are several numbers in the address book entry, these are offered for selection.
-  Select phone number.
  -  The number is dialled.

## Address book options



Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

**Options** Open menu.

<b>Move to ...</b>	Allocate current or highlighted entries to a group.
<b>Copy to SIM</b>	Copies name and number to the SIM card (Phonebook).
<b>Filter</b>	Only those entries which match the filter criteria are displayed.
<b>Import</b>	Set up readiness to receive for a Phonebook entry via IrDA (p. 89) or SMS (p. 43).
<b>Sort</b>	Specify sorting criteria for output of the Addressbook entries.
<b>Search</b>	Enter search term.
(For standard functions see p. 15)	

## Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

-  Open Addressbook (in standby mode).
- <Groups> Select (the number of entries is listed behind the group name).
-  Select group.

### Groups menu

<b>Options</b>	Open menu.
<b>Rename group</b>	Change name of group.
<b>Group symbol</b>	Assign a symbol to a group. The symbol must then appear in the display when one of the group members calls.

#### Additional information





**No group:** Contains all Addressbook entries that do not belong to a group (name cannot be changed).

**Received:** Contains Addressbook entries received by IrDA (p. 89) or SMS (p. 43) (name cannot be changed).

## Ringtone for group

Assign a ringtone to a group that plays when one of its members calls you.








-  Select group.
-  Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.
-  If necessary, select a ringtone.
-  Confirm.

# Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

## New entry

If the Phonebook has been selected as standard:

-  Open Addressbook (in standby mode).
-  Select <New entry>.
-  Display input fields.
-  Select input field.
-  Fill in input fields. The maximum number of characters available is shown at the top of the display.

### Phone number:

Always enter phone number with prefix. An entry is not saved without a phone number.

### Name:

Enter first and/or last names.

### Group:

Important phone numbers are combined together in a group (VIP). This is independent of the Addressbook groups.

### Location:

Default SIM

Special SIM cards can save phone numbers in a protected area (Protected SIM) (PIN2 required).

### Record number:

Each entry is automatically assigned a record number. You can also dial using the record number.

**Save** Press to store the new entry.

### Additional information

 Temporary switch to Addressbook.

**Country**  
International dialling code ..... p. 24  
Functions related to Text entry ..... p. 19

## Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

## Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

## Change entry



Select entry in Phonebook.



Press.



Select desired input field.



Make changes.



Press.

## Phonebook options

The following functions are available, depending on the current situation.

### Options

Open menu.

### Copy into



Copy all highlighted entries to the Addressbook.

### Copy all to



Copy all entries to the Addressbook.

### Delete all

The entire Phonebook is deleted. PIN-protected

### Import

Set up readiness to receive for a Phonebook entry via IrDA (p. 89) or SMS (p. 43).

(For standard functions see p. 15)

## <Special books>



Open Addressbook  
(in standby mode).

### <Special books>

Select.

## <Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

## <VIP numbers>

Display the phone numbers saved in the VIP group.

## <SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

## <Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

## <Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

### Phone number extensions in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook/Addressbook:



Press **down**:

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook/Addressbook.



Press.



Replace "?" with numbers.



Number is dialled.

# Call records

The phone number of a caller is displayed if

- the caller has switched off the **Incognito** function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phone-book/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.



Or

**View**

Select record.

Open call list.

Select phone number.

Dial phone number.

Display information on the phone number.

Up to 500 entries are stored in the records:

## Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon for missed call (in standby mode). Press the display key beneath the symbol to call up the **Inbox** (p. 42).

## Calls received

Accepted calls are listed.

## Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

## Delete records

The records are deleted.

## Call list menu

The records menu can be called up if an entry is highlighted.

**Options** Open menu.

**Copy into**  **Copy to SIM**

Copy the currently selected phone number into the preferred directory.

(For standard functions see p. 15)

# Durat/charges

You can display the charges and duration during a call. You can set a unit limitation for outgoing calls.



Last call

All outg. calls

All incoming

Remain. units

Charge sett.



Select.



Open report or settings.



Reset the selected report.

## Charge sett.



Open menu.

## Currency

Edit your currency.

## Personal rate

(PIN 2 prompt)

Enter the currency as well as the charge per unit and time.

## Account limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.



Press.



Enter PIN2.

Account limit

Switch on.



Enter number of units.



Confirm.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary depending on the service provider.

## Auto display

Call duration and charges are automatically displayed.



# Camera

You can view photos/videos recorded on the integrated camera immediately,

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo/video via MMS or e-mail.

## Switch on



Or



Starts camera in standby mode.



Switch over to single image



and video recording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor.




White balance.



Flash connected.

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably from motif to motif (storage space required). Beneath the preview image, you will find a reference to

the selected resolution. In video mode, the recording time already used and the maximum recording time still available is shown here.

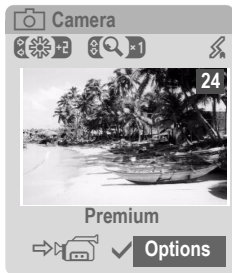

## Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu.

Settings prior to taking a photo:



Setting the brightness.



Sets the zoom factor.

## Image resolution

A setting can be made for the quality of the image regardless of the preview image resolution.

Premium:	640 × 480 (VGA)
High:	320 × 240 (QVGA)
Medium:	160 × 120 (QQVGA)
Wallpaper:	132 × 176

The resolution may decrease depending on the selected digital zoom.

## Video mode

The video mode resolution is the same as the preview image resolution.



Start the video recording.



Terminate the video recording.

A red point appears in the top right in the display while the video recording is being made.

**Play** Plays the video recording.

## Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly loaded while connected to the telephone. This reduces the stand-by time.



This symbol appears when the flash is being loaded.

Settings, see options menu.

## Camera options

The following functions are available, depending on the current situation.

**Options** Open menu.

<b>Settings</b>	<ul style="list-style-type: none"> <li>• Name for recordings</li> <li>• Image resolution.</li> </ul>
<b>Pictures</b>	Displays list of photos.
<b>Other videos</b>	Display the video list.
<b>Microphone on</b>	Switches the microphone on or off.
<b>Use flash</b>	Choose between: Automatic, Off, Red eye red.
<b>Self timer</b>	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second.
<b>White balance</b>	Choose between: Automatic, Indoor, Outdoor

(For standard functions see p. 15)

### Additional information



Insufficient memory available. Start the memory assistant to delete specific data (p. 86).

A mirror can be attached to the rear side of the telephone depending on the telephone variant. This makes it easier to make self portraits.

# Inbox

The central input folder offers immediate access to the messages currently received. This means that you no longer have to look through all input folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find a list of the symbols on p. 7.

To call up the central input folder, e.g. if a new SMS has been received:



Press the display key beneath the symbol.

Or



In standby mode:

In the central input folder, you will find the following message types:

**SMS, MMS, E-mail**

System messages:

Message about **MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message**

Data objects:

**Ringtones, Pictures and Video, calendar entries, Notes and Business card**



When you open an entry, the relevant application also starts.

After a set time span, entries which have already been read and opened are only displayed in the message-related incoming lists (see **Setup** in the options menu).

## Inbox options

**Options** Open menu.

**Receive e-mail** Select set access and send all e-mails.

**Setup** If entries have been read, remove them from the **Inbox**:

**Daily,  
Never,  
Immediately**

If **Daily** has been selected, specify the time.

(For standard functions see p. 15)

# SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

## Write/send



→ → Create new  
→ SMS text



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (p. 19).

The following is displayed in the to display line: Text entry status, number of SMS required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/Addressbook or enter it.

**Group** If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the **Sentbox** list.

## Text options

**Options** Open menu.

**Save** Save composed text in draft list.

**Picture& sound** Add pictures, animations and sounds into message (see following text).

**Text modules** Insert text module (p. 22).

**Format** Font size: Small font, Medium font, Large font  
Underline  
Alignment: Default alignm., Left, Centre, Right  
Mark (highlight text with the joystick)

**Delete text** Delete the whole text.

**Send with...** Select SMS profile so the SMS can be sent.

(For standard functions see p. 15)

## Picture&sound

Send the pictures and tones with or without accompanying text.

Remember that these may be protected (DRM, p. 13).

The text input field is open:

**Options** Open menu.



Select **Picture&sound**.

The menu contains:

**Fix animations**

**Fix sounds**

**Own animat.**

**Own pictures**

**Own sounds**



Select area.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations**/**Fix sounds**:



The selection is added to the SMS.

For **Own animat./Own pictures/Own sounds**:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed, sounds are displayed in the form of "wildcards".

## SMS to group

You can send an SMS message as a "circular" to a recipient group.

**Options** Open menu.

**Send** Select.

**Group** The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



A safety inquiry is made and then sending is started.

## Read




Arrival of a new SMS announced in the display. Open it with the display key beneath it Inbox (p. 42).



Reading the SMS.



Scroll through message line by line.

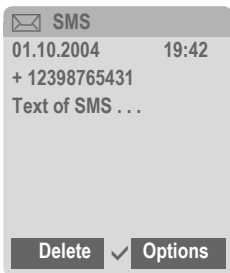

## Reply

You can answer the SMS now open immediately. The new additional text is placed above the received text.



Functions for a direct reply.

## Reply options



Reply immediately.

Write message	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Call back, Delay, Thanks	Add a standard text as a reply to the SMS.

## Read options

**Options** Open menu.

Reply	See "Reply options" above.
Picture&sound	Save picture/sound contained in the SMS.
Text zoom	Enlarge/reduce text display.
Archive	Move SMS message to archive.
(For standard functions see p. 15)	

## Lists

All SMS messages are archived in different lists, according to their status. (List of message symbols, see p. 8):

### Inbox



 
The list of received SMS messages is displayed.

### Draft



The list of not yet transmitted SMS messages is displayed.

### Unsent



The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

### Sent



The list of sent SMS messages is displayed.

## SMS archive



The list of SMS messages stored in the phone is displayed.

## List options

Different functions are offered depending on the list.

**Options** Open menu.

Send	Send or forward entry.
Send with...	Select an SMS profile for transmission.
Archive	Move SMS message to archive.
(For standard functions see p. 15)	

# Setting

## SMS signature



You can enter a “signature” with a maximum of 16 characters. This signature will then be attached to each SMS except **Reply** and when changes are made to an existing SMS.

## SMS profiles

 


Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.

### Activate profile



### Set profile



**Service centre** Enter the phone numbers for the service centre as provided by the service provider.

**Recipient** Enter a standard recipient for the profile.

**Message type**

- **Manual:** Inquiry for all messages.
- **Standard text:** Normal SMS message.
- **Fax:** Transmission via SMS.
- **E-mail:** Transmission via SMS.
- **New:** You may need to obtain the required code number from your service provider.

**Validity period** Period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum\*

\* Maximum period that the service provider permits.

**Status report** Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.

**Direct reply** If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

**SMS via GPRS** Sent SMS automatically via GPRS (p. 89).

**Save aft. send** Sent SMS messages are saved in the **Sentbox** list.




## More information on SMS

### SMS status report


If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent!** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also **Validity period** (p. 47).

### Phone number in SMS

Phone numbers displayed in the **highlighted** text can be dialled () or saved in the Phonebook/Addressbook.

### Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key () , start the download. Please check that the dial-in access (p. 90) is configured.

Remember that these may be protected (DRM, p. 13).

### **SIM memory full**

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

# MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

## Create



→ Create new → MMS

An MMS consists of the address header and the content.

An MMS may consists of a series of pages. Each page may contain a text, a picture/video and a sound.

Remember that pictures and sounds may be protected (DRM, p. 13).

Write **texts** with the help of T9 (p. 19).

**Pictures** and **videos** can be recorded with the integrated camera and/or loaded from **My stuff** (p. 121).

You can record **Sounds** with the sound recorder and/or load them from **My stuff** (p. 121).

First select an object for processing to be added to the first page of the MMS:

## Pictures/videos

Limits on picture size can be set in the user settings.

<Picture> Select.



Display picture/video functions:

### Insert picture

Open list to select a picture.

### Insert video

Open list to select a video.

### Camera

Activate the camera to take a photo or record a video for the MMS (p. 40).



Also possible.

**Open**

Display picture.

**Delete**

Delete inserted picture/video.

**Save**

Save picture/video for use later on.

**Msg. details**

Display properties, incl. any user right restrictions (p. 13).

**Sounds**

<Sound> Select.



Display sound functions:

**Insert sound**

Open list to select a tone.

**Record**

Activate tone recording in order to record tones (p. 113).



Also possible.

**Open**

Play back the tone.

**Delete**

Delete inserted tone.

**Save**

Save tone for use later on.

**Msg. details**

Display properties, incl. any user right restrictions (p. 13).


**Text**

<Text> Select and write the text.



The text functions are displayed (see also p. 19):

**Insert...**

Choose any of the following for insertion: **Text modules**, **Bookmark**, **Insert from** 

**Delete text**

Delete text on current page.

**Save**

Save text on the page as text module.

**Text input**

T9 settings:

T9 preferred, Input language

**Mark**

Text processing together with **Copy and Insert**.

## Generation options

<b>Options</b>	Open menu.
<b>Send MMS</b>	Send MMS.
<b>Play</b>	Play entire MMS on the display.
<b>Picture...</b>	See above p. 49.
<b>Sound...</b>	See above p. 50.
<b>Text...</b>	See above p. 50.
<b>Page</b>	<p><b>Add page:</b> Insert new page behind current one.</p> <p><b>Delete page:</b> Delete current page.</p> <p><b>Page list:</b> Display available pages.</p> <p><b>Timing:</b> Set the temporal sequence of the MMS presentation:</p> <ul style="list-style-type: none"> <li>• <b>Page duration:</b> Automatic or Manual</li> <li>• <b>Show page:</b> Only if Manual is set in front of it. Enter the lifespan of a page.</li> </ul>
<b>Msg. details</b>	Enter sending parameters (see next chapter).
<b>Save as templ.</b>	After creating MMS, save it as a template. See also below:
<b>Layout</b>	<p>Select one of four possible layouts:</p> <p>Text above, beneath, beside (on left or right) of picture.</p>

<b>Colours</b>	<p>Select the colours for:</p> <ul style="list-style-type: none"> <li>• Message</li> <li>• Page</li> <li>• Bitmap</li> <li>• Text backg.</li> <li>• Text colour</li> </ul>
----------------	--

(For standard functions see p. 15)

## Templates



MMS templates are saved MMS with not address. They can be sent as new MMS or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


<b>Options</b>	Open menu and select Save as templ.
----------------	-------------------------------------

## Sending an MMS


The page(s) of the new MMS is (are) already created and the MMS is displayed.



Open address entry.

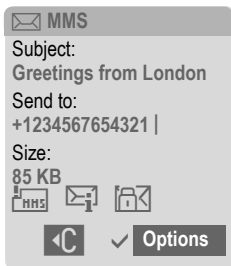

**Subject:** Enter a brief description.

**Send to:** Enter one or more phone number(s)/e-mail address(es).  
 → Insert from Addressbook.

**Size:** Display the size of the current MMS.



Start sending procedure.



The MMS is sent after confirmation.

### Expanded address fields



Scroll downwards.

**More:** Provide additional address fields.

**Cc:** Address(es) of copy recipient(s).

**Bcc:** Address(es) of copy recipient(s) who are not visible to the other recipients.

**Attachments:** Insert attachments.

**Date:** Creation date.

**Use delivery time:** Use specified send time.  
 If **Yes**:

**Delivery date:**

Send date.

**Delivery time:**

Send time.

### Icons for status information



Priority



Send report.



Contains DRM (p. 13).

## Sending options

**Options** Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Edit	Object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: <ul style="list-style-type: none"> <li>• File</li> <li>• Business card</li> <li>• Appointment</li> </ul>
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	After creating MMS, save it as a template.

(For standard functions see p. 15)

## Receiving an MMS

Depending on the setting, an MMS can (p. 55) be received in two ways:

### Complete transmission

The complete MMS is sent to your telephone. This can take quite long if the MMS is large. Thus, the request to switch to GPRS is displayed before reception, if need be.



Shown in the display.



Start reception. The MMS is sent.

### Preliminary notification

You are notified that an MMS is awaiting reception.



Shown in the display.



Read the notification. Display the size of the MMS in KB.

**Receive**

The complete MMS is sent.

**OK**

Display in Inbox.

## Reading an MMS

An MMS has been fully received.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:



To the next page.



**Press briefly once** to return to the start of the current page; **press briefly twice** to return to the start of the previous page.



Set volume.



Terminate.

When the MMS is complete, the message details are displayed.

**Subject:** Description of the MMS.

**From:** Information about the sender.

**Size:** Size of the MMS in KB.

### Expanded address fields



Scroll downwards.

**More:** Additional input fields.

**Cc:** Copy recipient.

### Attachments:

Save attachments.

**Date:** Reception date.

Symbols for status information (see p. 52)

## Lists

All MMS are saved in four different lists (list of message icons, see p. 8):

### Inbox



→ Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Receive**.

### Draft



→ Draft → MMS

The list of stored drafts is displayed.

### Unsent



→ Unsent → MMS

The list of the MMS messages not yet completely transmitted is displayed.

### Sent



→ Sent → MMS

The list of sent MMS messages is displayed.

## List options

Different functions are offered depending on the list/situation.

**Options** Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing.
View	Display MMS for viewing only (write-protected).
Send MMS	Send MMS.
Reply MMS	Reply to MMS immediately.
Forward MMS	Enter recipient(s) for forwarding.
Msg. details	Display message parameters.
Receiv.all MMS	Send all new MMS immediately.
(For standard functions see p. 15)	

## Setting

 →  → Message setup → MMS  
→ Select function.

### MMS profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. If the setting has not yet been set, you will receive the necessary data from the service provider or via the "Setting Configurator" at (p. 125):

[www.siemens-mobile.com/mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care)

### Activate profile

 Select profile.

**Options** Open menu and select **Activate**.

### Set profile

 Select profile.

**Options** Open menu and select **Change sett.**



## User settings

Set the MMS dispatch to suit your requirements:

<b>Delivery report:</b>	Request delivery confirmation for sent messages.
<b>Read reply:</b>	Request confirmation that the MMS has been read.
<b>Default priority:</b>	Send priority: Normal, High, Low
<b>Validity:</b>	Select the period in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
<b>Earliest deliv. time:</b>	Transmission from the service centre to the recipient: Immediate, Tomorrow
<b>Default duration:</b>	Length of display for an MMS page (standard requirement).

**Retrieval:** Receive complete MMS or only notification of arrival.

### Immediate

Receive complete MMS immediately.


### Auto.homenet

Receive complete MMS immediately in home network

### Manual

Only receive the notification.

**Spam filter:** Settings for receipt of promotional MMS.

**Size indication:**  Set max. message size and message handling.

# E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

## Write



→ Create new → E-mail

Enter the address data for the e-mail:

- Send to:** Enter one or more E-mail address(es).  
 → Insert them from the Addressbook/Phonebook.
- Subject:** Enter e-mail heading (up to 255 characters).

**Content** Enter text.

**To send:**

**Options** Open menu.

**Send e-mail**

Select.

**Or**

**All fields** Opens additional input fields.

**Cc:** Address(es) of copy recipient(s).

**Bcc:** Address(es) of copy recipient(s) who are not visible to the other recipients.

**Attachments:**

Add attachments such as images and sounds.

## Options

Different functions are offered depending on the position of the cursor.

**Options** Open menu.

Send e-mail	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add recipient	Add recipient from the current address directory.
Delete line	Delete current line.
Insert...	Text modules Bookmark <input type="text"/> → Insert them from the Addressbook/Phonebook.
Add attachm.	My stuff Open to make a selection. Remember that pictures and sounds may be protected (DRM, p. 13).
Delete text	Delete the whole text.
Text input	<ul style="list-style-type: none"> <li>• T9 preferred</li> <li>• Input language</li> </ul>

## Receive/read



Before an e-mail can be read, it must be retrieved from the server. You have two options:

### Retr. e-mail

Only the message header in **Inbox** (p. 42) is sent. You can then decide if you also want to receive the contents:

**Options** Open menu and select  
Retrieve body.

or want to delete the e-mail on the server:

**Options** Open menu and select  
Del. on server.

### Send/rec. mail

The set access is selected and all e-mails transferred into **Inbox** (p. 42). At the same time, completed e-mails are transferred from the **Unsent** list.

## Attachments

Contains the e-mail attachments, these can be saved in **My stuff** (p. 121).

**Options** Open menu and select  
Save attach.

## Lists

All e-mails are saved in different lists depending on their status (list of message icons, see p. 8):

### Inbox



The list of received e-mails is displayed.

### Draft



The list of e-mails not yet transmitted is displayed.

## Unsent

 →  → Unsent → E-mail

The list of e-mails not yet transmitted is displayed.

## Sent

 →  → Sent → E-mail

The list of transmitted e-mails is displayed.

## List options

Different functions are offered depending on the list.

**Options** Open menu.

<b>Retr. e-mail</b>	Only transfer the message header into Inbox (p. 42).
<b>Retrieve body</b>	Fetch the contents from the server if only the message header was received.
<b>Del. on server</b>	Delete message on the server.



(For standard functions see p. 15)

## Setting



 →  → Message setup  
→ E-mail

Before using this service you must set the server access and your e-mail parameters. You will receive the necessary data from the service provider or via the "Setting Configurator" (p. 125) at:  
[www.siemens-mobile.com/mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care)


## Accounts

-  Select account.
-  Open

## Activating access

-  Select access.
-  Activates access.

## Set access

-  Select access or <Empty>.
- Edit** Start the processing and fill in the data fields as specified by the service provider.

## Account sett.

Provider:	Select provider.
User name:	Your name.
E-mail address:*	Your e-mail address, e.g.: name@domain.abc
Reply address:	Additional e-mail address for replies.
User ID: *	Your user ID.
Password: *	Your password.
Downl. only e-mails smaller than <10> KB	Set maximum size for incoming e-mails.
Leave copy on serv.:	E-mails remain on the server after they have been retrieved or are deleted.
Download mode:	Subject only, whole e-mail, prompt.
Server type:	Select POP3 or IMAP4.
POP3 server:*	Enter Internet address if the server type is POP3 and SMTP.
POP3 port: *	(Default: 110)
IMAP4 server: *	Enter Internet address if the server type is IMAP4 and SMTP.
IMAP4 port: *	(Default: 25)
SMTP server:*	Enter Internet address.

SMTP port: \* (Default: 25)

SMTP authentic.: Authentication: Yes/No

SMTP password: A user password will be required if "Authentication" is set to Yes.

\*Your service provider will supply you with this information.

**Save** Save settings.

## General sett.

Enter an e-mail address to which a **Bcc** (blind carbon copy) is **always** sent.

## Inst. message



With this function you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether they want to be disturbed and what mood they are in.

**GPRS must be switched on.**

 →  → Inst. Message

## Start menu

**Login** Select the access via which the dialogue runs  
**or**  
**Account:** select (p. 66).



**Msg. history** Read the messages from the last meeting.

**Setup** Settings for your representation, the applications and servers.

**Quit** End application.

## Rapid access ...

### Select the access (p. 66)

 →  → Inst. message → Login

The current contact list or the list is displayed (if necessary, set access first, p. 66).

### Specify your own status (p. 67)

**Options** Open menu.

#### My settings

Select and make entries.



Return to contact list.

### Enter new contact

**Options** Open menu.

**Manage** Press, then:

#### Add contact

select and enter the user ID at least.



Return to contact list.

### Inst. Message with new contact (p. 65)



Select the contact.



Start Inst. Message.



Open editor.

 


Write text.



Send text ...  
 ... etc.

## Login



Select the last access to be used (see also **Automatic login**: p. 67).

## Contact lists

When the connection has been established, the contact list or the list of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an “empty” contact list will be generated by the server if necessary.

Displays in the list:

### -Conversation

Displays of the online contacts for the messages are available.

### -Online

Online contacts with whom no conversation is being held at the moment.

### -Group

Groups for Inst. Message with several contacts.



### -Offline

Contacts who are not online at present.

## Managing the contacts



Select a contact.

### Options

Open menu.

### Manage

Select.

### Contacts

Different functions are offered depending on the selection:

#### Add contact

##### User ID:

Enter a non-ambiguous user (login) name.

##### Nickname:

Enter your own nickname for the contact.

##### Friend:

The contact receives the status **Friend**: and access to personal information (p. 67).

#### Search contact

Search for contact.

#### Delete contact

Delete contact from the list.

#### Block contact

No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

## Managing the groups



Select one of the groups you set up yourself.

**Options** Open menu.

**Manage** Select.

### Manage group

Different functions are offered depending on the selection:

<b>Add member</b>	Add a new group member, see also <b>Add contact</b> (p. 62).
<b>Search memb.</b>	Search for group member.
<b>Invite</b>	Invitation to the contacts in your own group to Inst. Message.
<b>Delete member</b>	Delete contact from the group member list.
<b>Add group</b>	Add new group.
<b>Search group</b>	Search for group on the server (no longer in the "administered groups" list).

### Create group

**Group ID:**

Enter a non-ambiguous group name.

**Name:**

Name of group.

**Topic:**

Topic of group.

**Searchable:**

Other people can look for the group.

**Welcome note:**

Enter welcome text.

### Delete group

Delete group.



## Creating a new contact list

The current contact list is displayed.

**Options** Open menu.

### Contact lists

Available contact lists are displayed.

**Options** Open menu.

**Create** Select.

### Contact list ID:

Give the contact list its own, specific name.

**Name:** Allocate self-explanatory names.



Confirm.

## Contact list options

**Options** Open menu.

<b>Details</b>	Additional information about the contact or the group.
<b>My settings</b>	Information on your current personal status (p. 67).
<b>Manage</b>	Functions for managing a contact or a group.
<b>Contact lists</b>	Display contact lists for selection.
<b>Block list</b>	Display all blocked contacts. Can be unblocked.
<b>Appl. settings</b>	Set the application (p. 67).
<b>Suspend</b>	Terminate the application, the server remains connected.
<b>Logout</b>	Log off from the server and return to start menu.
<b>Help</b>	Display help text.

## Start chat

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page is displayed. During Inst. Message with a group, the name of the sender is placed in front of each contribution.



Open editor.



Write text



Send text. The text appears in the chat soon afterwards.

Naturally, you can also receive messages from contacts whom you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

## Options (individual contact)

**Options** Open menu.

**Send sound** Select and send a melody/ tone from the list (DRM p. 13).

**Send picture** Select and send a picture from the list (DRM p. 13).

**Send any** Send any file.

**Details** Information about the contact (if this is authorised by him).

**Clear all** Delete all texts in the current Inst. Message.

**Block contact** No more messages are received from the contact and the contact receives no status information from you.  
This function works for all your lists.

## Options (group contact)



**Options** Open menu.

**Leave group** Exit group.

**Details** Information about the group:  
Group ID:, Name:, Topic:, Owner:

**Clear all** Delete all texts in the current Inst. Message.

## Receiving objects



You will be informed in the display if sounds or pictures are sent to you during a dialogue.

**Receive** Accept object.

or

**Reject** Reject object.

## Msg. history

→ → Inst. message  
→ Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see **Suspend** (p. 64) and **Automatic login**: (p. 67).

## Setting

→ → Inst. message  
→ Setup  
→ Select function.

## Account

The list of available accesses is displayed.

/ Select an access to establish a connection.

Or

<New entry>/Account sett.

Set up an access or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

<b>Name:</b>	Name of the access.
<b>URL:</b>	Enter URL, e.g. www.abc.com
<b>User ID:</b>	Enter a non-ambiguous user (login) name.
<b>Password:</b>	Enter password (shown as a series of asterisks).

## My settings

Information on your current personal status:

<b>Alias:</b>	Your own alias by which you can be found on the server.
<b>AIM screen name:</b>	Name to be displayed in the group.
<b>Mood:</b>	Information about your own mood, e.g. Happy, Sad, Sleepy, etc.
<b>Status text:</b>	Random text information, e.g. "Am at home".
<b>Availability:</b>	Availability: Available, Not available, Discreet
<b>Mobile:</b>	Enter the phone number with internal extension code.

**Options** For **each** setting, specify who is allowed to view your personal information:

**Public**

All contacts.

**Private**

Contacts designated as Friend: (p. 62).

**Hidden**

Nobody.

## Appl. settings

Settings for the application used:

<b>Automatic login:</b>	Auto-reconnect to the last access to be used.
<b>Timeout:</b>	Time without action after which the application is terminated. However, the server remains connected.
<b>Message info:/ Online info:</b>	Signal the receipt of messages: Yes/No Signal given as: <ul style="list-style-type: none"> <li>• Sound</li> <li>• Silent alert</li> <li>• Pop-up Popup windows authorised: Yes/No</li> </ul>

# Voice message/mailbox



Most service providers provide a mailbox in which a caller can leave a voice mail for you if

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting** (p. 84) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly make the settings manually. The following sequence may vary from service provider to service provider.

## Setup




The service provider supplies you with two phone numbers:

### Save mailbox number

You call this phone number to listen to the voice mails left for you.

 


 Select number from Phonebook/Addressbook or enter/change it.

**OK** Confirm.

### Save call divert number

Calls are diverted to this phone number.



Enter phone number.

**OK**

Registration with the network is confirmed a few seconds later.

## Listening to message



A new voice message can be announced as follows, depending on the service provider:



Icon plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



**Press and hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

# CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

CB messages are displayed in standby mode, longer messages are scrolled automatically.

## Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

## Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

**New topic** Select.

- If no topic index is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate it with **Options**.

**Topic** Select

**Options** Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

## CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

### Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

# Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

## Access to the service provider

Direct call-up of the browser with the URL from your service provider.

## Internet



The browser is activated with the pre-set option as soon as you call up the function (Browser settings, S. 71; may be specified/pre-assigned by service provider).

## Browser menu

**Options** Open menu.

Homepage	Call up the pre-set homepage for the current profile.
Bookmarks	<ul style="list-style-type: none"> <li>• <b>List bookmarks</b> Display list of bookmarks stored in the phone.</li> <li>• <b>Bookmark site</b> The current page is saved as a bookmark.</li> </ul>
Go to...	Enter URL for direct dial to an Internet address, e.g. <b>wap.siemens-mobile.com</b>
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Setup	Set or reset browser (p. 71).
Exit browser	Close the browser.

## End connection



Press and **hold** to clear down the connection and close the browser.

## Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.



- One input field/link forward/back.
- Scroll one line.

## Display symbols in the browser (selection)



## Enter special characters



Select important special characters.

Your Internet browser is licensed by:



## Browser settings



→  → Internet

### Options

Open menu.

### Setup

Select.

### Browser

Set start option as well as handling of pictures and sounds plus send options.

### Profiles

The list of profiles is displayed for activation/setting. For more information, contact your service provider.

### Protocol parameters

Set protocol parameters, push messages and abort time as well as handling of cookies.

### Security

Set encryption.

### Context

Reset session; delete cache, history and cookies.

## Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

### Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.



## Set profile manually

You will receive the necessary data from the service provider or via the "Setting Configurator" (p. 125) at:

**www.siemens-mobile.com/  
mobilescustomerca**

**Options** Open menu.

**Edit** Start processing. For the Internet-specific settings below, please contact your service provider.

**Delete** Delete selected profile.

## Bookmarks


 →  → Bookmarks

### Display URL/call up page

#### List bookmarks

Display list of bookmarks stored in the phone.

 Select bookmark.

 Call up URL.

## Save

### Bookmark site

The current page is saved in the phone as a bookmark.

## Bookmark options

**Options** Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

## Emoty

If your phone is equipped with an Emoty CLIPit™ cover, you can transmit emotions. Various figures are animated with the integrated pressure, touch, and vibration sensors. The animations can be sent as MMS. You will find extensive information in the Emoty userguide.

## Games and Applications

Games and applications are offered on the Internet. Once downloaded, these are available to you via the telephone. Most applications include instructions. Some applications and games are already pre-installed on your telephone. You will find these listed here:

[www.siemens-mobile.com/cx70](http://www.siemens-mobile.com/cx70)

### Requirements

WAP profile (p. 71) and the access (p. 90) must be configured.

### Download

Select the correct access depending on whether you are loading games or applications:



or



In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

### Download new



Select a service provider or URL.



Start WAP browser and visit URL.

### Only description file



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

### or complete download



The application/game is completely loaded.

### Apply

Remember that applications/games may be protected (DRM, p. 13).



The executable application is saved on the telephone and can be started immediately.

### Downl. assist.



You will not be left on your own during the download!

## Options

Processing and administering your applications and folders:

<b>Move</b>	Move applications between folders.
<b>New folder</b>	Create and name new folder.
<b>Reinstall</b>	Reinstall an application (update).
<b>Security</b>	Select a safety level.
<b>Reinstall</b>	Repeat after transmission error.
<b>Attributes</b>	Show details of the application/folder (name, version, size, path, producer, date).
<b>HTTP profile</b>	Display profile list for activation/setting
(For standard functions see p. 15)	

### Additional information

You can use WAP to download applications (e.g. ringtones, games, images, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via WAP are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. If technically possible, back up your applications to a Windows® PC using the "Mobile Phone Manager", p. 123, [www.siemens-mobile.com](http://www.siemens-mobile.com)

# Setup

## Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal environment

Quiet environment

Noisy environment

Car Kit

Headset

- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

## Switching on a profile



Select default profile or personal profile.



Switch on profile.

## Profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu.


Change sett.

Select.

The list of available functions is displayed.

When you have finished setting a function, you return to the profile menu where you can change a further setting.

### Additional information

- Calling up the list in standby mode:
  - Profile list is displayed.
  - The active profile is marked with .

## Profile-Optionen

**Options** Open menu.

**Activate** Activate selected profile.

**Change sett.** Change profile settings.

**Copy from** Copy settings from another profile.

**Rename** Change personal profile (except default profiles).

## Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically as soon as the phone is inserted into the cradle (see also accessories, p. 133).

## Headset

The profile is only switched on automatically if an original Siemens headset is used (see also accessories, p. 133).

## Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

### Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

### Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

## Themes



Load a completely new user interface in your telephone. With the press of a key, various functions are re-organised based on a topic, e.g.

- switch on/off animation,
- background image,
- screensaver,
- switch on/off melody,
- additional animations.

Topic files are compressed to save memory space. After a download (p. 73) or a call from **My stuff**, these are automatically unzipped when activated.

### Additional information

It is possible that the existing settings could be overwritten.

## Activate new topic



Select topic.



Display topic preview.



Activate new topic.

## Dynamic light



The LEDs beneath the top of the phone are used to optically signal various functions.

### Show effects

Switch on function.

### Select

You can set the optical signals for the following functions:

Standby

Net search

 Calls

Group calls

Other calls

During a call

Incoming msgs

Appointments

CarKit conn.

Low battery

During on/off

Soundplayer

### Change

Display the possible rhythms.



Select them from several flash rhythms.



Allocate selection.

### Play demo

All flash rhythms are displayed in sequence.

### Cancel

Terminate.

## Display



### Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

\*#0000# 

### Text input

#### T9 preferred

Activate/deactivate intelligent text entry.

#### Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

## Wallpaper

Set wallpaper graphic for display.

### Logo

Choose graphic to be displayed instead of the provider logo.

### Colour skin

Select colour scheme, incl. background image for the entire user interface

### Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

#### Preview

Display the screensaver.

#### Style

Select **Analogue clock**, **Digital clock**, **Bitmap**, **Energy saving**

#### Bitmap

Select image in the **My stuff**.



### Timeout

Set period after which the screen-saver starts.

### Security

To terminate the screensaver, the telephone code is requested.

### Auto key lock

Automatic keypad locking if no key has been pressed for one minute in standby mode.

Unlocking:



Press and **hold**.

#### Note

The screensaver **Digital clock** reduces the phones standby time.

### Start up anim.

Select animation to be shown when phone is switched on.

### Shutdn anim.

Select animation to be shown when phone is switched off.

### Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

### Big letters

You can choose between two font sizes for the display.

### Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.

## Ringtones



Set the tones on the telephone to suit your requirements.


### Ringer setting

**On/off**      Activate/deactivate all tones.

**Beep**        Reduce ringtone to a short signal (beep).

### Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being loaded and accessories are connected (except the headset).

      Select one of several different silent alerts.

## Volume

Set different volumes for types of call/functions.



Select

Incoming call

Walky Talky

Messages

CB services

Alarm clock

Organiser

System



The ringtone is sounded again.



Set volume.



Confirm setting.

### Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

## Allocating a ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

### Calls

Allocate a single ringtone to all phone numbers in the Addressbook.

### Group calls

Allocate a different ringtone to each group.

### Other calls

Allocate one ringtone to the remaining callers.

### Walky Talky

Assign one ringtone to a Walky Talky connection.

## More melodies

Allocate further ringtones for:

Messages

Alarm clock

Organiser

Startup melody

Shutdown mel.

or record new ones with:

Sound recorder (p. 113)

## Phone Pilot



Your **Phone Pilot** accompanies you with instructions for many actions you can perform with your phone. It reminds you of important deadlines or birthdays.

 
A **Phone Pilot** is in the phone by default and cannot be deleted.

### Activate/deactivate

**Off** You can deactivate **Phone Pilot** function.

**Standard** Select the included "standard figure".

If you have additional figures downloaded, you can also install, activate, or delete them:



## Install

You can download additional figures on the Internet.



Select entry in the list or **Inbox**.




When installing a new **Phone Pilot** you can give it its own name.

**Yes**

Activate.

## Call setup



→  → Call setup  
→ Select function.

### Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

### Divert

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

#### Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.



Display if status is unknown (e.g. with a new SIM card).

#### Clear all



All set diversions are cleared.

### Set up call divert (example)

The most common condition for call divert is, for example:

#### Unanswered



Select **Unanswered**.  
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)



Confirm.

#### Set

Select.



Confirm.



Select or enter the phone number to which the calls are to be diverted.

**Mailbox** Use existing mailbox phonenumbers, or enter them if necessary.



Confirm. After a short pause, the setting is confirmed by the network.

### All calls



All calls are diverted.



Icon in the top line of the display in standby mode.

### Not reachable

Divert occurs if phone is switched off or is out of range.

### No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

### Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (p. 84), you will hear the call waiting tone during a call (p. 26).

### Receiving fax



Fax calls are diverted to a number with a fax connection.

### Receiving data



Data calls are diverted to a phone number with a PC connection.

### Additional information

Note that the divert is stored in the network and not in the phone (e.g., when the SIM card is changed).

#### Reactivate divert


The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

### Call screening



Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled. Other calls are only displayed.

### Any key answ.

Incoming calls can be accepted by pressing any key (except for )

### Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

## Phone setup



- Phone setup
- Select function.

### Key tones

Set the type of acoustic key acknowledgement.

### Info tones

Set service and alarm tones:

**On/off** Activate/deactivate tones.

**Extended** If switched on, a wider range of service tones is available, e.g.: end of menu reached, network connection interrupted.

### Automatic switch off

The phone switches off each day at the set time.

#### Activate

**Time**

Press.



Enter time  
(24-hour clock).



Confirm.

#### Deactivate

**Manual**

Press.



Confirm.

## Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

**More**

Press several times to display additional information about the device.

### Device check

After the last information page, a self-test as well as individual test are offered. If you select **Selftest**, all individual test are carried out.

#### Software version

Display the software version for your phone in standby mode:

\* # 0 6 #, then press **More**.

## Memory assis.

The memory assistant will help you if there is insufficient phone memory. If necessary, it is automatically started by applications.

After the capacity has been checked, all files and folders are displayed with their size and you can view, open or delete them as necessary.

## File system

### Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted. Formatting can last longer than one minute.


### Clean up

Creating more memory by deleting temporary, non-required files.

## Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

**\*#9999#** 



## Clock



→ → Clock  
→ Select function.

### Time/date

The clock must be set correctly once at start-up.

**Change** Press.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

#### Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

### Time zones

The time zone can be selected in the world map or a city list:

#### World map



Select the desired time zone.

#### City list



Select a city in the selected time zone.

**Options** Open menu.

**Set time zone** Set time zone.

**Auto time zone** Have the time zone automatically set by the network.

**Search city** Search for a city.

**Help** Operating instructions.

### Date format

Select the display format for the date.

### Time format

Select 24h or 12h.

### Buddhist year

Switch to the Buddhist year (not on all phone models).

### Show clock

Activate/deactivate time display in standby mode.

### Auto time zone

 
The time is set automatically.

## Connectivity






### GPRS

(General Packet Radio Service)



GPRS is a new method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator. Some service providers do not yet support this service.

Shown in the display:

-  Activated and available.
-  Registered.
-  Temporarily interrupted.

### GPRS info



Display of information on connection status.

### IrDA

Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other appliances which also have an infrared interface.

The infrared interface is on the right side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown on the display:

-  IrDA activated.
-  During transmission.

## Data services

Basic setting and activation of the connection profiles for data transmission such as **MMS, WAP**.

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually. In this case, you will receive the necessary data from the service provider or via the "Setting Configurator" at (p. 125):

**[www.siemens-mobile.com/mobilescustomercaare](http://www.siemens-mobile.com/mobilescustomercaare)**

### Select profile



Select the profile.



Confirm selection.

### Set profile



Select the profile.

### Options

Open menu.

### Edit

Open the selection.



Select **CSD settings**, and/or **GPRS settings**.

### Edit

Select service and enter data (see below).

### Save

Save settings.

## CSD (Circuit Switched Data)

Dial-up number:	Enter ISP number.
Call type:	Select ISDN or analogue.
Login:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS1 / DNS 2:	(optional).

## GPRS (General Packet Radio Service)

You can only start to use GPRS once you have activated GPRS on your phone (p. 89).

APN:	Enter service provider address.
Login:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS 1 (opt.): DNS 2 (opt.):	(optional).

## HTTP profile

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will find the current settings for the service provider in the Internat at this address:

**[www.siemens-mobile.com/mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care)** (p. 125).



Make the settings.

## Authentication

Activate or deactivate encrypted WAP dial-up (CSD connections only).

## Fax/data

### Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

### Send voice/fax




Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

**Rec. voice/fax**

(**Only** if no special fax or data number is available).

Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

**End transmission**

End transmission with PC-software and/or press .

**Rec fax/data**

Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ringing tone and the type of call (fax or data) is displayed. Now start the communication program in your PC to receive the fax/data.

## Security



### Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

#### Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



**Press and hold.**

### Direct call

(Phone-code protected)

Only **one** phone number can be dialed (see also p. 27).

### Only



(PIN 2 or phone code protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN 2 input, the **whole** Phonebook can be protected with the phone code.

### This SIM only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

### Codes

Description, see p. 17:

**PIN control, Change PIN, Change PIN2, Chg.phonecode**

## Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4-digit network password for network barring. Your service provider will give you this password. You may need to be registered separately for each barring.

### All outgoing

All outgoing calls except emergency numbers are barred.

### Outgoing intl.

(International outgoing)

Only national calls can be made.

### Out.int.x.home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

### All incoming

The phone is barred for all incoming calls (forwarding of all calls to mailbox provides a similar effect).

## When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

### Status check

The following information can be displayed after a status check:



Barring set.



Barring not set.



Status unknown  
(e. g. new SIM card).

### Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

## Network



### Line



This function is only displayed if it is supported by the service provider.  
**Two separate** phone numbers must be registered on the phone.

#### Select line

Select the currently used phone number.



Display current phone number.

### Protected

(Phone-code protected)

You may limit usage to one phone number.

#### Additional information

Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Switch from phone number/connection in standby mode:



Press.



Press.

## Network info

The list of GSM networks currently available is displayed.



Indicates non-authorized service providers (depending on SIM card).

## Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

## Auto network

Activate/deactivate, see also "Choose network" above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

## Pref. network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Your service provider is displayed:



Display list of preferred networks.



Create/change entry:

<Empty> or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

### Furth.network

Select, enter the provider data and save it.

#### Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

## Band selection



Select either GSM 900, GSM 1800 or GSM 1900. Make sure that your service provider supports the selected band.

## Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

## User group



Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

### Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

### Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

### All outgoing

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

### Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).

## Accessories



→ → Accessories  
→ Select function.

### Car Kit

Only in combination with an original Siemens handsfree Car kit (see accessories). The car kit profile is activated automatically as soon as the phone is inserted into the cradle.

#### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

#### Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the automatic switching off of the phone.

#### Car loudspk.

Improves playback in certain circumstances.

### Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the Car Kit profile when phone is inserted in cradle.

### Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

#### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

#### Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the auto key lock is activated.

#### Auto answer

If you do not notice that you phone has accepted a call, there is the danger that the caller may eavesdrop.

# My menu



Press.



Press.

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 entries is preset. You can, however, change it as you want.

## Use



Select the required entry.



Confirm.

Or



If the entry selected is a phone number, you can also call it with the Call key.

## Change menu

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.



The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If **Phonebook** is selected, the phone number must also be selected; if **Internet** is selected, the bookmark must also be selected.

## Reset all


(Telephone code required)



Select. After a safety query, the pre-assignment is reset.



# Fast access key

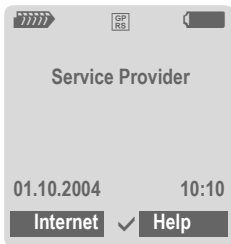You can assign one important phone number of a function to each one of the two soft keys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialled or the function can be started at the touch of a button.



## Additional information

The service provider may have already assigned functions to a soft key (e.g. access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left soft key may sometimes be replaced automatically by  /  to access a new message for example.

## Soft keys

### Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

**Internet**

Press **briefly**.

**Change**

Scroll to new assignment in the list.



Confirm.

- Special case **Phone number**. Pick out a name from the Phonebook/ Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

### Apply

In standby mode:

#### Application

The "Internet" is just used as an example here.

**Internet**

**Press and hold**, the application is started.

#### Phone number:

The setting "Carol" is used here only as an example.

**Carol**

**Press and hold**, the phone number is dialled.

## Speed keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (p. 68) and number key 0 is reserved for switching over two connections during use (p. 95).

## Change

In standby mode:



number key **briefly** press (e.g. 3).

This number is still free:

**Set**

Press.

Select a new function from the list and confirm with **OK**.

**Or**

An assignment has already been made to this key (assignment displayed above the right soft key):



Press **briefly**.

**Change**

Scroll to application in the list.



Confirm.

- Special case **Phone number**. Pick out a name from the Phonebook/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

## Apply

Select a stored phone number or start a stored application (e. g. **Internet**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right soft key e.g.:

**Internet**

Press **down**.

**Or simply**



**Press and hold**.

# Organiser

## Calendar



→ Calendar

You can enter appointments in the calendar. Time and date must be set for the Calendar to work correctly.


The calendar offers you three views:


### Monthly view

Special colour coding:

Day with entries for appointments, day-long appointments, weekend

Navigation:

 One day forward/back.

 One week forward/back.


 Daily view open.


### Weekly view

Special displays:

Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:

 One day forward/back.


 Forward/backward by the hour through the day.


## Daily view

Special displays:

Description of appointment.

Navigation:

 One day forward/back.

 To the start/end of the day or next/last entry.

## Calendar setup



→ Calendar setup

**Start of day:**

Hour when the working day begins.

**Start of week:**

Weekday on which the monthly and weekly view on the left starts

**Set weekend:**

Set the days for the weekend.

**Show birthdays:**

Yes/No.

# Appointments



→ Appointments

Appointments are displayed in chronological order in a list.

## Enter new appointment

<New entry>

Select.

### Types:



**Memo**

Text input for description



**Voice memo**

Enter voice memo. Shown with alarm.



**Call**

Enter phone number to be displayed with the alarm.



**Meeting**

Text input for description



**Holiday**

Enter start and end date.



**Birthday**

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

### Description:

Description of appointment.

### Phone number:

Enter a phone number or select one from the Addressbook.

### Voice memo:

Enter a voice recording, see *Dictat.machine*, p. 105.

### Location:

Location of appointment.

### Whole day:

All-day appointment: Yes/No

### Start date:

Date when appointment starts.

### Start time:

Time when appointment starts.

### End date:

Date when appointment ends.

### End time:

Time when appointment ends.

**Alarm time:**

On/off or Silent alert.



Enter the timespan **before** the appointment and select the time unit:

Minutes, Hours, Days

**Reoccurrence:**

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Yearly

Enter a parameter for repeating:

Forever, Until, Occurrences (number)

If **Weekly** is selected, certain weekdays can be highlighted.

**Standard**

In the list, select those fields which are to be offered for future entries.

**Information on the alarm**

When the set date and time are reached there is an audio and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 104).

Alarm type **Memo**: The text is displayed.

Alarm type **Meeting**: The text is shown in the display.

Alarm type **Call**: The phone number is displayed and can be dialed immediately.

Alarm type **Birthday**: You can send special birthday greetings by SMS, MMS, e-mail or a call via **Options**.

With **Snooze** you can set a repetition of the alarm.

**Additional information**

Display above set alarms:



Alarm clock.



Appointment.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 76). The phone does not go to standby mode. To deactivate it press any key.

**Tasks**

→ Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as **Appointments**, see this section. Then:



**Status:**

Choose between: **Done** or **Outstanding**

**Priority:**

Selection in 5 levels of **Lowest** bis **Highest**.

**Use date**

If activated with **Yes**, the following time-input option is offered.

**Due date:/Expiry time:**

Enter the date and time by when the task is to be completed.

**Alarm:** and **Standard** as for **Appointments**.

## Notes



Write and manage brief text notes.  
Protect confidential information using a phone code.

### Enter a new memo

<New entry>

Write a normal note.

<Confidential>

Write a confidential note.  
The phone code is required.



Enter text. The first line is displayed later as a "title" in the notes list.

**Options**

Open menu.

**Save**

Save note.

## Missed appts.



Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

## Organiser options

Depending on the application used (**Calendar**, **Appointments**, **Tasks**, **Notes**) and the current situation, different functions are offered.

**Options** Open menu.

<b>Delete until</b>	Delete all entries prior to a certain date.
---------------------	---

<b>Delete done</b>	Delete all completed tasks.
--------------------	-----------------------------

<b>Activate/Deactivate</b>	Switch alarm on/off.
----------------------------	----------------------

<b>Confidential</b>	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.
---------------------	--

(For standard functions see p. 15)

## Dictat.machine

 →  → Dictat.machine

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the Calendar.
- Record a call.

### Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

## New recording

<New entry>

Select.

The remaining time available as well as the recording time are shown in the display.



A brief tone sounds when the recording starts. Now say the text.



Pause/recording alternately.



End recording.

The recording is automatically saved with a time stamp. **Rename** with **Options**.

## Playback



Select the desired recording.



Playback/pause, alternately.



**Press and hold** rapid rewind and fast forward.

## Dictating machine options

**Options** Open menu.

**Loudspeaker** Playback via the built-in loudspeaker.

(For standard functions see p. 15)

## Time zones



Time zones

The time zone can be selected in the world map or a city list:

### World map



Select the desired recording.

### City list



Select a city in the selected time zone.

## Time zone options

### Options

Open menu.

### Set

Specify the time zone.

### Auto time zone



The time zone is switched automatically to local time by the network.

### Search city

Search for a city.

### Help

Operating instructions.

# Extras

## Walky Talky



This application can be used to simultaneously connect multiple subscribers. Like a normal Walky Talky, only one subscriber can speak at a time. The others can only listen until the speaker allows others to talk.

A recipient is selected using their Walky Talky address (WT ID) or their phone number. Groups created in advance (p. 110) can be invited to a session. Your service provider will supply you with your own WT address.

The recipient can also use a mobile phone, as well as a PC with an Internet connection and headset (depending on service provider).

To use the application, GPRS (p. 89) must be switched on and Walky Talky (p. 111) activated.

## Preparing a session



<New session>

Select.

The possible functions as well as already added subscribers are displayed.

You have several options to combine the subscribers:

<Add from  >



Search and mark recipient in Addressbook.



Add recipient.

Or

<Add f. sess.>



Select a subscriber from an earlier session.

Or

<Enter WT ID>



Enter WT ID of a recipient.

Select

Add entries.

Or

<Add from grp>



Select group.



Open



Select and mark recipient.

**Select**

Add recipient.

## Starting a session

If all the desired subscribers are combined, start the session:



The subscribers are displayed, and the authorised speaker is shown in bold.

## Speaking rights

The list of subscribers is displayed. The current authorised speaker is shown in bold.



Request speaking rights. The delegation of speaking rights is displayed and then the requester can talk.



Returning speaking rights.

### Additional information

Depending on the setting for **Hold mode** (p. 112) must be pressed and held as long as one speaks.

If the person with speaking rights takes a long pause, the speaking rights are automatically released again.

## Inviting additional subscribers

You can invite additional subscribers during a session.

**Options**

Open menu, select **Invite** and mark new subscribers.

## You are being invited

The invitation is shown in a window. You can accept or refuse this invitation.



Accept the invitation.

The list of subscribers is displayed.

## Leaving the session and ending

Only if you yourself started the session.

**Options**

Open menu.

### Quit session

Select. You will leave **and** end the current session.

## Letting the session run in the background

The current session remains active in the background. A phone call ends the session.

### Putting Walky Talky in the background



Press and hold.

### Using Walky Talky again



→ Walky Talky

**Sessions** Continue session again.

## Walky Talky options

**Options** Open menu.


Different functions are offered depending on the situation.

<b>History view</b>	Display of subscribers in order of speaking.
<b>Session view</b>	Display of subscribers for the current session.
<b>Quit session</b>	End session.
<b>Session details</b>	<b>Start time, Status, Duration, Type etc.</b>
<b>User details</b>	Display subscriber properties (see also <b>My presence</b> , p. 111).
<b>Add to </b>	Save WT ID in Addressbook.
<b>Invite user</b>	Invite a subscriber to a session.
<b>Add to group</b>	Add subscriber to the group.

<b>Clear</b>	Delete the list except for the last entry.
--------------	--

<b>Handsfree</b>	Switch on handsfree talking (loudspeaker).
------------------	--

<b>Request pres.</b>	Request information about the readiness to receive for a subscriber.
----------------------	--

<b>Volume</b>	Set volume.  is also possible.
---------------	---

(For standard functions see p. 15)

## Sessions



→ Walky Talky → **Sessions**

Display subscriber list for the current session. The authorised speaker is shown in bold.

## Records



→ Walky Talky → Records

Select the list of received and made WT calls as well as the option to delete all lists.

You can mark subscribers for one session in the list.



Start session.

The function **Create as group** in **Options** can be used to combine entries in the list into a new group.

## Groups



→ Walky Talky → Groups

Only **your** groups are displayed and can be edited.

### Setting up a new group

<New entry>

Select.



Fill in input fields:

Walky Talky ID:

Subscriber ID.

Name: Group name.

Type Instant or Chat.

Max. users:

Maximum number of group members ("0" means "no limit").

### Membership:

Set if membership in this group is open to everyone (**Open**) or if the subscriber is limited to the member list (**Restricted**).

**Memberlist** Add member to the group.

**Rejectlist** List of subscribers which may not become members of this group.

**Save** Save group.

### <Rejectlist>

List of subscribers with whom a session is not desired. Invitations from this list are always refused automatically.

### <Acceptlist>

List of subscribers whose invitation is automatically accepted (see also **Auto answer** p. 111).

### Starting a session (group conversation)



Select group.



Start session.

## Viewing group properties



Select group.



View properties.

### Options

Open menu.

Add to	Copy group ID to the Addressbook.
Edit	Edit (your own) group.
Copy ID to clip	Save group ID (WT ID) in the clipboard.
Memberlist	Display the member list.
Rejectlist	Display the refused subscribers.

## My presence



→ → Walky Talky  
→ Presence → My presence

The following properties (yours) can be set:

### Interruption

Allow, forbid interruption

### Mood

Display your mood.

### Notes

Note.

## Settings



→ → Walky Talky  
→ Settings

Some settings must be made by the user or can be copied from your service provider.



Select and confirm the function, area.

### Dwnl. settings

Download settings from the server of the service provider.

### WT online

Log in/out, status information for login.

### Block WT calls

Allow/block Walky Talky calls.

### Auto answer

Automatically accept invitations because of the **Acceptlist** (p. 110).


### Use Acc.& Rej.

Activate/deactivate the use of **Acceptlist/Rejectlist** p. 110/p. 110).

### Walky Talky

- **WT enabled**  
Activate/deactivate Walky Talky.
- **History length:**  
Number of entries in the list.
- **Timeout(min.):**  
Walky Talky is put in the background if not used after an adjustable amount of time.



- **Hold mode**  
Depending on the setting,  must be pressed and held to speak.
- **Default view**  
**Session view** or **History view**.
- **Request pres.**  
The saved properties are displayed.

### Server

Settings for the server. Please check with your service provider.

### Advanced

Further settings. Please check with your service provider.

#### Additional information

If an accessory such as the car kit is connected, its PTT key also functions as a WT-key.

## SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the soft key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone can support future additions in your service provider's user package. For further information, please contact your service provider.

## Alarm clock



The alarm will ring at the time set by you, even when the phone is switched off.



Activate/deactivate the alarm.



Switch to time setting.



Set alarm call time (hh:mm).



Switch to the week days.



Navigate to the various days.



Display options: alarm call time and days.



Set days for alarm calls. Press again to delete the highlighting.

**Press and hold** to highlight/unhighlight all the days.

**OK**

Confirm setting.

#### Additional information



Screen display in standby mode: alarm clock activated.

With **Snooze** you can set the alarm to repeat.

## Sound recorder

Use the sound recorder to record noises and tones for use as ring tones. The tone recording is normally started by other applications/functions such as "assign ring tone".

### New recording

#### Start from main menu

→ → Sound recorder

<New entry>

Select.

The remaining time available as well as the recording time are shown in the display.

#### Start it from another application as follows

The recording display appears:



A brief tone sounds when the recording starts.



Pause/record alternately.



End recording.

The recording is saved with a timestamp in the folder **Sounds**. Rename with **Options**.

**Insert**

Transfer recording into the application.

## Playback



Select the desired recording.



Playback/pause, alternately.



**Press and hold** rapid rewind and fast forward.

### Options

Open menu.

Loudspeaker	Playback via the built-in loudspeaker.
Set as...	Set the recording as a ringtone.
(For standard functions see p. 15)	

## Calculator



Calculator

The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top display half.



Enter number(s).



Navigate functions.



Use function. The result is calculated and displayed immediately.

### Basic functions:

+, -, *, /	Basic calculation types.
=	Result.
1/x	Conversion
%	Convert to percentage.
.	Decimal point.
±	Sign change "+" / "-"

### Options

### Expansion of the range of functions:

$\sqrt{x}$	Square root
$x^2$	Square
e	Exponent.
MS	save displayed number.
MR	Call up saved number.
M+	Insert number from memory.

## Calculator options

**Options** Open menu.

**Convert** Call up the unit converter with the current result.

**Clear all** Delete all units.

**Extended mode/  
Basic mode** Convert calculation functions.

(For standard functions see p. 15)

## Unit converter

 → **Unit converter**

You can convert various measurement units into other measurement units.






The following types are offered with various units:

- Velocity
- Energy
- Mass
- Pressure
- Time
- Volume
- Area
- Length
- Power
- Temperature
- Currency

Example of type **Velocity** units:



Type	Units
Velocity	Kilometres/h, Metres/sec, Miles/h, Miles/sec, Knots, Mach

## Convert

-  Select the source unit/currency.
-  Switch to the input field.
-  Enter the quantity to be converted.
-  Switch to the selection field.
-  Select the target measurement unit / currency  
The result is displayed.



You can use both input fields alternately.

Special key functions:

-  Set decimal point.
-  Change prefix.

## Currency

When you call up the function, you must enter a basic currency into which the conversions are to be made.

-  Enter currency (e. g. euro)
-  Store entry.

Now enter the name and exchange rate of the currency to be converted.

**Options** Open menu.


<b>Add currency</b>	Enter new currency and exchange rate.
<b>Set as base</b>	Use entered currency as basic currency.
<b>Edit rate</b>	Change the exchange rate of the basic currency.
<b>Calc.</b>	Start calculator.
(For standard functions see p. 15)	


## Stopwatch

 →  → Stopwatch


Two intermediate times can be recorded and saved.

Display, also in standby mode.

 Start/stop.

 Save intermediate time.

After a stop:

 Reset to zero.

## Stopwatch options

**Options** Open menu.

<b>Stopwatch list</b>	Display saved entries.
-----------------------	------------------------

(For standard functions see p. 15)


## Countdown

 →  → Countdown


A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Display, also in standby mode.


If no time has been entered:

 Open input window


**Edit** Activate input field.

 Set period of time.


**OK** Confirm.


 Start.

If a countdown time is specified:

 Start countdown.

While the time is elapsing:

 Interrupt counter.

 Let counter continue running.

**Reset** Reset counter to starting time.

## Remote synchronisation



→ Remote syncr.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or in the Internet.

[www.siemens-mobile.com/syncml](http://www.siemens-mobile.com/syncml)

### Synchronise

#### Sync

The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

#### Next

Scroll through the various displays.

### Sync. setting

The following settings can be made prior to synchronisation:

#### Sync. profile

You can choose between 5 profiles.



Select profile.



Activate profile.

or

#### Edit

Set profile

### Server sett.

**Providers** Display the current service provider.

**Homepage :** e.g. **www.siemens-mobile.com**

**Port:** Enter port number, e.g. 80.

**Login:** Enter user name (Login name).

**Password:** Enter password (shown as a series of asterisks).

**Calendar path**

**Contacts path**

**Notes path**

**Task path**

**HTTP authentication:** Confirmation required; Yes/No (if No, the input fields are not visible).

**HTTP name:** Enter name.

**HTTP password:** Enter password.

**Last sync:**

Time of the last synchronisation.

**Sync. mode**

- **Sync data:** Modified data or All data
- **Sync direction:** Two-way, Mobile update or Server update

**Date range**

Select On/off

Enter the time in weeks in which entries (past and future) are to be synchronised.

**Sync items:**

Highlight database areas to be synchronised:

Calendar

Addressbook

Notes

Tasks

Save settings.

**Device manag.**

 →  → Device manag.

If you were informed about software updates by a push message, you can establish a connection to the provider's server using the Device manager, so you can download them. When downloading is finished, you will be asked to switch the phone off and on again. Afterwards, the software of your phone will be updated. Please follow the instructions in the display.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually. If necessary, check with your service provider for details. You will find the current settings for the service provider on the Internet at [www.siemens-mobile.com/mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care) under "FAQ".

## Active profile

A standard profile for downloading the current software of the operating system is displayed.

**Sync** Establish a connection to the active profile.

Or

**Edit** Call up profile list.



Select profile.



Activate profile.

Or

**Edit** Set profile.


## Last connect.

Display last connection.




## Media player


When you are viewing a picture/ video or listening to a melody, the application starts a media playback.


 Scroll to the next media file.


## Pictures


The following functions can be applied to a displayed picture:

 Zoom function if the displayed picture has a higher resolution than the display. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.

 Centre the picture.


 Switch to full-picture mode and back again.


 Switch on display illumination (only in full screen mode).

 e.g. send via MMS or e-mail.

## Melodies/video


The media playback offers the following functions for melody and video playback:

 Play or pause, depending on the situation.


 Set volume.

 Mute.

 Stop function.

 End playback.

## Options

 Open menu.

Different functions are offered depending on the starting situation and the object.

<b>Volume</b>	Set the volume with the joystick.
<b>Set as...</b>	Set picture as <b>Wallpaper</b> , <b>Logo</b> for example, and sounds for <b>Incoming call</b> , <b>Startup melody</b> , for example.
<b>Slideshow</b>	Automatic run-through in full-picture mode. Individual picture connection with joystick.
<b>Edit</b>	Access to picture processing (application must be loaded).

(For standard functions see p. 15)

# My stuff

To organise your files, you can use the file system like a PC file manager. There are some folders in **My stuff** for the various data types for this purpose.

Remember that pictures and sounds may be protected (DRM, p. 13).



The list of the folders and files is displayed.

## Navigation



Select file/folder in lists.



The cursor can be moved freely in the preview.



Open folder or start file with related application

## <New picture>/<New sound>

The application for the folder currently selected is loaded.

## <New downl.>

The WAP browser is started and the download page displayed.

# Own file options

**Options** Open menu.

<b>Move</b>	Place highlighted file(s) or folder in temporary memory.
<b>Copy</b>	Place highlighted file(s) or folder in temporary memory.
<b>Paste</b>	Transfer content of temporary memory into current folder.
<b>New folder</b>	Create a new folder and name it.
<b>Thumbn. view</b>	Switch over to miniature view.
<b>Attributes</b>	Display information on file or folder selected.

(For standard functions see p. 15)

## Index structure

Some folders have already been created for different data types in My stuff. These folders cannot be changed.

Depending on the service provider, the structure, content and functionality of My stuff may vary.

Folder	Description	Format
Pictures	Pictures	bmp bmx jpg/jpeg png gif
Videos	Videos	3gp
Animations	Switch on/off animations	bmx gif
Sounds	Melodies	mid amr wav
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Skins	Loaded user interfaces.	scs
Games	Java archive	jar
	Download info	jad
Applications	Applications, such as Photo Editor or Download Assistant.	*
Misc.	Internet sites.	html wml

# Mobile Phone Manager

The Windows® PC program, MPM (Mobile Phone Manager) enables you to use extended phone functions from your PC. Among other things, you can easily manage your phone's Addressbook, as well as read, store and send SMS and EMS messages. The phone and PC communicate via IrDA or a data cable (See Accessories, p. 133).



You can download the software from the Internet:

[www.siemens-mobile.com/cx70](http://www.siemens-mobile.com/cx70)

## Contacts Management



You can use contacts management to manage the personal contacts you have stored in your phone, to add new ones and to delete and edit them. You can compare and copy contacts between your phone, Outlook®, Lotus Notes™ and other Siemens phones (including Gigaset).

## SMS and EMS management



Write EMS and SMS messages from the convenience of your PC. Use all the options your PC offers you and use your sounds and pictures to create SMS and EMS messages. You can read, forward, print, delete and archive your messages.

## Backup and restore



With the back-up function, you can regularly make a back-up copy of your phone data on the PC. If you ever lose the data on your phone or replace the phone, you can quickly re-instate all data with the restore function. Please observe any possible restrictions for DRM-protected data.

## Bookmark Management



Use your PC to browse on the Internet and define your preferred Internet sites. Save the Internet addresses as bookmarks on your phone so that you can quickly call them up at a later time when you are on the move.

## Phone explorer



You can use the phone explorer to read your phone's file system. Files such as pictures, sounds and much more can easily be copied between the phone and PC by dragging and dropping.

## GPRS modem



The GPRS modem establishes an Internet connection via your mobile phone so that you can surf the Internet on your laptop while on the move and at the touch of a button.

## Processing pictures and photos



Picture/photo processing offers you the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered to help you create colourful, attractive graphics. The user-friendly interface makes child's play of transferring pictures/photos from or to the mobile phone, and of changing the graphic settings.

## Ringtone Management



The sound module allows you to manage nearly all sound formats easily and to save them on the phone. This phone does not support MP3 functionality.

# Questions & Answers





If you have any questions about using your phone, visit us at [www.siemens-mobile.com/mobilescustomer-care](http://www.siemens-mobile.com/mobilescustomer-care) anytime. For additional help, we have listed below some frequently asked questions and answers.

## Configuration service


To help you set up your mobile phone for the data service WAP, MMS, e-mail and Internet, you can use a configuration service. This service is used to have the necessary settings for your mobile phone sent to you by SMS. We recommend that you contact your network provider who will send you the configuration messages.

As an alternative you can also use the "Setting Configurator" at [www.siemens-mobile.com/mobilescustomer-care](http://www.siemens-mobile.com/mobilescustomer-care). Siemens will then send you the configuration messages. Please follow the instructions contained in those messages.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Too little standby time.	Frequent use of organiser and games.	Restrict use if necessary.
	Fast search activated.	Deactivate speed search (p. 96).
	Display illumination on.	Switch off display illumination (p. 80).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 93).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: +5 °C to +45 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.

Problem	Possible causes	Possible solution
SIM error.	SIM card not inserted correctly. Dirty SIM card contacts. SIM card with wrong voltage. SIM card damaged (e.g. broken).	Check that the SIM card is inserted correctly (p. 9). Clean SIM card with a dry cloth. Use 3V SIM cards only. Carry out a visual check. Change SIM card at service provider.
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised.  Network call barring is set. Network overloaded.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (p. 95). Check network barrings (p. 94). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 95). Switching phone off and on again can speed this up.
Calls not possible.	Second line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (p. 96). Check for new barrings. Reset limit with PIN 2 (p. 39). Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 94).
Impossible to make entries in Phonebook/Addressbook.	Phonebook/Addressbook is full.	Delete entries in Phonebook /Addressbook (see Standard functions, p. 15).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 68).
 flashes to indicate an SMS.	SMS memory is full.	Delete (see Standard functions, p. 15) or file SMS (p. 46).
 flashes to indicate an MMS.	MMS memory full.	Delete MMS (see Standard functions, p. 15).
 flashes to indicate an MMS.	Phone memory full.	Delete messages, pictures, videos, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, videos, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (p. 86).

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate or set WAP profile (p. 72). If necessary ask your service provider.
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (p. 47).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed at the destination phone	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check WAP settings; (p. 72) contact your service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 128).
Service provider Code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (p. 91).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.
<b>Damage</b>		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

**Reset all settings to factory default p. 87: \* # 9 9 9 9 #** 



# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens-mobile.com/  
mobilescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **More**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on p. 125.

You can also get personal advice about our range of products on our Premium Hotline:  
**United Kingdom** ..... **0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi ..... 0 26 42 38 00  
Argentina ..... 0 80 08 88 98 78  
Australia ..... 13 00 66 53 66

Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany *	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03

\* 0,12 Euro/min.

---

Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 57 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 04 60 00
Russia .....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey .....	0 21 65 79 71 00
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Vietnam .....	84 89 30 01 21
Zimbabwe .....	04 36 94 24

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.

- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or: [www.siemens-mobile.com/conformity](http://www.siemens-mobile.com/conformity)

CE 0682

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	90 g
Size:	101 x 46 x 18 mm (78 ccm)
Li-Ion battery:	750 mAh
Operating temperature:	-10 °C ... +55 °C
SIM card:	3.0 V

The SAR value specified on p. 138 does not apply to phones equipped with "Emoty CLIPit™ Cover" (p. 72) or other CLIPit™ covers.

### Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....

15 digit serial number of the phone  
(under the battery):

.....

the customer service number of the service  
provider:

.....

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating time

The operating time depends upon the respective conditions of use: Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

**Call time: 100 to 330 minutes**

**Standby time: 60 to 300 hours**

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes

\* Key input, games, organiser etc.

# Quality

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

# Accessories

 
## Fashion & Carry

### CLIPit™ Covers

Changeable top shells as well as keyboards area available in specialist shops. Alternatively, you can visit our online shop.

### Carrying Cases

A range of carry cases is available at specialist shops or you can visit the Siemens Mobile Store online:



## Energy

### Li-Ion Battery (750 mAh) EBA-660

Spare battery.

### Travel Charger

Travel Charger EU ETC-500

Travel Charger UK ETC-510

Travel charger with an extended input voltage range of 100–240 V.

### Car Charger Plus ECC-600

Charger for the cigarette lighter socket in the car. It is possible to make telephone calls during charging.

## Handsfree Portable

### Headset Basic HHS-500

Headset without keys; accepting and ending calls is done using the phone.

### Headset HHS-510

Headset with key to accept and end calls.

### Headset Purestyle HHS-610

High quality headset with button for accepting and ending calls. An ear hook which can be adjusted for the left or the right ear, makes it more comfortable to wear.

### USB DCA-510 data cable

For connecting the phone to the USB port of the PC. With load function.

## Office

### Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

### USB DCA-510 data cable

For connecting the phone to the USB port of the PC. With load function.

### Data Cable USB DCA-540

For connecting the phone to the USB port of the PC. With load function.

### SyncStation DSC-600

Table support for the telephone to facilitate simultaneous data exchange and telephone charging. Contains a desktop stand and a USB data cable.

## Multitainment

### Emoty CLIPit Cover

This cover is used to "transfer" your emotions to animated figures via the integrated pressure, touch, and vibration sensors. The animations can then be sent as normal MMS and received from any MMS compatible phone.

### Plug-in Flash IFL-600

Plug-in flash module for taking photos in areas with low ambient light.

## Car Solutions

### Mobile Holder HMM-680

Cradle without antenna port.

### Mobile Holder HMM-685

The cradle for connecting an external antenna. Ideal for use with headset PTT or car kit portable.

Can also be used as cradle for retrofitting your handsfree car kit (series 55).

### Car Kit Comfort HKC-680

Handsfree kit with first-class digital call quality and supreme ease of use. Includes all components needed for installation. The individual antenna solution is available in specialist shops.

### Car Kit Easy HKP-600

Facilitates convenient handsfree talking with high call quality. With the integrated, rotating cradle and the flexible microphone positioning, the telephone can be optimally adjusted to suit any vehicle interior. The power is supplied via the cigarette lighter socket.

### Optional Car Kit accessories

Car Data Adapter HKO-690

Phone-In Adapter Cable HKO-570

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Original Siemens Accessories

[www.siemens-mobile.com/  
shop](http://www.siemens-mobile.com/shop)

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.



## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Siemens.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.

- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

# SAR – European Union (RTTE)

## INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed\*\*. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg\*\*\*. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use

only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.67 W/kg\*\*\*\*

The SAR information can also be found on the Siemens web site at

**[www.siemens-mobile.com](http://www.siemens-mobile.com)**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

---

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**[www.who.int/peh-emf](http://www.who.int/peh-emf)**

**[www.mmfa.org](http://www.mmfa.org)**

**[www.siemens-mobile.com](http://www.siemens-mobile.com)**

\*\* The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

\*\*\* averaged over 10 g body tissue.

\*\*\*\* SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at **[www.siemens-mobile.com](http://www.siemens-mobile.com)**

# SAR – International (ICNIRP)

## INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*\*. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.67 W/kg\*\*\*

SAR information can also be found at **www.siemens-mobile.com**

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

- 
- \* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**www.who.int/peh-emf**


**www.mmfa.org**


**www.siemens-mobile.com**


- \*\* averaged over 10 g of tissue.


- \*\*\* SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at **www.siemens-mobile.com**

# Menu tree

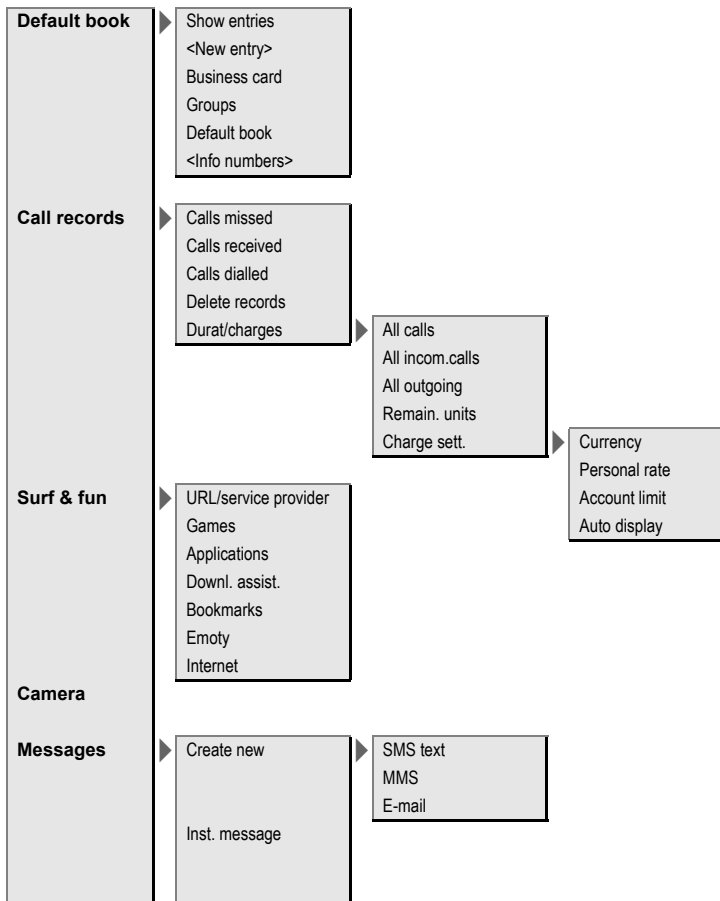


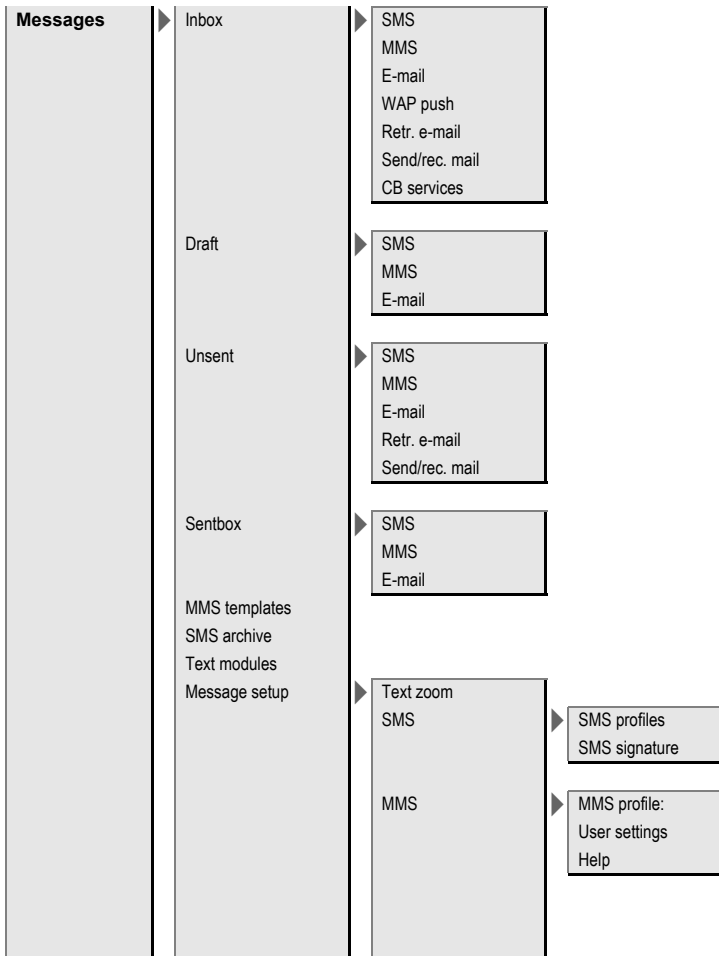


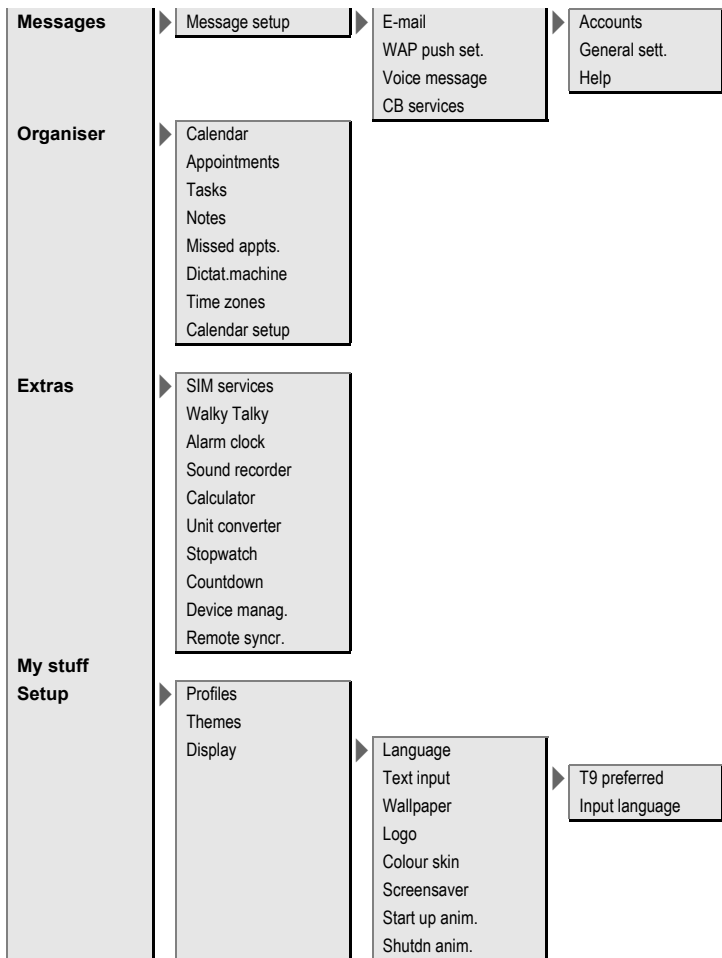

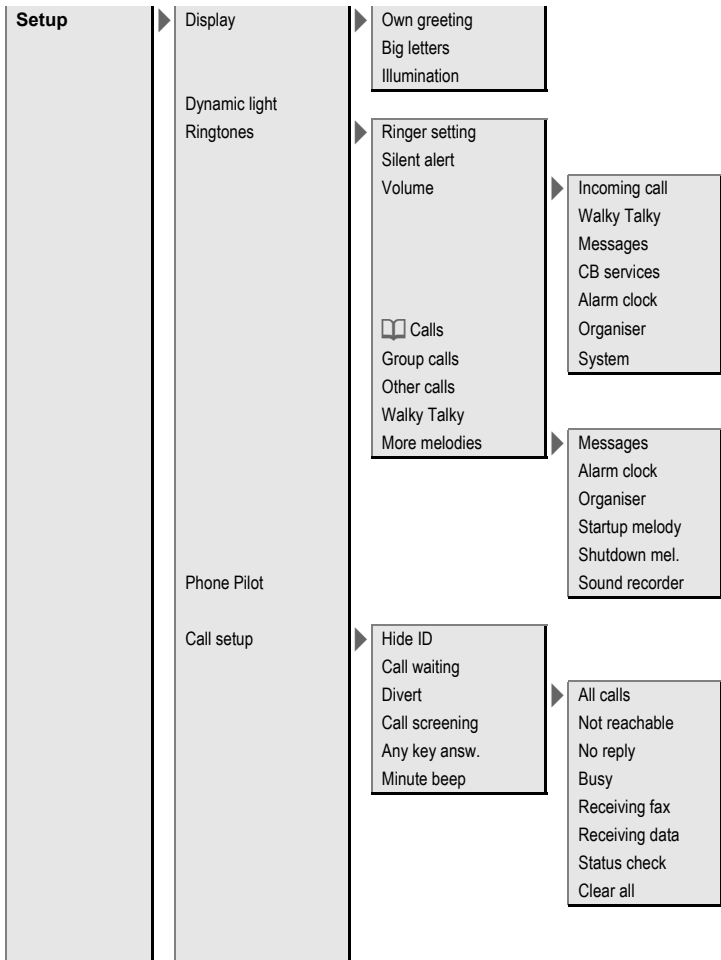



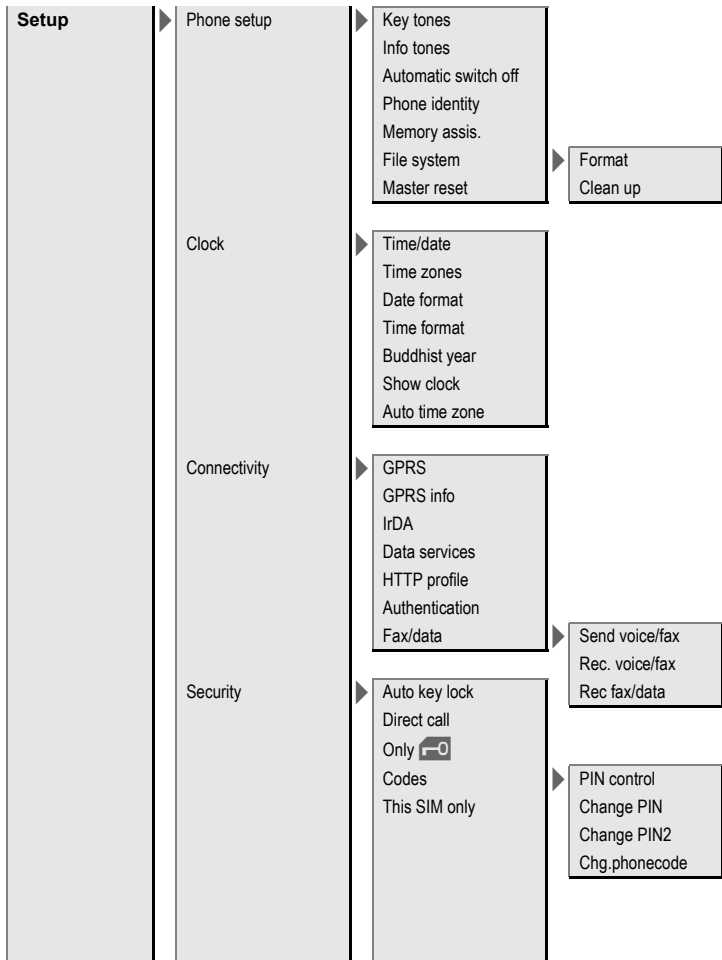

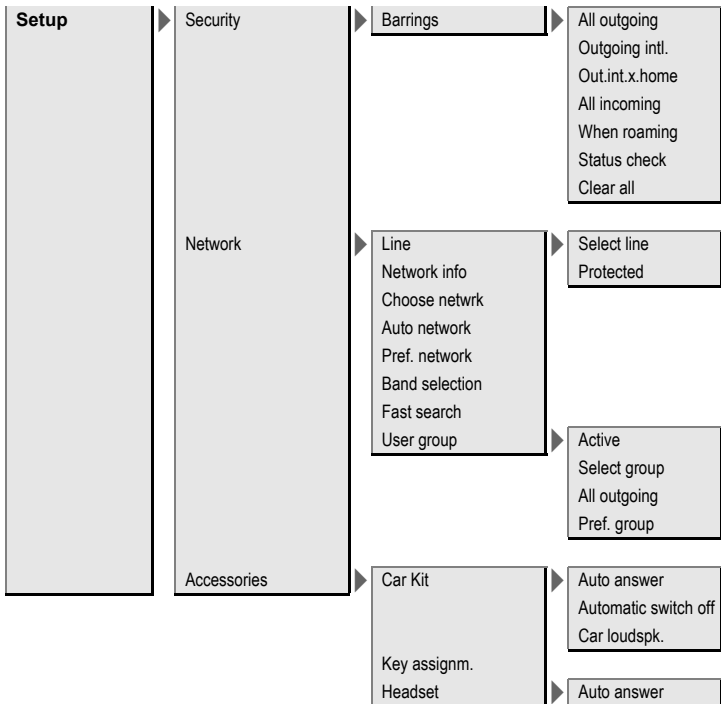


# Index

- A**
- Accessories..... 133
  - Additional books..... 37
  - Addressbook
    - Dial entry..... 33
    - Groups ..... 34
    - New entry..... 31
    - Read entry ..... 33
  - Aircraft mode ..... 76
  - Alarm
    - Alarm clock..... 112
    - Type ..... 103
  - Alarm clock ..... 112
  - All calls (call time/charge) ..... 39
  - All calls (diversion) ..... 85
  - All incoming (barrings) ..... 94
  - Answering service (external)..... 68
  - Any to answer ..... 85
  - Appointments ..... 102
  - Authentication ..... 92
  - Auto display
    - Clock ..... 88
    - Duration/charges ..... 39
  - Auto key lock..... 93
  - Auto time zone..... 88, 106
  - Auto. Network selection ..... 95
  - Auto. redial ..... 24
  - Automobile accessories ..... 134
- B**
- Band selection ..... 96
  - Battery
    - Charge..... 10
    - Insert..... 9
    - Operating time ..... 10, 131
    - quality declaration ..... 132
  - Big letters ..... 80
  - Bookmarks (WAP) ..... 70, 72
  - Browser ..... 71
  - Buddh. Date..... 88
  - Business card ..... 30
  - Busy number..... 24
- C**
- Calculator ..... 114
  - Calendar ..... 101
  - Call
    - Accept/end ..... 25
    - Barring ..... 94
    - Charges..... 39
    - Conference ..... 26
    - Divert..... 84
    - End ..... 23
    - Hold..... 25
    - Menu ..... 27
    - Reject..... 25
    - Swap (change) ..... 25
  - Call back ..... 24
  - Call divert ..... 84
  - Call transfer ..... 27
  - Call waiting..... 26, 84
  - Calling ..... 23
  - Calls dialled (call list)..... 38
  - Calls received (call list) ..... 38
  - Camera ..... 40
  - Car Kit
    - Accessories ..... 134
    - Setting..... 97
  - Car kit accessories ..... 134
  - Care of phone ..... 130
  - Cell Broadcast (CB)..... 69
  - Central input..... 42
  - Change faceplate ..... 11
  - Change keypad mat ..... 11
  - Charge rate..... 39
  - Charges ..... 39

- 
- Charging the battery..... 10  
Clock..... 88  
Codes..... 17  
Colour scheme ..... 79  
Conference..... 26  
Connection profiles ..... 90  
Contact list ..... 62  
Control code (DTMF) ..... 28  
Countdown ..... 116  
Credit limit ..... 39  
CSD settings ..... 90
- D**
- Data connection ..... 89  
Date format..... 88  
Default book ..... 30  
Device manag..... 118  
Dialling code ..... 23  
Dialling with number keys ..... 23  
Dictating machine ..... 105  
Digital rights management ..... 13  
Direct call ..... 27  
Direct reply (SMS)..... 47  
Display  
    Illumination ..... 80  
    Language ..... 79  
    Symbols..... 7  
Divert ..... 84  
Download ..... 73  
DTMF tones  
(tone sequences)..... 28  
Duration/charges ..... 39  
Dynamic Light ..... 78
- E**
- E-mail  
    Lists ..... 58  
    Receive/read..... 58  
    Settings ..... 59  
    Write..... 57  
Emergency number..... 12  
Emoty ..... 72  
Extras ..... 107, 130
- F**
- Factory settings ..... 87  
Fast access..... 99  
Fast search..... 96  
Fax/data mode ..... 91  
Filter..... 85  
Formatting (SMS text)..... 43  
Formatting  
(telephone memory)..... 87  
Forwarding (call)..... 27  
Frequency range ..... 96
- G**
- Games and applications ..... 73  
GPRS..... 89  
Groups..... 34
- H**
- Handset volume ..... 23  
Handsfree talking..... 25  
Headset  
    Accessories ..... 133  
    Setting ..... 97  
Hide ID ..... 84  
Highlighting mode ..... 16  
Hold call ..... 25, 27  
Home network..... 95  
Hotline ..... 128

- I**
- Identity number (IMEI)..... 86
  - IMEI number..... 86
  - Inbox..... 53
  - Info tones..... 86
  - Information services (CB)..... 69
  - Infrared ..... 89
  - Infrared (IrDA) ..... 89
  - Input language (T9)..... 20
  - Inst. Message ..... 61
  - International dialling code ..... 24
  - Internet..... 70
- K**
- Kamera ..... 40
  - Key tones ..... 86
- L**
- Language ..... 79
  - Limit (call time/charge)..... 39
  - Logo..... 79
  - Loss of phone, SIM card..... 131
- M**
- Mailbox..... 68
  - Maintenance of phone..... 130
  - Media Player..... 120
  - Menu
    - Controls..... 14
    - My menu ..... 98
    - Speed dialling ..... 17
  - Menu speed dialling ..... 16
  - Menu tree ..... 140
  - Message
    - CB ..... 69
    - E-mail ..... 57
    - MMS..... 49
    - SMS..... 43, 45
  - Message memory full..... 48
  - Message type..... 47
  - Microphone on/off ..... 27, 41
  - Minute beep ..... 85
  - Missed appointments..... 104
  - Missed calls (call list)..... 38
- MMS**
- Lists ..... 54
  - Receive ..... 53
  - Send ..... 52
  - Write..... 49
- Mobile Phone Manager** ..... 123
- Muting (microphone)**..... 27, 41
- My menu** ..... 98
- My phone** ..... 29
- N**
- Network**
- Barring ..... 94
  - Connection ..... 95
  - Settings ..... 95
- Notes**..... 104
- O**
- Only  ..... 93
  - Only this SIM ..... 93
  - Operating times (battery) ..... 10, 131
  - Organiser..... 101
  - Own (phone) numbers..... 37
  - Own greeting..... 80
- P**
- PC connection..... 18
  - Phone (settings)..... 86
  - Phone code..... 17
  - Phone data ..... 131
  - Phone identity number (IMEI)..... 86
  - Phone number transmission on/off ..... 84
  - Phone Pilot ..... 83

- 
- Phonebook  
  Additional books..... 37  
  call an entry..... 36  
  New entry..... 35  
  Protected SIM ..... 37  
  VIP numbers ..... 37
- Pictures & sounds (SMS) ..... 44
- PIN  
  Change..... 17  
  Control ..... 17  
  Enter ..... 12  
  Error..... 127
- PIN2 ..... 17
- POP3 ..... 60
- Preferred network..... 95
- Preventing accidental  
activation ..... 18
- Product data..... 131
- Profiles  
  MMS..... 55  
  Phone..... 75  
  SMS..... 47  
  WAP ..... 71
- Prompt ..... 24
- Provider logo..... 79
- PUK, PUK2 ..... 17
- Q**
- Questions & Answers..... 125
- R**
- Records ..... 38
- Redial ..... 23
- Reminder ..... 24
- Remote synchronisation ..... 117
- Ringtone setting ..... 81
- Ringtones..... 34, 81, 83
- S**
- Safety precautions ..... 3
- Screensaver ..... 79
- Second phone number ..... 95
- Security ..... 17
- Service centre (SMS) ..... 47
- Service supplier portal..... 29
- Service tones ..... 86
- Set time/date ..... 88
- Settings ..... 75
- Short message (SMS) ..... 43
- Shown in the display..... 7
- Shut down animation..... 80
- Siemens City Portal ..... 29
- Signal strength ..... 13
- Silent alert ..... 81
- SIM card  
  Clear barring ..... 18  
  Insert ..... 9  
  Problems..... 126
- SIM services (optional) ..... 111, 112
- SMS  
  Archive ..... 46  
  Lists ..... 46  
  Profiles..... 47  
  Read ..... 45  
  Settings ..... 47  
  Signature ..... 47  
  T9 input ..... 20  
  To group ..... 44  
  Write..... 43
- SMTP ..... 60
- SOS ..... 12
- Sound recorder ..... 113
- Special characters ..... 19
- Speech time (battery) ..... 131
- Speed dialling keys..... 100

Standard functions ..... 15  
Standby mode ..... 14  
Standby time ..... 10, 131  
Start up animation..... 80  
Stopwatch..... 116  
Storage location  
(Phonebook) ..... 35  
Surf & fun..... 70  
Swap..... 25  
Switch off phone  
    Automatic..... 86  
    Manually ..... 12  
Switch on phone ..... 12  
Symbols ..... 7  
Synchronisation..... 117

**T**

T9 text entry..... 20  
Tasks ..... 103  
Technical data ..... 131  
Text entry  
    With T9..... 20  
    Without T9 ..... 19  
Text module ..... 20  
Time zones..... 12, 88, 106  
Topics ..... 77

**U**

Unanswered ..... 84  
Unit converter ..... 115  
Upper and lowercase letters..... 19  
User group ..... 96

**V**

Validity, SMS ..... 47  
Voice message (mailbox) ..... 68  
Volume  
    Handset volume ..... 23  
    Profiles..... 75  
    Ringtone ..... 81

**W**

Walky Talky ..... 82, 107  
Wallpaper (display) ..... 79  
WAP..... 70  
WAP push ..... 42