




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF85761. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF85761 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF85761
User guide AEG-ELECTROLUX EWF85761
Operating instructions AEG-ELECTROLUX EWF85761
Instructions for use AEG-ELECTROLUX EWF85761
Instruction manual AEG-ELECTROLUX EWF85761

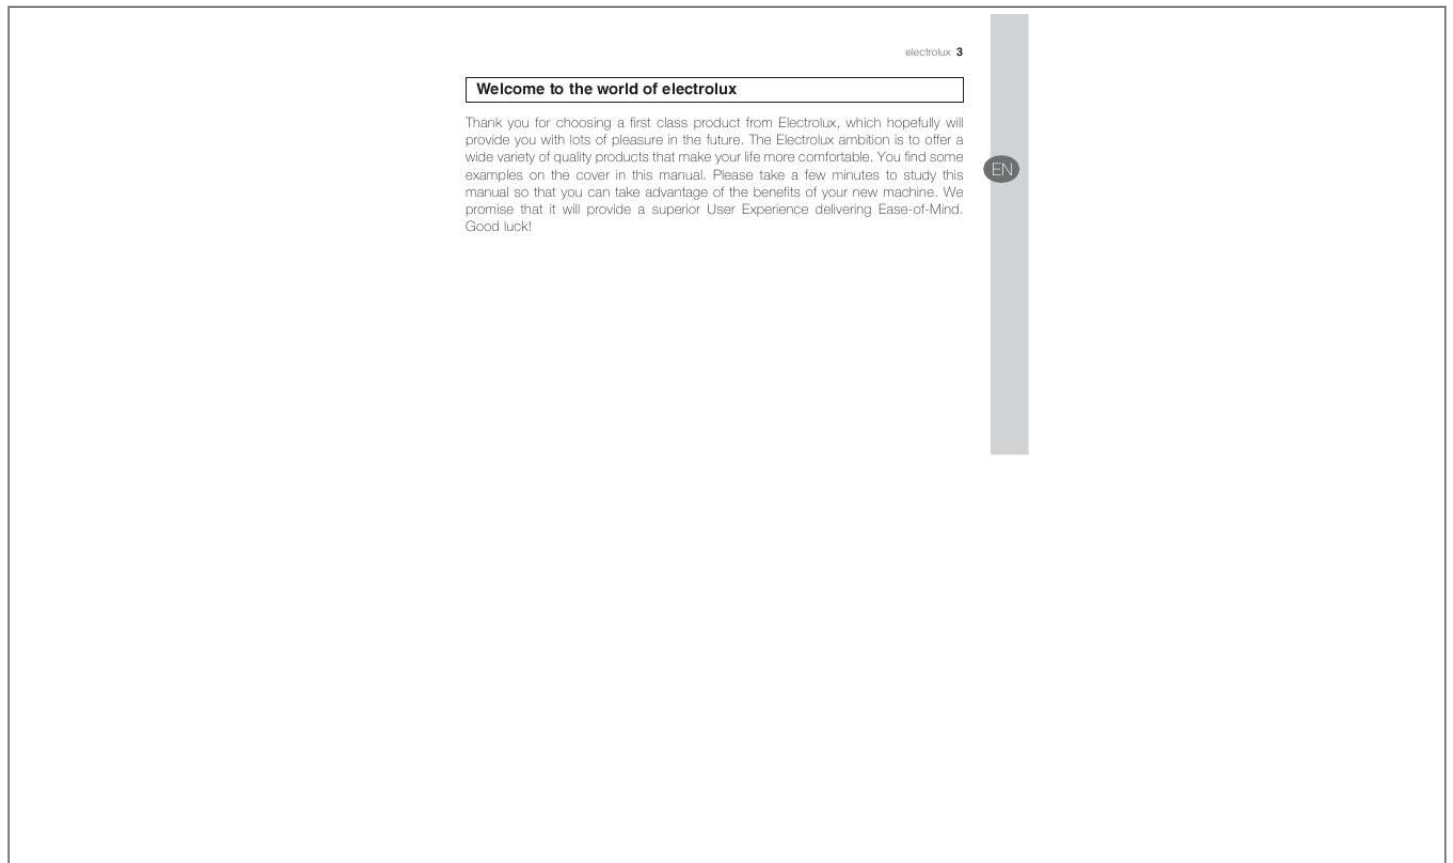

[Your user manual](#)
[AEG-ELECTROLUX EWF85761](#)

Manual abstract:

Any electrical work required to install this appliance should be carried out by a qualified electrician. Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. product description electrolux 7 Product description Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. 1 2 3 EN 8 9 4 12 10 11 7 13 56 1 Detergent Dispenser Drawer 2 Worktop 3 Control Panel 4 Door Opening Handle 5 Drain Filter 6 Rating Plate 7 Front Feet 8 Water Inlet Hose 9 Drain Hose Support 10 Mains Cable 11 Water Drain Hose 12 Hose Holders 13 Back Feet Detergent dispenser drawer Prewash Wash Fabric Softener 8 electrolux control panel Control panel 1 2 3 4 7 5 6 1 2 3 4 5 6 7 Programme selector dial See page 10. Spin selector button See page 10. Options button See page 11.

Extra Rinse button See page 12. Start/Pause button See page 12.

Delay Start button See page 13. Programme progress display See page 13. use electrolux 9 Use First Use Measure out the detergent and the fabric softener Ensure that the electrical and water connections comply with the installation instructions. Run a cotton cycle at 90 °C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out the "prewash" phase, pour it into the compartment marked . EN Daily Use Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. 10 electrolux use Select the required programme Turn the programme selector dial to the required programme. The green Start/Pause light starts to flash.

Programme Option buttons Depending on the programme, different functions can be combined.

These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on..



[Your user manual](#)

[AEG-ELECTROLUX EWF85761](#)