



**Versión en español**

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131735000.

Spanish Owner's Guides  
Frigidaire Company  
P. O. Box 9061  
Dublin, Ohio 43017-0961

**Before Operating Your Washer**

**Read your washer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your washer Owner's Guide before operating this appliance.

**Operating Steps**

Read **Washing Procedures** in your **Owner's Guide**. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. Set cycle selector and washer control according to type, size, and soil level of each load.

8. Close lid and pull cycle selector knob to start washer.
9. If desired, add liquid fabric softener during the final rinse.
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

**Cycle Selection**

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

*(continued, reverse side)*

## Cycle Selection (continued)

### Regular Cycle

Up to 15 minutes of wash agitation for most fabrics.

- **15 Hot** 15 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled items.
- **10 Warm** 10 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.
- **5 Cold** 5 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Perm Press Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

- **12 Hot** 12 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled items.
- **8 Warm** 8 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.
- **4 Cold** 4 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Knits & Delicates Cycle

8 minutes of wash/pause agitation. A warm water wash and a cold water rinse are provided for knit and delicate items.

**LOAD SIZE** sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle	Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15 Hot
Lightly Soiled Colorfast White Cotton & Linen	Warm	Cold	Regular	10 Warm
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	5 Cold
<b>PERMANENT PRESS</b> White or Heavily Soiled	Hot or Warm	Cold	Perm Press	12 Hot or 8 Warm
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press	8 Warm or 4 Cold
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Warm Warm	Cold Cold	Knits & Delicates Knits & Delicates	Start*(8) Start*(8)
Washable Woolens	Warm	Cold	Knits & Delicates	Start*(8)

**\*Always set the Knits & Delicates cycle to begin at the START position.**