

automatic clothes washer
model WWA3200V
OPERATING INSTRUCTIONS

**SAVE THESE INSTRUCTIONS
WITH YOUR USE AND CARE BOOK**

Before operating your washer,
READ YOUR USE AND CARE BOOK.


It contains valuable information about sorting and loading, laundry additives, stain removal and **IMPORTANT CAUTIONS FOR THE PERSONAL SAFETY OF THOSE USING THIS APPLIANCE.**

SORT AND LOAD

- Add sorted laundry to wash basket. Place large articles at the bottom and distribute evenly to balance the load. Do not wind around the agitator. See your Use and Care Book for sorting details. For best results, make sure that your washer is not overcrowded.
- A typical full load:

3 double sheets	5 T-shirts
4 long sleeve shirts	3 pair of trousers
5 bath towels	7 wash cloths
4 standard size pillow cases	6 handkerchiefs
- Add measured amount of detergent as recommended on detergent package. **NOTE:** Because of variations in contents, some granular detergents may be difficult to dissolve. If this is a problem:
 - After loading the clothes, put the detergent in the wash basket next to the agitator, or,
 - Use a liquid detergent. Powdered bleach may be added along with detergent. For proper use of liquid bleach and fabric softener, see your Use and Care Book.

SET THE CONTROLS

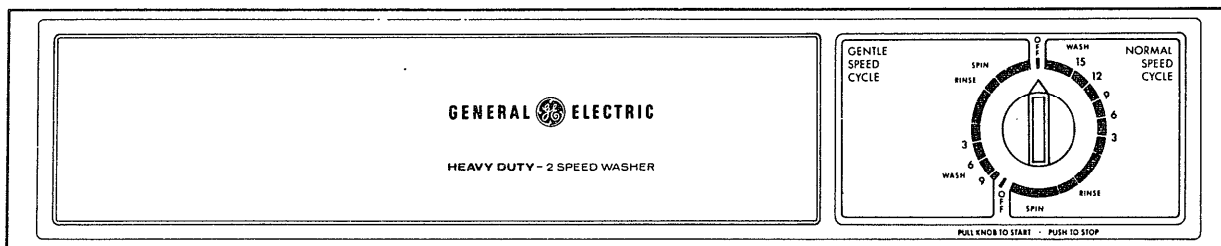

- **Wash and Rinse Temperature Selection.**
Machine will provide warm water wash and cold water rinse when the faucets are both fully turned on.
- **Push Cycle Selector Knob in and turn clockwise to your selected wash cycle.**
 - **THE NORMAL SPEED CYCLE** automatically provides normal wash speed and fast spin.
 - **THE GENTLE SPEED CYCLE** automatically provides gentle wash speed and slow spin.

To Vary Wash: Open hot and cold water faucets as much as needed to provide desired wash water temperature. For **HOT** water wash, open hot water faucet only. **BE SURE TO RE-OPEN COLD WATER FAUCET BEFORE THE RINSE CYCLE.**

- **Close the lid.**

Lid must be closed for washer to operate. Washer will fill but will not agitate or spin with the lid open.

- **Pull Cycle Selector Knob out to start washer.**




The wash cycle setting can be changed at any time. Push in the cycle selector knob to stop the washer and reset to the new position.


0011 49-9350

WHAT HAPPENS IN EACH CYCLE

NORMAL SPEED CYCLE

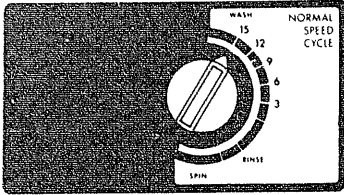


Provides longer washing time for most cottons, linens, work and play clothes. This cycle automatically provides normal speed wash and spin.

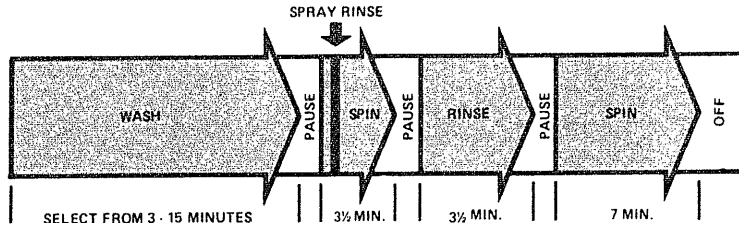


TOTAL CYCLE TIME: Varies from 19 to 31 min. plus fill time depending on selected wash time.

GENTLE SPEED CYCLE

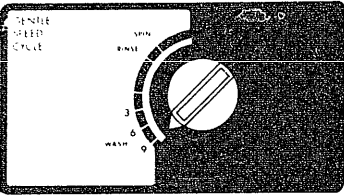

For knits and delicates. This cycle automatically provides gentle speed wash and spin. An extended spray rinse is provided in this cycle to minimize the setting of wrinkles.

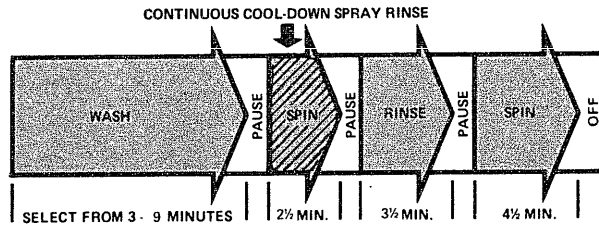

TOTAL CYCLE TIME: Varies from 16 to 23 min. plus fill time depending on selected wash time.

BEFORE YOU CALL FOR SERVICE . . . Check the TROUBLE-SHOOTING GUIDE on the back cover of your USE AND CARE BOOK. It lists many minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

GENERAL ELECTRIC COMPANY
LOUISVILLE, KENTUCKY 40225

GENERAL  ELECTRIC

WWA3200V

Product improvement is a continuing endeavor at General Electric. Therefore, specifications are subject to change without notice. A General Electric Warranty applies to this product.

