

This leaflet contains specific operating information for your model. Save this leaflet with the Use and Care Book which also came with your washer.

**FOR BEST RESULTS,
READ AND BECOME
FAMILIAR WITH BOTH.**


Automatic Clothes Washer

Model
WWA3100B

Operating Instructions for your washer

GENERAL  ELECTRIC

HEAVY DUTY - WASHER

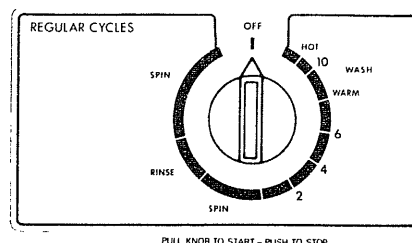

Sort clothes and load washer properly.

- Sort clothes carefully by fabric type, weight, color and amount of soil. See your Use and Care Book for sorting help.
- Load clothes into the wash basket being careful not to overload. Clothes level should be below the retaining ring.

Here is a typical full load:

- 3 Double Sheets
- 6 Long Sleeve Shirts
- 3 Boxer Shorts
- 6 Standard Pillow Cases
- 5 T-shirts
- 4 Pair Trousers
- 6 Handkerchiefs

Note: When washing stockings, panty hose and other easily tangled items, always handle separately. To minimize tangling, the use of a net laundry bag is recommended.

- Refer to your Use and Care Book for more information on loading clothes, detergents, and other laundry products.


- Close lid. Washer will fill but not agitate or spin with lid open.
- Push Cycle Selector Knob in and turn clockwise to your selected wash temperature and time.

Wash Water Temperature Selection

- For hot water wash, set cycle selector to "HOT" (11 min.) or "10"
- For warm water wash, set cycle selector to "WARM" (8 min.), "6," "4," or "2."
- For cold water wash, set cycle selector for warm wash as explained above and TURN OFF THE HOT WATER FAUCET.

**RINSE WATER TEMPERATURE
WILL ALWAYS BE COLD.**

- Pull Cycle Selector Knob out to start the cycle.

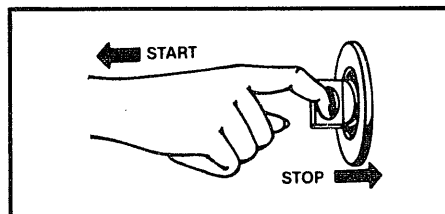

If you wish to change cycle setting after washer has started, push Cycle Selector Knob in to stop washer and reset to the new position. Setting can be changed at any time during the cycle.

GENERAL  ELECTRIC

Part No. 141A7449 P370 Rev. 1
10-83

49-9381-1

Your Direct Line to General Electric
The GE Answer Center 800.626.2000



BEFORE OPERATING YOUR WASHER

Read your Use and Care Book. It contains IMPORTANT CAUTIONS for the PERSONAL SAFETY of those using the appliance.

BEFORE YOU CALL FOR SERVICE

Check the Problem Solver in your Use and Care Book. It lists many minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

Part No. 141A7449 P370 Rev. 1
Pub. No. 49-9381—1

General Electric Company
Appliance Park
Louisville, Kentucky 40225

Model
WWA3100B

GENERAL  ELECTRIC