




model **WWA5009V**
automatic clothes washer
OPERATING INSTRUCTIONS
SAVE THESE INSTRUCTIONS
WITH YOUR USE AND CARE BOOK

Before operating your washer,
READ YOUR USE AND CARE BOOK.

It contains valuable information about sorting and loading, laundry additives, stain removal and **IMPORTANT CAUTIONS FOR THE PERSONAL SAFETY OF THOSE USING THIS APPLIANCE.**

SORT AND LOAD

- Add sorted laundry to wash basket. Place large articles at the bottom and distribute evenly to balance the load. Do not wind around the agitator. See your Use and Care Book for sorting details.

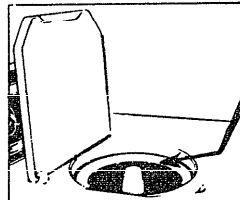


- A typical full load:

3 double sheets	4 T-shirts
3 long sleeve shirts	2 pair of trousers
3 bath towels	7 wash cloths
4 standard size pillow cases	5 handkerchiefs

- Clothes level should be below the clothes retaining ring.
- Measure and add detergent to the wash load as recommended on detergent package. Powdered bleach may be added along with detergent. **NOTE:** Because of variations in contents, some granular detergents may be difficult to dissolve. If this is a problem:

- After loading the clothes, put the detergent in the wash basket next to the agitator, or,
- Use a liquid detergent.
- For use of bleach, fabric softener and other laundry aids, see your Use and Care Book.

SET THE CONTROLS

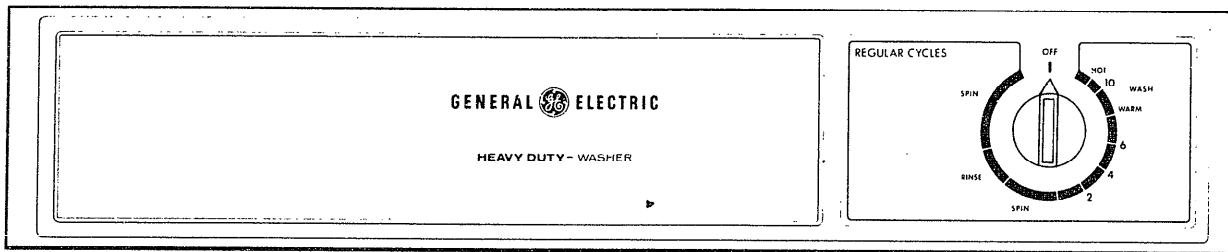

- **CLOSE THE LID.**

Lid must be closed for washer to operate. Washer will fill but will not agitate or spin with lid open.

- **PUSH CYCLE SELECTOR KNOB IN** and turn clockwise to your selected wash temperature and time.

- For cold water wash, set cycle selector for warm wash as explained at left and **TURN OFF THE HOT WATER FAUCET.**

RINSE WATER TEMPERATURE WILL ALWAYS BE COLD.

- Pull Cycle Selector Knob out to start washer.



WASH WATER TEMPERATURE SELECTION

- For hot water wash, set cycle selector to "HOT" (11 min.) or "10".
- For warm water wash, set cycle selector to "WARM" (8 min.), "6", "4" or "2".

The wash cycle setting can be changed at any time. Push in the cycle selector knob to stop the washer and reset to the new position.

UC17 49-9351

BEFORE YOU CALL FOR SERVICE . . . Check the **TROUBLE-SHOOTING GUIDE** on the back cover of your **USE AND CARE BOOK.** It lists minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

GENERAL ELECTRIC COMPANY
LOUISVILLE, KENTUCKY 40225

GENERAL  ELECTRIC

WWA5009V

Product Improvement is a continuing endeavor at General Electric. Therefore, specifications are subject to change without notice. A General Electric Warranty applies to this product.

