

model WWA7304P
automatic clothes washer
OPERATING INSTRUCTIONS
SAVE THESE INSTRUCTIONS
WITH YOUR USE AND CARE BOOK


Before operating your washer,
READ YOUR USE AND CARE BOOK.

It contains valuable information about sorting and loading, laundry additives, stain removal and **IMPORTANT CAUTIONS FOR THE PERSONAL SAFETY OF THOSE USING THIS APPLIANCE.**

SORT AND LOAD


- Remove filter pan. (The underside of the lid provides a convenient resting place for the filter pan while loading or unloading clothes.)
- Add sorted laundry to the wash basket. See your Use and Care Book for sorting details.
- A typical full load:

3 double sheets	4 T-shirts
3 long sleeve shirts	2 pair of trousers
3 bath towels	7 wash cloths
4 standard size pillow cases	5 handkerchiefs

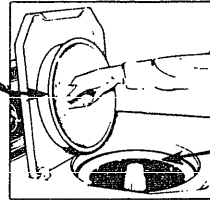

- Clothes level should be below the clothes retaining ring.
- Replace Filter Pan and add measured amount of detergent as recommended on detergent package. **NOTE:** Because of variations in contents, some granular detergents may be difficult to dissolve. If this is a problem:
 - After loading the clothes, put the detergent in the wash basket next to the agitator, or,
 - Use a liquid detergent.
- For use of Bleach Dispenser see back page. For use of fabric softener and other laundry aids, see your Use and Care Book.

SET THE CONTROLS Refer to CONTROLS SETTING GUIDE below

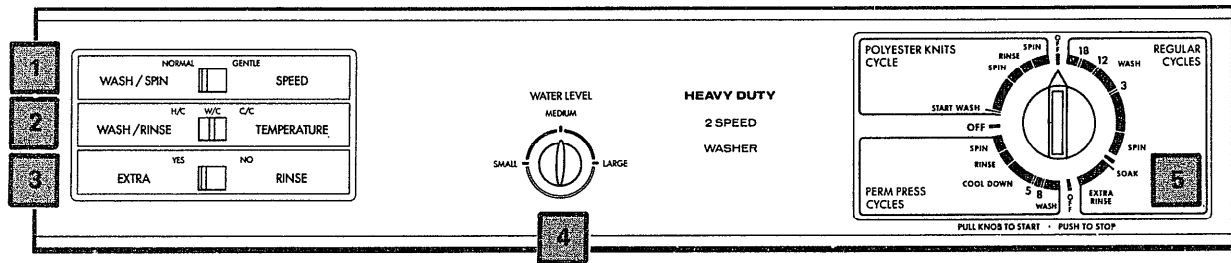

- Close lid and set controls as follows:

Lid must be closed for washer to operate. Washer will fill but will not agitate or spin with lid open.

- Select WASH/SPIN SPEED.
- Select WASH/RINSE TEMPERATURE.
- Extra Rinse Selection. Set the switch to "YES" to provide an automatic second deep rinse following the regular wash cycle. Set to "NO" if the Extra Rinse is not desired.

- Select WATER LEVEL:

Load Size Setting	Amount of Clothes in Washer
Small!	Less than 1/2 full!
Medium	Between 1/2 - 2/3 full
Large	Over 2/3 full
- Push Cycle Selector Knob in and turn clockwise to your selected wash cycle. See wash cycles on back page.

- Pull Cycle Selector Knob out to start washer.



The wash cycle setting can be changed at any time. Push in the Cycle Selector knob to stop the washer and reset to the new position.

CONTROLS SETTING GUIDE

	COTTONS & LINENS			PERMANENT PRESS SYNTHETICS AND BLENDS	KNITS AND DELICATES
	Work clothes dungarees, etc.	White or Colorfast	Bright Colors		
WASH/SPIN SPEED	NORMAL	NORMAL	NORMAL	GENTLE	GENTLE
*WASH/RINSE TEMPERATURE	Hot/Cold or Warm/Cold	Hot/Cold or Warm/Cold	Warm/Cold	Warm/Cold	Warm/Cold or Cold/Cold
CYCLE	REGULAR	REGULAR	REGULAR	PERM.PRESS	POLYESTER KNITS
**CYCLE SELECTOR SETTING	18 Min.	12 Min.	9 Min.	8 Min.	START WASH

*The cooler wash settings (not below 80°F./27°C.) will save energy. See your Use and Care Book for more complete instructions.


**The wash times suggested here apply to laundering an average weight of clothes under typical home conditions. You may find that some adjustment in these times is desirable.

HOW TO USE THE BLEACH DISPENSER

The Bleach Dispenser is designed for use with liquid bleach only! If you prefer to use powdered bleach, pour it into the Filter Pan, NOT into the bleach dispenser.

- Do NOT overflow — Avoid splashing. Undiluted bleach may cause fabric damage.

- Pour measured amount of liquid bleach directly into the BLEACH DISPENSER.

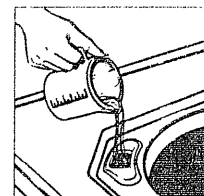

- Maximum recommended amount of liquid bleach . . .
 - Full wash: 1 1/4 cup (310 ml) liquid.
 - Small wash: 2/3 cup (170 ml) liquid.



WHAT HAPPENS IN EACH CYCLE

All times are approximate.

REGULAR CYCLES

Provides longer washing time for most cottons, linens, work and play clothes.

EXTRA RINSE

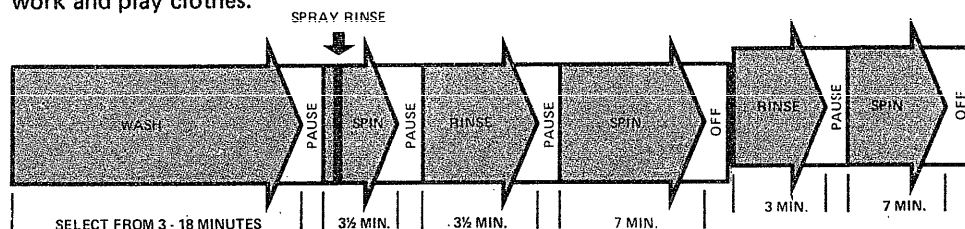
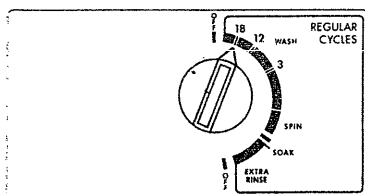


TOTAL CYCLE TIME:

- Without Extra Rinse: Varies from 21 to 36 minutes plus fill times depending on selected wash time.
- With Extra Rinse: Varies from 36 to 51 minutes plus fill times depending on depending on selected wash time.

SOAK CYCLE

May be used with most soaking aids to loosen deeply embedded soils or stains.

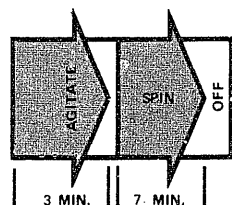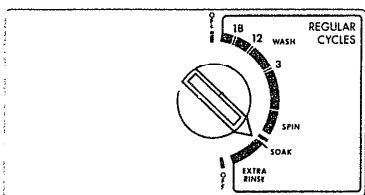

TOTAL CYCLE TIME: 11 minutes plus fill time.



- Cold water will be provided automatically in the SOAK CYCLE.
- If a Hot or Warm soak is desired, set Wash Temp Switch and turn Cycle Selector to "18 Min."
- After washer fills and begins to agitate, push in Cycle Selector knob and turn to "SOAK".
- Pull out Cycle Selector knob to complete the cycle.

For an EXTENDED SOAK

- Allow washer to fill and agitate for a few minutes to dissolve soaking agent, then —
- Push in Cycle Selector knob to stop washer and allow to soak for as long as desired.
- After desired soak period, pull out Cycle Selector knob to complete the cycle.

PERM PRESS CYCLES



Cool-down spray rinse to minimize the setting of wrinkles.

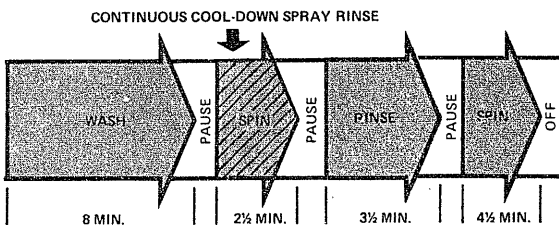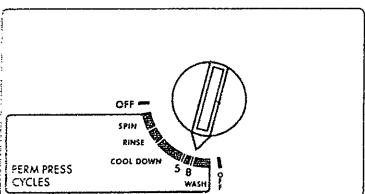

TOTAL CYCLE TIME: 23 minutes plus fill time.

POLYESTER KNITS CYCLE

A combination of agitation and soak for more effective polyester knit laundering.

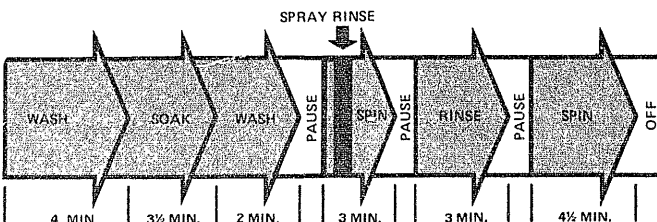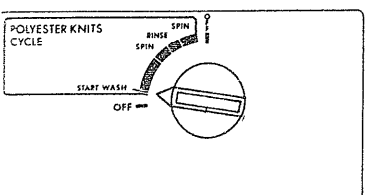

TOTAL CYCLE TIME; 24 minutes plus fill time.

GENERAL ELECTRIC COMPANY

LOUISVILLE, KENTUCKY 40225