

Portable Washing Machine

User's manual

Haier

This manual is for
HWM10-01


- Please read this manual carefully before using.
- Retain it for future reference.

The Haier logo consists of the word "Haier" in a white, sans-serif font, centered within a dark gray square background.



Contents
 
| | |
|-------------------------------------|---|
| ● Names of the parts..... | 1 |
| ● Safety precautions | 2 |
| ● Installation and adjustment | 4 |
| ● Preparation before washing | 5 |
| ● Process washing..... | 6 |
| ● Disposal after washing | 8 |
| ● Trouble shooting | 8 |
| ● Packing list *Specification..... | 9 |

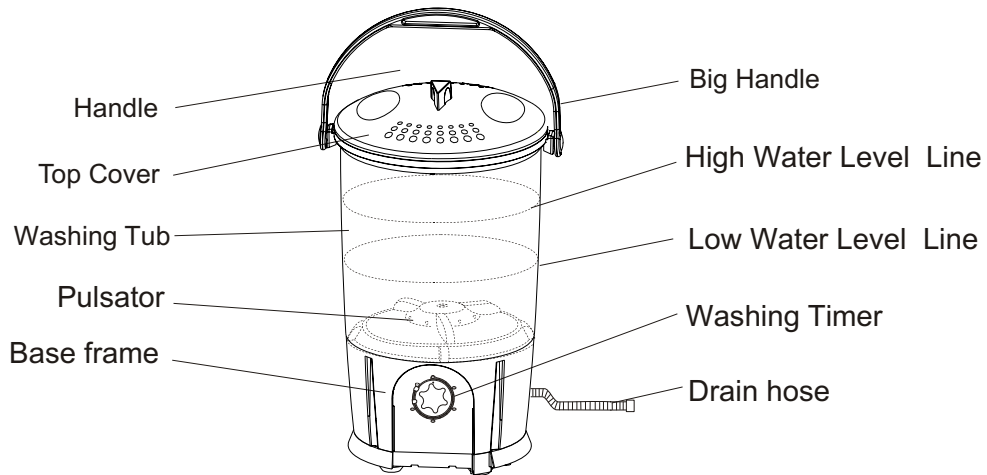Names of the parts



Meaning and description of the symbols

| | |
|---|---|
| <p>Warning sign</p>  | <p>Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.</p> |
| <p>Forbidden sign</p>  | <p>Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of the user.</p> |

Safety precautions

Please insert the power cord into special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.

 
The power cord plug should be convenient to be plugged in or plugged out with hand while the washing machine runs normally. Be sure to pull the plug out and close the water tap when the machine is idle, when moving the machine, or when cleaning the machine. Do not use wet hand to insert or pull out the power plug.

Do not damage the power cord, bend, extend, twist, bind or alter it by force. Do not press or nip it with weight. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Keep the pin of the power plug clean, if the power plug is polluted with dust, please wipe with dry cloth carefully. If the power cord or the power plug is bad, to avoid risk it is required to have it replaced by the technicians of our special shop or the after-sale service department.


Do not wash water-proof laundries like the raincoat, bike covers etc.



Do not let the machine share one receptacle with other electric appliances. If the power plug is damaged, or the plugging into the receptacle is loose, do not use the plug any more.

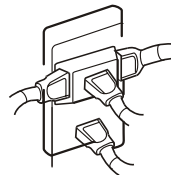

 Do not put the machine at damp place like the bathroom. Never wash it with water. Not put wet laundries on the control panel.

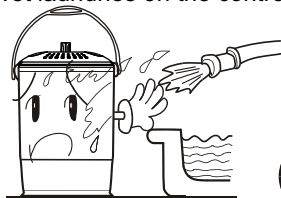

Do not use water hotter above 50 C.



Safety precautions

Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. Do not let the children climb the washing machine.



 
Do not decompose, repair or alter the machine by yourself.




Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.




Do not wash laundries with volatile materials (such as thinner, petrol etc.)

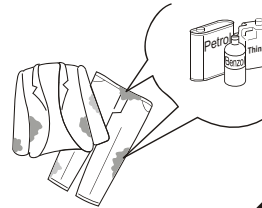

 The handicapped or children without care shall not use the machine.

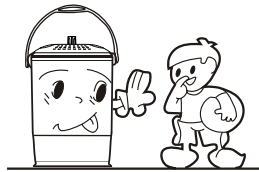

 Keep the machine away from direct sunlight and heat source like the heater.

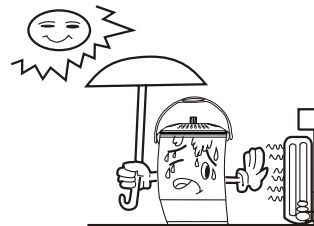


Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important to your security and correct operating the machine.


Usage of the drain hose

The drain hose shall drain smoothly

 
1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth, and cost such long time that the machine may stop at mid way.

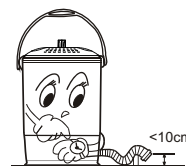

 2. Do not trample or press the drain hose.

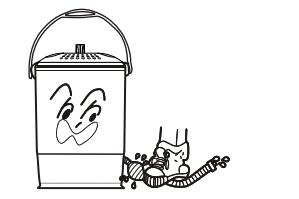

 3. Do not lengthen or cut down the drain hose.

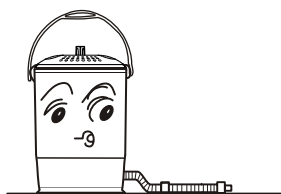


Adjust the installation position

The largest allowed slope of the shank base of the machine is 2° . The slanting or rough ground will result in unstable running or stoppage of the machine, Please adjust it.

- Confirm it's horizontal :

 Hang the lead line to check if it is horizontal

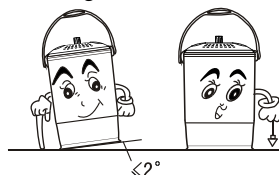

How to use the whitener

- Fill water to decided level. Dilute the whitener with container. Pour it slowly into the washing tub.
- Avoid using whitener on laundries with color or pattern as they are prone to lose color.
- The whitener shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before use.







How to use the washing powder

- Direct dissolved in the machine
 - 1.Fill some water.
 - 2.Add the power. Run for 30 seconds to dissolve it completely.
 - 3.Put in the laundries. Select suitable water level.
- The instant dissolving of the washing powder:
 - 1.Prepare warm water of 30°C and a container.
 - 2.Add the powder while stirring to fully dissolve it.
- It is suggested not to use high sudsing detergent.
- Washing powder with poor quality or long time storage maybe caked.

Preparation before washing

Pay attention to followings before washing the laundries

| | | | | |
|--|--|--|--|--|
| <p>Confirm if there's special requirement for the laundries.</p> | <p>Clear the pocket. Take out the coins, sand, hairpins etc.</p>  | <p>Fasten the buttons and zippers.</p>  | <p>The quantity of the laundries shall not exceed the rated value. The big laundries like the jeans shall be put in loosely.</p>  | <p>When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.</p>  |
| <p>A.Please check if the laundries are applicable for washing. b.Separate those not colorfast from other laundries. c.For laundries not water absorbing, please put them into water with hands. d.For laundries with much soil, please remove the soil first. You can add detergent on the part with serious soil directly. It is much easier to remove the soil by that mean. e.For laundries likely to get lint ball or with long fiber, please first turn the inside out before putting them into the water. F.Do not put the laundries polluted with chemicals directly into the washing machine.</p> | | | | |

Process washing


1.Put into the laundry (under700g) and detergent, then fill the water needed.

The selection of detergent quantity

| Detergent quantity(kg) | Water level /Water quantity | Standard usage quantity | |
|------------------------|-----------------------------|-----------------------------|-----------------------|
| | | Concentrated washing powder | Common washing powder |
| under700g | High water level about 9L | About 7.5g | About 12g |
| Under300g | Low water level about 5L | About 4g | About 7g |



Attention:

 - 1.Confirm that the drain hose is properly hanged before fill water, or the water will flow through the drain hose.
- 2.After add the water, the water level must be under the high line, so as to avoid splashing of water

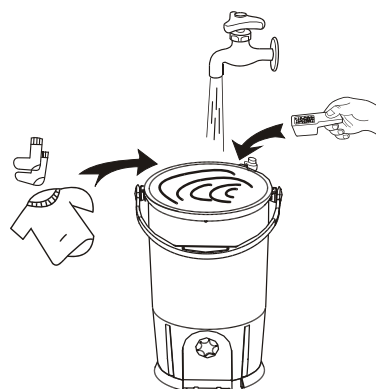

Attention:

  Do not sprinkling the water to the base frame.

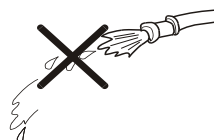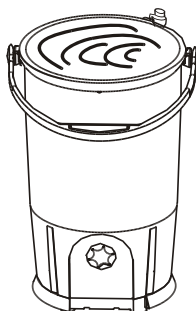


Process washing

2. Close the top lid

3. Connect the powerline

 
Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.

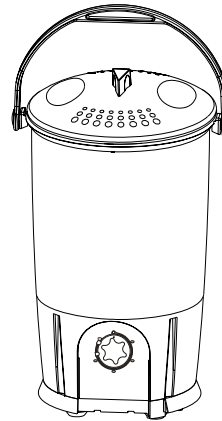

4. Set the washing duration


Select washing duration depending on the laundry

| Laundry | Washing Duration(min) |
|-----------------------------------|-----------------------|
| Silk fabric(thin laundry) | About 2~4 |
| Knitted fabric/chemical fabric | About 3~6 |
| Cotton, blending or linen fabrics | About 8~10 |
| Very dirty or heavy laundry | About 10~13 |

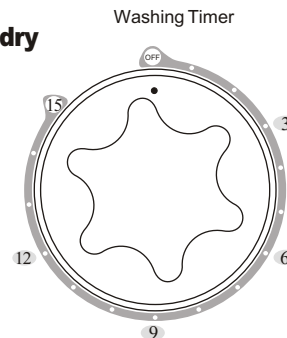 



 5. Finish washing

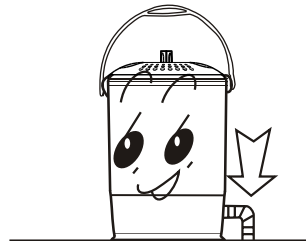- The tumbler stops revolving. Level the drain hose down to let the waste water out.



Disposal after washing

- Please first pull off the power plug from the receptacle before cleaning.

| | |
|--|---|
| <ul style="list-style-type: none"> ● After washing, pull off the power plug, hang up the power cord. ● Do not store water in the washing machine for a long period. Drain the water completely after each using. ● Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then let the machine dry. ● Close the top lid, then place the machine well. |  |
| <ul style="list-style-type: none"> ● If the cabinet is dirty, wipe it with wet cloth ● If the cabinet is very dirty, wipe it with neutral detergent. ● Do not flush it directly with water. |  |

Trouble shooting

The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair.

| Phenomena | How to settle |
|---|---|
| The machine does not act | <ul style="list-style-type: none"> ● Is there power failure? — Use it when the power is on. ● Is the power plug loose? — Insert the power plug tightly. |
| There's abnormal sound inside the machine | <ul style="list-style-type: none"> ● Is the machine slanting? — Level the machine properly. ● Are there some metal foreign bodies in a tub? — Remove the metal foreign bodies |



Packing list

| Name | Quantity | Storage position |
|----------------------------|----------|---------------------------|
| ● User's manual | ● One | ● Inside the document bag |
| ● Portable Washing machine | ● One | |

Specification

| | |
|------------------------------------|---|
| Water level/Water quantity (about) | 9L/High Water Level 5L/Low Water Level |
| Rated Voltage | 127V~ |
| Rated Frequency | 60Hz |
| Rated Wash power | 90W |
| Rated Current of Fuse | 5A |
| Water Injection pressure | 0.03MPa ~ 0.78MPa |
| Rated washing Capacity | 0.7kg |

Made in China