SONY

3-220-493-11 (1)



Operating Instructions Manual de instrucciones (no verso)

EMK-01

Sony Corporation © 2000 Printed in Philippines

Notice to Users

2000 Sony Electronics Inc. All rights reserved. This manual and the software described herein, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

SONY ELECTRONICS INC. PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTBILITY OR FITNESS WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY ELECTRONICS INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL. THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF

Sony Electronics Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate usage licens agreement

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Sony, eMarker, and the eMarker logo are trademarks of Sony Corporation. Windows and the Windows 98 logo are registered trademarks of Microsoft Corporation.

All other trademarks are trademarks of their respective owners.

SONY_® EMK-01 FC Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

If you have any questions about this product, go to the eMarker web site:

Declaration of Conformity Trade Name[,] SONY

Responsible Party: Sony Electronics

the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

WARNING

System

required:

faster)*

greater)*

• USB port

greater

Internet browser

* Recommended values

Quick glance

Requirements

• IBM-compatible PC

space (5MBytes)*

To use eMarker, the following are

– Pentium 133 MHz (200 MHz or

- 32MBytes of RAM (64MBytes or

- 3MBytes of available hard disk

– SVGA (800 \times 600) (XGA (1024 \times

768))* monitor with 256 colors

- Internet Explorer 4.0 or newer, or

- Netscape Navigator 4.0 or newer

Start by setting up your eMarker.

• U.S.-Version Windows 98 or

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving
- antenna. - Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to
- which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help

CAUTION

CHILDREN. RISK OF CHOKING IF SWALLOWED. BATTERY MAY CAUSE DEATH IF SWALLOWED. DO NOT USE WHILE DRIVING OR

KEEP OUT OF REACH OF SMALL

OPERATING DANGEROUS EQUIPMENT. ALWAYS USE IN A SAFE ENVIRONMENT.

Inserting a battery

1 Turn to open the battery compartment



2 Place the supplied CR2025 battery with the + side facing upward.



3 Close the lid.



Note

All your eMarks will be erased when you open the battery compartment. Be sure to upload your eMarks to the eMarker web site before opening the lid.

When to replace the battery

Under normal conditions of use, the battery will last approximately 6 months. When the battery becomes weak, the LCD indications become dimmer. Replace the battery with a Sonv CR2025 or Duracell DL-2025 lithium battery. Use of another battery may present a risk of fire or explosion.

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

Preparations

1 Connect the eMarker Cradle to the USB port of your PC.



2 Download and install the eMarker software. Follow the downloading and installing procedure on the eMarker web site http://www.eMarker.com.



3 Take off the cap of the eMarker.



4 Plug the eMarker into the eMarker Cradle. In some cases, you can plug the eMarker directly into the USB port on your PC as well.



- **5** Your PC will recognize the eMarker and install the device driver automaticaly.
- 7 Unplug the eMarker from the eMarker Cradle.

How to use the eMarker

1 Press the e button when you hear a song that you like on one of your registered radio stations/TV channels. A black circle appears on the display in falling down "Sand Clock" animation movement

To eMark a song from a registered radio station Press the e button once

To eMark a song from a registered TV channel Press the e button twice. "TV" flashes on the lower display of the eMarker. Note Be sure to check the availability of this feature on the web site

To eMark a song that you heard on a radio station outside your normal listening area Hold the e button pressed for two seconds. "ROAM" flashes on he lower display of the eMarker. Note

Be sure to check the availability of this feature on the web site

- 2 Turn on your PC and establish internet connection.
- **3** Take off the cap of the eMarker.
- **4** Plug the eMarker into the eMarker Cradle.
- **5** Continue the operation following the instructions on your PC.

Note

The eMarker can hold up to 10 eMarks at once. If you try to register an 11th eMark, all 10 black circles will flash to indicate that it is full and the 11th eMark will not be registered.

To cancel an eMark

Press the CANCEL button on the rear of the eMarker with the tip of a pen or sharp object. Each time you press the CANCEL button, an eMark is canceled from the latest one entered, and one black circle on the display disappears.

6 Resister your eMarker. Follow the registering procedure on the eMarker web site.

Be sure to attach the cap to the eMarker after use.











http://www.eMarker.com.

Model No.: EMK-01

Address: 1 Sonv Drive Park Ridge, NJ 07656

Telephone No.: (201) 930-6972

This device complies with Part 15 of cause undesired operation.



Step 1

Insert a battery

Step 2

Step 3

the web site.

Take your eMarker to where you listen to the radio and eMark vour favorite songs by pressing the e button on your eMarker while listening to radio. During housework • In a commuter train • On a street

Go home and check out the

songs that you have eMarked on

Windows 98 SE (Second Edition) • Internet access (e.g. modem or Ethernet) with speed of 28.8kbps or

Precautions

- The eMarker is a precision instrument. Never disassemble.
- Keep the eMarker away from extremely high temperatures (above 60°C [140 °F]) and humidity. Never leave the eMarker inside the
- When using outdoors, never let the eMarker become wet with rain or salt water.
- When the eMarker or the connector become soiled, wipe them with a dry cloth.
- Do not pull the cable when disconnecting the cable of the eMarker cradle from your PC. Always grip the plug when disconnecting to prevent damage
- Do not try to pull the cap off without pushing the two buttons on the cap.

Troubleshooting

You cannot eMark.

- The battery is not set properly. \rightarrow Set the battery properly.
- Ten eMarks have already been made
- \rightarrow Cancel the eMarks and try eMarking again or upload your eMarks to the web site to clear the memory in the terminal.

The eMarker application will not launch automatically.

- · Installation failed or the shortcut for the application has been erased.
- → Create a shortcut for the tsr.exe file in the folder in which the application is installed, and move it to the Startup Folder by going through Start Menu and selecting Program Folder.
- The tsr.exe file for the application may be erased.
- \rightarrow Download and install the application again.

Nothing happens on your PC when you plug the eMarker into the eMarker Cradle.

- The "e" logo does not appear on the Task Tray (at lower right-hand corner of screen).
- \rightarrow Launch the eMarker application by going through the folder in which the application is installed
- Check to see if your USB port is active by switching it with another device (e.g. a USB mouse).

If the above-mentioned remedies do not help improve the situation, go to the eMarker web site for more information

(http://www.eMarker.com).

Specifications

Supplied accessories Operating Instructions (1) eMarker cradle (1) CR2025 lithium battery (1)

eMarker (EMK-T01)

Power requirement CR2025 lithium battery Battery life Approx. 6 months (assuming eMarking ten times a day, including one data transfer) Output USB connector Dimensions Approx. 1 $\frac{5}{16} \times 3 \frac{3}{4} \times \frac{21}{32}$ in. $(32.4 \times 94.2 \times 16.1 \text{ mm}) (w/h/d)$ Mass Approx. 0.9 oz. (26 g)

eMarker cradle (EMK-C01)

Input/output USB connectors Dimensions Approx. $3 \frac{1}{4} \times \frac{1^3}{16} \times \frac{2^5}{8}$ in.

- $(79.6 \times 28.6 \times 64.6 \text{ mm}) (w/h/d)$ Mass
- Approx. 2.8 oz. (80 g)

ADVERTENCIA

Este equipo ha sido probado y se ha comprobado que cumple con los límites para dispositivos digitales de Clase B. de acuerdo con la Parte 15 de las Normas de la FCC. Estos límites han sido diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede radiar energía de radiofrecuencia v. si no se instala v utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las radiocomunicaciones. Sin embargo, no existe ninguna garantía de que tales interferencias no se produzcan

en una instalación particular. Si este equipo causa interferencias perjudiciales, lo cual podrá determinarse desconectando y volviendo a conectar su

alimentación, se ruega que el usuario corrija las interferencias tomando una o más de las medidas siguientes: - Reorientación o reubicación de la

- antena receptora - Aumento de la separación entre el
- equipo y el receptor.
- Conexión del equipo a un tomacorriente diferente del utilizado por el receptor.
- Solicitud de ayuda al proveedor o a un técnico de radio/televisión experimentado.

PRECAUCIÓN

MANTENGA ESTA UNIDAD FUERA DEL ALCANCE DE NIÑOS PEQUEÑOS. SI SE TRAGA LA PILA, EXISTE EL RIESGO DE MUERTE.

NO UTILICE ESTA UNIDAD MIENTRAS CONDUZCA O CUANDO MANEJE EQUIPOS PELIGROSOS. UTILÍCELA SIEMPRE EN UN ENTORNO SEGURO.

Requisitos del sistema

Para utilizar eMarker se requiere lo signiente:

- PC compatible con IBM
- Pentium de 133 MHz (200 MHz o de mayor velocidad)* - 32 Mbytes de RAM (64 Mbytes o
- más)* - 3 Mbytes de espacio disponible en
- el disco duro (5 MB)* - Monitor SVGA (800 x 600) (XGA
- (1024 x 768))* con 256 colores
- Windows 98 versión U.S. o Windows 98 SE (Second Edition)

 Puerto USB • Acceso a Internet (p. ej., módem o

Ethernet) con velocidad de 28,8 kbps o más

- Examinador de Internet - Internet Explorer 4.0 o más reciente. o
- Netscape Navigator 4.0 o más reciente

* Valores recomendados

Vista rápida





Inserción de la pila Preparativos

1 Gire la tapa de la pila con una moneda, etc. para abrir el compartimiento de la



2 Inserte la pila CR2025 suministrada con la cara + hacia arriba.



3 Cierre la tapa.



Todas sus "eMarcas" se borrarán cuando abra el compartimiento de la pila. Cerciórese de cargar sus "eMarcas" en el sitio Web de eMarker antes de abrir la tapa

Cuándo reemplazar la pila

En condiciones normales de utilización, la pila durará aproximadamente 6 meses. Cuando la pila se debilite, las indicaciones del visualizador de cristal líquido serán difíciles de ver. Reemplace la pila por otra de litio CR2025 Sony o DL-2025 Duracell. La utilización de otra pila podría suponer el riesgo de incendio o explosión

ADVERTENCIA

La pila puede explotar si la maltrata. No recargue, desarme, ni tire la pila al fuego

1 Conecte el soporte del eMarker al puerto USB de su PC.



2 Descargue e instale el software del eMarker.

Siga el procedimiento de descarga e instalación del sitio Web de eMarker http://www.eMarker.com.

Nota Si no puede ver el logotipo "e" en la bandeja de tareas (de la esquina inferior derecha) después de la instalación, ejecute el software pasando a través de los menús Start, Programs, y eMarker

3 Quite la tapa del



4 Enchufe el eMarker en el soporte para el mismo.

En algunos casos, podrá enchufar el eMarker directamente en el puerto USB de su PC.



- 5 Su PC reconocerá el eMarker e instalará el controlador del dispositivo automáticamente.
- **6** Registre su eMarker. Siga el procedimiento de registro del sitio Web de eMarker.
- 7 Desenchufe el eMarker del soporte del mismo. Cerciórese de colocar la tapa en el eMarker después de haberlo utilizado

Forma de utilizar el eMarker

1 Presione la tecla e cuando oiga una canción que desee de una de sus emisoras de radiodifusión/canal de televisión que haya registrado. En el visualizador aparecerá un

círculo negro con movimiento descendente de "reloj de arena".

Para "eMarcar" una canción de una emisora de radiodifusión registrada Presione una vez la tecla e.

Para "eMarcar" una canción de un canal de televisión registrado Presione dos veces la tecla e. En el visualizador inferior del eMarker parpadeará "TV". Nota Cerciórese de comprobar la

disponibilidad de esta función en el sitio Web.

Para "eMarcar" una canción de una emisora de radiodifusión que oiga fuera de su área normal de escucha Mantenga presionada la tecla e durante dos segundos. En el visualizador inferior del eMarker parpadeará "ROAM". Nota

Cerciórese de comprobar la disponibilidad de esta función en el sitio Web.

- **2** Conecte la alimentación de su PC y establezca la conexión con Internet.
- **3** Quite la tapa del eMarker.
- 4 Enchufe el eMarker en el soporte del mismo.
- **5** Continúe la operación siguiendo las instrucciones de su PC.

Nota

El eMarker podrá almacenar hasta 10 "eMarcas" a la vez. Si trata de registrar la 11.ª "eMarca", todos los 10 círculos negros parpadearán para indicar que la memoria está llena y que tal "eMarca" no se registrará.

Para cancelar una "eMarca"

Presione la tecla CANCEL de la parte posterior del eMarker con la punta de un bolígrafo o un objeto puntiagudo. Cada vez que presione la tecla CANCEL, se cancelará una "eMarca" desde la última introducida, y desaparecerá un círculo negro del visualizador

Precauciones

- El eMarker es un instrumento de precisión. No lo desarme nunca.
- Mantenga el eMarker alejado de temperaturas extremadamente altas (más de 60°C) y de la humedad. No deje nunca el eMarker en el interior de un automóvil.
- Cuando utilice el eMarker en exteriores, no permita que se humedezca con la lluvia ni con el agua del mar.
- Cuando el eMarker o su conector se ensucie, frótelo con un paño seco.
- Para desconectar el eMarker de su PC, no tire del cable de su cable Para evitar daños, tire siempre del
- conector. • No intente tirar de la tapa sin presionar los dos botones de la misma

Solución de problemas

No es posible "eMarcar". • La pila no está insertada

- correctamente
- → Insértela adecuadamente. • Ya ha realizado 10 "eMarcas".
- → Cancele las "eMarcas" v trate de volver a realizar otras o descargue las "eMarcas" del sitio Web para borrar la memoria del terminal

La aplicación del eMarker no se eiecuta

automáticamente.

- La instalación falló o el acceso directo para la aplicación se borró.
- \rightarrow Cree un acceso directo para el archivo tsr.exe en la carpeta en la que instaló la aplicación, y muévalo hasta la carpeta Startup pasando a través de Start Menu y seleccionando Program Fólder.
- El archivo tsr.exe para la aplicación puede haberse borrado.
- → Vualva a descargar e instalar la aplicación.

No sucede nada en su PC al enchufar el eMarker en su soporte.

- El logotipo "e" no aparece en la bandeja de tareas (de la esquina inferior derecha de la pantalla).
- → Ejecute la aplicación del eMarker pasando a través de la carpeta en la que haya instalado la aplicación.
- Compruebe si su puerto USB está activo conectándole otro dispositivo (p. ej., un ratón USB).

Si las soluciones mencionadas no ayudan a mejorar la situación, busque más información en el sitio Web de eMarker (http://www.eMarker.com).

Especificaciones

Accesorios suministrados Manual de instrucciones (1) Soporte del eMarker (1) Pila de litio CR2025 (1)

eMarker (EMK-T01)

Alimentación Pila de litio CR2025 Duración de la pila Aprox. 6 meses (suponiendo que se realice diez "eMarcas" al día, incluyendo una transferencia de dtos) Salida Conector USB Dimensiones Aprox. 32,4 x 94,2 x 16,1 mm (an/al/prf) Masa Aprox. 26 g

Soporte del eMarker (EMK-C01)

Entrada/salida Conectores USB Dimensiones Aprox. 79,6 x 28,6 x 64,6 mm (an/al/prf) Masa Aprox. 80 g