 


Panasonic[®]

Operating Instructions

5.8 GHz Expandable Digital Cordless Handset

Model No. **KX-TGA551**

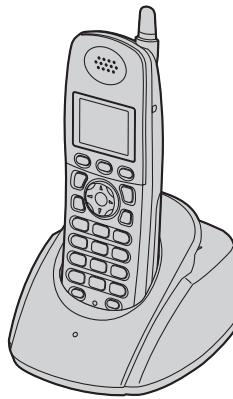

Thank you for purchasing a Panasonic cordless telephone.

This handset is an accessory handset for use with Panasonic base units KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576, and KX-TG5583. You must register this handset with your base unit before it can be used.

Charge the battery for 6 hours before initial use.

Please read these Operating Instructions before using the unit and save for future reference.

PQQX14421ZA DM0205MK1045

Table of Contents

Preparation

Accessory information	3
Connections	3
Battery installation	4
Battery charge	4
Registration	5
Changing the display language	5
Belt clip	5
Headset (optional)	6
Wall mounting	6

Controls and Operation

Controls	7
Operation	8
Using the navigator key	8
Using the soft keys	8
Guide to programming	9
Differences between the handsets included with the KX-TG5561, KX- TG5566, KX-TG5571, KX-TG5576, and KX-TG5583	9

Useful Information

FCC and other information	10
Specifications	11
Customer services	12
Warranty	13

Preparation


Accessory information

To order replacement accessories, call 1-800-332-5368.

TTY users (hearing or speech impaired users) can call 1-866-605-1277.

Included accessories	Order number	Quantity
Charger	PQLV30030ZM	1
AC adaptor for charger	KX-TCA1-G	1
Battery	HHR-P104	1
Handset cover	PQYNTG5432MR	1
Belt clip	PQKE10396Z2	1

Connections

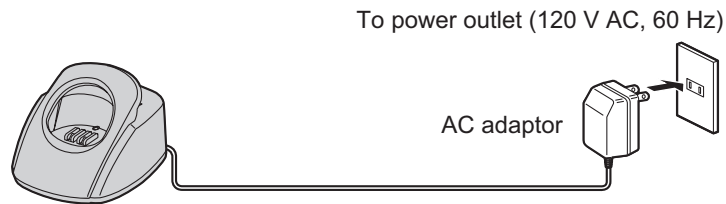


Note:

- Use only the included Panasonic AC adaptor KX-TCA1.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.


Preparation

Battery installation

 - 1 Insert the battery (①), and press it down until it snaps into the compartment (②).

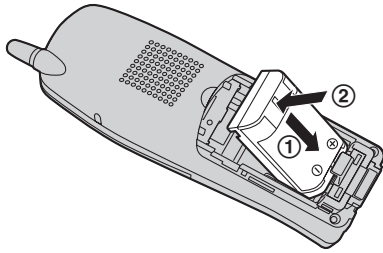

- 2 Close the handset cover.

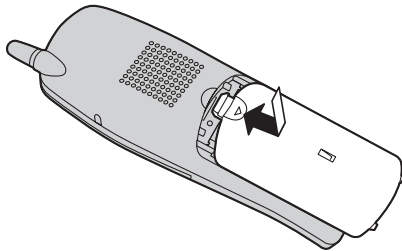 

Attention:

 


A nickel metal hydride battery that is recyclable powers the product you have purchased.
Please call 1-800-8-BATTERY for information on how to recycle this battery.

Battery charge

Place the handset on the charger for **6 hours** before initial use.

- The unit will beep once, the CHARGE indicator will light, and “Charging” will be displayed.
- “Charge completed” is displayed when the battery has been fully charged. The CHARGE indicator will remain lit.

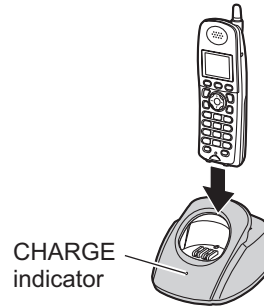


Note:


- To ensure the battery charges properly, clean the charge contacts of the handset and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust, or high humidity.

Recharging the battery

 Recharge the battery when:

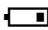- “Recharge battery” is displayed or  flashes on the handset display.
- the handset beeps intermittently while it is in use.

 Note:

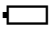- If the battery has been discharged, the handset will display “Charge for 6 HRS” and  when you place the handset on the charger.

Preparation

Battery performance

After your Panasonic battery is fully charged, you can expect the following performance:

Operation	Operating time
While in use (talking)	Up to 5 hours
While not in use (standby)*1	Up to 11 days
While using the clarity booster feature	Up to 3 hours

*1 Handset is off the charger but not in use.

Registration

Register the handset to a KX-TG5561/KX-TG5566/KX-TG5571/KX-TG5576/KX-TG5583 base unit.

Important:

- Charge the battery fully.
- Before registering, make sure the base unit and the other handsets are not being used.
- Have the handset and base unit near each other when registering the handset.

1 Base unit:

Press and hold **[INTERCOM]** until the CHARGE indicator flashes.

- After the CHARGE indicator starts flashing, the rest of the procedure must be completed within 1 minute.

2 Handset:

Press **[OK]** (right soft key), then wait until the handset beeps.

- Registration is complete.
- The handset's extension number (**1** to **8**) will be displayed.

Note:

- To cancel the handset registration, please see your base unit's operating instructions.

 
Changing the display language

- 1 Press **[MENU]**, then press **[#] [1] [1] [0]**.
- 2 Press **[1]** to select English. Press **[2]** to select Spanish.
- 3 Press **[SAVE]** or **[GUARDAR]**, then press **[OFF]**.

Belt clip


You can hang the handset on your belt or pocket using the included belt clip.

To attach the belt clip

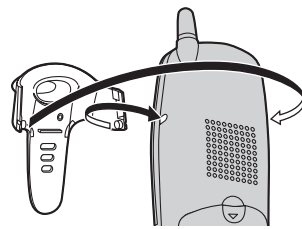

To remove the belt clip

 While pressing the top of the clip (1), pull the right edge in the direction of the arrow (2).

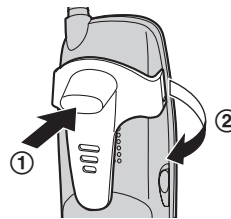


Preparation

Headset (optional)

Connecting an optional headset to the handset allows hands-free phone conversations. Please use only a Panasonic KX-TCA60, KX-TCA86, KX-TCA88, KX-TCA88HA, KX-TCA91, KX-TCA92, or KX-TCA98 headset. See page 3 for ordering information.

 To connect an optional headset to the handset

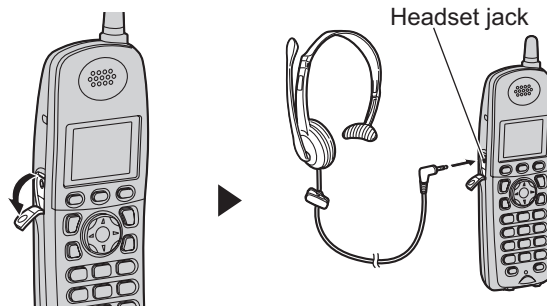


- Model shown is KX-TCA86.

Wall mounting

The charger can be wall mounted, as shown below.

 
- 1 Connect the AC adaptor.
- 2 Drive the screws (not included) into the wall using the wall mount template (see below).
- 3 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.

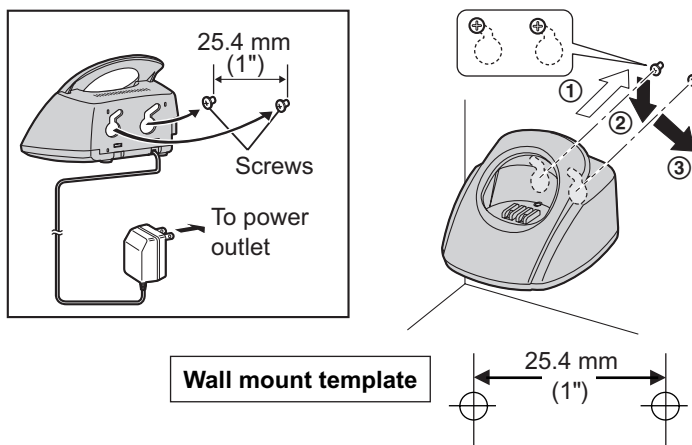

Controls and Operation


Controls

 Handset

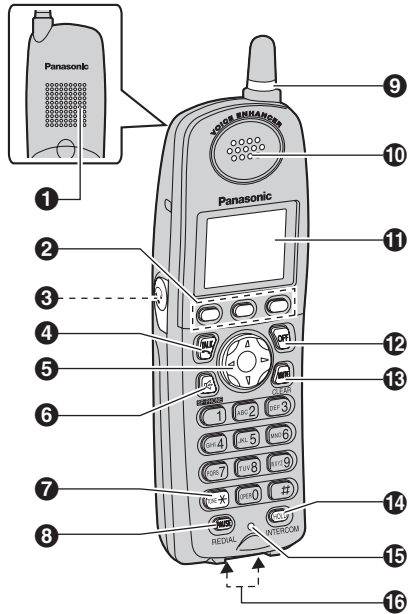

- 1 Speaker
- 2 Soft keys
- 3 Headset jack/Audio jack
- 4 [TALK]
- 5 Navigator key
- 6 [SP-PHONE]
- 7 [TONE]
- 8 [REDIAL] [PAUSE]
- 9 Ringer indicator
Message indicator
- 10 Receiver
- 11 Display
- 12 [OFF]
- 13 [CLEAR] [MUTE]
- 14 [INTERCOM] [HOLD]
- 15 Microphone
- 16 Charge contacts

 Charger

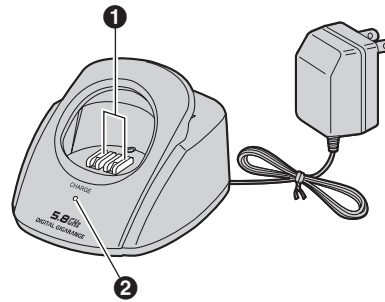

- 1 Charge contacts
- 2 CHARGE indicator

 
 
Controls and Operation

Operation

After registering this handset, refer to the operating instructions included with your KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576, or KX-TG5583 for details about operating the handset. Please note that the KX-TGA551 has certain features which differ from the handset included with your base unit. Read page 8 and page 9 beforehand.

Using the navigator key

This handset features a navigator key. The navigator key works the same as the joystick found on the handset included with your KX-TG5561, KX-TG5566, KX-TG5571, or KX-TG5576. Pressing each of the 4 areas on the navigator key indicated by the arrows (▲, ▼, ◀, and ▶) performs the same operation as pushing the joystick up, down, left, and right.

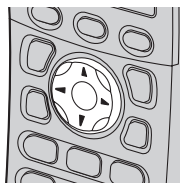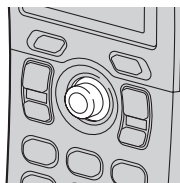KX-TGA551/ KX-TG5583 navigator key	KX-TG5561/ KX-TG5566/ KX-TG5571/ KX-TG5576 joystick
	

Use the navigator key as follows.

 
- To select the receiver or speaker volume, press [▲] and [▼].
- To scroll to a menu item shown on the display, press [▲], [▼], [◀], and [▶].
- To select a menu item, you can press [▶].
- To go back to the previous menu, you can press [◀].
- To move the cursor to right and left, press [◀] and [▶].

- To scroll through the caller list and phonebook, press [▼] and [▲].
- For KX-TG5571, KX-TG5576, and KX-TG5583 users only: To repeat and skip messages, press [◀] and [▶].

Using the soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the function displayed directly above it.

- The functions displayed will vary depending on how you are using the handset and the base unit the handset is registered to.
- When a function does not appear above a soft key, the soft key has no function.

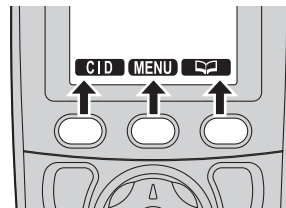

Note:

- When in standby mode, pressing [MENU] reveals the handset's main menu. From here you can access various features and settings.

Controls and Operation

Guide to programming

Available programming functions vary depending on the base unit the handset is registered to.

Please read the operating instructions included with your base unit.

- 1 Press **[MENU]** (middle soft key).
- 2 Press **[▼]**, **[▲]**, **[←]**, and **[→]** to scroll through the menu.
- 3 Press **[SELECT]** when the desired menu item is selected.
- 4 Press **[▼]** and **[▲]** to scroll through the menu.
- 5 Press **[SELECT]** or **[→]** when the desired menu item or setting is displayed.
- 6 Press **[SAVE]**, then press **[OFF]**.

Differences between the handsets included with the KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576, and KX-TG5583

The KX-TGA551 has certain features which differ from the handset included with your base unit, as indicated in the table below.

Feature	KX-TGA551 KX-TG5583	KX-TG5561 KX-TG5571	KX-TG5566 KX-TG5576
Display type	Color	Monochrome	Color
Display size	1.4 inch	1.6 inch	1.6 inch
Control type	Navigator key	Joystick	Joystick
USB-support ^{*1}	–	–	●
Picture ID	–	–	●
Picture download feature	–	–	●
Song record feature	●	●	●
Song download feature	–	–	●
Wallpaper	●	–	●
Wallpaper download feature	–	–	●
Memory status display	–	–	●

*1 USB-support allows you to connect the handset to your PC and send pictures and songs from your PC to the handset, as well as create and edit phonebook entries using your PC. This feature is not available with KX-TGA551 and KX-TG5583.

Useful Information

FCC and other information

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning:

This product complies with FCC radiation exposure limits set forth for an uncontrolled environment. To comply with FCC RF exposure requirements, the handset unit may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

Responsible party:

Panasonic Corporation of North America
One Panasonic Way,
Secaucus, New Jersey 07094
Phone number: 1-800-211-PANA (7262)

Useful Information

CAUTION:

Installation

- Operating near 5.8 GHz electrical appliances may cause interference. Move away from the electrical appliances.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the unit and is easily accessible.
- To prevent the electric shock, use only the audio cable with the transformer included with your base unit when connecting the unit to an audio device.

Battery

To reduce the risk of fire or injury to persons, read and follow these instructions.

- Use only the battery(ies) specified.
- Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery(ies). Do not allow conductive materials such as rings, bracelets or keys to touch the battery(ies), otherwise a short circuit may cause the battery(ies) and/or the conductive material to overheat and cause burns.
- Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

- To prevent the risk of fire or electrical shock, do not expose this product to rain or any type of moisture.
- Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes an unusual noise. These

conditions can cause fire or electric shock. Confirm that smoke has stopped and contact the Panasonic Call Center at 1-800-211-PANA (7262).

Specifications

Handset

Operating environment:

5 °C – 40 °C (41 °F – 104 °F)

Frequency:

5.76 GHz – 5.84 GHz

Dimensions:

Approx. height 173 mm x width 48 mm x depth 33 mm (6¹³/₁₆" x 1⁷/₈" x 1⁵/₁₆")

Mass (Weight):

Approx. 180 g (0.40 lb.)

Power supply:

Ni-MH battery (3.6 V, 830 mAh)

Security codes:

1,000,000

Charger

Operating environment:

5 °C – 40 °C (41 °F – 104 °F)

Dimensions:

Approx. height 71 mm x width 88 mm x depth 100 mm (2¹³/₁₆" x 3¹⁵/₃₂" x 3¹⁵/₁₆")

Mass (Weight):

Approx. 110 g (0.24 lb.)

Power consumption:

Standby: Approx. 0.8 W

Maximum: Approx. 3.2 W

Power supply:

AC adaptor (120 V AC, 60 Hz)

Useful Information

Customer services

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at: 1-800-211-PANA (7262),
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

TTY users (hearing or speech impaired users) can call 1-877-833-8855.

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:
1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)
(Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company
20421 84th Avenue South, Kent, WA 98032
(We Accept Visa, MasterCard, Discover Card, American Express, and
Personal Checks)

TTY users (hearing or speech impaired users) can call 1-866-605-1277.

Service in Puerto Rico

Panasonic Puerto Rico, Inc.
San Gabriel Industrial Park, Ave. 65 de Infantería, Km. 9.5,
Carolina, Puerto Rico 00985
Phone (787)750-4300, Fax (787)768-2910

Useful Information

Warranty

**PANASONIC CONSUMER
ELECTRONICS COMPANY, DIVISION
OF PANASONIC CORPORATION OF
NORTH AMERICA**
One Panasonic Way,
Secaucus, New Jersey 07094

PANASONIC PUERTO RICO, INC.
San Gabriel Industrial Park,
Ave. 65 de Infantería, Km. 9.5,
Carolina, Puerto Rico 00985

**Panasonic Telephone Products
Limited Warranty**

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Parts	Labor
One (1) Year	One (1) Year

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company Customer Servicenter
4900 George McVay Drive Suite B Door #12 McAllen, TX 78503

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

For Limited Warranty service for headsets if a headset is included with this product please call Panasonic Call Center at 1-800-211-PANA (7262).

When shipping the unit carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Useful Information

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicer or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicer. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Useful Information

If you need assistance with setup or operation;

- 1** Visit our website: <http://www.panasonic.com/consumersupport>
- 2** Contact us via the web at: <http://www.panasonic.com/contactinfo>
- 3** Call us at: 1-800-211-PANA (7262)
TTY users (hearing or speech impaired users) can call 1-877-833-8855.

When you ship the product;

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.
- Send the unit to Panasonic Services Company Customer Servicenter, prepaid and adequately insured.
- Do not send your unit to Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono inalámbrico fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.
© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**
One Panasonic Way, Secaucus, New Jersey 07094

 
Panasonic Puerto Rico, Inc.
San Gabriel Industrial Park, Ave. 65 de Infantería, Km. 9.5,
Carolina, Puerto Rico 00985

Panasonic®

Instrucciones de operación

Teléfono Inalámbrico Digital Expandible de 5,8 GHz

Modelo N°. **KX-TGA551**

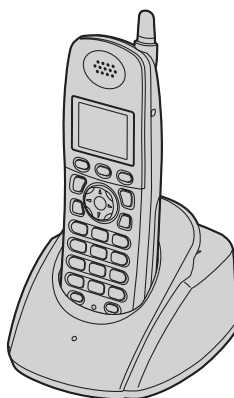

Gracias por adquirir un teléfono inalámbrico Panasonic.

Este auricular es un accesorio para usarse con las unidades base Panasonic KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576 y KX-TG5583. Debe registrar este auricular en su unidad base antes de poder usarlo.

Cargue la batería durante 6 horas antes de utilizar por primera vez.

Lea estas instrucciones de operación antes de usar la unidad y guárdelas para consultarlas en el futuro.

Tabla de Contenido

Preparación

Información de los accesorios	3
Conexiones	3
Instalación de la batería	4
Carga de la batería	4
Registro	5
Para cambiar el idioma de la pantalla	5
Gancho para el cinturón	5
Audífono (opcional)	6
Montaje en la pared	6

Controles y Operación


Controles	7
Operación	8
Uso de la tecla de navegación	8
Para usar las teclas de función	8
Guía de programación	9
Diferencias entre los auriculares que se incluyen en el KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576 y KX-TG5583	9

Preparación**Información de los accesorios**

Para pedir accesorios de repuesto, llame al 1-800-332-5368.

Los usuarios TTY (usuarios con impedimentos auditivos o del habla) pueden llamar al 1-866-605-1277.

Accesorios incluidos	Número de pedido	Cantidad
Carga	PQLV30030ZM	1
Adaptador para corriente (para el cargador)	KX-TCA1-G	1
Batería	HHR-P104	1
Tapa del auricular	PQYNTG5432MR	1
Gancho para el cinturón	PQKE10396Z2	1

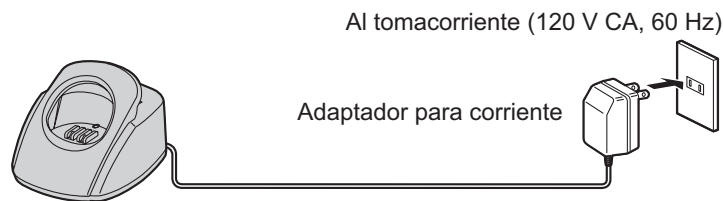 
Conexiones**Nota:**

- Use sólo el adaptador para corriente Panasonic KX-TCA1 incluido.
- Los adaptadores para corriente deben permanecer conectados todo el tiempo. (Es normal que el adaptador se caliente durante su uso.)
- El adaptador para corriente debe estar conectado a un enchufe de corriente orientado verticalmente o en una toma de corriente alterna montada en el piso. No conecte el adaptador para corriente alterna a una toma de corriente montada en el techo, ya que el peso del adaptador puede hacer que se desconecte.


Preparación

Instalación de la batería

 - 1** Inserte la batería (①), y presiónela hasta que encaje en el compartimento (②).

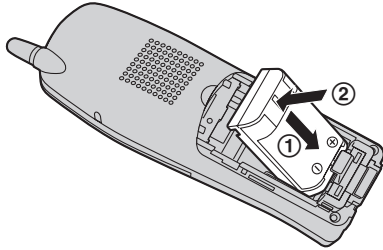

- 2** Cierre la tapa del auricular.

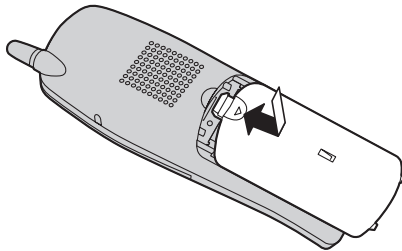 

Carga de la batería

Coloque el auricular en el cargador durante **6 horas** antes de usarlo por primera vez.

- La unidad emitirá un pitido una vez, el indicador de CHARGE se encenderá y aparecerá "Cargando".
- "Carga completada" aparece cuando la batería se ha cargado completamente. El indicador de CHARGE permanecerá encendido.




Nota:


- Para asegurarse de que la batería se cargue correctamente, limpie los contactos de carga del auricular y el cargador con un paño suave y seco una vez al mes. Límpielos con mayor frecuencia si la unidad está sujeta a grasa, polvo o un alto nivel de humedad.

Para recargar la batería

Recargue la batería cuando:

- "Recargar batería" aparece o  se enciende de manera intermitente en la pantalla del auricular.
- El auricular emite bips intermitentes mientras está en uso.

Nota:

- Si la batería se ha descargado, el auricular mostrará "Cargar por 6Hrs." y  al colocar el auricular en el cargador.

Preparación

Rendimiento de la batería

Después de que su batería Panasonic esté completamente cargada, puede esperar el siguiente rendimiento:

Operación	Tiempo de funcionamiento
Mientras esté en uso (hablando)	Hasta 5 horas
Mientras no estén en uso (en espera)*1	Hasta 11 días
Mientras use la función de amplificador de claridad	Hasta 3 horas

*1 El auricular no se encuentra en el cargador pero no está en uso.

Registro

Registre el auricular en una unidad base KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576 o KX-TG5583.

Importante:

- Cargue por completo la batería.
- Antes de registrarlo, asegúrese de que no se estén usando la unidad base y los demás auriculares.
- Tenga el auricular cerca de la unidad base cuando vuelva a registrar el auricular.

1 Unidad base:

Oprima y mantenga oprimido **[INTERCOM]** hasta que el indicador de CHARGE parpadee.

- Después de que el indicador de CHARGE comience a parpadear, debe completar el resto del procedimiento en menos de 1 minuto.

2 Auricular:

Oprima **[OK]** (tecla de función de la derecha), y después espere hasta que el auricular de la unidad emita un pitido.

- El registro ya está completo.
- Aparecerá el nuevo número de extensión del auricular (del **1** al **8**).

Nota:

- Para cancelar el registro del auricular, consulte el manual de instrucciones de la unidad base.

 
Para cambiar el idioma de la pantalla

- 1 Oprima **[MENU]** (el centro del joystick), y después oprima **[#] [1] [1] [0]**.
- 2 Oprima **[1]** para seleccionar inglés. Oprima **[2]** para seleccionar español.
- 3 Oprima **[SAVE]** o **[GUARDAR]**, y después oprima **[OFF]**.

Gancho para el cinturón


Puede colgarse el auricular en el cinturón o bolsillo usando el gancho para el cinturón que se incluye.

Para colocar el gancho para el cinturón

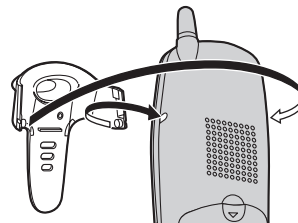

Para quitar el gancho para el cinturón

 Mientras oprime la parte superior del gancho (1), jale la orilla derecha en la dirección de la flecha (2).

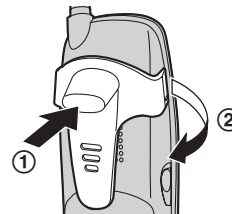


Preparación

Audífono (opcional)

La conexión de un audífono opcional al auricular le permite tener conversaciones telefónicas con las manos libres. Por favor, utilice solamente un auricular KX-TCA60, KX-TCA86, KX-TCA88, KX-TCA88HA, KX-TCA91, KX-TCA92 o KX-TCA98 de Panasonic. Consulte la página 3 para obtener información acerca de cómo hacer un pedido.

 Para conectar un audífono opcional al auricular

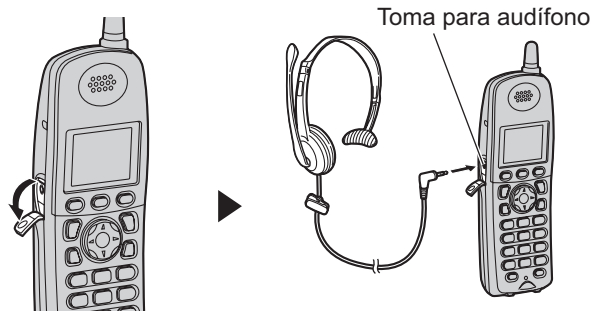


- El modelo mostrado aquí es un KX-TCA86.

Montaje en la pared

El cargador se puede montar en la pared, como se muestra abajo.

 - 1 Conecte el adaptador para corriente.
- 2 Coloque los tornillos (que no se incluyen) en la pared usando la plantilla para montaje en la pared (consulte las instrucciones de abajo).
- 3 Coloque el cargador (1), y después deslícelo hacia abajo (2) y a la derecha (3) hasta que esté seguro.

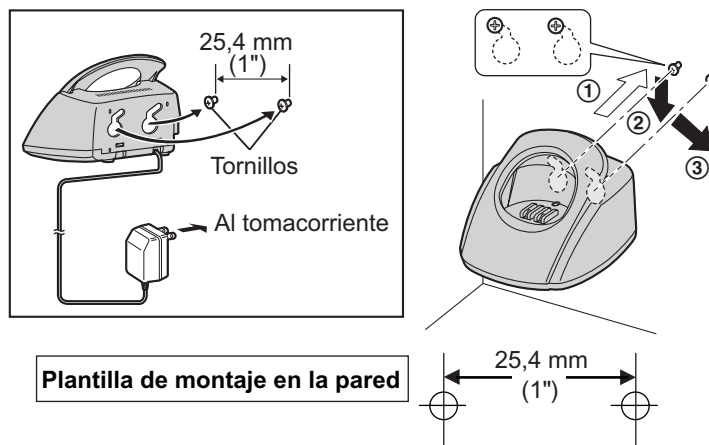


(6)

Controles y Operación

Controles

 
Auricular

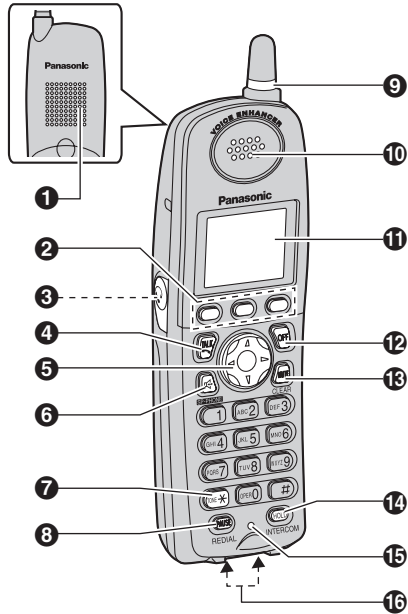

- 1 Altavoz
- 2 Teclas de función
- 3 Toma para audífono/Toma de audio
- 4 [] (HABLAR)
- 5 Tecla navegadora
- 6 [] (ALTAVOZ)
- 7 [*] (TONO)
- 8 [REDIAL] (REMARCADO)
[PAUSE] (PAUSA)
- 9 Indicador de timbre
Indicador de mensaje
- 10 Receptor
- 11 Pantalla
- 12 [OFF] (APAGADO)
- 13 [CLEAR] (CANCELAR, BORRAR)
[MUTE] (SILIENCIADOR)
- 14 [INTERCOM] (INTERCOMUNICADOR)
[HOLD] (RETENCIÓN/EN ESPERA)
- 15 Micrófono

16 Contactos de carga

 Cargador

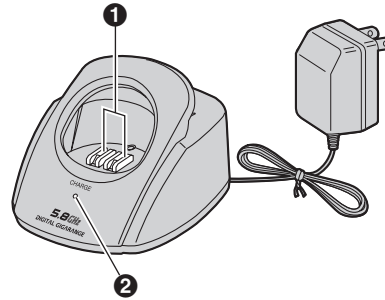

- 1 Contactos de carga
- 2 Indicador de CHARGE (CARGA)

 
 
Controles y Operación

Operación

Después de registrar este auricular, consulte las instrucciones de operación que se incluyen en su KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576 o KX-TG5583 para obtener detalles acerca de cómo operarlo. Observe que el KX-TGA551 tiene ciertas funciones que difieren del auricular que se incluye en su unidad base. Lea las página 8 y página 9 de antemano.

Uso de la tecla de navegación

Este auricular incluye una tecla de navegación. La tecla de navegación funciona igual que el joystick que se encuentra en el auricular que se incluye en su KX-TG5561, KX-TG5566, KX-TG5571 o KX-TG5576. Al oprimir cada una de las cuatro áreas de la tecla de navegación que se indica por medio de las flechas (▲, ▼, ◀, y ▶) se efectúa la misma operación que al oprimir el joystick hacia arriba, abajo, izquierda y derecha.

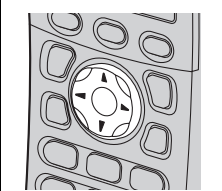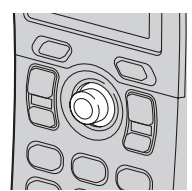Tecla de navegación del KX-TGA551 y KX-TG5583	Joystick del KX-TG5561, KX-TG5566, KX-TG5571 y KX-TG5576
	

Use la tecla de navegación de la siguiente manera.

 
- Oprima [▲] y [▼] para seleccionar el volumen del receptor o del altavoz.
- Oprima [▲], [▼], [◀], y [▶] para desplazarse a un elemento del menú que aparece en la pantalla.
- Puede oprimir [▶] para seleccionar un elemento del menú.

- Puede oprimir [◀] para volver al menú anterior.
- Oprima [◀] y [▶] para mover el cursor a derecha e izquierda.
- Oprima [▼] y [▲] para desplazarse por la lista de personas que llaman y el directorio telefónico.
- Sólo para usuarios del KX-TG5571, KX-TG5576 y KX-TG5583: oprima [◀] y [▶] para repetir mensajes y avanzar al siguiente mensaje.

Para usar las teclas de función

El auricular incluye 3 teclas de función. Al oprimir una tecla de función, puede seleccionar la función que aparece directamente encima de ella.

- Las funciones que se muestran varían dependiendo de la forma en que use el auricular y la unidad base en la que está registrado.
- Cuando una función no aparece encima de una tecla de función, ésta no tiene función.

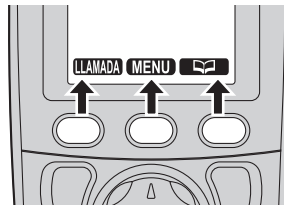

Nota:

- Al oprimir [MENU] en modo en espera se muestra el menú principal del auricular. Desde ahí puede acceder a diversas funciones y configuraciones.

Controles y Operación

Guía de programación

Las funciones de programación disponibles varían dependiendo de la unidad base en la que está registrado el auricular.

Lea las instrucciones de operación que se incluyen en su unidad base.

- 1 Oprima **[MENU]** (tecla de función del medio).
- 2 Oprima **[▼]**, **[▲]**, **[◀]**, y **[▶]** para desplazarse por el menú.
- 3 Oprima **[SELEC.]** cuando seleccione el elemento del menú que desee.
- 4 Oprima **[▼]** y **[▲]** para desplazarse por el menú.
- 5 Oprima **[SELEC.]** o **[▶]** cuando aparezca el elemento del menú o la configuración que desee.
- 6 Oprima **[GUARDAR]** y después oprima **[OFF]**.

Diferencias entre los auriculares que se incluyen en el KX-TG5561, KX-TG5566, KX-TG5571, KX-TG5576 y KX-TG5583

El KX-TGA551 tiene ciertas funciones que difieren del auricular que se incluye en su unidad base, como se indica en la tabla de abajo.

Función	KX-TGA551 KX-TG5583	KX-TG5561 KX-TG5571	KX-TG5566 KX-TG5576
Tipo de pantalla	Color	Monocromático	Color
Tamaño de pantalla	1,4 pulg.	1,6 pulg.	1,6 pulg.
Tipo de control	Tecla navegadora	Joystick	Joystick
Soporte de USB*1	–	–	●
Identificación de imágenes	–	–	●
Función de descarga de imágenes	–	–	●
Función de grabación de canciones	●	●	●
Función de descarga de canciones	–	–	●
Papel tapiz	●	–	●
Función de descarga de papel tapiz	–	–	●
Pantalla de estado de la memoria	–	–	●

*1 El soporte de USB le permite conectar el auricular a su PC y enviar imágenes y canciones desde su PC al auricular, así como crear y editar entradas del directorio telefónico usando su PC. Esta función no está disponible en el KX-TGA551 y KX-TG5583.