

Bluetooth® Audio System


Installation/Connections Instalación/Conexiones




* 4 2 9 6 0 1 8 4 1 * (1)
©2011 Sony Corporation Printed in Thailand

MEX-BT4054U/MEX-BT4050U


1

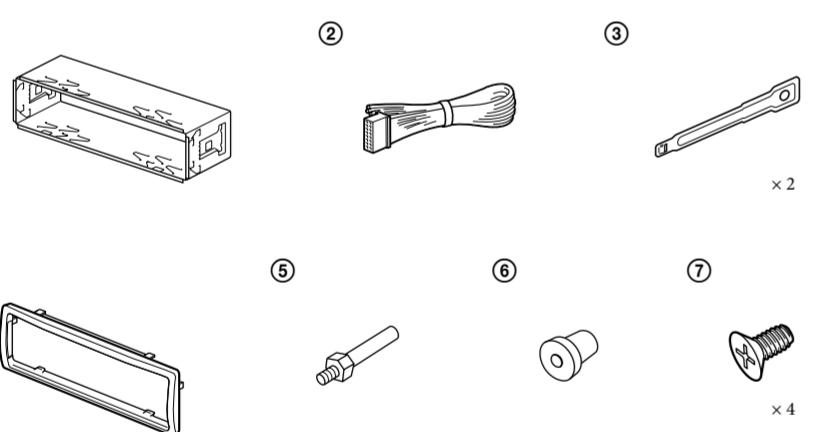


Equipment used in illustrations (not supplied) Equipo utilizado en las ilustraciones (no suministrado)

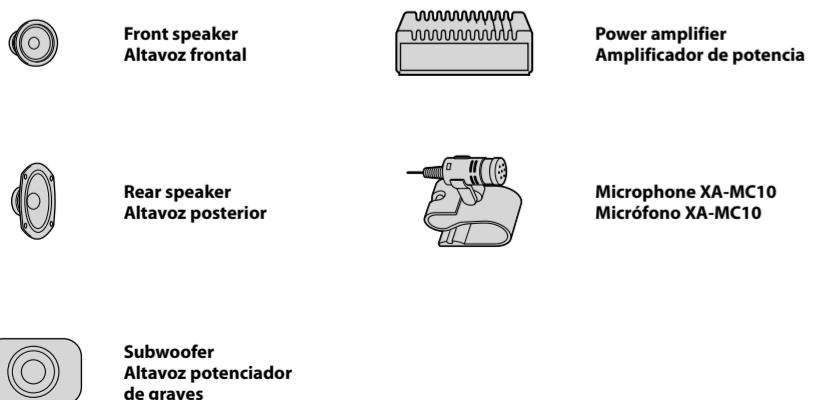

2

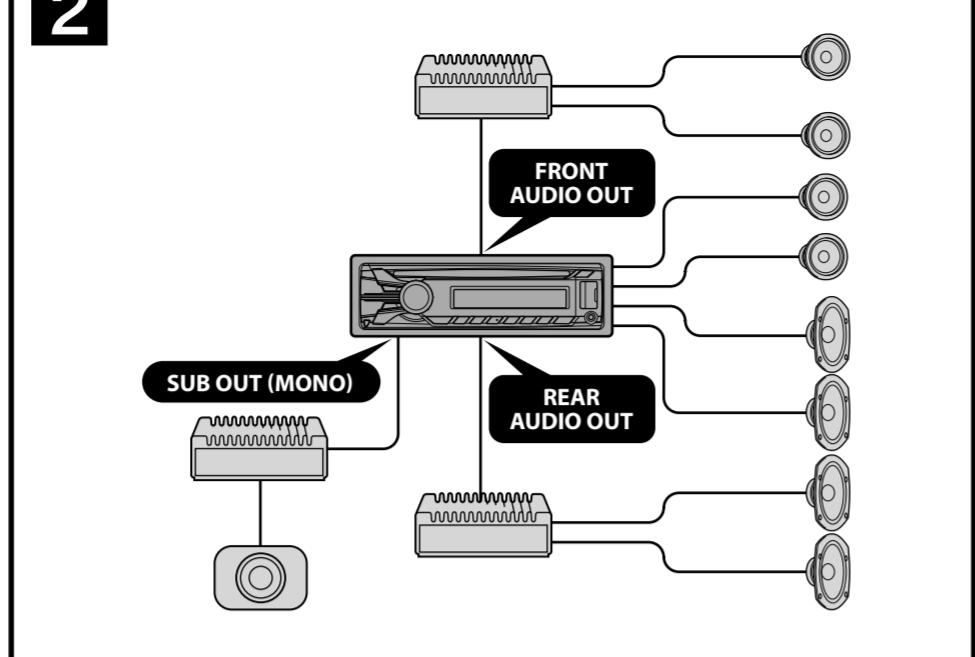

3

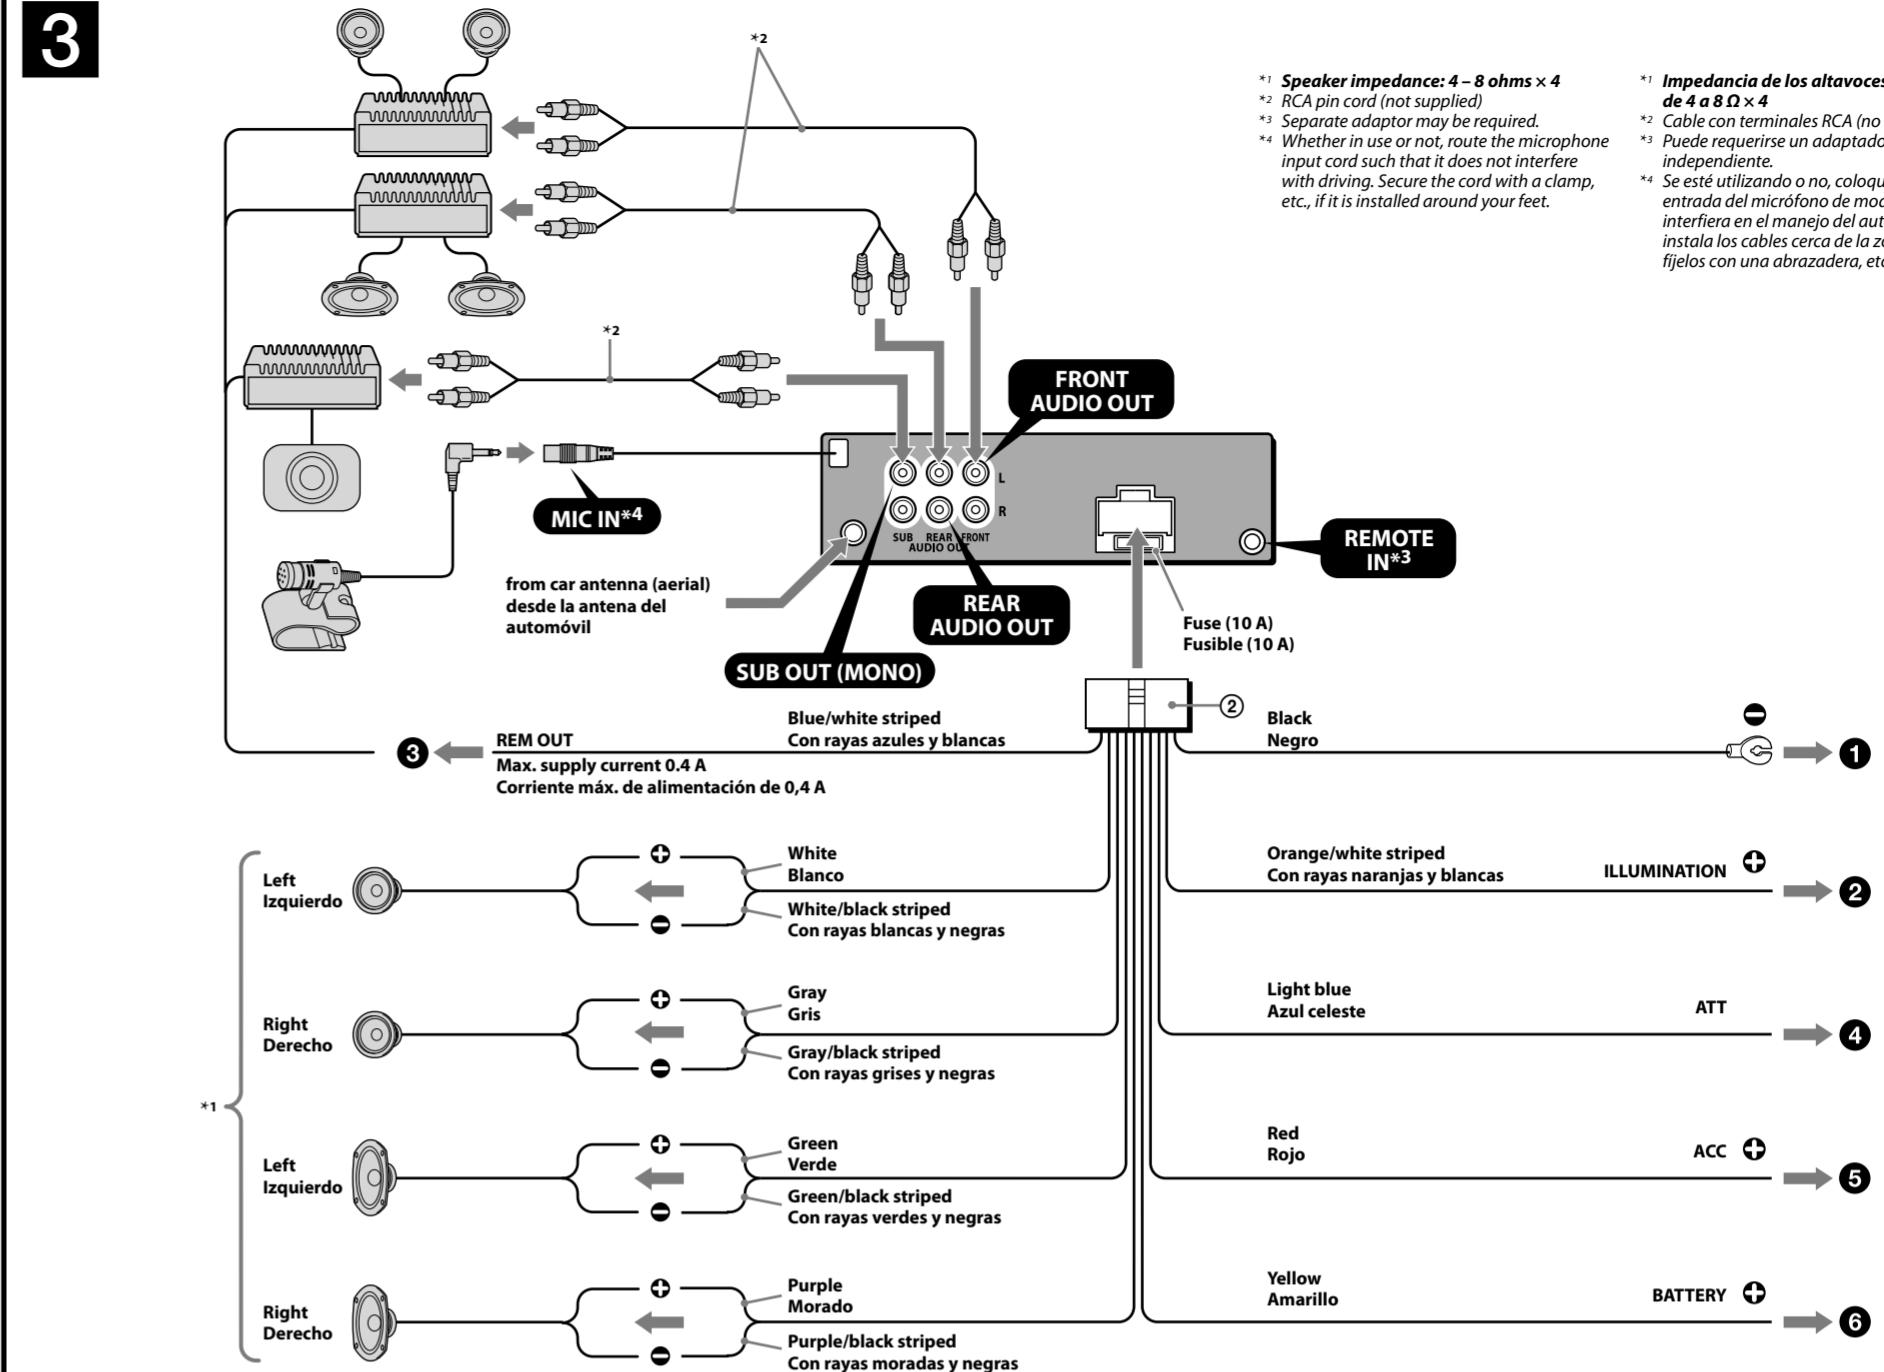

- *¹ Speaker impedance: 4 – 8 ohms × 4
- *² RCA pin cord (not supplied)
- *³ Separate adaptor may be required.
- *⁴ Whether in use or not, route the microphone input cord such that it does not interfere with driving. Secure the cord with a clamp, etc., if it is installed around your feet.

- *¹ Impedancia de los altavoces:
de 4 a 8 Ω × 4
- *² Cable con terminales RCA (no suministrado)
- *³ Puede requerir un adaptador independiente.
- *⁴ Si se está utilizando o no, coloque el cable de entrada del micrófono de modo que no interfiera en el manejo del automóvil. Si instala los cables cerca de la zona de los pies, sujetelos con una abrazadera, etc.

1

Cautions

Be sure to install this unit in the dashboard of the car as the rear side of the unit becomes hot during use.

- This unit is designed for negative ground (earth) 12 V DC operation only.
- Do not get the leads under a screw, or caught in moving parts (e.g. seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- **Run all ground (earth) leads to a common ground (earth) point.**
- Be sure to insulate any loose unconnected leads with electrical tape for safety.


Notes on the power supply lead (yellow)

- When connecting this unit in combination with other stereo components, the connected car circuit's rating must be higher than the sum of each component's fuse.
- When no car circuits are rated high enough, connect the unit directly to the battery.

Parts list [1]

- The numbers in the list are keyed to those in the instructions.
- The bracket ① and the protection collar ④ are attached to the unit before shipping. Before mounting the unit, use the release keys ③ to remove the bracket ① from the unit. For details, see "Removing the protection collar and the bracket ④" on the reverse side of the sheet.
- **Keep the release keys ③ for future use as they are also necessary if you remove the unit from your car.**
- **To the +12 V power terminal which is energized at all times**

Caution
Handle the bracket ① carefully to avoid injuring your fingers.

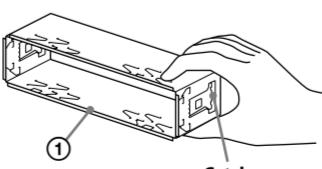

Note
Before installing, make sure that the catches on both sides of the bracket ① are bent inwards 2 mm (1/8 in.). If the catches are straight or bent outwards, the unit will not be installed securely and may spring out.

Connection example [2]

Notes

- Be sure to connect the ground (earth) lead before connecting the amplifier.
- The alarm will only sound if the built-in amplifier is used.

Connection diagram [3]

- **To a metal surface of the car**
First connect the black ground (earth) lead, then connect the yellow, and red power supply leads.
- **To a car's illumination signal**
Be sure to connect the black ground (earth) lead to a metal surface of the car first.

Notes on the power antenna (aerial) control lead or power supply lead of antenna (aerial) booster

- If it is not necessary to connect this lead if there is no power antenna (aerial) or antenna (aerial) booster, or with a manually-operated telescopic antenna (aerial).
- Connect the yellow and red power input leads only after all other leads have been connected.

Notes on connection

- When your car has a built-in FM/AM antenna (aerial) in the rear side glass, see "Notes on the control and power supply leads."

To AMP REMOTE IN of an optional power amplifier

- This connection is only for amplifiers. Connecting any other system may damage the unit.

To the interface cable of a car telephone

- To the +12 V power terminal which is energized in the accessory position of the ignition key switch

Notes

- If there is no accessory position, connect to the +12 V power (power on/off) lead if it is energized at all times.
- Be sure to connect the black ground (earth) lead to a metal surface of the car first.

When your car has a built-in FM/AM antenna (aerial) in the rear side glass, see "Notes on the control and power supply leads."

To the +12 V power terminal which is energized at all times

- Be sure to connect the black ground (earth) lead to a metal surface of the car first.

Notes on the control and power supply leads

- REM OUT lead (blue/white striped) supplies +12 VDC when you turn on the unit.
- When your car has built-in FM/AM antenna (aerial) in the rear side glass, connect REM OUT lead (blue/white striped) or the accessory power supply lead (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
- A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection

- Esta unidad ha sido diseñada para alimentarse sólo con cc de 12 V de masa negativa.
- No coloque los cables debajo de ningún tornillo, ni los apriese con partes móviles (p. ej. los rieles del asiento).

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the car chassis.
- Do not attempt to connect the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid short circuit, do not use the built-in speaker leads installed in the car if the car shares a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Notes on connection

- If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes sobre los cables de conexión y de fuente de alimentación

- El cable REM OUT (rayado azul y blanco) suministra cc+12 V al encender la unidad.
- Si el automóvil tiene una antena de FM/AM incorporada en el cristal trasero o lateral, conecte el cable REM OUT (rayado azul y blanco) o el cable de fuente de alimentación auxiliar (rojo) al terminal de alimentación del amplificador de señal de la antena existente. Para obtener más detalles, consulte la distribuidor.

Precauciones

Asegúrese de instalar la unidad en el tablero del automóvil, ya que la parte posterior de la unidad se calienta durante el uso.

Memory hold connection

- Esta unidad ha sido diseñada para alimentarse sólo con cc de 12 V de masa negativa.
- No coloque los cables debajo de ningún tornillo, ni los apriese con partes móviles (p. ej. los rieles del asiento).

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the car chassis.
- Do not attempt to connect the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid short circuit, do not use the built-in speaker leads installed in the car if the car shares a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Notes on connection

- If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notas sobre los cables de control y de fuente de alimentación

- El cable REM OUT (rayado azul y blanco) suministra cc+12 V al encender la unidad.
- Si el automóvil tiene una antena de FM/AM incorporada en el cristal trasero o lateral, conecte el cable REM OUT (rayado azul y blanco) o el cable de fuente de alimentación auxiliar (rojo) al terminal de alimentación del amplificador de señal de la antena existente. Para obtener más detalles, consulte la distribuidor.

Ejemplo de conexiones [2]

- Asegúrese de conectar primero el cable de conexión a masa antes de realizar la conexión del amplificador.
- La alarma sonará únicamente si se utiliza el amplificador incorporado.
- Con esta unidad no es posible utilizar una antena motorizada sin caja de relé.

Diagrama de conexión [3]

- **A una superficie metálica del automóvil**
Conecte primero el cable de conexión a masa negro, y después los cables amarillo y rojo de fuente de alimentación.
- **A una señal de iluminación del automóvil**
Después de conectar el cable de conexión a masa negro, conecte el terminal de alimentación de la señal de iluminación amarillo.

- **Al cable de control de la antena motorizada o al cable de fuente de alimentación del amplificador de señal de la antena**
No conecte el cable de conexión a masa de esta unidad al terminal negativo (-) del altavoz.

- **No se dispone de antena motorizada ni de amplificador de señal de la antena, o se utiliza una antena telescópica accionada manualmente, no será necesario conectar este cable.**

- **Si el automóvil tiene una antena de FM/AM incorporada en el cristal trasero o lateral, conecte "Notas sobre los cables de control y de fuente de alimentación".**

- **Al AMP REMOTE IN de un amplificador de potencia opcional**
Este conector es sólo para amplificadores. La conexión de cualquier otro sistema puede dañar la unidad.

- **Al cable de interfaz de un teléfono para automóvil**

- **Al terminal de alimentación de +12 V que recibe energía en la posición de acceso del interruptor de encendido**

- **Notas**

- Si no hay posición de acceso, conectelo al terminal de alimentación (batería) de +12 V que recibe energía sin interrupción.

- Asegúrese de conectar primero el cable de conexión a masa negra o a una superficie metálica del automóvil.

- Si el automóvil tiene una antena de FM/AM incorporada en el cristal trasero o lateral, conecte "Notas sobre los cables de control y de fuente de alimentación".

- **Al terminal de alimentación de +12 V que recibe energía sin interrupción**

- Asegúrese de conectar primero el cable de conexión a masa negra a una superficie metálica del automóvil.

Lista de componentes [1]

• Los números de la lista corresponden a los de las instrucciones.

- La unidad se comercializa con el soporte ① y el marco de protección ④ ya colocados. Antes de montarla, utilice las llaves de liberación ③ para extraer el soporte ① de la misma. Para obtener más información, consulte "Extracción del marco de protección y del soporte ①".

• Consérve las llaves de liberación ③ para utilizarlas en el futuro, ya que también las necesitará si retira la unidad del automóvil.


Precaución

Tenga mucho cuidado al manipular el soporte ① para evitar posibles lesiones en los dedos.




Nota
Antes de instalar la unidad, compruebe que los enganches de ambos lados del soporte ① están dobrados hacia adentro 2 mm. Si no lo están o están dobrados hacia afuera, la unidad no se instalará correctamente y puede saltar.


4 1

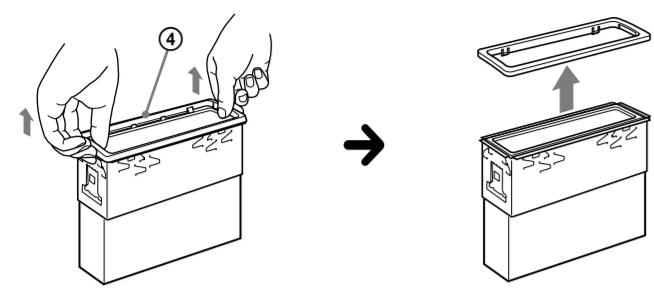


5 1

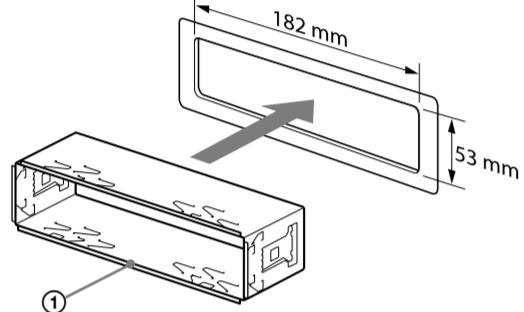

2

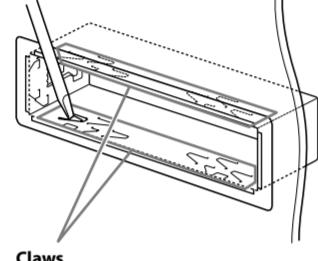

3

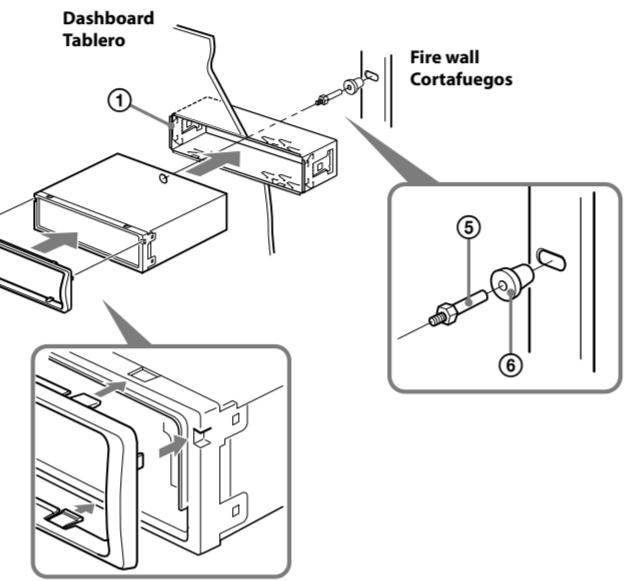

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperatures, such as direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Removing the protection collar and the bracket [4]

Before installing the unit, remove the protection collar (④) and the bracket (①) from the unit.

1 Remove the protection collar [4].

Pinch both edges of the protection collar (④), then pull it out.

2 Remove the bracket [1].

Insert both release keys (③) together between the unit and the bracket (①) until they click. Pull down the bracket (①), then pull up the unit to separate.

Mounting example [5]

Installation in the dashboard

- Bend these claws outward for a tight fit, if necessary [5-2].
- Make sure that the 4 catches on the protection collar (④) are properly engaged in the slots of the unit [5-3].

Mounting the unit in a Japanese car [6]

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

Note
To prevent malfunction, install only with the supplied screws (⑦).

How to detach and attach the front panel [7]

Before installing the unit, detach the front panel.

7-A To detach

Before detaching the front panel, be sure to press and hold [SOURCE/OFF]. Press the front panel release button, and pull it off towards you.

7-B To attach

Engage part (⑧) of the front panel with part (⑨) of the unit, as illustrated, and push the left side into position until it clicks.

Warning if your car's ignition has no ACC position

Be sure to set the Auto Off function. For details, see the supplied Operating Instructions.


1 Remove the protection collar [4].
Pinch both edges of the protection collar (④), then pull it out.

2 Remove the bracket [1].
Insert both release keys (③) together between the unit and the bracket (①) until they click.

3 Pull down the bracket (①), then pull up the unit to separate.

Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

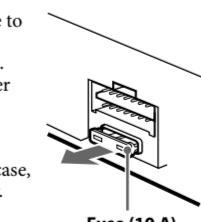

Ejemplo de montaje [5]

Instalación en el tablero

- Si es necesario, doble las uñas hacia fuera para que encaje firmemente [5-2].
- Compruebe que los 4 enganches del marco de protección (④) estén bien fijados en las ranuras de la unidad [5-3].

Montaje de la unidad en un automóvil japonés [6]

Es posible que no pueda instalar esta unidad en algunos automóviles japoneses. En tal caso, consulte a su distribuidor Sony.

Nota
Para evitar que se produzcan fallas de funcionamiento, realice la instalación solamente con los tornillos suministrados (⑦).

4 2

3

1

2


4

5


6

7


6 A TOYOTA

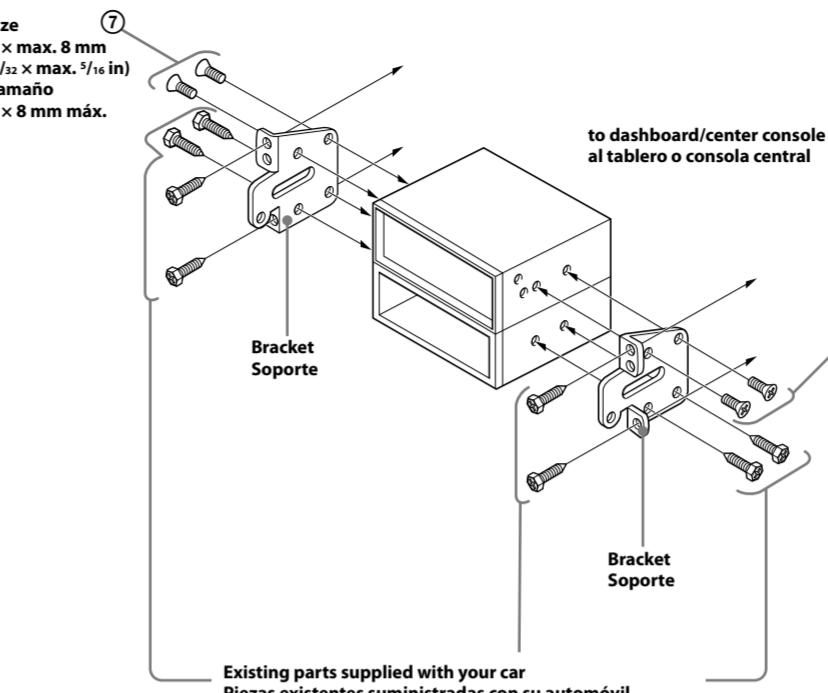

B NISSAN

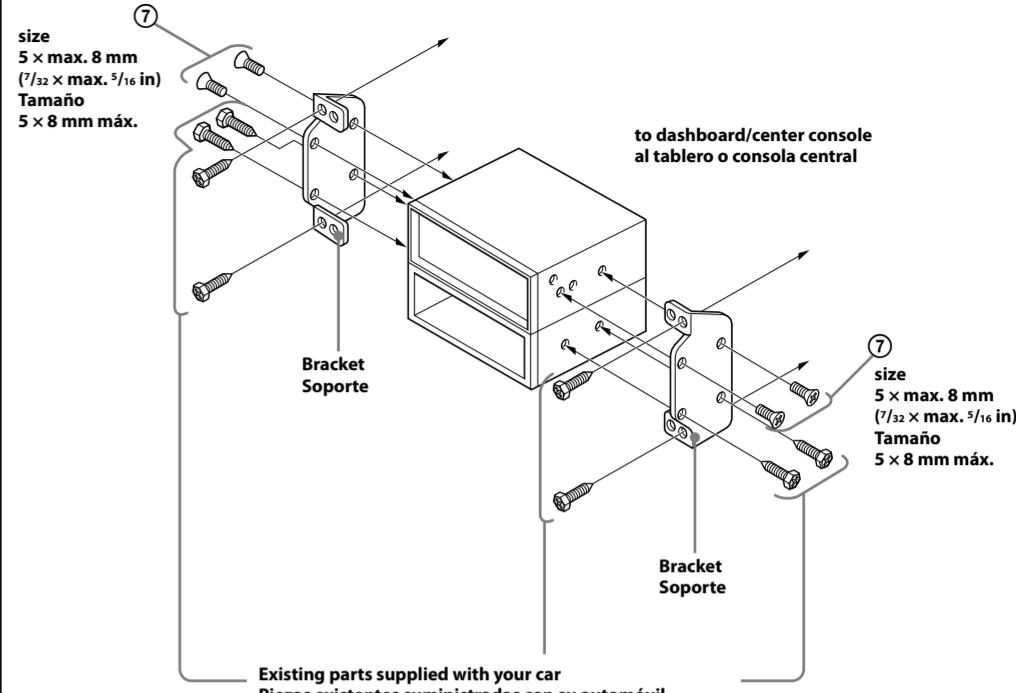

7 A

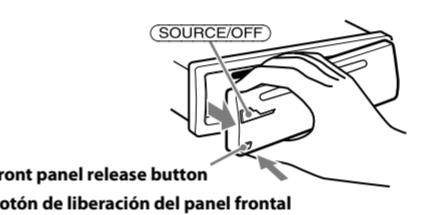

B

