



# BTPC-700DC-B-N-A-R

## TABLET PC 7"-DUAL CORE-WIFI-HDMI-ANDROID 4.2

Manual de Instrucciones

## ÍNDICE

INSTRUCCIONES DE FUNCIONAMIENTO - INTRODUCCIÓN

- LISTA DE APLICACIONES

CONFIGURACIÓN

- CONEXIONES INALÁMBRICAS Y REDES
- PANTALLA Y SONIDO
- APLICACIONES
- IDIOMA Y ENTRADA
- COPIA DE SEGURIDAD Y RESET
- FECHA Y HORA
- SOBRE EL DISPOSITIVO

HDMI

**REPRODUCTOR HD** 

MÚSICA

CÁMARA

NAVEGADOR

## INSTRUCCIONES DE FUNCIONAMIENTO

## INTRODUCCIÓN



Volver
Inicio
En ejecución
Captura de pantalla
Volumen +/-
Menú Opciones
Menú de aplicaciones
Estado conexión USB
Entrada de voz
14:09 🐨 🖉 🗎 83% Hora / Señal WIFI / Señal 3G / Estado batería
Barra Google
LISTA DE APLICACIONES
Pulse en el icono de aplicaciones 😡 para acceder al menú de aplicaciones:

	APPS	WIDGETS				🛱 знор	
			100			$\bigcirc$	
	Browser	Calculator	Calendar	Camera	Chrome	Clock	
			0		1	2/60P	
	Dev Tools	Downloads	Email	File Manage	Flash Playe	Gallery	
	~	8		<b>?</b>		Receipt Know	
	Gmail	Google	Local	Maps	Navigation	News & Wes	
	<b>a</b>				1001	talk	
	Play Music	Play Store	Settings	Sound Reco	Speech Rec	Talk	
5	D		<b>S</b>			14:14 9	P.21 8 112%

Podrá cambiar el sitio de un aplicación manteniéndola pulsada y soltándola en el lugar deseado.

Haga clic en WIDGETS para acceder a los iconos de aplicaciones útiles:



## **CONFIGURACIÓN**

CONEXIONES INALÁMBRICAS Y REDES

Seleccione seleccione para acceder al menú de WIFI:

<b>*</b>	vi-Fi		67	+	÷
wi	RELESS & NETWORKS				
0	Wi-Fi OFF				
	More				
	vice				
¢	Display				
8	Storage				
-	Battery				
ع ب		<u>ــــــــــــــــــــــــــــــــــــ</u>		4:14 /	83%

Settings		67	+	:
WIRELESS & NETWORKS	UARM Secured with WPA/WPA2 (WPS available)		<b>\$</b>	
🗢 Wi-Fi 📃 ON	ChinaNet-UdeT Secured with WPA/WPA2 (WPS available)		₹.	
O Data usage	shijun Secured with WPA/WPA2			
DEVICE	ChinaNet-bhlN Secured with WPA/WPA2 (WPS available)		<b>.</b>	
্ৰিগ Sound	China Net-gWpJ		<b>.</b>	
Display	ChinaNet-iqpW			
Battery	Secured with WPA/WPA2 (WPS available)		-	
🔁 Apps	Secured with WPA2			
			4:34 ⊿	84%

Active la función WiFi y el dispositivo comenzará a buscar redes WiFi automáticamente.

Cuando se muestre este icono se la red requerirá una contraseña, para ello aparecerá la siguiente ventana:

Settings	UARM					0	
WIRELESS & NETWORKS	Signal strength	Good	DOK				
🗢 Wi-Fi	Password						
More		Show password					
DEVICE	Cancel			Connect			
q w e	e r	t	yι	ı i	о	р	×
a s	d f	g	h	j	k	1	Done
ণ্ট z	хс	v	b	n m	,	•	<sup>?</sup> ひ
?123 玤	/ @					-	- :-)
	Ú Ý	り い の い				<b>—</b> 14	:34 ⊿ 🛢 84%

## PANTALLA Y SONIDO

En el menú de configuración seleccione 🚺 Sound :

Settings		
WIRELESS & NETWORKS	Volumes	
🗢 Wi-Fi	Music, video, games & other media	
🕚 Data usage	<b>4</b> 10	
More	Notifications	
DEVICE	•	
الله Sound 📢		
Display	Alarms	
🔳 Storage		
Battery	ок	
🛃 Apps		
		🔤 15:29 寮⊿ 🛢 73%

-0	Settings							
	▶ Wi-Fi	Music, video	, games & otl	her media				
	🕽 Data usage	<b>•</b> {•••						
		•						
		Alarms						
	Storage	6 -						
	Apps							
¢			₽	d»	:		R. 1	7:37 হ 🖉 🚔 44%

Podrá ajustar el volumen de determinados avisos y aplicaciones.

En el menú de configuración seleccione PANTALLA:

Settings	
WIRELESS & NETWORKS	Brightness
🗢 Wi-Fi	Wallpaper
O Data usage	Sleep After 10 minutes of inactivity
DEVICE	Calibrate G-sensor
🚯 Sound	Daydream
Storage	Font size Normal
Battery	Accelerometer coordinate system Accelerometer uses the default coordinate system.
Apps	screen adantion
	<b>ᢏ〉 ᢏ》 :</b>
Brightness Brillo	

Wallpaper Salva pantallas	
Sleep After 10 minutes of inactivity Función Sleep	
Calibrate G-sensor Calibración	
Daydream Apagado auto de pantalla	
Font size Normal Tamaño de fuente	
Accelerometer coordinate system Accelerometer uses the default coordinate system. Sietem	a coordinado de acelerómetro
screen adaption Used to adjust size of some games display screen . Ajuste of	de pantalla para APK especiales

#### APLICACIONES

Gestión de aplicaciones: Haga clic en el icono del menú de configuración para entrar en la configuración de aplicaciones:

Settings			
Data usage		DOWNLOADED	ON SD CARD
More	Adobe Flash Player		
DEVICE	Chrome		
📢 Sound	21.41MB		
Display	Google Play Music		
Storage	Maps		
Battery	13.79МВ		
🔄 Apps	● 百度视频 8.57MB		
🚊 Users			
PERSONAL			
Location access	188MB used	Internal storage	316MB free
	<b>≤</b> 1≫ :		📕 15:30 🐨⊿ 🛢 73%

Settings		
Oata usage	Adobe Flash Player 11.1	
More	Version 11.1.115.34	
DEVICE		Uninstall
🜗 Sound	Show notifications	
Display	STORAGE	
E Storago	Total	4.56MB
Storage	App	4.56MB
Battery	USB storage app	0.00B
	Data	0.00B
🔄 Apps	SD card	0.00B
🚊 Users		
PERSONAL	CACHE	
Location access	Cache	0.00B
	_1» _1» :	■ 15:30 ▼/ ■ 73%

IDIOMA Y ENTRADA

Haga clic en Language & input para ajustar los valores de indioma y entrada de texto:

Î٩	Settings	;					
	📰 Stora	ige			Language English (United Kingdom)		
	🔒 Batte	ry			Spell checker		<u>-</u>
	🖄 Apps						
	🚊 Users	3		KEVBO			
	PERSONAL			KETB0/	AND & INFOT METHODS		
	🔷 Loca	tion access			<b>Default</b> English (UK) - Android keyboard		
	🔒 Secu	rity			Android keyboard English (UK)		
	A Lang	uage & input			Google Pinyin Chinese Pinyin		<u></u>
	ACCOUNTS				Google voice typing Automatic		
<u>(</u>			¢	d»		15:30	₹⊿ 🕯 72%

COPIA DE SEGURIDAD Y RESET

Seleccione	Ð	Backup & reset	,	Factory data reset Erases all data on tablet	,	Reset tablet	para
configurar o	ioac	ones de copia	a d	le seguridad v vo	lvei	r a los valor	es de

configurar opciones de copia de seguridad y volver a los valores de fábrica:





NOTA: Al efectuar la función RESET, todas las APK desaparecerán.

FECHA Y HORA

Seleccione Date & time en el menú configuración para acceder a los ajustes de fecha y hora:



SOBRE EL DISPOSITIVO

Seleccione esta opción para obtener iinformaciónj a cerca del dispositivo:



### HDMI

El dispositivo cuenta con una salida HDMI con la que podrá conectar la unidad a otros dispositivos. Para ellos use un cable de conexión (no incluido).

## **REPRODUCTOR HD**

Seleccione el icono de reproductor de vídeo y accederá a la galería:



Para funciones adicionales, mantenga pulsado el archivo elegido.

Para	reproducir	archivos	almacenados	en la	tarjeta	micro	SD
seleco	cione 🔳 Sto	orage Ena	ble media scanning	g on extso	у 🗹		

## MÚSICA

Seleccione el icono de música

8

Artists	Albums	Songa	Playlists	Now playing
Unknown artist				
5566 1 album				
Josh Groban				
	ि <i>य</i> े ये)	1	<u>↓</u> ⊉ ⊕	10:16 💵



## CÁMARA



Seleccione el icono Camera para entrar en el modo de cámara:



#### Para hacer una foto:



Seleccione la cámara de vídeo o fotos.



Pulse el icono de disparo.



Seleccione la cámara delantera o trasera.



Ajuste la exposición.



Menú de configuración de cámara



Modos

## NAVEGADOR



Seleccione el icono para abrir el navegador:



Para navegar debe tener conexión a internet.

"Las especificaciones pueden cambiar sin previo aviso" IMPORTADO I.R.P., S.L. AVDA. SANTA CLARA DE CUBA 5 SEVILLA, SPAIN





#### **DECLARACIÓN DE CONFORMIDAD**

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

#### DIRECTIVAS EMC

ETSI EN 301 489-1 V1.8.1 (2008) ETSI EN 301 489-17 V2.1.1 (2009) ETSI EN 300328 V1.7.1: 2006 EN 50371: 2002 EN60950-1:2006+A12: 2011

Descripción del aparato:

Modelo BRIGMTON **BTPC-700DC-B-N-A-R** Dispositivo de conexión a internet

Importador: I.R.P., S.L. Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.





## BTPC-700DC-B-N-A-R

## TABLET PC 7"-DUAL CORE-WIFI-HDMI-ANDROID 4.2

## **Instruction Manual**

OPERATING INSTRUCTIONS

- INTRODUCTION
- LIST OF APPLICATIONS

CONFIGURATION

- WIRELESS & NETWORKS
- SCREEN AND SOUND
- APPLICATIONS
- LANGUAGE AND ENTRY
- BACKUP AND RESET
- DATE AND TIME
- ON THE DEVICE

HDMI

HD PLAYER

MUSIC

CAMERA

BROWSER

## **OPERATION INSTRUCTIONS**

## INTRODUCTION





Note: Long pressing an application icon can add shortcut to the desktop automatically

Click WIDGETS icon to view widgets:



Note: Long pressing any widgets; you can create a shortcut on the desktop

## SETTINGS

WIRELESS & NETWORKS

Click

🚔 <sup>wi-Fi</sup> icon, then select wireless & network:

wi-Fi		67	+	E
WIRELESS & NETWORKS				
O Data usage				
More				
DEVICE				
🜗 Sound	to see networks available, tum wisPi on.			
Display				
Storage				
Battery				
🛃 Apps				
	<b>」、 」</b>			83%

Settings		<i>(</i> ) + :
WIRELESS & NETWORKS	UARM Secured with WPA/WPA2 (WPS available)	Ŧ.
🗢 Wi-Fi 📃 ON	ChinaNet-UdeT Secured with WPA/WPA2 (WPS available)	₹.
C Data usage More	<b>shijun</b> Secured with WPA/WPA2	Ŧ
DEVICE	ChinaNet-bhIN Secured with WPA/WPA2 (WPS available)	<b>\$</b>
	ChinaNet-gWpJ Secured with WPA/WPA2 (WPS available)	÷
Storage	ChinaNet-iqpW Secured with WPA/WPA2 (WPS available)	÷
Battery	JIEYUHE1 Secured with WPA2	Ŧ
🖄 Apps	ChinaNet-5nux	
	ひ, ひ, :	📕 14:34 🛛 🗎 849

#### Wi-Fi settings

Turn on Wi-Fi, tablet can search for nearby Wi-Fi networks automatically and display related information. Choose WIFI router.

If it displays locked as , you need type password before connection:

Settings	UARM					6) -	- 1
WIRELESS & NETWORKS	Signal strength	Good					
🗢 Wi-Fi	Security Password		PSK				
Data usage More		Show pas	sword				
DEVICE	Cancel						
q w e	r	t	y u	i	ο	р	×
a s	d f	g	h	j k			Done
<b>쇼 z</b>	x c	v	b r	n m	,	•	¢
?123	/ @						
	ý L	<b>⊴</b> ≫ :				14:34	⊿ 🗋 84%

#### SOUND AND DISPLAY



Click Sound to set volume

	Volumes	
	Music, video, games & other media	
🕚 Data usage	-{··	
	Notifications	
	•	
	-	
🗘 Display	Alarms	
Storage		
	ок	
-		



Settings		
	Music, video, games & other media	
🕚 Data usage	<b>4</b> 9 <b></b>	
	•	
🗱 Display		
	<b>°</b>	
🛃 Apps		
		🔜 17:37 マ⊿ 🖬 44%



Used to adjust size of some games display screen

LCD Brightness setting

Set wallpaper

Set sleep interval

Calibrate

Set screen protect

Adjust font size

Select an accelerometer coordinate system Adjust screen adaption

Settings	
WIRELESS & NETWORKS	Brightness
🗢 Wi-Fi 🛛 🗖	Wallpaper
🕚 Data usage	Sleep
More	After 10 minutes of inactivity
	Calibrate G-sensor
Display	Daydream
E Storage	Font size Normal
Battery	Accelerometer coordinate system
🖄 Apps	screen adantion
	<b></b> 15:29 ♥∠ ■ 73%

#### APPS

Click Apps into application settings interface. You can see all application details and uninstall programs completely.

°, s	Gettings									
C	Data usage					DOWNLOADED			N SD CA	RD
	More		F	Adobe Fl 4.56MB	ash Playe	er 11.1				
DE	VICE		_							
¢	0 Sound		?	21.41MB						
¢	) Display	6		Google F 8.75MB	lay Music					
8	Storage		_							
			27	Maps						
Ê	Battery			13.79MB						
2	Apps		D	百度视频 8.57MB						
2	Users									
	RSONAL									
						Internal storage				
	Locationaccess	188	MBu	sed				316M	B free	
D		\$°	ŝ	E			-	15:30	╤⊿∎	73%

Ĭ٩	Settings		
	🕓 Data usage	Adobe Flash Player 11.1	
	More	Version 11.1.115.34	
	DEVICE		Uninstall
	🕀 Sound	Show notifications	
	Display	STORAGE	
		Total	4.56MB
	Storage	Арр	4.56MB
	Battery	USB storage app	0.00B
	-	Data	0.00B
	🖄 Apps	SD card	0.00B
	🚊 Users		
	PERSONAL	CACHE	
	Location access	Cache	0.00B
←		r1) r1) :	■ 15:30 〒 / ■ 73%

LANGUAGE & INPUT

Click A Language & input

to set native language.

Settings		
📰 Storage	Language English (United Kingdom)	
Battery	Spell checker	<u>=</u> +
🙇 Apps		
👤 Users	Personal dictionary	
PERSONAL	KEYBOARD & INPUT METHODS	
Location access	<b>Default</b> English (UK) - Android keyboard	
Security	Android keyboard	<u>=</u>
🛕 Language & input	Casala Dinvin	
Backup & reset	Chinese Pinyin	
	Google voice typing	<u>∓</u> ‡;
	t>	🔄 15:30 🤛⊿ 🖬 72%



Location access
Location access
Security
Language & input
Backup & reset
Accountrs
Country
C

Note: All applications are installed by user will be disappeared.



PERSONAL	to the second of the design of the second	
Location access	Automatic date & time Use network-provided time	
Security	Automatic time zone Use network-provided time zone	
Language & input		
D Backup & reset		
ACCOUNTS		
+ Add account		
SYSTEM		
O Date & time	Use 24-hour format	
🖐 Accessibility	Choose date format	
{ } Developer options		
	o	□ 15:31 👽 / 🖬 1



Obtain the time automatically

Obtain the time zone automatically Set current date

Set current time

Select time zone for your location

## About tablet

You can check the Tablet detail information:

System updates
Status
Status of the battery, network and other information
Legal information
Model number
UM923-v1.1-000-02-01-01-00-01-00-00-xx
Android version
4.2.2
Baseband version v2:0
3.4.39+ stephen@umarsoft#37

#### HDMI

Connect television / projector with device by HDMI cable (not included) for display.

HD PLAYER Click Super-HDPM icon to browse picture and video:



Note: It needs some time to load all files at first time. Press one file 2S for more advanced operation.

If you want to browse the file from TF card, please make sure





Click



Camera icon into camera interface:



Make sure the internet is connected.

"Features can change without notice"

Imported: I.R.P., S.L. Avda. Santa Clara de Cuba 5 41007 Sevilla Spain

**BRIGMT** 

#### **DECLARATION OF CONFORMITY**

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

#### **EMC DIRECTIVES**

ETSI EN 301 489-1 V1.8.1 (2008) ETSI EN 301 489-17 V2.1.1 (2009) ETSI EN 300328 V1.7.1: 2006 EN 50371: 2002 EN60950-1:2006+A12: 2011

Description of apparatus:

BRIGMTON Model **BTPC-700DC-B-N-A-R** Movile Internet Device

Importer: I.R.P., SL Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.

