



**MANUAL DE INSTRUCCIONES
ASPIRADORA EN SECO Y HÚMEDO
AS-4779**







ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

DESCRIPCIÓN 2
 INSTRUCCIONES DE SEGURIDAD 3
 MONTAJE 3
 OPERACIÓN 4
 LIMPIEZA Y MANTENIMIENTO 5
 RESOLUCIÓN DE PROBLEMAS 5
 CONTENIDO 5
 ESPECIFICACIONES 6
 DIAGRAMA DE CIRCUITOS 6

	PRECAUCIÓN	
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA		
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
 	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.</p> <p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

 
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

CARACTERÍSTICAS

- Poderosa y compacta
- Aspira en seco y húmedo
- Sistema de múltiples filtros de aire que garantiza una limpieza higiénica
- Función especial de sople de aire
- Posición especial de parqueo para uso fácil y ahorro de espacio
- Control de flujo de aire en la manija
- Ruedas giratorias que facilitan el movimiento
- Accesorios a diversos
- Diseño amigable con el usuario

ILUSTRACIÓN

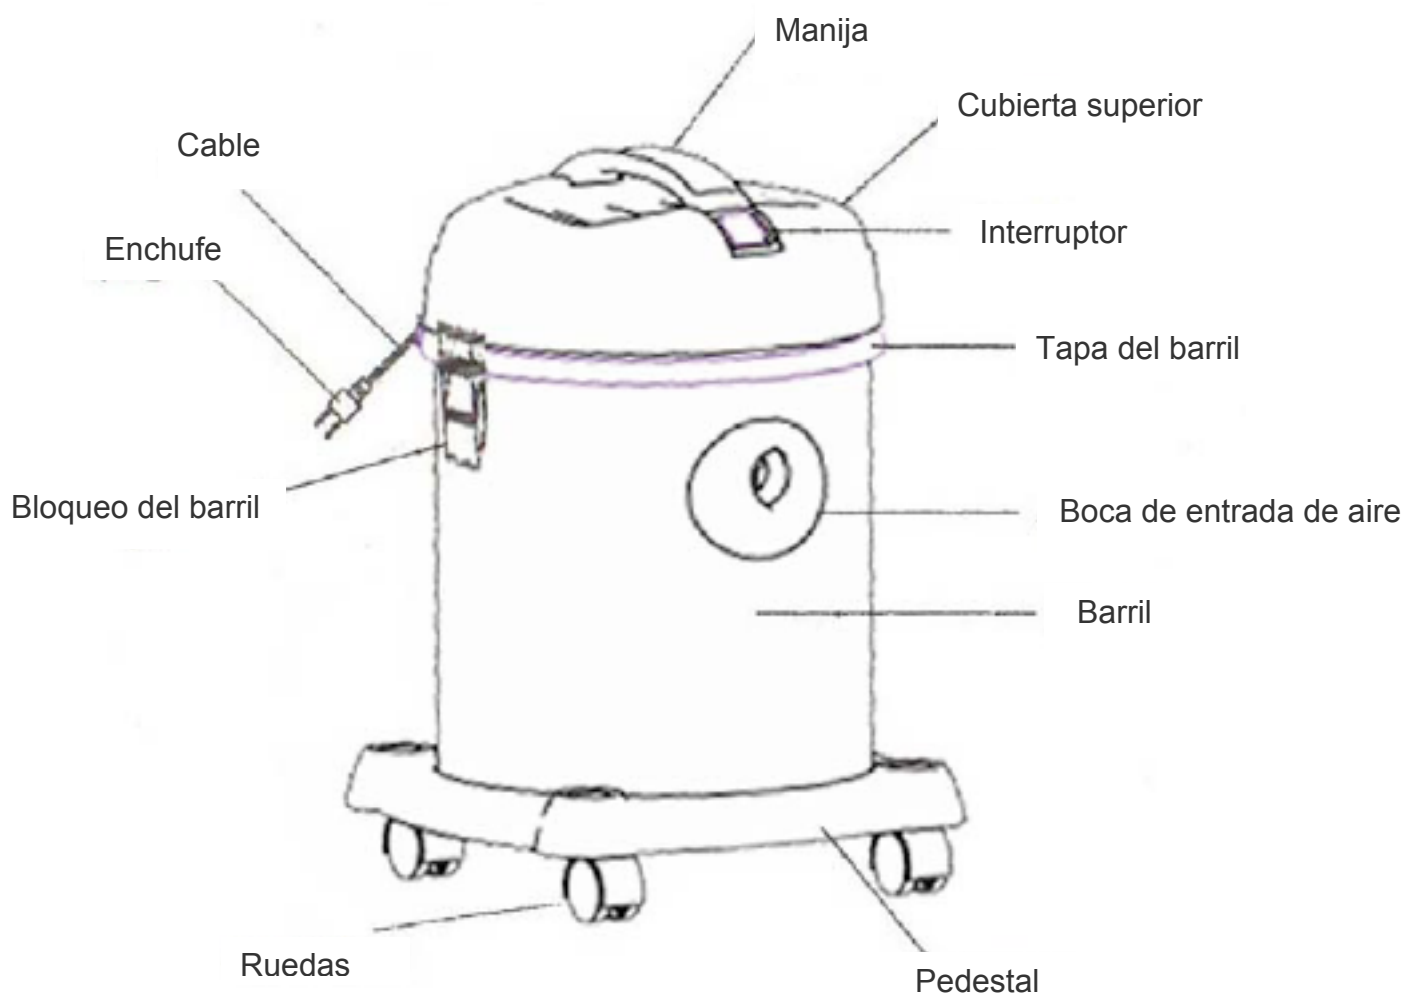



Manguera



Tubos



Filtros



Cerdas

Boquilla

 
Cepillo de piso
absorbente


 

INSTRUCCIONES DE SEGURIDAD


- No utilice la unidad si el cable de poder está dañado.
- La aspiradora no debe ser utilizada por personas con capacidades físicas o mentales reducidas o niños, a menos que tengan estricta supervisión.
- No aspire materiales calientes como colillas de cigarrillo encendidas.
- La aspiradora no debe ser expuesta al calor.
- Desconecte la aspiradora del tomacorriente después de cada uso y antes de limpiarla. Hale el enchufe y no el cable con el fin de evitar que el cable se dañe por dentro.
- No coloque ningún objeto en las aberturas de la aspiradora.
- No utilice la aspiradora sin el contenedor de polvo y el filtro de aire.
- No aspire partículas pesadas o difíciles como por ejemplo harina, cemento, etc., para evitar una sobrecarga de la unidad.
- La aspiradora debe limpiarse con una prenda húmeda suave. No la introduzca en agua. Tampoco utilice solventes para limpiar.
- La aspiradora está diseñada para uso doméstico y no para un uso comercial.
- Evite que la boquilla o el cepillo toquen la superficie de los muebles.
- No utilice el cable para halar la unidad. También evite que el cable entre en contacto con objetos puntiagudos.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

MONTAJE





 
Coloque el filtro de aire en la aspiradora.

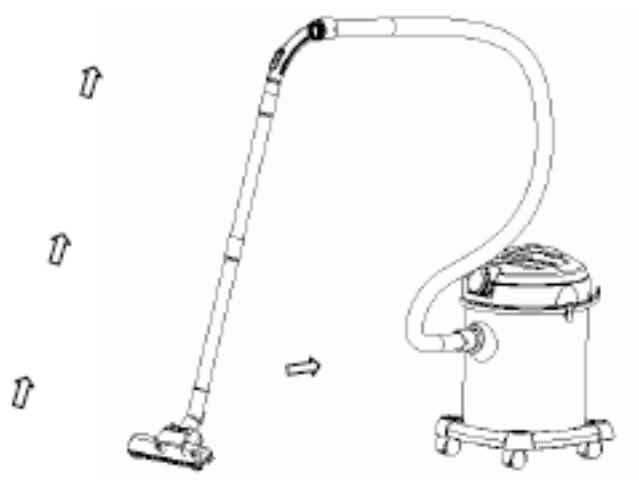







<p>Coloque el contenedor de polvo en la aspiradora.</p>	
<p>Para utilizar la manguera flexible inserte un extremo de la manguera en el orificio de succión. Asegúrese que está en posición fija.</p>	
<p>Elija el accesorio que va a utilizar, ya sea el cepillo con la boquilla y colóquelo en el tubo de succión.</p>	



OPERACIÓN

	<p>Antes de comenzar, asegúrese que el filtro de aire está en posición.</p>
	<p>Antes de encender la unidad, asegúrese que la instalacion de la manguera este bien realizada, de lo contrario la unidad puede sufrir graves daños.</p>
	<p>Desenrolle el cable de poder.</p>
	<p>Conecte la unidad y enciéndala.</p>
	<p>Al terminar desconecte el cable.</p>

LIMPIEZA Y MANTENIMIENTO

	Abra el contenedor de polvo.
	Retire el filtro de aire.
	Vacíe el contenedor de polvo.
	Lave el filtro de aire con agua limpia.
	Seque el filtro de aire.
	Vuelva a poner las piezas en su sitio.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
La aspiradora no enciende	Verifique la conexión el cable de poder Asegúrese de haber encendido el interruptor
La potencia de succión es menor	La unidad puede estar bloqueada; verifique y retire el bloqueo. Limpie el filtro de aire que puede estar sucio.


CONTENIDO

- Aspiradora
- Manguera flexible
- Cepillo de humedad
- Tubo de extensión (2)
- Cepillo incorporado
- Filtro x 1

ESPECIFICACIONES

Voltaje	110V AC
Frecuencia nominal	60Hz
Potencia	1200W
Presión de operación	≥ 16 kPa
Nivel de ruido	<85dB(A)

 DIAGRAMA DE CIRCUITOS

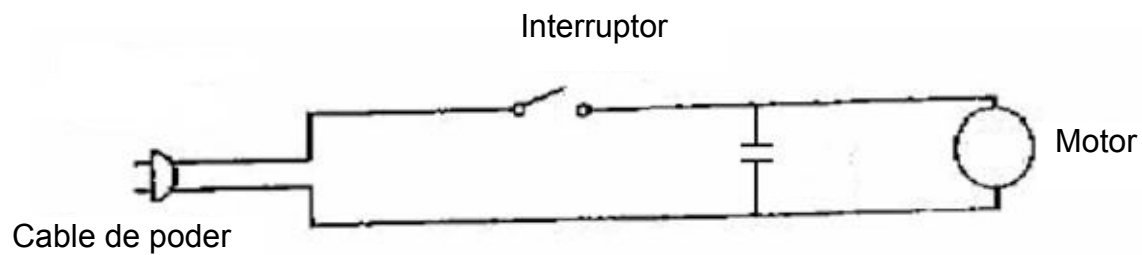



**INSTRUCTION MANUAL
WET AND DRY VACUUM CLEANER
AS-4779**

 





DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

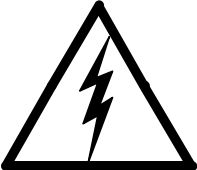

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

 
Congratulations on the purchase of this high-quality product. Please read this operating instruction attentively, before you take the appliance in operation. It gives important notes for security, the use and maintenance of the appliance. If you have further questions, please contact our customer service.

 
Contents:

- Description of the appliance
- Appliance figure
- Important safety instructions
- Assembly
- Operation
- Cleaning and maintenance
- Error detection
- Technical data
- Circuit illustration

Description of the appliance:

- Powerful and compact.
- Wet & Dry
- Multiple air filter system guarantees a hygienic cleaning.
- With special air-blowing function.
- Special parking position for easy use and space saving.
- Airflow control on handle.
- Rotary wheels facilitate moving and running.
- Divers accessories.
- User-friendly design.

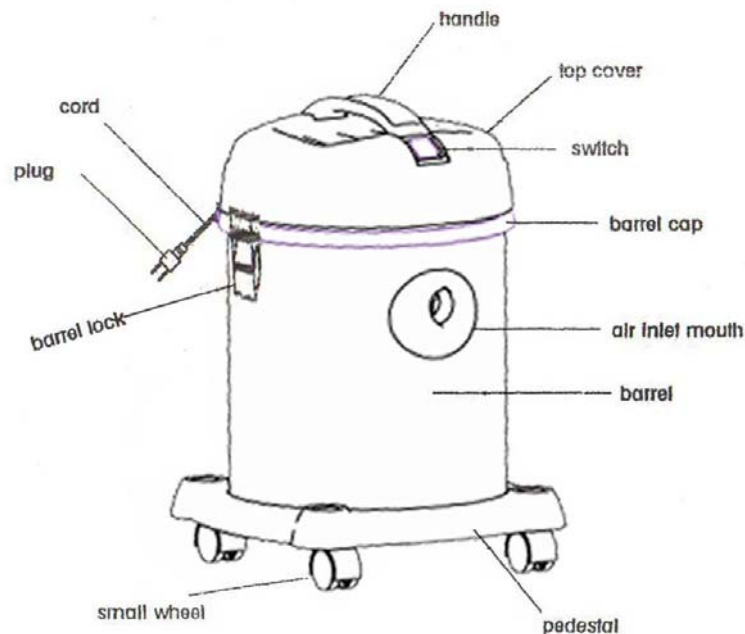

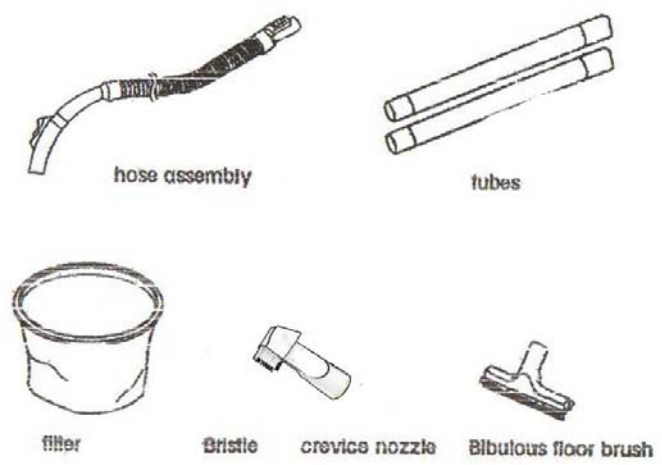



Appliance figure:







Important safety instructions:


 

 
If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent .


This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

⊘	Do not vacuum any sharp-edged, hot or incandescent materials.	
⊘	The appliance should not be exposed to heat.	
⊘	Unplug the appliance form the mains supply socket after use and before every cleaning. Pull the plug, not the mains cable, in order to disconnect the appliance from the mains.	
⊘	Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair etc.	
⊘	Do not use the vacuum cleaner without dust container or dust filter in place.	
⊘	Do not vacuum any flour, cement etc, in order to avoid the overloads.	

  
 
 

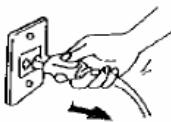 
<p>⊘</p>	<p>The appliance should only be cleaned with a dry or damp cloth; it should never immersed in water. Do not use any solvents for cleaning.</p>	
<p>⊘</p>	<p>This appliance is intended for domestic use only and not for commercial applications.</p>	
<p>⊘</p>	<p>Avoid the nozzle or brush touching the surface of the furniture.</p>	
<p>⊘</p>	<p>Do not use the mains wire to carry the appliance. Do not pull the mains wire over sharp edges.</p>	

Assembly:


<p>Dust filter: Put the dust filter in the dust container carefully.</p>	
<p>Dust container: Attach the dust container to the hand vacuum cleaner.</p>	
<p>Flexible hose (optional): To use the flexible hose, insert the end of the hose into the suction hole. Make sure, that it is snapped in the position.</p>	
<p>Accessories: Choose your desired accessory (brush or nozzle) and attach it to the suction hole.</p>	

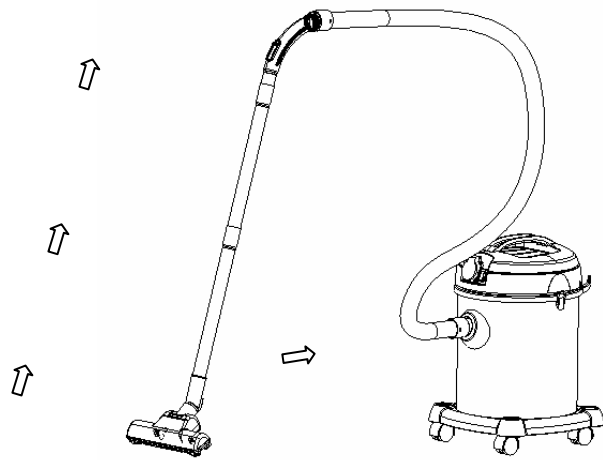

 
 


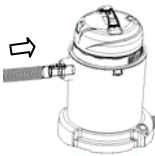

Operation:

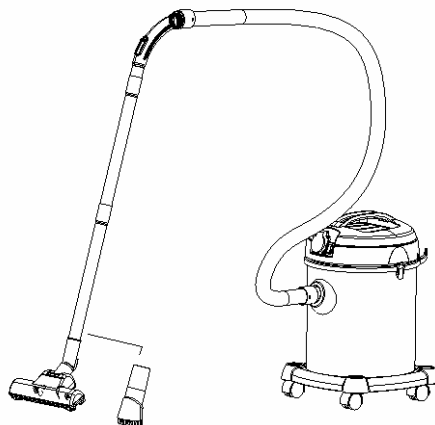	<p>Before you start the appliance, make sure that the dust filter is in the position.</p>
	<p>Before you start the appliance, make sure that the hose assembly is in the position. or else the appliance had mangled.</p>
	<p>Unwind the power cord.</p>
	<p>Plug the appliance and switch on.</p>
	<p>Unplug the appliance after use</p>

Attach the desired accessories to the vacuum cleaner.



Cleaning and maintenance:

	<p>Open the dust container.</p>
	<p>Take out the dust filter.</p>
	<p>Empty the dust container.</p>
	<p>Wash off the dust filter with cleaning water.</p>
	<p>Dry up the dust filter.</p>
	<p>Assemble the vacuum cleaner.</p>

Error detection:

Before you contact our service center, please check the following:

Problem	Possible reason	Advice
<p>Motor does not start</p>	<ul style="list-style-type: none"> -Power cord not firmly plugged into outlet. -Outlet damaged. -Cleaner not switched on. 	<ul style="list-style-type: none"> -Plug unit firmly. -Check the Outlet. -Switch on the appliance
<p>Suction power is weaker</p>	<ul style="list-style-type: none"> -Unit clogged -Dust filter needs cleaning -Dust container not in position. -Filter blocked 	<ul style="list-style-type: none"> -Remove the blockage. -Clean the dust filter. -Attach the dust container again to the cleaner. -Clean the filter.

Technical data:

Rated voltage: 110V AC

Rated frequency: 60Hz

Rated power: 1200W

Operating pressure: ≥ 16 kPa

Sound level: <85 dB(A)

Specification:

Vacuum cleaner x 1

Flexible hose x 1

Wet brush x 1

Operating instructions x 1

Extension tube x 2

Assembled brush x 1

Filter bag x 1

Schematic diagram:

