

CUSTOM CUT



Instructions for Care and Use
MODEL HC244B

CONAIR

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — any appliance is electrically live, even when the switch is off.

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. **Unplug immediately.**
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet immediately after using.**
- Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER WARNING

To reduce the risk of burns, electric shock, fire, or injury to persons:

be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is used on Alternating Current 120V AC 60 hertz only. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Do not attempt to defeat this safety feature.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

Short attachment comb (number 1) cuts hair to 1/8".

Medium-Short attachment comb (number 2) cuts hair to 1/4".

Medium-Long attachment comb (number 3) cuts hair to 3/8".

Long attachment comb (number 4) cuts hair to 1/2".

Long attachment comb (number 5) cuts hair to 5/8".

Long attachment comb (number 7) cuts hair to 3/4".

Left ear attachment comb lightly tapers over left ear.

Right ear attachment comb lightly tapers over right ear.

Repeat around sides and back of head.

To taper hair down to the neckline, use attachment comb #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").

ADVRENGLIA SEGURIDAD PARA CORTE DE CABELLO

Para reducir el riesgo de lesiones, siempre se deben

usar guantes de seguridad.

Guarde este manual de instrucciones para futuras referencias.

18 PIEZAS JUEGO DE PELUQUERIA

para su uso.

18 PIEZAS

ACCESORIOS ESPECIALES

 


Fig. 1

Chuchilla grande
y cortante

Chuchilla grande
pequeña

Chuchilla grande
de su cortante

MANTENIMIENTO DE LAS CUCHILLAS

 


Fig. 2

Chuchilla grande
de su cortante

INSTRUCCIONES DE MANTENIMIENTO

 


Fig. 3

Chuchilla grande
de su cortante

INSTRUCCIONES DE MANTENIMIENTO

 


Fig. 4

Chuchilla grande
de su cortante

