

Quick Setup Guide

ALT-A33PC

A L T U S




©2009 Sony Corporation Printed in China

Check the package contents


Wireless Audio Transmitter for PC (AIR-PC10T) (1)



Wireless Audio Receiver (AIR-A10R) (1)

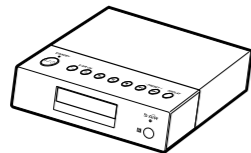


Cradle (1)

 

Wireless transceiver (1)



 
Remote (1)



R03 (size AAA) batteries (2)



 AC power adaptor (1)



Audio cable (1)




Other contents

- Application software S-AIR Cast™ (CD-ROM) (1)
- Operating Instructions (3)
- Warranty (1)


1 Hook up the Wireless Audio Receiver

1. Insert the wireless transceiver into the back of Wireless Audio Receiver.

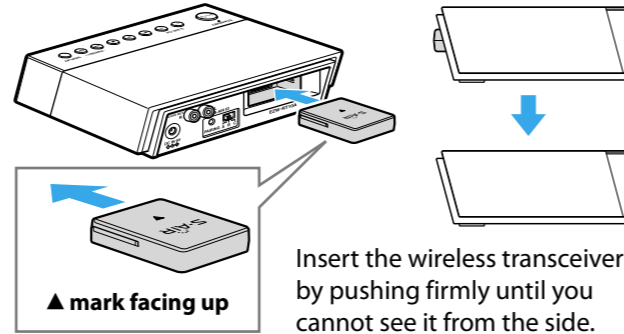


Insert securely until you hear a click.

2. Set the S-AIR ID on the back of Wireless Audio Receiver to "A."

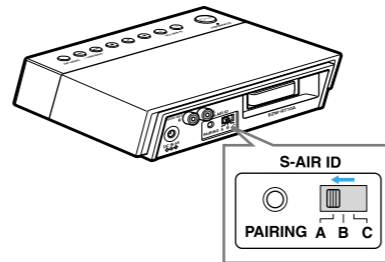


The S-AIR ID is set to "A" at the factory.

3. Connect the audio cable to the external music system.

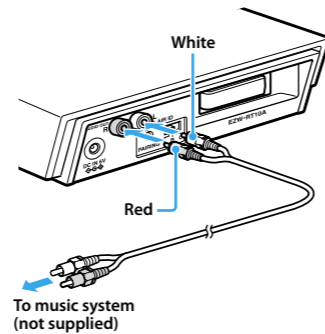


4. Connect and plug in the AC power adaptor (①), and turn the Wireless Audio Receiver on by pressing I/⏻ (②).

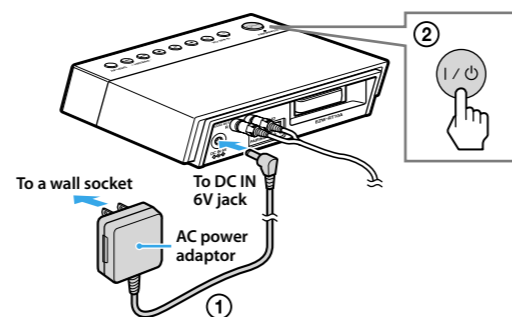

2 Connect the Wireless Audio Transmitter

1. Turn on your computer.

2. Quit all applications, then connect the Wireless Audio Transmitter to your computer.

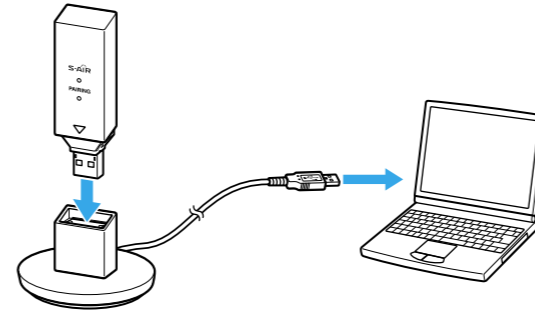


If the message to restart the computer appears, restart the computer.

Once the S-AIR connection is established, the S-AIR indicator on the Wireless Audio Transmitter and the Wireless Audio Receiver light up in green.

3 Start playback

Open your media player, press the play button to start music playback and enjoy.

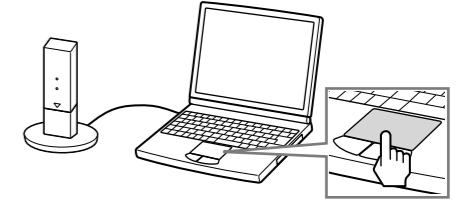

Now, you are ready to enjoy your computer's music library wirelessly throughout your home.

If there is no sound from the connected external music system, check the following:

- Adjust the volume of your computer.
- Make sure to set the sound playback device property on your computer to [AIR-PC10T] as shown below.
 - 1 Quit all applications (iTunes, etc.).
 - 2 Click in the following sequence:
 - Windows Vista (in Classic View):** [Start] – [Control Panel] – [Sound] – [Playback]
 - Windows XP (in Classic View):** [Start] – [Control Panel] – [Sound and Audio Devices] – [Audio]

Enjoy your music with S-AIR Cast™

With the supplied S-AIR Cast™ application software, you can control the media player on your computer using the buttons on the S-AIR Wireless Audio Receiver.

S-AIR Cast™ enables you to enjoy more advanced usage such as Remote Mode or Advanced Remote Mode.

Remote Mode enables the S-AIR Wireless Audio Receiver to remotely control the supported media player, and **Advanced Remote Mode** enables the S-AIR Wireless Audio Receiver to play music tracks without launching a media player. This allows you to enjoy music without interference from the Windows system or other application sound alerts.

For more details, refer to the Operating Instructions of AIR-PC10T.

- Microsoft, Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- iTunes is a registered trademark of Apple Inc.
- All other trademarks and registered trademarks are of their respective holders. In this manual, TM and ® marks are not specified.

Guía de instalación rápida ALT-A33PC

 
A L T U S

Comprobación del contenido del paquete


Wireless Audio Transmitter for PC (AIR-PC10T) (1)




Base (1)



Mando a distancia (1)

 


Adaptador de alimentación de ca (1)

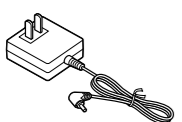

Otro contenido

- Application software S-AIR Cast™ (CD-ROM) (1)
- Manual de instrucciones (3)
- Garantía (1)

Wireless Audio Receiver (AIR-A10R) (1)

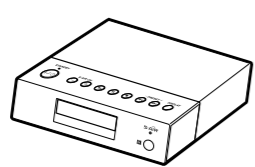


Transceptor inalámbrico (1)



Pilas R03 (tamaño AAA) (2)




 Cable de audio (1)




1 Conexión del Wireless Audio Receiver

1. Inserte un transceptor inalámbrico en el posterior del Wireless Audio Receiver.

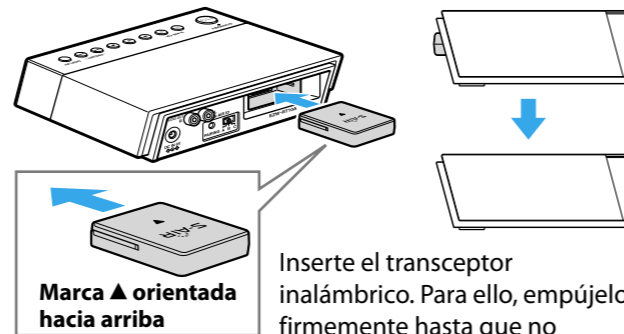


Inserte el transceptor inalámbrico. Para ello, empújelo firmemente hasta que no pueda verlo desde el lateral. Introdúzcalo con firmeza hasta que oiga un clic.

2. Ajuste el selector S-AIR ID en el posterior del Wireless Audio Receiver en "A."

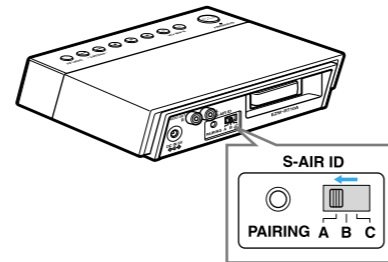


El selector S-AIR ID está ajustado en "A" de manera predeterminada.

3. Conecte el cable de audio al sistema de música externo.

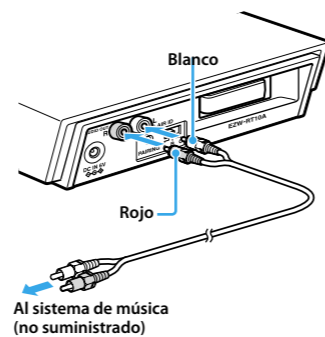


4. Conecte y enchufe el adaptador de alimentación de ca (1), y pulse I/⏻ para encender el Wireless Audio Receiver (2).

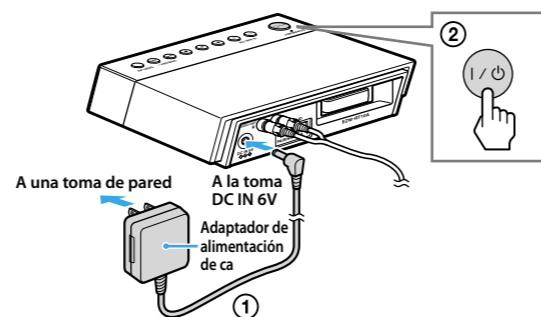

2 Conecte el Wireless Audio Transmitter

1. Encienda el ordenador.

2. Cierre todas las aplicaciones y conecte el Wireless Audio Transmitter al ordenador.

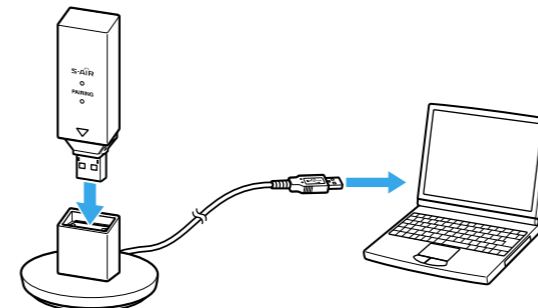


Si aparece un mensaje que indica que debe reiniciar el ordenador, reinicielo.

Cuando se establece la conexión S-AIR, el indicador S-AIR del Wireless Audio Transmitter y el Wireless Audio Receiver se iluminan en verde.

3 Inicie la reproducción

Abra el reproductor multimedia, pulse el botón de reproducción y disfrute de la música.

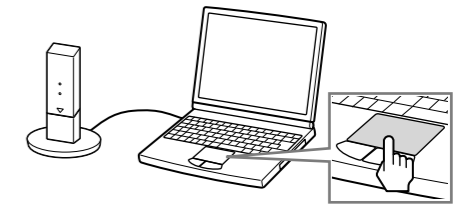

Ahora, ya puede disfrutar de la biblioteca musical de su ordenador de modo inalámbrico en toda la casa.

Si no se emite sonido desde el sistema de música externo conectado, compruebe lo siguiente:

- Ajuste el volumen del ordenador.
- Asegúrese de ajustar la propiedad del dispositivo de reproducción de sonido del ordenador en [AIR-PC10T], tal y como se muestra a continuación.

1 Cierre todas las aplicaciones (iTunes, etc.).

2 Haga clic en la siguiente secuencia:

Windows Vista (en la vista clásica): [Inicio] – [Panel de control] – [Sonido] – [Reproducción]

Windows XP (en la vista clásica): [Inicio] – [Panel de control] – [Dispositivos de sonido y audio] – [Audio]

Disfrute de su música con S-AIR Cast™

Con la aplicación de software S-AIR Cast™ suministrada, puede controlar el reproductor multimedia de su ordenador mediante los botones del S-AIR Wireless Audio Receiver.

S-AIR Cast™ le permite disfrutar de un uso más avanzado, como el Remote Mode o el Advanced Remote Mode.

El **Remote Mode** permite al S-AIR Wireless Audio Receiver controlar el reproductor multimedia suministrado de forma remota, y el **Advanced Remote Mode** permite al S-AIR Wireless Audio Receiver reproducir pistas de música sin ejecutar un reproductor multimedia. De esta forma, le permite disfrutar de la música sin tener que oír las interrupciones del sistema Windows ni las alertas sonoras de otras aplicaciones. Si desea obtener más información, consulte el manual de instrucciones de AIR-PC10T.

- Microsoft, Windows y Windows Vista son marcas comerciales o marcas comerciales registradas de Microsoft Corporation en los Estados Unidos y/o en otros países.
- iTunes es una marca comercial registrada de Apple Inc.
- Todas las demás marcas comerciales y marcas comerciales registradas son propiedad de sus respectivos propietarios. En este manual, no se especifican los símbolos TM y ®.