 




**MANUAL DE INSTRUCCIONES
LAVADORA SEMI-AUTOMATICA
LAV-5108**

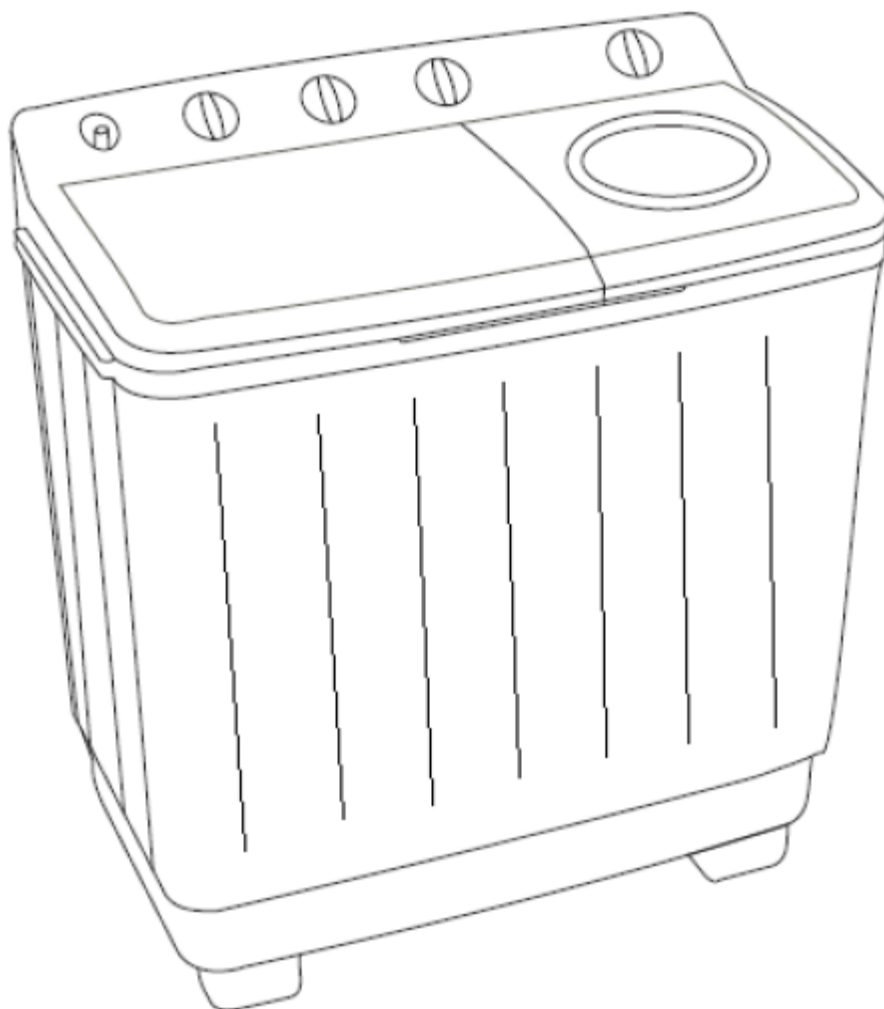

ESTIMADO CLIENTE


Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

CARACTERÍSTICAS	2
INSTRUCCIONES DE SEGURIDAD	2
ESPECIFICACIONES	2
DESCRIPCIÓN	3
BOTONES DE OPERACIÓN	4
ANTES DE USAR	5
LAVAR	5
SECAR	6
ENJUAGAR	7
LIMPIEZA Y MANTENIMIENTO	7
RESOLUCIÓN DE PROBLEMAS	7
DIAGRAMA DE CIRCUITOS	8

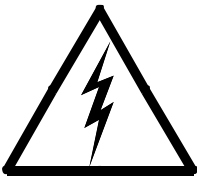 	PRECAUCIÓN RIESGO DE CHOQUE ELÉCTRICO , NO ABRA	
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.		
 	Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico. Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

CARACTERÍSTICAS

- Alta capacidad de lavado.
- Bajo ruido gracias a su tecnología de silenciamiento.
- Lavado fuerte: utilice el botón multi-pulsador y el flujo de lavado a mano para que las prendas no se retuerzan tanto. Utilice esta función para algunas prendas comunes como jeans y frazadas.
- Excelente estabilidad; no se mueve mientras lava o seca.
- Diseño atractivo.


INSTRUCCIONES DE SEGURIDAD

- Evite que la lavadora reciba los rayos directos del sol.
- No instale la lavadora en el baño.
- Evite mojar el panel de control.
- Evite que los niños jueguen con la lavadora.
- No coloque productos volátiles cerca de la lavadora.
- No utilice el agua con una temperatura mayor a 50°.
- No haga modificaciones al cable de poder. Éste debe conectarse por la tierra.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

ESPECIFICACIONES

	Lavado	Secado
Capacidad máxima	16 kg	6 kg
Suministro de energía	AC 115V/60Hz	
Potencia de entrada	500 W	210 W
Tiempo máximo	15 minutos	5 minutos
Indicador de agua	Alto, Medio o Bajo	
Modo de lavado/secado	Reverso automático	Centrifugado
Dimensiones	975 x 530 x 1000 mm (sin patas)	

 DESCRIPCIÓN

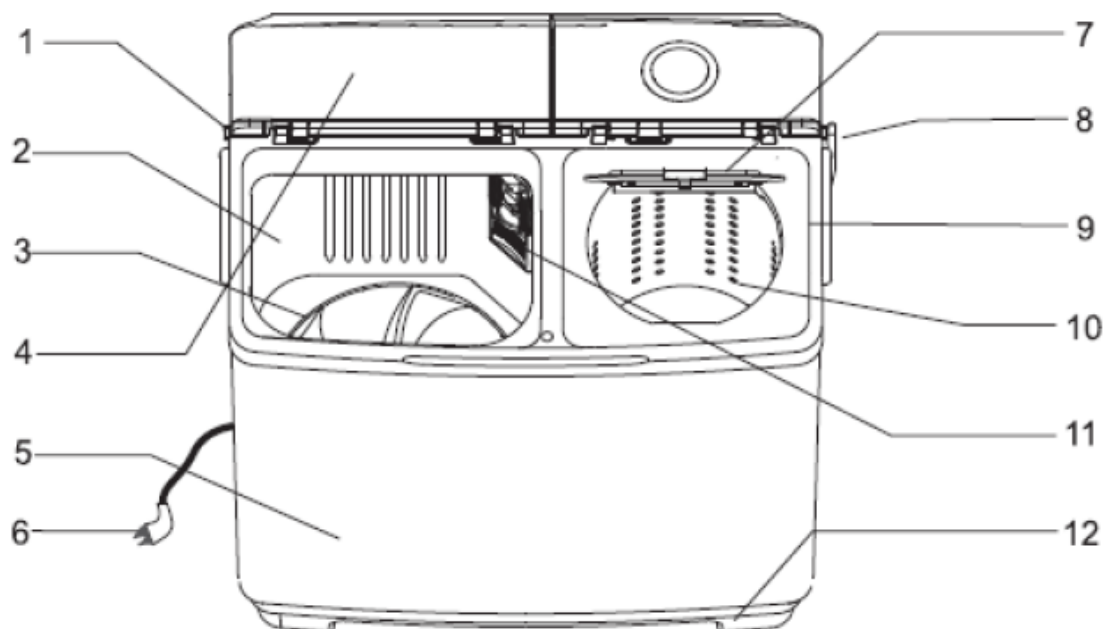

1. Panel de control
2. Tina de lavado
3. Pulsador
4. Tapa
5. Carcasa
6. Cable de poder
7. Tapa de seguridad
8. Manguera de drenaje
9. Marco
10. Tina de secado
11. Filtro
12. Base

ACCESORIOS

 


Tapa de secado



Manguera de entrada

BOTONES DE OPERACIÓN

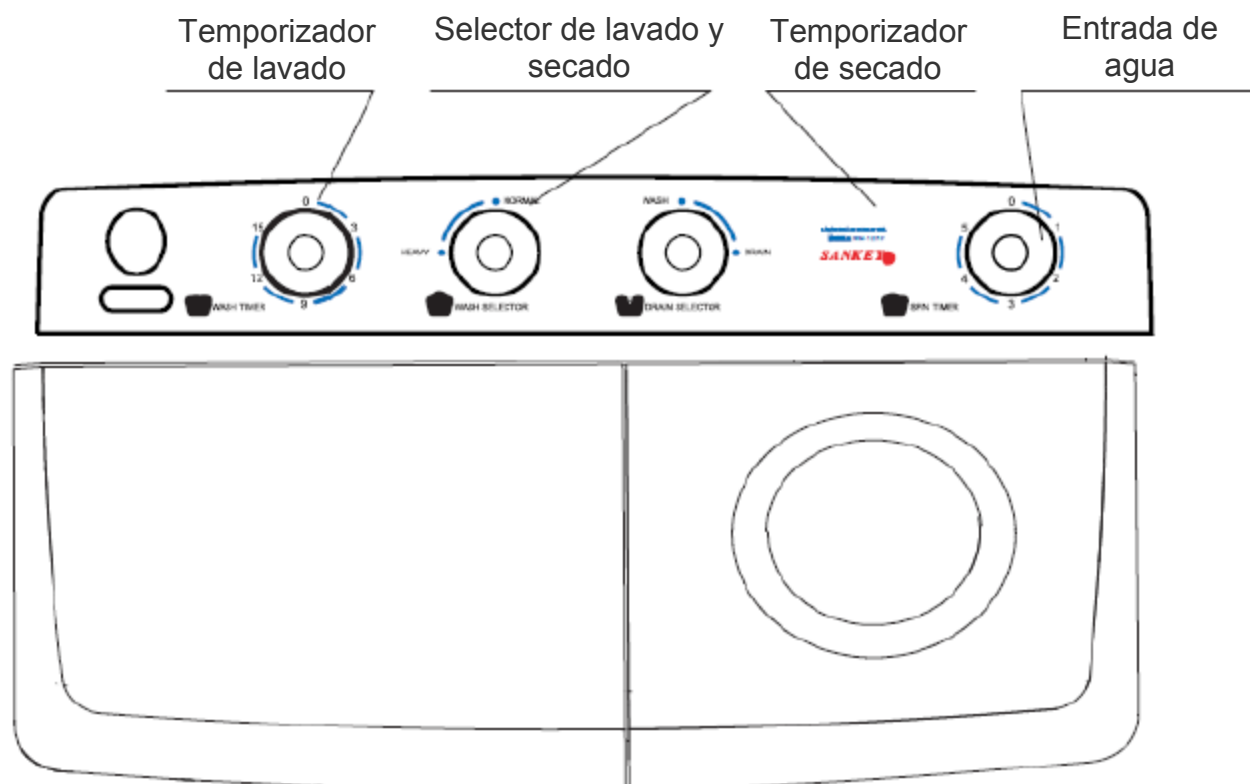

REFERENCIA

Camiseta (algodón) 150g	Camisa 200g	Traje (algodón) 200g
		
Interiores (algodón) 50g	Medias 50g	Bufanda (algodón) 300g
		

ANTES DE USAR

 
- Coloque la manguera de drenaje apuntando hacia el desagüe.
- Verifique los bolsillos para retirar cualquier objeto.
- Cierre las cremalleras de las prendas.
- Lave las prendas según su color.
- Retire la suciedad de las prendas.
- Lave las prendas de forma separada según su material.
- Coloque las medias en una malla para prendas delicadas.
- Verifique el tipo de lavado.
- Conecte el cable de poder.

LAVAR

1. Seleccione el nivel del agua de acuerdo con el material.
2. Ajuste el nivel del agua de acuerdo con el tipo de lavado.
3. Agregue el detergente y revuelva a medida que el agua alcanza el nivel medio y luego coloque las prendas en la tina.
4. Active el temporizador.
5. Active el selector de drenaje.

Usted puede lavar sábanas o mantas con un peso menor a cuatro kilos y que tengan la etiqueta de "lavar a mano".


1. Agregue el detergente en el agua de la tina.
2. Doble la manta como se muestra en la figura.

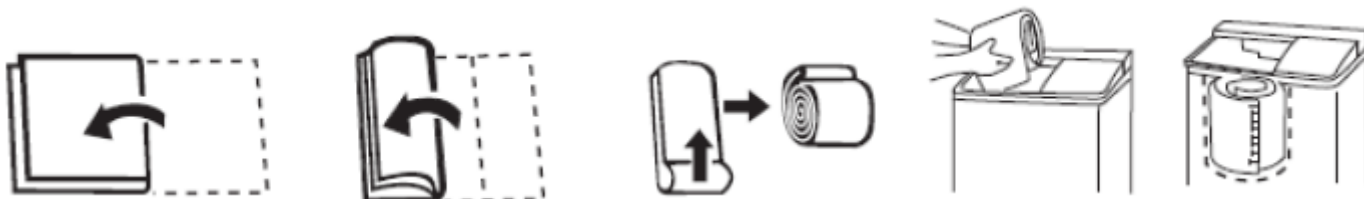

SECAR

1. Coloque las prendas en la tina de manera uniforme

 
2. Coloque la tapa de seguridad para evitar que la tina se sacuda en el proceso de secado

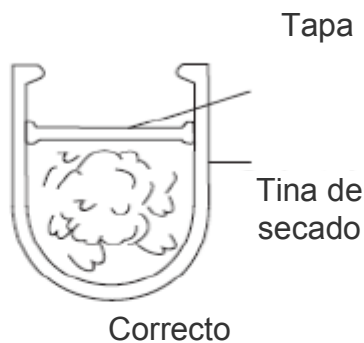


3. Cierre la tapa de seguridad y la tapa de secado

4. Seleccione el tiempo de secado de acuerdo con la siguiente tabla

 Tapa de secado

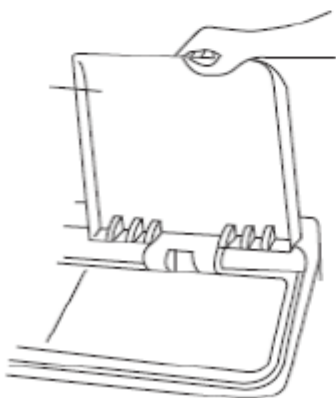

Material	Tiempo
Hilo	50s
Fibra	1-2min
Interiores	2-3min
Algodón	3-4min
Sábanas	5min

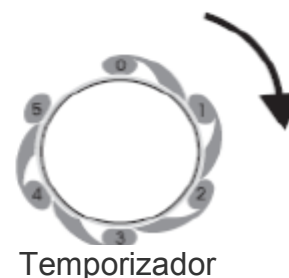 

Temporizador

- Levante la tapa si la tina se sacude con demasiada fuerza.
- Drene después de secar si el proceso determinado y secado se hace al mismo tiempo.

ENJUAGAR

A. ROCIAR Y ENJUAGAR

Coloque las prendas en la tina de lavado después de lavarlas.

Conecte un lado de la manguera de entrada en la entrada de agua para secar.

Abre la tapa para rociar de tres a cuatro minutos.

Ajuste el tiempo de secado a tres minutos.

Nota

No enjuague si el agua está muy sucia.

B. Secado

Para ahorrar agua, tiempo y electricidad, haga el proceso de secado antes de enjuagar.

1. Coloque las prendas en la tina de lavado después de enjuagarlas.
2. Conecte un lado de la manguera entrada en la entrada de agua para lavar.
3. Ajuste el selector de agua de acuerdo con el material.
4. Ajuste el nivel del agua de acuerdo con las prendas.
5. Para ahorrar agua, cierre la tapa cuando alcance el nivel del agua.
6. Ajuste el selector para enjuagar.
7. Coloque las prendas en la tina de lavado después de enjuagar.
8. Deseche el agua de enjuague.
9. Enjuague varias veces según necesite.

LIMPIEZA Y MANTENIMIENTO


- Limpie la cubierta de la lavadora con una prenda suave y humedecida. No utilice productos abrasivos ya que pueden dañar el acabado.
- Retire el filtro que retiene la pelusa, límpielo y vuélvalo a instalar.
- La manguera de drenaje se instala al lado de la lavadora, al igual que al lado de la tina de secado. Colóquela según necesite.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
La lavadora no funciona	Verifique la conexión del cable de poder, y que los botones no estén apagados
El drenaje no funciona	Verifique la posición correcta de la manguera de drenaje, y que no esté atorada
Se escuchan sonidos extraños al lavar	Verifique que se debe a objetos que se han dejado en las prendas
Se escuchan sonidos extraños al secar	Verifique que la lavadora esté correctamente balanceada, y que las prendas estén bien

 DIAGRAMA DE CIRCUITOS

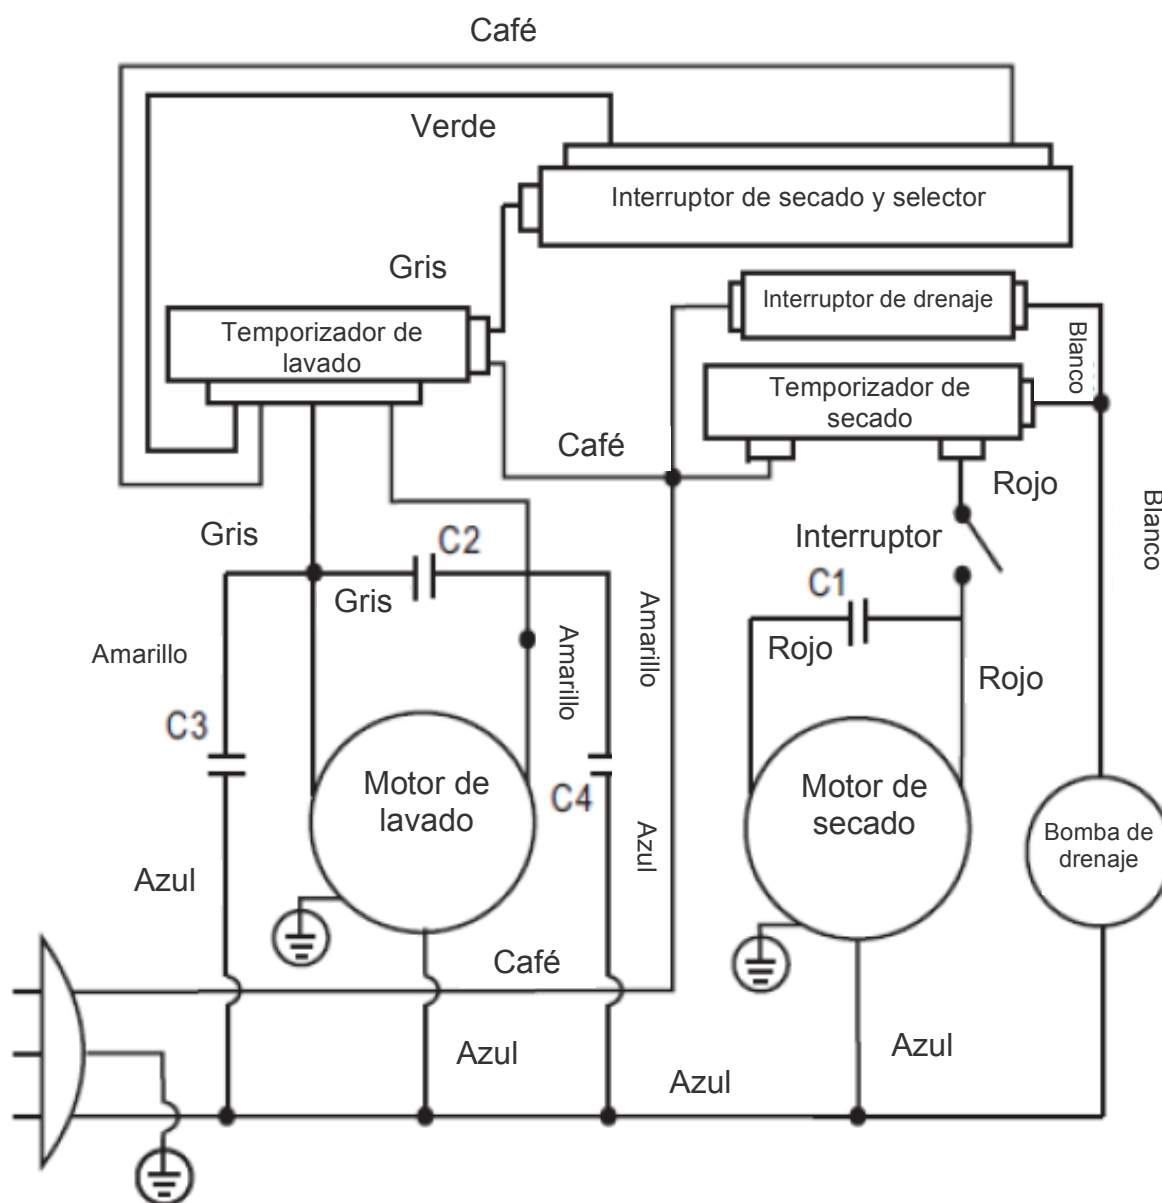


- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.



**INSTRUCTION MANUAL
SEMI-AUTOMATIC WASHING MACHINE**

 
LAV-5108

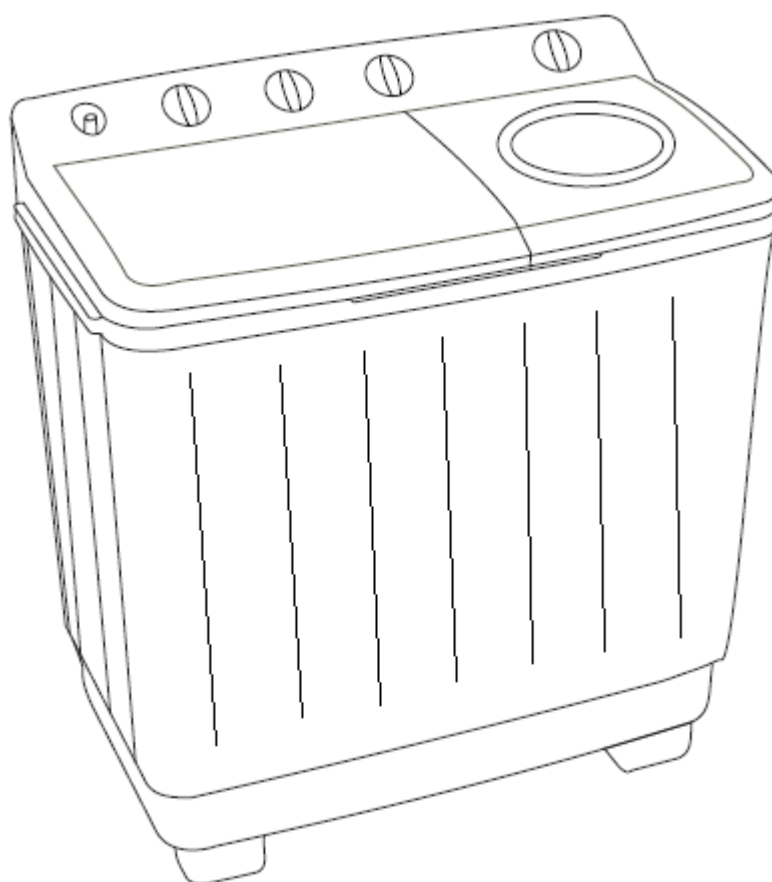

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

 If you need extra support, please write to info@premiermundo.com

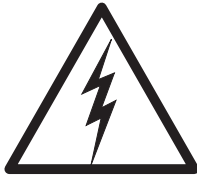	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.		
 	This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock. This sign means that there are important instructions of operation and handling in the manual that comes with this device.	


PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

 Parts name and accessory

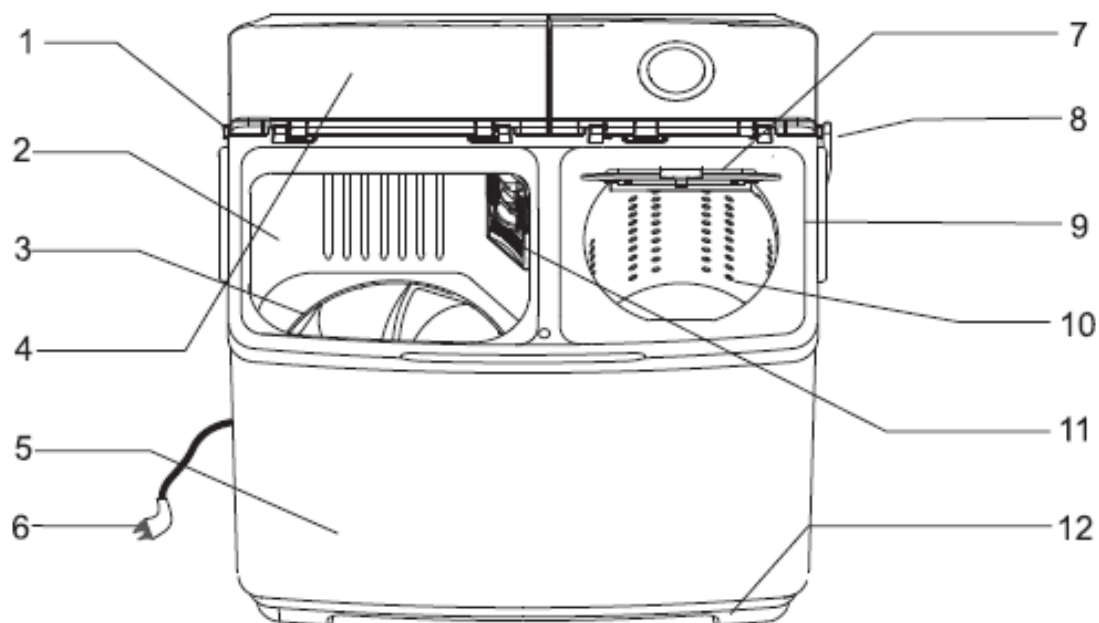

- 1.Control panel 2.Wash tub 3. Pulsator 4.Wash cover
 5.Body 6.A C 7.Safety cover 8.Drain hose
 9.Frame 10.Spin tub 11.Lint-filter 12.Base

Accessory	
 Inner cap	 Inlet hose

Production introduction


The following is its details:

- Super washing capacity.
- Low noise, adopt newest silencer technology.
- Strong washing: use multi-pulsator, hand-rubbed flow, and lower the clothes twist. Available for common clothes, but for blanket, jeans and so on.
- Complete function, Simple operation: Inlet selector, water-Adjustment, lint-filter, water level direction, rinse and so on.
- Good stability; not move during washing, spinning.
- Beautiful appearance:

Main Technical Data Sheet

	Washing	Spin-drying
Capacity (Maximum)	16kgs	6 kgs
Power Supply	AC115V/60Hz	
Input power	500W	210W
Maximum timing	15 minutes	5 minutes
Indicate of water	High , Medium, Low	
Modes of washing/spinning	Automatic reverse/hand-rubbing like	Centrifugal
Overall dimension	975 x 530 x 1000mm (without feet)	

 Operation name

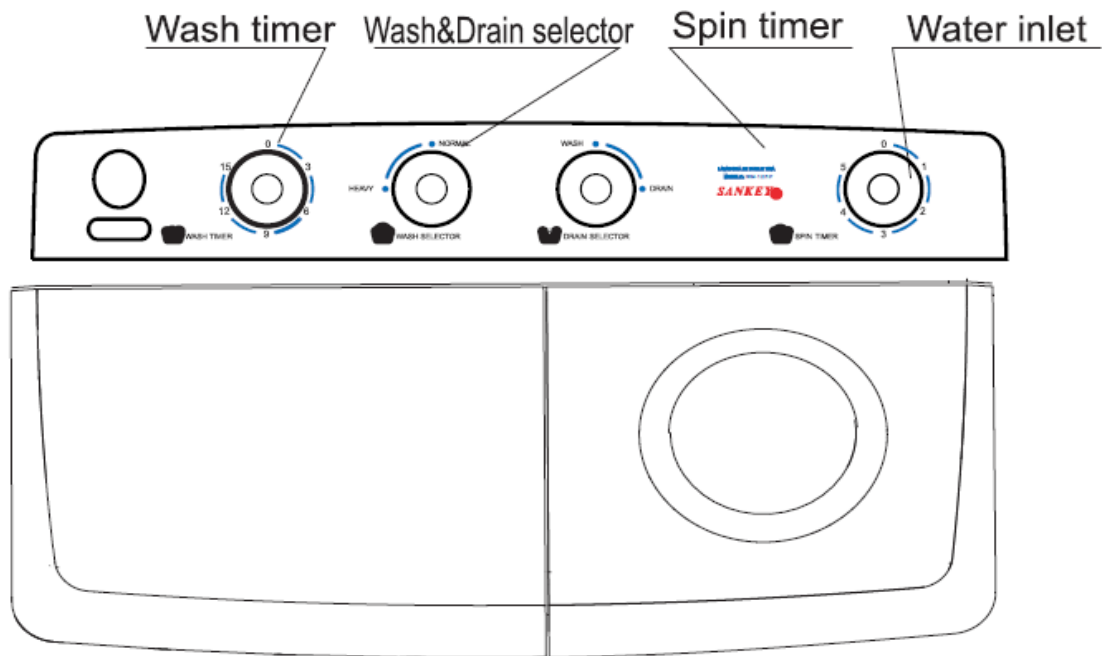

If the design is not consistent with that in the manual,
and we will not account for it separately.

Enclosed: reference

T-shirt(cotton) 150g	Shirt(slub) 200g	Siut(cotton) 500g
Pants(cotton) 50g	Socks(slub) 50g	Scarf(cotton) 300g

Prepare before use

 
- Lay down drain hose to the cloaca.
- Put one side of drain hose on the tap, and the other side into the inlet.
- Take clothes out, and clean the dirty.
- Wash the clothes separately according to its material.
- For the socks, please put it into net to wash.
- Please wash referring to the list.
- Plug into the connector.

ATTENTION BEFORE USE

- Check pocket, in case of coin, barrette, and so on.
- Turn clothes outside in case of fuzz
- To prevent it from twisting, please knot.
- Please zip up clothes.
- Please wash fading clothes separately.
- Please put fleecy clothes into the net to wash.

Wash

1. Select water level according to its material.
2. Adjust the water level according to washing.
3. Pour scour into tub and churn up as the water reaches the middle level. And then put clothes into wash tub.
4. Turn the washing timer to the following position.

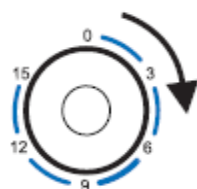

Wash timer

5. Put selector to the drain position to drain.

● The machine is available for slub blanket under 4kg marked "wash by hand". The details;

 
- ❶ Pour the liquid scour dissolved in the warm water into wash tub.
- ❷ Fold blanket according to the following picture, and put it into tub.




● Folio



● Fold third


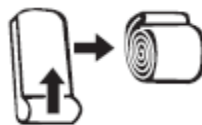


● Fold blanket

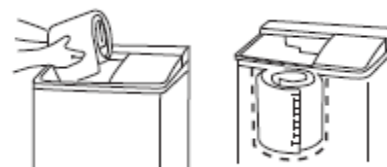 

● Put it into tub,
its edge downwards

  Spinning

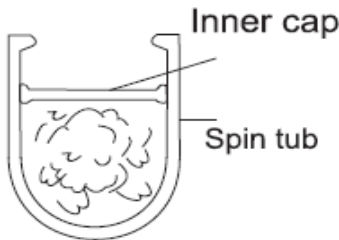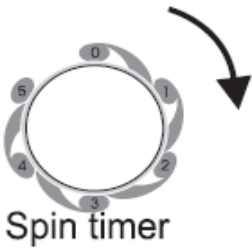1.Put clothes into tub evenly.	2.Press the safety cap incase it will cause to shake during spinning.														
	 														
3.Close safety cover and spin cover	4.Selecting spin time referring to the following chart.														
	<table border="1"> <thead> <tr> <th>Wash</th><th>Spin timer</th></tr> </thead> <tbody> <tr> <td>Thread</td><td>50s</td></tr> <tr> <td>Fibre/slub</td><td>1min</td></tr> <tr> <td>Fibre</td><td>1-2min</td></tr> <tr> <td>Underwear</td><td>2-3min</td></tr> <tr> <td>Cotton/hump</td><td>3-4min</td></tr> <tr> <td>Blanket(cotton)</td><td>5min</td></tr> </tbody> </table> 	Wash	Spin timer	Thread	50s	Fibre/slub	1min	Fibre	1-2min	Underwear	2-3min	Cotton/hump	3-4min	Blanket(cotton)	5min
Wash	Spin timer														
Thread	50s														
Fibre/slub	1min														
Fibre	1-2min														
Underwear	2-3min														
Cotton/hump	3-4min														
Blanket(cotton)	5min														

- ⚠ Open the spin cover right now if spin tub shake badly and make sure of machine stability, and then put washing well.

- ⚠ Please drain 1m after spin if draining and spinning happen at the same time.

Rinse

A. Spray and rinse

Rinse in the spin tub.

- ① Put Washing into spin tub after washed.
- ② Connect one side of inlet hose into the water inlet for spin.
- ③ Open the tap to spray 3-4min.
- ④ Set up the spin time, 3min.



No rinse if there is rust in water. Because it is apt to adhere to washing.

B. Rinse

Rinse in the spin tub.

To save water, time, electricity, please spin before rinse.

- ① Put the clothing into wash tub after rinsed.
- ② Connect one side of inlet hose into the water inlet for wash.
- ③ Selecting the water selector according to its material.
- ④ Set the water level up according to clothing.
- ⑤ To save water, please close the tap when it reaches water level.
- ⑥ Adjust the selector to rinse.
- ⑦ Put washing into spin tub after rinse.
- ⑧ Get rid of rinse water.
- ⑨ Rinse several times according to clothing feculence, clean it and dry.



Please bear two points in your mind after wash.

1. Pull out the plug.
2. Take off inlet hose.

Body maintenance

Clean the dirt and water on the cover with soft cloth. And you had better not use cleanser or volatility in case it would destroy plastic body.



Filter clean

Take off

- 1 Press and pull filter out

 
Button

- 2 Turn lint-filter and clean it.

- 1 Install
Plug filter into water board, and push it.

Lint-filter

Over flow cover

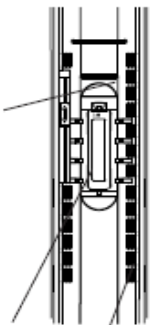


Prevent frostbite

- 1 Close tap, take inlet-hose down and drain.
- 2 Lay down drain hose and drain completely.

After frozen

 - 1 Put inlet hose into 50°C water to dissolve.
- 2 Pour the 50°C water into wash tub for 10m.
- 3 Install inlet hose and open tap to make sure of inlet and outlet.

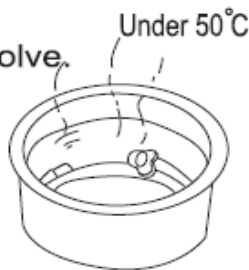


Maybe the button slide down from the hole if you adjust it brutishly. So please be carefully and slightly.

Handle

Water level handle

 
Over flow

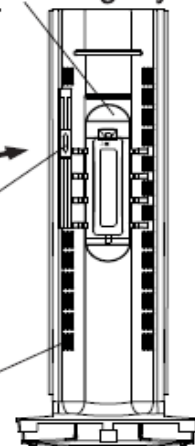

Drain hose change

Drain hose is installed at the side of wash. And it can be installed at the side of spin with the request of place.

 
- ❶ Pull out plug and drain completely.
- ❷ Lay machine down where it is spread a blanket.
- ❸ Take drain hose out from hose and put it into another hose.

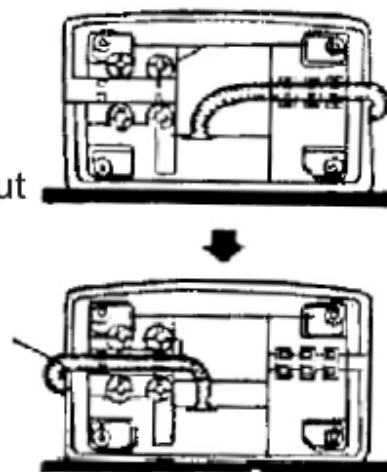

Place to install

Please avoid the following place to prevent electricity problem, prevent color and form from changing.

 - Sun-baked
- Rainy and moist
- Scraggly

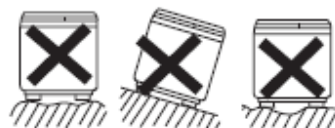

Attention

A.C cord of this machine adopts the Y connection.
Please do not open the A.C cord by yourself in case that it would cause problem. If it need repairing, please contact after market.

Attention:

- ☐ Pull out plug after use
- ☐ Please use the correct plug
- ☐ The max machine bolster angle is 2°
- ☐ Please do not take A.C cord and electric parts down by yourself
- ☐ There is aeration entrance in the base. Do not let some sundries like blanket jam into it.
- ☐ Connecting earthing wire to the live wire is forbidden.

Please pull out plug to check if there is following problems:

Problems	Reason
Not work	Power or not Plug or not It is on the 0 position
Not drain	Drain hose is reserved or not Drain hose is frozen or not Drain hose is jammed by dust or not
Abnormal sound during washing	Coin or others fall into wash tub or not
Abnormal sound during spinning	Machine is balanced or not Clothes are evenly or not Clothes fall out of spin tub or not

No contacting wash or spin tub during spinning	Clothes forbidden
Spin does not stop in 15 min after opened. Please stop using and contacting after market. 	The volatile is prohibited in case that it would cause fire. Button and thread should be packed well before washed. 
Don't install machine in the bathroom	Close spinning cap
Prevent rusting, reducing insulation. 	Clothes is easy to be destroyed if expanding out of cap. 
Attention for clean	Over 50°C water is forbidden
Don't water operation parts, such as console in case that electric parts would be destroyed.. 	Prevent distorting, aging. 
Boy is forbidden to play nearby	Take care of fire, heater
It is very dangerous once boy fell into tub. 	Don't put the burning incense candle nearby in case it distort or fire. 

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CIRCUIT DIAGRAM

