



**MANUAL DE INSTRUCCIONES
SOPORTE PARA TV LCD
WM-3292**



ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com

WWW.PREMIERMUNDO.COM



LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

INTRODUCCIÓN

Con el fin de que obtenga el mayor desempeño de su soporte, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo.

INSTRUCCIONES DE INSTALACIÓN

- Este producto está diseñado para soportar televisores pantalla plana de hasta 75kg a una pared firme vertical.
- Advertencia:** Preste atención en que no haya partes faltantes o defectuosas. Nunca utilice partes que se encuentren dañadas ya que la instalación defectuosa puede causar serios daños.
- Nota:** Todas las piezas aquí incluidas son para el montaje en pared. Si usted no está seguro acerca de la fortaleza de su pared, consulte a un experto. También puede hacerlo con relación a la instalación correcta del soporte en otro tipo de paredes. Estas piezas no son para usar en acero.
- Precaución:** No instale el soporte en paredes de yeso o paredes de panel.
- Verifique que los tornillos estén bien apretados, cada dos meses.
- Las partes aquí suministradas son para uso exclusivo de este producto. No utilice otras piezas para el montaje.**

LISTA DE PARTES

A		Placa de pared	x 1	B		Riel de TV	x 2
C						Barra de Seguridad	x1
D		Arandela M4/M5/M6/M8	x 4	E		Tornillo 6mm	x 6
F		Chazo de concreto	x 6	G		Tornillo Mecanizado M4x30mm	x 4
H		Arandela para tornillo	x 6	I		Espaciador de plástico	x 4
J		Tornillo Mecanizado M8x25mm	x 4	K		Tornillo Mecanizado M8x40mm	x 4
L		Tornillo Mecanizado M5x30mm	x 4	M		Tornillo Mecanizado M6x30mm	x 4


MONTAJE SOBRE PARED DE LADRILLO O DE CONCRETO

Use la placa como plantilla para marcar 6 puntos en la pared. Tres en el borde inferior y tres en el borde superior. Asegúrese que la distancia entre cada dos agujeros sea de 200mm. Taladre en cada marca con una braca de 10mm agujeros de 60mm de profundidad como mínimo. Inserte en cada agujero un chazo de concreto (F) y por ultimo sujete la placa a la pared usando seis tornillos (E) y seis arandelas (H).

MONTAJE EN PARED DE MADERA


La placa debe estar montada sobre dos vigas de madera. Use un buen sensor para localizar las vigas al interior de la pared de madera. Puede hacerlo también usando puntillas. Use la placa como plantilla para marcar las locaciones a taladrar. Taladre los agujeros a una profundidad de 3mm con una broca de 4mm a la altura que desee. Instale la placa a la pared usando cuatro tornillos (E) y cuatro arandelas (H). Asegúrese que superficie plana de la placa queda contra la pared.

Nota: No use chazos de concreto cuando realice el montaje en paredes de madera.

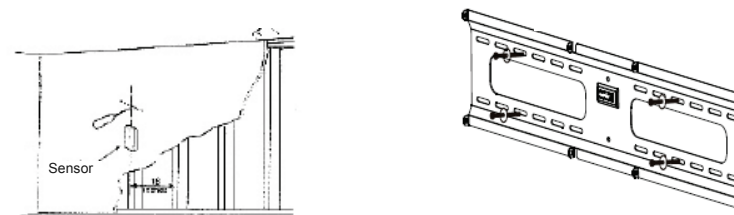

ENSAMBLE DE LA PANTALLA

Monte los rieles a la parte trasera del televisor. Asegúrese que los dos rieles del televisor (B) están montados a la misma distancia del borde superior y lo más centrados posible usando los tornillos M4, M5, M6 y M8 que se proveen con este equipo como se muestra en el diagrama 2-A. Si la pantalla es curva, ponga los espaciadores de plástico (I) yuxtapuestos al panel trasero del televisor y los rieles como se muestra en el diagrama 2-B. Para televisores de superficie trasera plana no necesita de los espaciadores como en la figura 2-C. aquí proveemos cuatro arandelas extras en caso de que los tornillos sean muy largos.

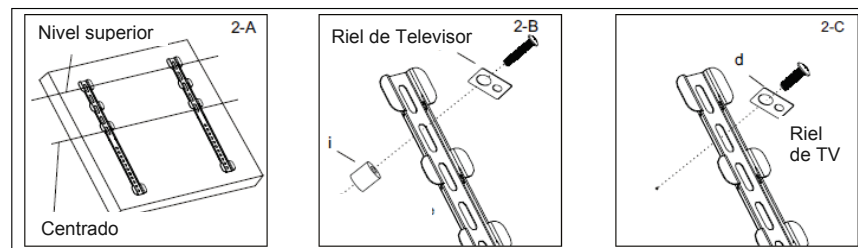


AJUSTAR PANTALLA

Descargue el televisor en la placa: primero enganche los rieles del televisor en la parte superior de la placa (A). Luego inserte la barra de seguridad (C) por el espacio inferior del televisor y los rieles para poner el seguro como se muestra en la figura 4-B.

Figura 4-A: vista frontal del plasma ensamblado

Figura 4-B: barra de seguridad con candado

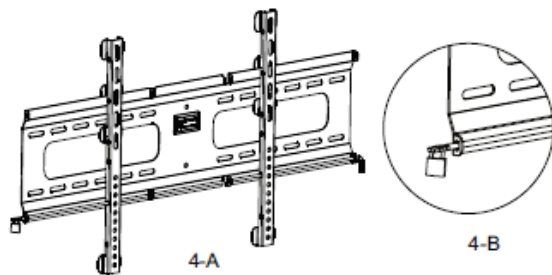



INSTRUCTION MANUAL
LCD TV BRACKET
WM-3292



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to info@premiermundo.com

WWW.PREMIERMUNDO.COM



PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

ASSEMBLY INSTRUCTIONS FOR FIXED FLAT PANEL WALL MOUNT













 
This product is designed to mount flat panel televisions weighing up to 75kg to a vertical firm wall.

Safety Warning: Be careful to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury.

Note: The included hardware is for mounting on walls. If you are uncertain about the nature of your wall, consult an expert. Please consult your hardware or installation professional for proper mounting to other types or walls. The supplied hardware is not for steel.

Forbidden Instruction: Do not mount onto plasterboard or paneled walls.

The wall plate is optional.

(a)		Wall Plate	x1	(b)		TV Rail	x2
(c)				Safety bar			x1
(d)		M4M5M6M8 Washer	x4	(e)		6mm Lag Bolt	x6
(f)		Concrete Anchor	x6	(g)		M4x30mm Machine Screw	x4
(h)		Lag Bolt Washer	x6	(i)		Plastic spacer	x4
(j)		M8x25mm Machine Screw	x4	(k)		M8x40mm Machine Screw	x4
(l)		M5x30mm Machine Screw	x4	(m)		M6x30mm Machine Screw	x4

SUPPLIED PARTS: Supplied joint parts are exclusive for using in this product. Other joint parts are forbidden to use on this product. If any parts are missing or faulty, telephone the special franchiser for a replacement.

1 FIX TO WALL

Note: This product should be mounted to solid brick, concrete or hard wood batten/studs wall.

1a. SOLID BRICK AND CONCRETE BLOCK MOUNTING: Use the Wall Plate (a) as a template to mark 6 holes locations on the wall. Three in the top row slots and three more in the bottom row. Make sure these holes are level and there is at least 200mm between any two holes. Pre-drill these holes with a 10mm masonry bit to at least 60mm in depth. Insert a Concrete Anchor (f) into each of these holes. Attach the Wall Plate to the wall using 6 Lag Bolts (e) and 6 Lag Bolt Washers (h).

1b. HARD WOOD WALL MOUNTING: The Wall Plate (a) **MUST** to be mounted to two wood studs.


Use a high quality stud sensor to locate three adjacent studs. It is a good idea to verify where the studs are located with an awl or thin nail shown in diagram 1-A. Pre-drill a 3mm deep hole at the desired height in each stud using a 4mm drill bit. Use the Wall Plate as a template to mark the location of the second hole in each stud. Pre-drill these holes using the 4mm drill bit as well. Attach the Wall Plate to the wall using the 4 Lag Bolts (e) and 4 Lag Bolt Washers (h). Make sure the Wall Plate is oriented so the flat surface in the center of the plate is against the wall shown in diagram 1-B.

Note: Do not use any concrete anchor when you mount the bracket onto hard wood wall.

Diagram 1-A






Diagram 1-B

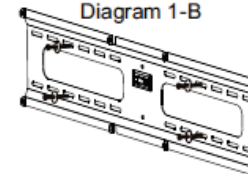

2 FIT SCREEN

2. MOUNT THE TV RAILS TO THE BACK OF YOUR FLAT PANEL TV: Make sure the two TV Rails (b) are mounted at an equal distance from the top of the TV and as close to the center as possible as shown in diagram 2-A. M4, M5, M6 and M8 bolts are provided. Plastic Spacers (i) are provided for use with M4, M5, M6 and M8 TV mount bolts on TVs with curved or recessed back panels as shown in diagram 2-B. If you are mounting to a television with a flat back you will not need a plastic spacer as shown in diagram 2-C. **Make sure these bolts are right!** Some televisions have shallow threaded inserts; we have provided 4 extra washers you may use to offset this if the provided bolts are too long.

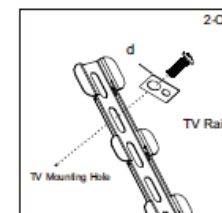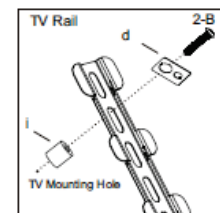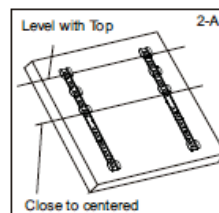



3 ADJUST

3. HANG THE TV ONTO THE WALL PLATE:

First hook the TV Rails over the top of the Wall Plate (a). Then insert the safety bar (c) into the gap at the bottom of the TV Rails and add a lock as showed in diagram 4-B.

Diagram 4-A: Front view of the fixed plasma mount assembled.

Diagram 4-B: Safety bar with a lock

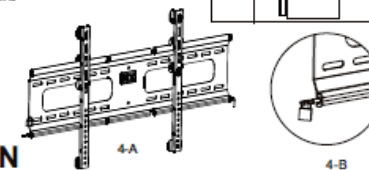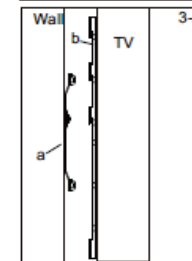

TENDING INSTRUCTION

Please check whether screws are fixed well each two months. IF YOU HAVE ANY DOUBTS REGARDING INSTALLATION CONSULT OUR SPECIAL FRANCHISER.