




Active Speaker System

Operating Instructions
Manual de instrucciones
Manual de instruções




RDP-NWD300




©2011 Sony Corporation Printed in Malaysia

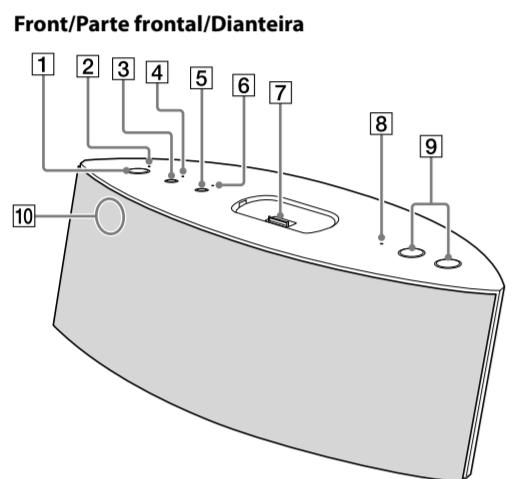A

Front/Parte frontal/Dianteira

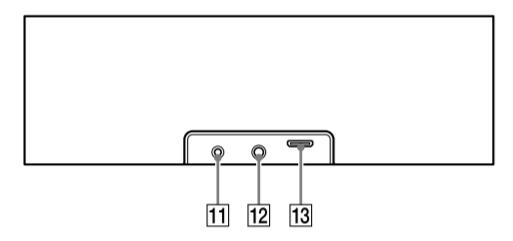

Rear/Parte posterior/Traseira

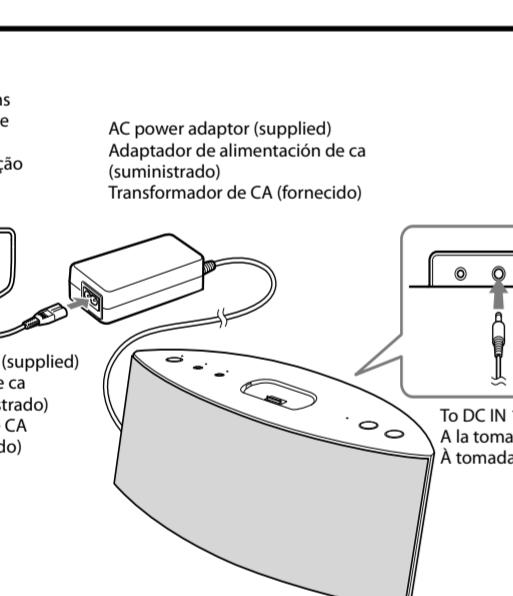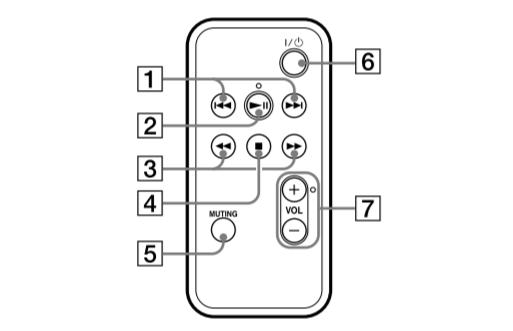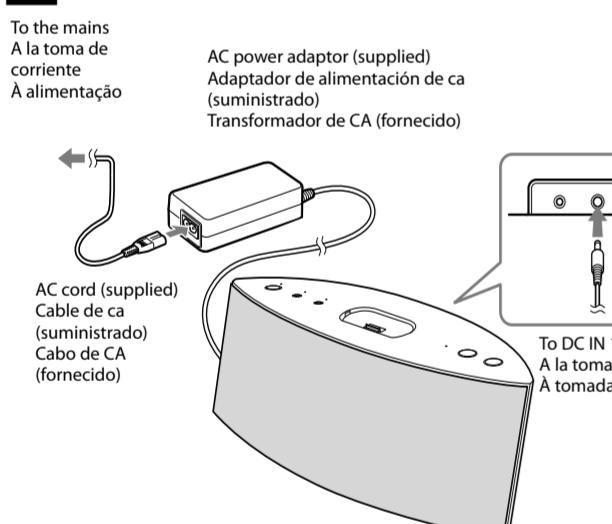B**C**AC power adaptor (supplied)
Adaptador de alimentación de CA (suministrado)

Transformer de CA (fornecido)

AC cord (supplied)
Cable de CA (suministrado)

Cabo de CA (fornecido)

To the mains
A la toma de corriente
À alimentaçãoTo the main unit
A la toma de corriente del sistema
A alimentaçãoTo the remote control
A la toma de corriente del mando a distancia
A alimentação

English

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

The nameplate is located on the bottom exterior of the system.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet.

Should you notice an abnormality in the system, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

WARNING

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Headelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that at this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

"WALKMAN" and the "WALKMAN" logo are registered trademarks of Sony Corporation.

Precautions

On safety

• AC cord must be changed only at the qualified service shop.

• Use only the supplied AC power adaptor. Do not use any other AC power adaptor.

• The nameplate is located on the bottom exterior.

• Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.

Where purchased
All countries/regions 100 V - 240 V AC,
50/60 Hz

• The main unit is not disconnected from the AC power source (mains) as long as it is connected to the AC outlet, even if the main unit itself has been turned off.

Notes
• Turn off the main unit before disconnecting the AC power adaptor. If the AC power adaptor is connected then disconnected from the main unit without turning off the main unit, it may cause a malfunctions.

• Use only the supplied AC power adaptor. Do not use any other AC power adaptor to avoid damaging the main unit.

• Disponible para cargar y utilizar el

- After operating the system with the AC power adaptor, disconnect the AC power adaptor from the wall outlet if the system is not to be used for an extended period of time. Just switching the I/O (power/standby) button to standby does not turn the AC power adaptor off.

On placement

- Do not place the system in an inclined position.
- Do not place the system in locations that hot and subject to direct sunlight, dusty, very humid, or extremely cold.
- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

- Use caution when placing the system or AC power adaptor on a specialty treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene. If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

On operation

- Should any solid object or liquid fall into the system, have the system checked by qualified personnel before operating it any further.
- Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards, or floppy disks with magnetic coding in front of the system for an extended period of time.

If the TV picture or monitor display is magnetically distorted

- Although this system is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off.

- When there seems to be no improvement, locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects which magnify or magnified sound near the TV set/personal computer set, such as audio racks, TV stands, toys etc. These may cause magnetic distortion to the picture due to their interaction with the system.

Design and specifications are subject to change without notice.

Supplied accessories

AC power adaptor (1)

AC cord (3)

Remote commander (1)

Lithium battery CR2025 (1) (preinstalled for the trial use of the remote commander)

Attachment for "WALKMAN" (2)

Operating Instructions (1)

Dimensions (w/h/d)
50 mm Full range, magnetically shielded

Impedance
Bass reflex

Maximum input power
4 Ω

Speaker section
Speaker system
50 mm Full range, magnetically shielded

Enclosure type
Bass reflex

Amplifier section
Practical maximum output
5 W + 5 W (1 kHz, 4 Ω)

Input impedance
LINE IN jack 45 kΩ (at 1 kHz)

General
Power
DC 13 V 2 A (via supplied

AC power adaptor, AC 100 V - 240 V power supply)

Input/output
WM-PORT plug × 1, WM-PORT jack × 1, LINE IN jack (stereo mini) × 1, DC IN jack × 1

Dimensions (w/h/d)
Approx. 285 × 95 × 119 mm

Mass
Approx. 830 g

Operating temperature
5°C to 35°C

Fuente de alimentación

Adaptador de alimentación de ca (suministrado)

Modelo: RDP-NWD300

POR FAVOR LEA DETALLADAMENTE ESTE MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR EL EQUIPO. RECUERDE QUE UN MAL USO DE SU APARATO PODRÁ ANULAR LA GARANTÍA.

Fuente de alimentación:

cc de 13 V 2 A

Adaptador de alimentación de ca (suministrado)

Modelo: AC-E1320D1

Entrada: cc de 100 a 240 V 50/60 Hz

Salida: cc de 13 V 2 A

ADVERTENCIA

Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia ni a la humedad.

Para reducir el riesgo de incendios o electrocución, no exponga el aparato a gotas o salpicaduras de agua ni sobre los objetos con líquidos, como flores.

No sitúe el aparato en un espacio cerrado, como una estantería o un armario empotrado.

La placa del nombre está situada en la parte posterior exterior de esta unidad.

El sistema no se desconecta de la fuente de alimentación mientras se encuentre conectado a la toma de corriente de ca, aunque esté apagada.

• Tras utilizar el sistema compruebe si la tensión de la alimentación del mismo es idéntica a la de la fuente de alimentación local.

Lugar de adquisición
Todos los países y regiones 100 V - 240 V ca, 50/60 Hz

Tensión de alimentación

100 V - 240 V ca, 50/60 Hz

Notas

- Es posible que algunas operaciones del mando a distancia no funcionen, o que funcionen de manera diferente a la que se indica, en función de las especificaciones del "WALKMAN" que esté utilizando.

- El botón VOLUME +/- (pista anterior o siguiente) no es pretendido utilizar para conectar el sistema con un ordenador.

- El botón LINE INPUT (pista anterior o siguiente) no es pretendido utilizar para conectar el sistema con un ordenador.

- La unidad principal no se desconecta de la fuente de alimentación de ca mientras se encuentre conectada a la toma de corriente de ca, aunque esté apagada.

- Tras utilizar el sistema con el adaptador de alimentación de ca, desconecte el adaptador de la pared si no va a utilizar el sistema durante un cierto tiempo. Solo con cambiar el botón I/O (encendido/en espera) al modo en espera no se apagará el adaptador de alimentación de ca.

- No ponga el sistema en una posición inclinada.

- No coloque el sistema en lugares que sean calurosos y expuestos a los rayos directos del sol, polvorientos, muy húmedos, o demasiado fríos.

- No deje el sistema cerca de fuentes de calor, ni en lugares expuestos a la luz solar directa, polvo excesivo, humedad, lluvia o golpes.

- Tenga cuidado si coloca la unidad o el adaptador de alimentación de ca en un solo tramo de manera especial (encerrado, barnizado con aceite pulido, etc.), ya que es posible que aparezcan manchas o se descolora.

- Limpie el gabinete, el panel y los controles con un paño suave apenas humedecido con una solución neutra de detergente. No utilice ningún tipo de almohadilla abrasiva, polvo áspero o solvente, como por ejemplo alcohol o bencina. Si tiene dudas o problemas relacionados con su sistema, consulte con su distribuidor Sony más cercano.

- Funcionamiento

- Si se introduce algún objeto sólido o líquido en el sistema, haga que sea revisado por personal especializado antes de volver a usarlo.

- Aunque este sistema esté magnéticamente protegido, no deje cintas grabadas, relojes, tarjetas de crédito o dispositivos que utilizan codificación magnética delante del mismo durante un período prolongado de tiempo.


- Si la imagen del televisor o la pantalla del monitor aparece distorsionada debido al magnetismo

- Aunque este sistema esté magnéticamente protegido, en algunos casos la imagen de algunos televisores u computadoras personales puede distorsionarse debido al magnetismo. Si esto ocurre, apague el televisor o la computadora y enciéndalo de nuevo tras transcurridos de 15 a 30 minutos. En el caso de la computadora personal, tome medidas adecuadas, como guardar los datos antes de apagarla. Si no se produce ninguna mejoría, aleje el sistema del televisor o de la computadora. Asimismo, no coloque imanes cerca del televisor o de la computadora, como soportes de audio, mesas de televisores, juguetes, etc., ya que pueden provocar una distorsión magnética de la imagen debido a la interacción con el sistema.




Notes

- Some operations of the remote commander may not work, or work differently as indicated, depending on the specification of the "WALKMAN" you are using.

- When the audio device is connected to the LINE IN jack, the 1/2/3/4 buttons of the remote commander work.

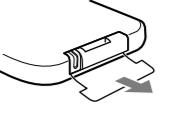

2 Lithium battery CR2025 (not supplied)
Pila de litio CR2025 (no suministrada)
Pilha de lítio CR2025 (não fornecida)

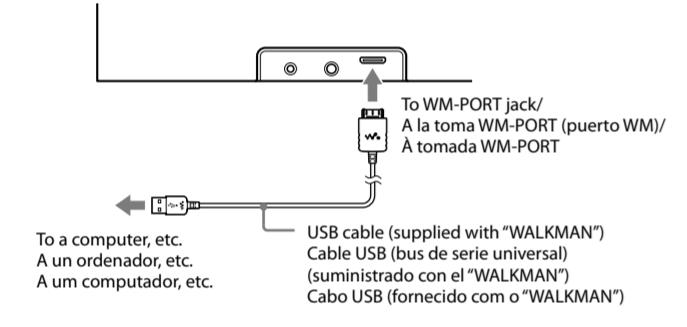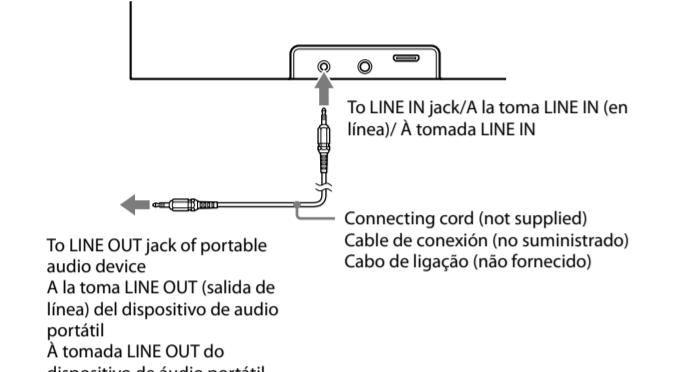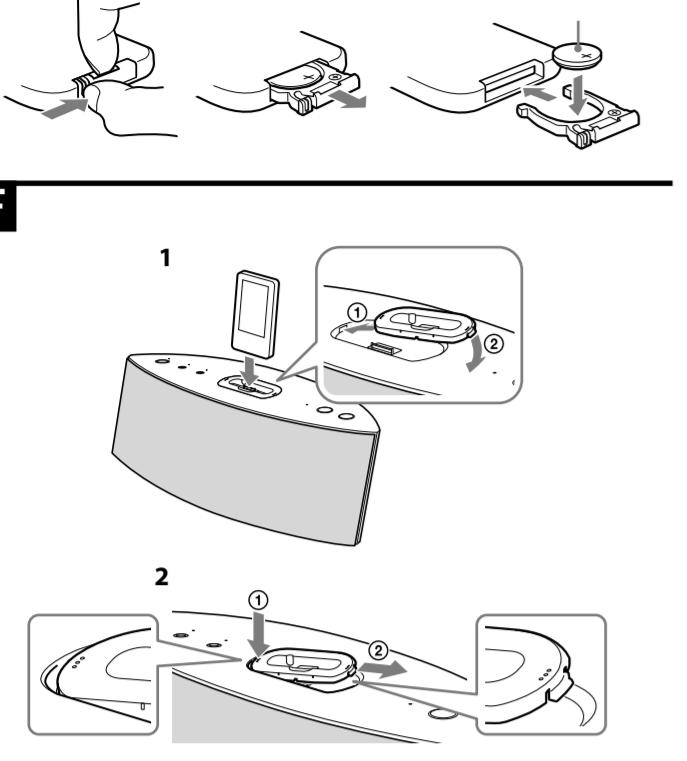

Attachment Accesorio	Product name/ Nombre del producto/ Nome do produto	Model name/Nombre del modelo/ Nome do modelo
Type A	A Series	NWZ-A820 series NWZ-A810 series NWZ-A800 series NWZ-A720 series
		NWZ-A826/A828/A829/ A826K/A828K/A829K NWZ-A815/A816/A818 NW-A808/A806/A805 NWZ-A726/A728/A729
	S Series	NWZ-S730 series NWZ-S630 series
		NWZ-S736F/S738F/S739F NWZ-S636F/S638F/S639F/ S636FK
	E Series	NWZ-E430 series
	X Series	NWZ-X1000 series
	S Series	NWZ-S710 series NWZ-S610 series
		NWZ-S715F/S716F/S718F NWZ-S615F/S616F/S618F NWZ-S510 series
		NWZ-S515/S516
	Type A/Tipo A	Type B/Tipo B

