


SAMSUNG

Owner's Instructions

SW51ASP/SW61ASP

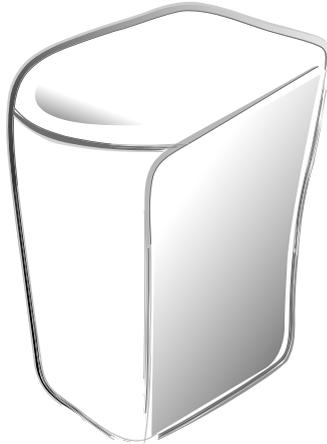

	Page
CONTENTS	
FEATURES	1
DESCRIPTION OF PARTS	2
SAFETY INSTRUCTIONS	3
INSTALLATION & MAINTENANCE	4
ENVIRONMENT	4
IN CASE OF PUMP-DRAINED WASHER	4
HOW TO CONNECT WATER SUPPLY HOSE	4
CLEANING THE FILTER NET	5
HOW TO ADD THE FABRIC SOFTENER	5
HOW TO PUT THE DETERGENT IN	5
CLEANING THE FILTER	5
LEVELLING	5
PRECAUTIONS	6
TO DO A CLEAN WASHING	6
WASHING INSTRUCTION	6
PROCEDURE	6
WASH PROGRAM	7
WASHING PROGRAM DETAILS	7
OPTIONAL CYCLE	8
TROUBLESHOOTING	8
SPECIFICATION	

FEATURES

1 MAGIC FILTER


- This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

2 SOFTENER DISPENSER


- The Softener Dispenser releases the fabric softener at the appropriate time when the last rinsing proceeds.

3 WATERFALL FLOW

- The Waterfall Flow injected from under the pulsator cascades with full force back into the tub, pushing down any clothes that float right under the water surface. It is this Waterfall Flow that enables this washing machine to effectively wash large and heavy items, such as bluejeans and blankets.

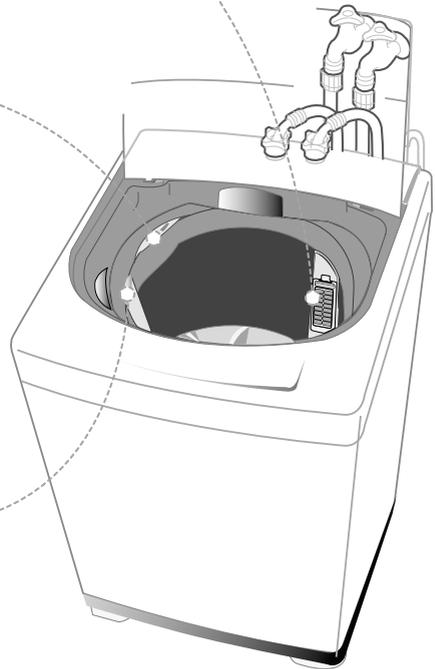

DESCRIPTION OF PARTS

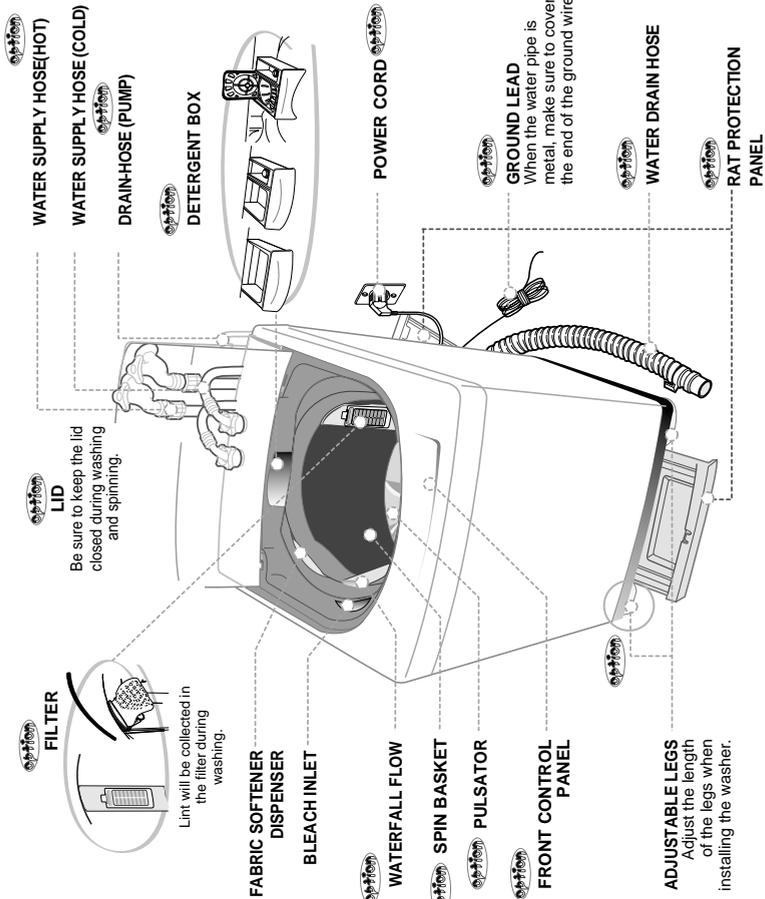

 TIME LEFT HL. MIN.	<input type="radio"/> COLD	<input type="radio"/> HIGH	<input type="radio"/> SOAK	<input type="radio"/> SENSOR
	<input type="radio"/> HOT	<input type="radio"/> MEDIUM	<input type="radio"/> WASH	<input type="radio"/> HEAVY DUTY
	<input type="radio"/> LOW	<input type="radio"/> RINSE	<input type="radio"/> ECONO WASH	<input type="radio"/> WOOL
	<input type="radio"/> MINIMUM	<input type="radio"/> SPIN		

DELAY START	TEMPERATURE	WATER LEVEL	CYCLE	PROGRAM	START/PAUSE	POWER
-------------	-------------	-------------	-------	---------	-------------	-------

CONTROL PANEL

SAFETY INSTRUCTIONS

WARNING!

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, take care to adhere to the following precautions.

- **Where an unearthen power cord is not fitted, be sure that the washer is grounded.**

To avoid electrical shock use metal piping for the ground connection.

Take care not to ground the washer to gas pipes or telephone cables due to the danger of explosion from lightning strikes.

- **During spinning, don't put your hand in the spin basket.**

Because the spin basket is rotating at the high speed, rotating parts may injure your hand.



- **Openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**

- **Turn off water taps when the washer is not in use to avoid water pressure damage to the pump.**

- **To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.**

- **The appliance is not intended for use by young children or infirm persons without supervision.**

- **Young children should be supervised to ensure that they do not play with the appliance.**

- **If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**

- **Place clothes evenly into the washer as unevenly distributed laundry may cause excessive out-of-balance noise and vibration.**

- **Maximum hot water supply temperature 60 degrees.**

- **Before washing, check all pockets.**

If nails or pins remain in pockets, they may damage the washer or clothes.

- **Don't press the control panel with a sharp object.**

Panel damaged or malfunction may occur.

If the control panel for this washer is damaged, it must be replaced by a repair shop appointed by the manufacturer, as special purpose tools are required.

- **Do not operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.**

- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**

- **The instructions for use shall specify the maximum mass or dry cloth in kg, for which the appliance is designed.**

- **If the appliance is supplied from a cord extension set or electrical portable outlet device the cord extension set or electrical portable outlet device should be positioned so it is not subject to splashing or ingress of moisture.**

- **This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.**

Young children should be supervised to ensure that they do not play with the appliance.

INSTALLATION & MAINTENANCE

ENVIRONMENT

Leave some space

Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable slope is 1 degree)

Never install the washer in a very steamy environment or where it might be open to the rain.

 
 
Excessive moisture may cause an electrical shock hazard.

Avoid direct sunlight or heaters.

As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

IN CASE OF PUMP-DRAINED WASHER

- Take out the cap-hose and connect the outlet-hose.
- Be sure to join tightly the drain hose into the drain-outlet on the left side of the machine.
- Install the drain hose in the position of about 70-80cm above the ground.



HOW TO CONNECT WATER SUPPLY HOSE

Check the type of tap fitting which is in your laundry and then see appropriate instruction below:

A tap of ordinary type is desirable



ORDINARY TAP



SQUARE TAP



ROTATING TAP



In case of square tap

- Take out the internal part of the connector and join it in the following way.





Internal part

1. Remove the adaptor from the water supply hose.

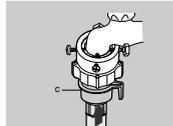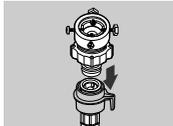

4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When you release part (c) the hose is automatically connects to the adaptor making a 'click' sound.

2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (b) following the arrow for gap about 5mm between them.

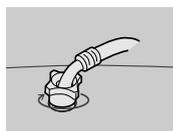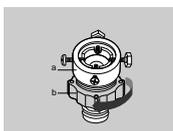

5. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put (a) and (b) together.






6. If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown.

Note : The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be used.

CLEANING THE FILTER NET

1. Push the upper part of the filter and pull in.
2. Open the cover as shown in the figure.
3. Clean the filter.
4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.

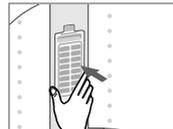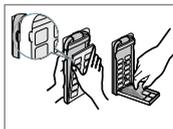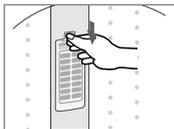


HOW TO ADD THE FABRIC SOFTENER

- When a proper amount (one time does) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softener became stiff.



HOW TO PUT THE DETERGENT IN


1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.

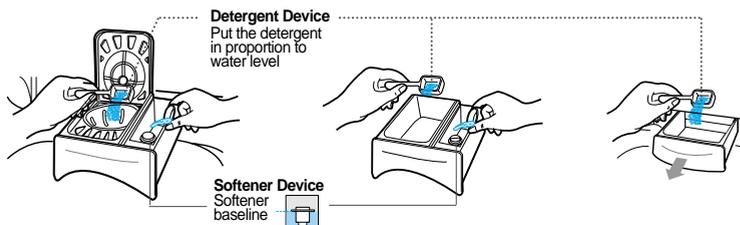

CAUTION : If softener is stored over the above base line, it may flow down at any time.

CLEANING THE FILTER (pump drained washer)

1. Place a rag under washer filter not to wet the floor.
2. Turn the filter-cap to the left.
3. Take out the filter and remove any sludge.
4. Reassemble in reverse order.

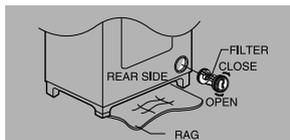

LEVELLING


 
- If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.

- Place the machine more than 10cm away from the wall.

- Adjust the legs on feet for levelling.

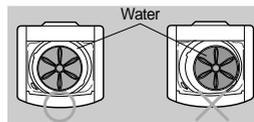


WARNING! NOTE THE FOLLOWING PRECAUTIONS TO PREVENT ELECTRICITY LEAKAGE AND THE POSSIBILITY OF ELECTRIC SHOCK.

Earthing is necessary to prevent leakage or electric shocks caused by the electric currents leaked from the machine.

How to earth an outlet with earthing terminals when an earthed power load is not fitted.

Outlet with earthing terminals:

 - Even when the internal wires of the earthing terminals are joined, connect the earthing conductor (green) of the machine to the tap.




When using an extension cord and a boosting transformer:

- Make sure that the earthing conductor is connected.



Never make an earthing to

 - The telephone line, lightning rod, or gas pipe as it is extremely dangerous in case of lightning strikes.



TO DO A CLEAN WASHING

- Press the POWER button.
- Pour a little detergent into case-detergent.
- Turn on water supply to the washing machine.
- Choose the SOAK in CYCLE button and the HIGH in WATER LEVEL button.
- Press the START/PAUSE button.

WASHING INSTRUCTION

PROCEDURE

1. Sort the laundry into separate wash loads.

Each load of washing should contain clothing which needs the same washing conditions. For example, you should not wash delicate clothes with very dirty work clothes.

2. Load the laundry into washing.

Before load, check all pockets, and close zippers, hooks and eyes.

3. Add the detergent. (see page 5)

4. Add the fabric softener. (see page 5)

5. Close the lid.

6. Press power button.

7. Choose the wash program & optional cycle. (see page 7-8)

If you choose "SENSOR" program you don't need to select water level.


Water level is set automatically at "SENSOR" program.

Press the START/PAUSE button.

8. Select the water level.

Before choosing the water level, remember following things.

When you choose SENSOR, HEAVY-DUTY, ECONO-WASH, WOOL program, water level is selected "AUTO" automatically, but if you want to choose water level manually you can select. HIGH, MEDIUM, LOW, MINIMUM

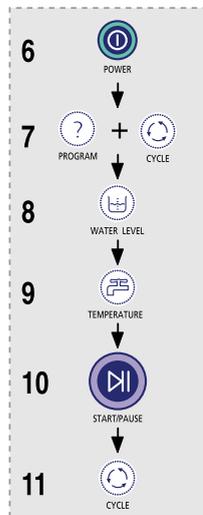

9. Select the water temperature.

Before choosing the water temperature remember the following:

- You can choose COLD → COLD+HOT → HOT on all programs.

HOT is hot wash and cold rinse.

COLD is cold wash and cold rinse.

10. Close the lid and press the START/PAUSE button.

11. Do you want extra rinse?

For extra rinses press the cycle key 1 to 5 times (depending on the number of extra rinse required).

You can select up to 5 extra rinses or return to a single rinse by pressing the cycle key.

The time left display will show the number of rinses selected.

Note that the extra rinse program is not available when pause is selected or during the spin cycle.

WASH PROGRAM

	SENSOR	HEAVY DUTY	ECONO WASH	WOOL
Wash Time (SW51ASP)	25 min	26 min	5 min	5 min
Wash Time (SW61ASP)	20 min	20 min	5 min	5 min
Wash Action	Normal	Normal	Normal	Gentle
Wash Temp.	HOT HOT + COLD COLD	HOT HOT + COLD COLD	HOT HOT + COLD COLD	HOT + COLD COLD
Deep Rinse	COLD	COLD	COLD	HOT + COLD COLD
Spin Time	5 min	7 min	3 min	1 min
Total Time (High Water level)	49 min	49 min	32 min	29 min

WASHING PROGRAM

SENSOR Program

- The best washing program is chosen automatically
- Load size and water level is determined automatically
- ☼ *Unplug the power cord after washing.*

ECONO WASH Program

- Saving your time and energy
- This program is suitable for heavily soiled laundry
- Load size and water level is determined automatically or you can choose the water level you want
- ☼ *Unplug the power cord after washing.*

HEAVY DUTY Program

- This program is suitable for heavily soiled laundry
- Load size and water level is determined automatically or you can choose the water level you want
- ☼ *Unplug the power cord after washing.*

WOOL Program

- This program is suitable for woollen clothes
- Only high and medium water levels are available
- ☼ *Unplug the power cord after washing.*

WASH ONLY

- When you choose this cycle, wash cycle is operated.
- Pressing optional cycle key during washing changes the wash time in two minute intervals.
- The wash time can be changed to between 3 and 25 minutes.
- Load size and water level is determined automatically
- ✿ **Unplug the power cord after washing.**

SOAK

- The laundry is soaked in water so that heavy dirt can be eliminated sufficiently.
- You can choose soak cycle after choosing wash program.
- When you select soak function, 5 minute cycle (1 min. washing then 4 min. pause) continue for 30 minutes before main wash program.
- Load size and water level is determined automatically
- ✿ **Unplug the power cord after washing.**

SPIN ONLY

- You can choose this cycle, only cycle is operated.
- Pressing cycle key during spinning only cycle changes the spin dry time.
The spin dry time can be changed to between 1 and 7 minutes.
- ✿ **Unplug the power cord after washing.**

RINSE ONLY

- When you choose this function, only rinse cycle is operated.
- Pressing function key during rinsing changes the number of rinse. Up to 5 rinses can be optionally selected.
- ✿ **Unplug the power cord after washing.**

RINSE AND SPIN ONLY

- When you choose this cycle, only rinse & spin cycle are operated without wash cycle.
- Pressing cycle key during operation changes the number of rinse (see above).
You cannot change the spin dry time using this function.
- ✿ **Unplug the power cord after washing.**

DELAY START

- This function allows you to delay the start of your chosen wash program for 3, 4, ... 18 hours.
- By pressing the delay start key you can select delayed period for 3, 4, ... 17, 18 hours, and your washing machine will finish the selected wash program after the delayed period.

TROUBLESHOOTING

Washing machine won't work

- Is the water tap opened?
- Is the washer plugged in?
- Is the power cut off?
- Is the fuse all right?
- Is there enough water?



Spinning does not work

- Is the laundry spread out evenly in the washer?
- Is the washer set on a sturdy flat surface?
- Is the lid closed?



Water does not drain

- Is the drain hose down? (No pump)
- Is the drain hose frozen?
- Is the drain hose clogged?

If the water does not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E"



Water is not supplied

- Is the water tap opened?
- Is the water cut off?
- Is the water supply hose or hose connection clogged?
- Is the water tap frozen?

If water is not supplied in 60 minutes, a buzzer will sound, and the remaining time indicator will shown "4E".



While lid is opening, the washing machine won't work

Make sure to close the lid while washing machine is operating.

**IF YOU NEED HELP WITH YOUR NEW
SAMSUNG WASHING MACHINE**

Contact your nearest Samsung office or Samsung authorized
service center for technical assistance

SPECIFICATION

	SW51ASP	SW61ASP
Power input(Watts)	330	426
Load capacity(kg)	5.0	6.0
Size(WxDxH)(mm)	540 X 560 X 850	588 X 618 X 955
Net Weight(kg)	31	38
Water Consumption(liters)	106(high)	138(high)
Water Pressure(min-max)	50~780KPa	50~780KPa