


# Automatic Topload Washers

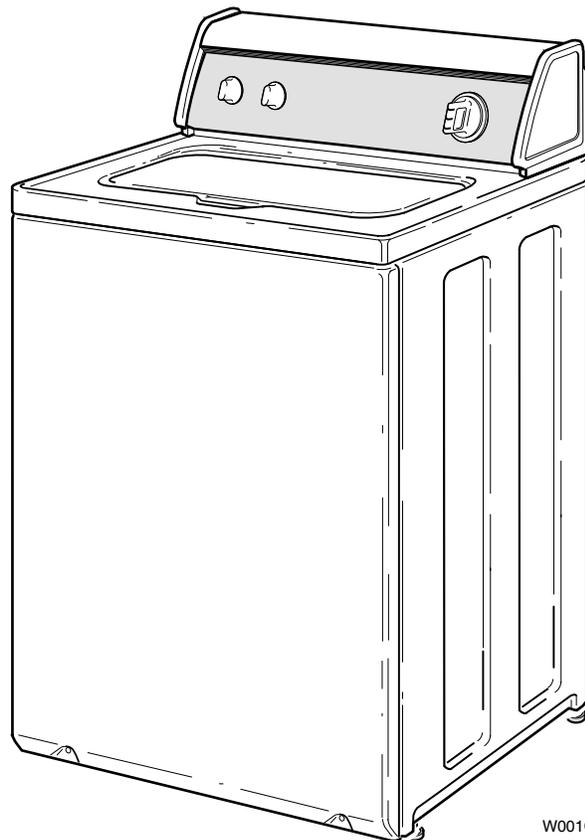

W001C

Installation/Operation

**Keep These Instructions for Future Reference.**

(If this machine changes ownership, this manual must accompany machine.)

  
**Alliance**  
Laundry Systems

[www.comlaundry.com](http://www.comlaundry.com)

Part No. 39971R3  
March 2007





## WARNING

**For your safety and to reduce the risk of fire or an explosion, do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**

W022E

**IMPORTANT: Read the complete INSTALLATION and OPERATION INSTRUCTIONS before using the washer.**



# Table of Contents

<b>Replacement Parts</b> .....	5
<b>Safety Information</b> .....	7
Explanation of Safety Messages .....	7
Important Safety Instructions .....	7
<b>Installation</b> .....	9
Dimensions and Specifications .....	9
Before You Start .....	10
Tools .....	10
Installing the Washer .....	10
Step 1: Remove the Shipping Brace and Shipping Plug .....	10
Step 2: Wipe Out Inside of Washtub .....	11
Step 3: Connect Fill Hoses .....	11
Step 4: Connect Drain Hose to Drain Receptacle .....	12
Step 5: Position and Level the Washer .....	14
Step 6: Connect the Washer to Electrical Power .....	14
Step 7: Add Water to the Washer .....	15
Step 8: Check Lid Switch .....	15
Electrical Requirements .....	16
Earthing (Grounding) Instructions .....	17
Water Supply Requirements .....	17
Water Temperature .....	18
Water Pressure .....	18
Risers .....	18
<b>Operation</b> .....	19
Loading the Washer .....	19
Load Articles .....	19
Load Sizes .....	19
Water Level .....	20
Determine Proper Cycle .....	20
To Wash Clothes .....	21
Timer .....	22
Soaking .....	22
Optional Features .....	23
Bleach Dispenser .....	23
Fabric Softener Dispenser .....	23
Washing Temperature Guide .....	24
<b>Maintenance</b> .....	25
User-Maintenance Instructions .....	25
Cold Weather Care .....	25
Care of Your Washer .....	25
Replacing Hoses .....	25
Vacations and Extended Non-Use .....	25
Filter Screens .....	25
Reinstallation of Shipping Materials .....	25

© Copyright 2007, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Motor Overload Protector.....	25
Before You Call for Service .....	26
If Service Is Required .....	27
Information for Handy Reference.....	28

# Replacement Parts

If replacement parts are required, contact the source from which you purchased your washer, or contact:

**Alliance Laundry Systems**  
**Shepard Street**  
**P.O. Box 990**  
**Ripon, WI 54971-0990**  
**U.S.A.**  
**Phone: (920) 748-3950**

for the name and address of the nearest authorized parts distributor.



# Safety Information

## Explanation of Safety Messages

Throughout this manual and on machine decals, you will find precautionary statements (“DANGER,” “WARNING,” and “CAUTION”) followed by specific instructions. These precautions are intended for the personal safety of the operator, user, servicer, and those maintaining the machine.

	<b>DANGER</b>
<b>Indicates an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.</b>	

	<b>WARNING</b>
<b>Indicates a hazardous situation that, if not avoided, could cause severe personal injury or death.</b>	

	<b>CAUTION</b>
<b>Indicates a hazardous situation that, if not avoided, may cause minor or moderate personal injury or property damage.</b>	

Additional precautionary statements (“IMPORTANT” and “NOTE”) are followed by specific instructions.

**IMPORTANT:** The word “IMPORTANT” is used to inform the reader of specific procedures where minor machine damage will occur if the procedure is not followed.

**NOTE:** The word “NOTE” is used to communicate installation, operation, maintenance or servicing information that is important but not hazard related.

## Important Safety Instructions

(Save These Instructions)

	<b>WARNING</b>
<b>To reduce the risk of fire, electric shock, serious injury or death to persons when using your washer, follow these basic precautions:</b>	
<small>W023</small>	

1. Read all instructions before using the washer.
2. Refer to the GROUNDING INSTRUCTIONS in the INSTALLATION manual for the proper grounding of the washer.
3. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
4. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
5. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using a washing machine or combination washer-dryer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. **THE GAS IS FLAMMABLE. DO NOT SMOKE OR USE AN OPEN FLAME DURING THIS TIME.**
6. Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. This is a safety rule for all appliances.

## Safety Information


7. Before the washer is removed from service or discarded, remove the lid to the washing compartment.
8. Do not reach into the washer if the washtub or agitator is moving.
9. Do not install or store the washer where it will be exposed to water and/or weather.
10. Do not tamper with the controls.
11. Do not repair or replace any part of the washer, or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
12. To reduce the risk of an electric shock or fire, DO NOT use an extension cord or an adapter to connect the washer to the electrical power source.
13. Use your washer only for its intended purpose, washing clothes.
14. ALWAYS disconnect the washer from electrical supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.
15. Install the washer according to the INSTALLATION INSTRUCTIONS. All connections for water, drain, electrical power and grounding must comply with local codes and be made by licensed personnel when required. Do not do it yourself unless you know how!
16. To reduce the risk of fire, clothes which have traces of any flammable substances such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals such as in mops and cleaning cloths, must not be put into the washer. These flammable substances may cause the fabric to catch on fire by itself.
17. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
18. Keep your washer in good condition. Bumping or dropping the washer can damage safety features. If this occurs, have your washer checked by a qualified service person.
19. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
20. Be sure water connections have a shut-off valve and that fill hose connections are tight. CLOSE the shut-off valves at the end of each wash day.
21. Lid MUST BE CLOSED any time the washer is to agitate or spin. DO NOT bypass the lid switch by permitting the washer to agitate or spin with the lid open. A brake will stop the washtub within seconds if the lid is opened during spinning. If the washtub does not stop when the lid is opened, remove the washer from use and call the service person.
22. Always read and follow manufacturer's instructions on packages of laundry and cleaning aids. Heed all warnings or precautions. To reduce the risk of poisoning or chemical burns, keep them out of the reach of children at all times (preferably in a locked cabinet).
23. Always follow the fabric care instructions supplied by the garment manufacturer.
24. Never operate the washer with any guards and/or panels removed.
25. DO NOT operate the washer with missing or broken parts.
26. DO NOT bypass any safety devices.
27. Failure to install, maintain, and/or operate this machine according to the manufacturer's instructions may result in conditions which can produce bodily injury and/or property damage.

**NOTE: The WARNING AND IMPORTANT SAFETY INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining, or operating the washer.**

Always contact your dealer, distributor, service agent or the manufacturer about any problems or conditions you do not understand.

# Installation

## Dimensions and Specifications

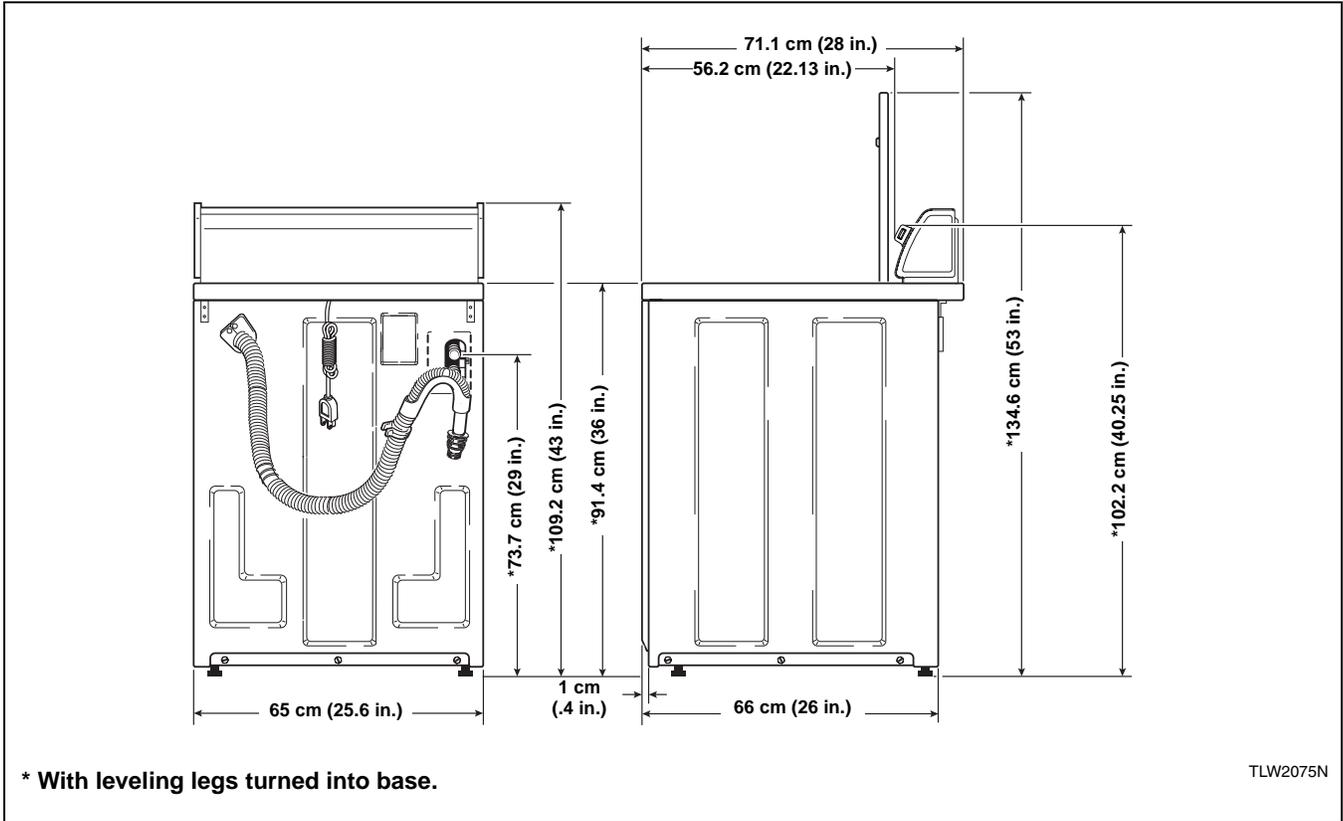

\* With leveling legs turned into base.

TLW2075N

## Installation

### Before You Start

#### Tools

For most installations, the basic tools you will need are:

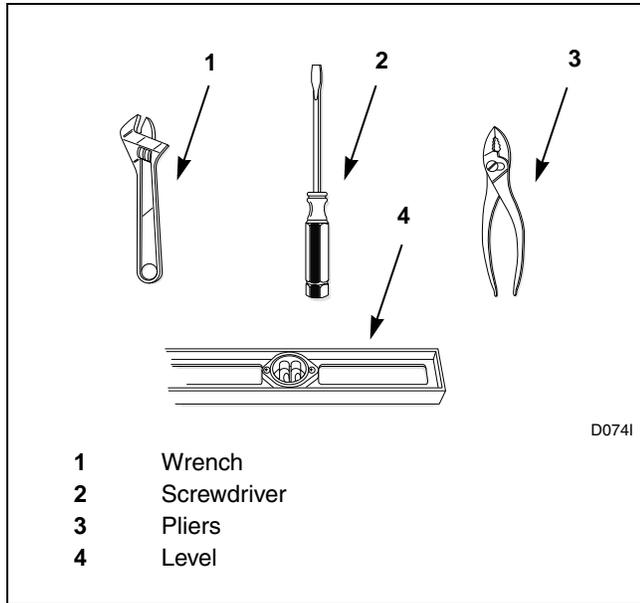


Figure 1

### Installing the Washer

**NOTE:** If washer is delivered on a cold day (below freezing), or is stored in an unheated room or area during the cold months, do not attempt to operate it until the washer has had a chance to warm up.

**NOTE:** Install dryer before washer. This allows for attaching exhaust duct.

#### Step 1: Remove the Shipping Brace and Shipping Plug

Remove the shipping brace from under the lid. The plastic shipping plug will be released from the base of the washer when removing the cardboard base from the washer.

**NOTE:** Do not tilt washer to front or sides when moving.

Save brace and plug and reinstall whenever washer is moved.

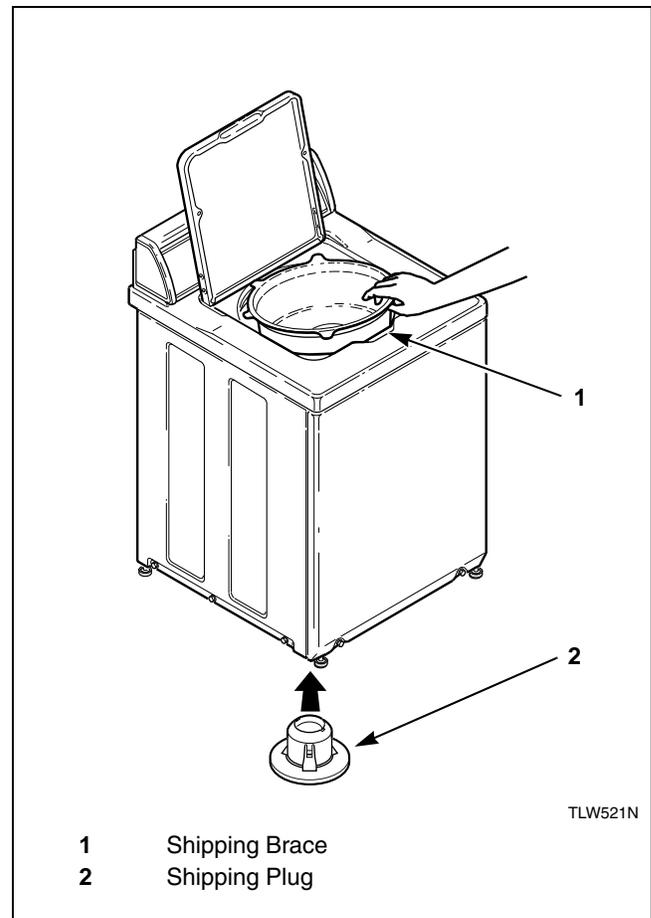


Figure 2

### Step 2: Wipe Out Inside of Washtub

Prior to first wash, use an all purpose cleaner, or a detergent and water solution, and a damp cloth to remove shipping dust from inside of washtub.

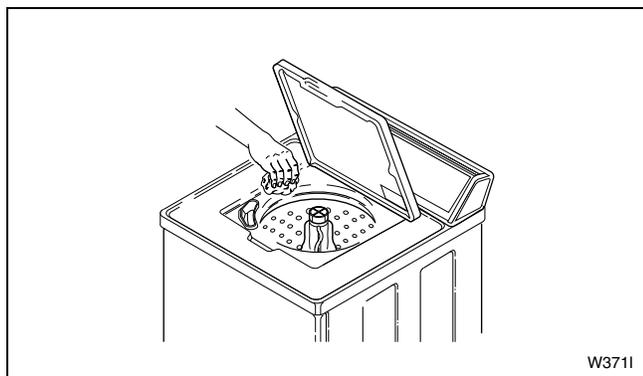


Figure 3

### Step 3: Connect Fill Hoses

Refer to section on *Water Supply Requirements* before connecting fill hoses.

Turn on the water supply faucets and flush the lines for approximately two minutes to remove any foreign materials that could clog the screens in the water mixing valve. (This is especially important when installing your washer in a newly constructed or renovated building.)

Insert rubber washers and filter screens (from accessories bag) in water fill hose couplings (two hoses supplied with washer). Connect fill hoses to water supply faucets. Then connect the hoses to the hot and cold valve connections at the rear of the washer. Refer to *Figure 4*.

**IMPORTANT: Thread hose couplings onto valve connections finger tight, then turn 1/4 turn with pliers. DO NOT cross thread or overtighten couplings.**

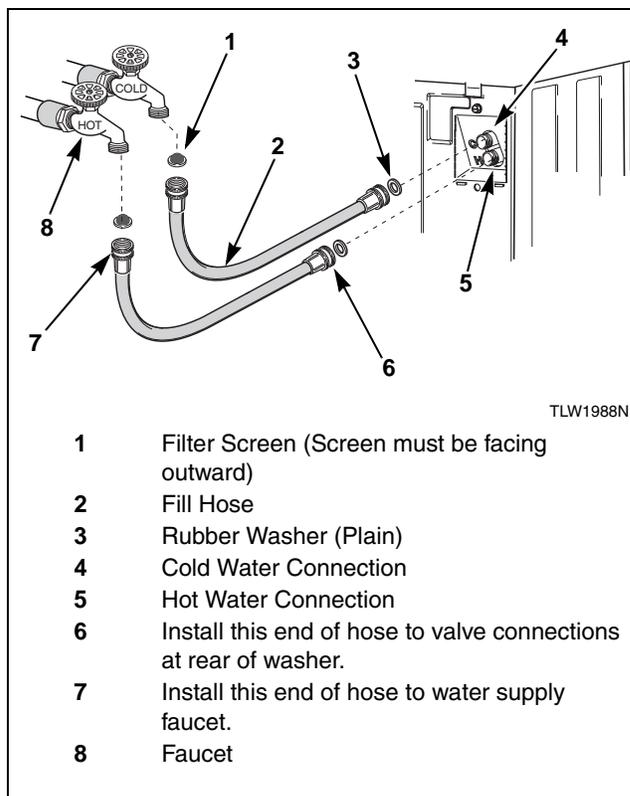


Figure 4


**IMPORTANT: Hoses and other natural rubber parts deteriorate after extended use. Hoses may develop cracks, blisters or material wear from the temperature and constant high pressure they are subjected to.**

**All hoses should be checked on a yearly basis for any visible signs of deterioration. Any hose showing the signs of deterioration listed above should be replaced immediately. All hoses should be replaced every five years.**

**Installation**


**Step 4: Connect Drain Hose to Drain Receptacle**

**IMPORTANT:** Drain receptacle must be capable of handling a minimum of 3.2 cm (1-1/4 inch) outside diameter drain hose.

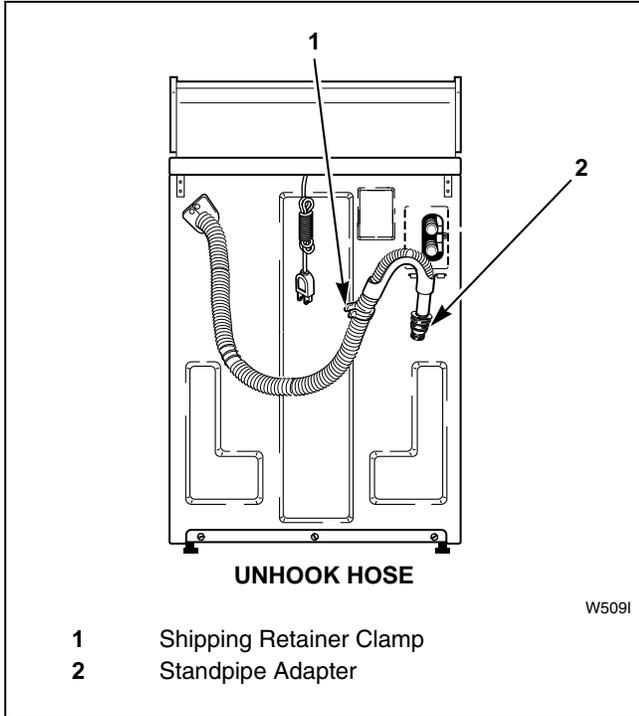


- 1 Shipping Retainer Clamp
- 2 Standpipe Adapter

Figure 5

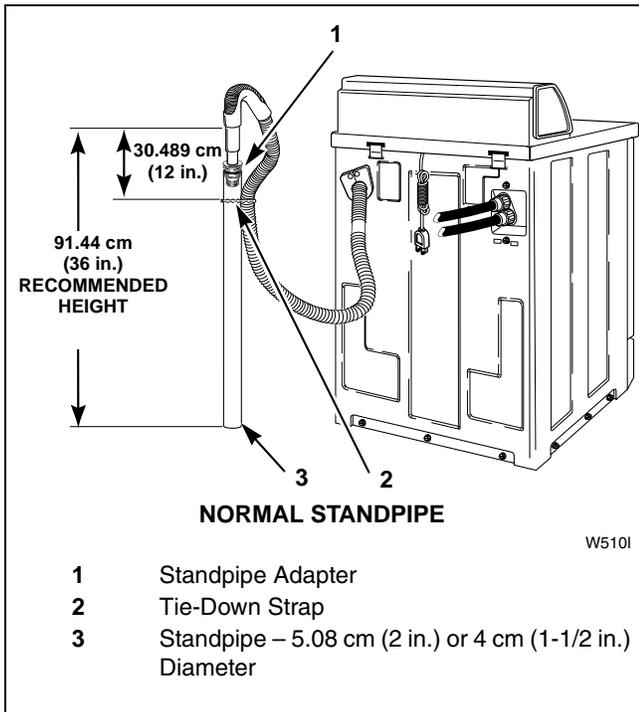


- 1 Standpipe Adapter
- 2 Tie-Down Strap
- 3 Standpipe – 5.08 cm (2 in.) or 4 cm (1-1/2 in.) Diameter

Figure 6

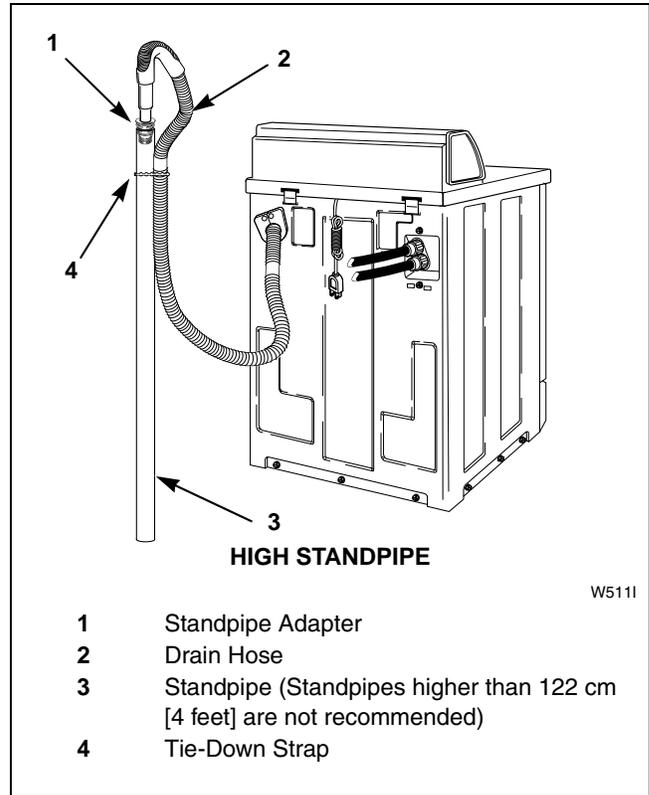

- 1 Standpipe Adapter
- 2 Drain Hose
- 3 Standpipe (Standpipes higher than 122 cm [4 feet] are not recommended)
- 4 Tie-Down Strap

Figure 7

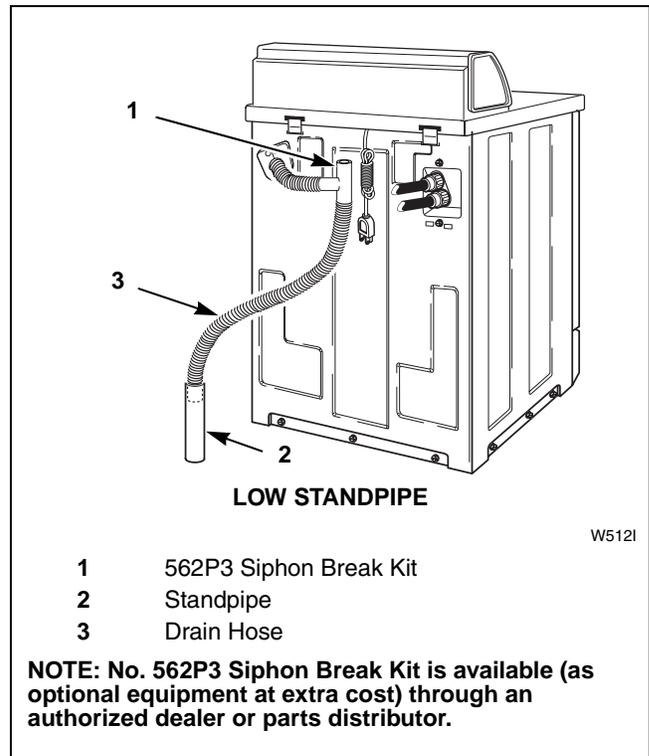

- 1 562P3 Siphon Break Kit
- 2 Standpipe
- 3 Drain Hose

**NOTE:** No. 562P3 Siphon Break Kit is available (as optional equipment at extra cost) through an authorized dealer or parts distributor.

Figure 8

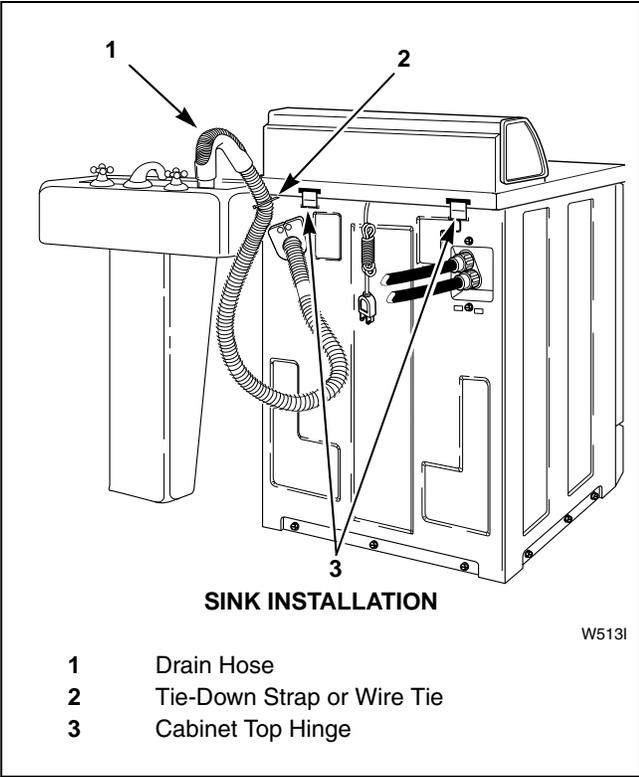


Figure 9

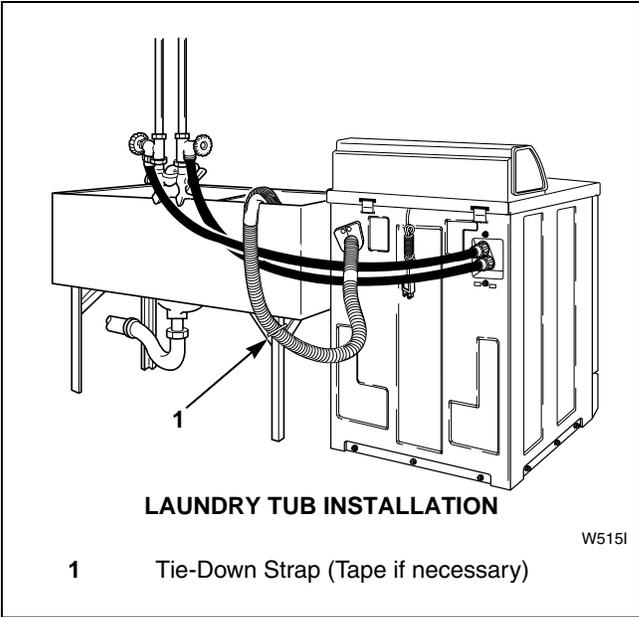


Figure 11

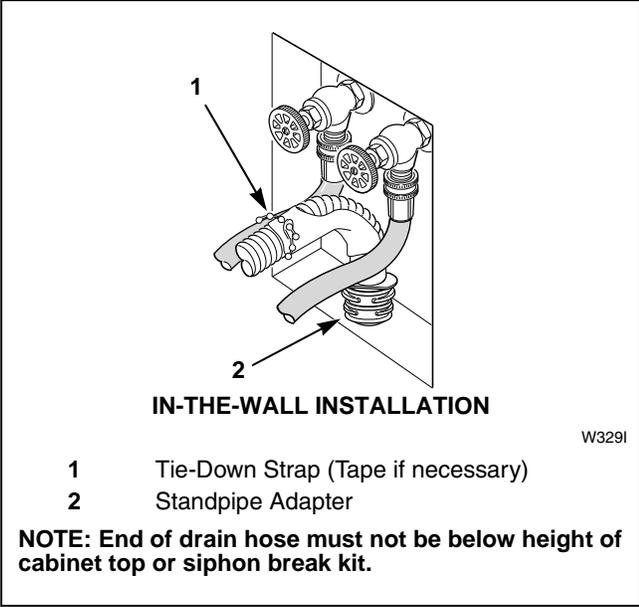


Figure 10

## Installation

### Step 5: Position and Level the Washer

Position washer so it has sufficient clearance for installation and servicing.

Place rubber feet on all four leveling legs.

Place washer in position on a clean, dry, and firm floor. Do not install the washer on carpeting.

Loosen 7/8 inch locknuts and adjust the two front leveling legs. Once adjusted, tilt the unit forward on front legs and lower back down into position to set the rear self-leveling legs.

Washer must not rock. After washer is at desired height, tighten locknuts securely against bottom of washer base. If these locknuts are not tight, washer will not remain stationary during operation.

Improper installation or flexing of a weak floor will cause excessive vibration.

Do not slide washer across floor once the leveling legs have been extended, as legs and base could become damaged.

Verify that washer does not rock.

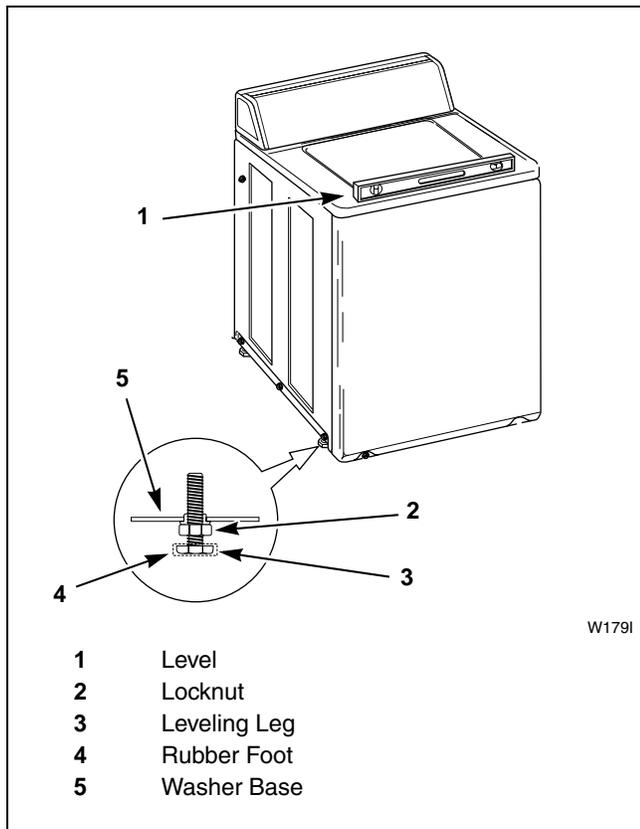


Figure 12

### Step 6: Connect the Washer to Electrical Power

Refer to section on *Electrical Requirements* and connect the washer to an electrical power source.

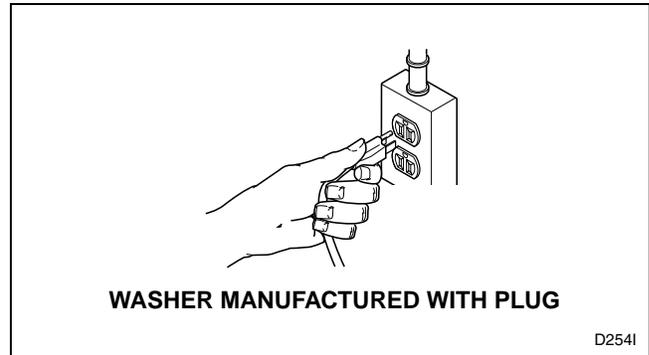


Figure 13

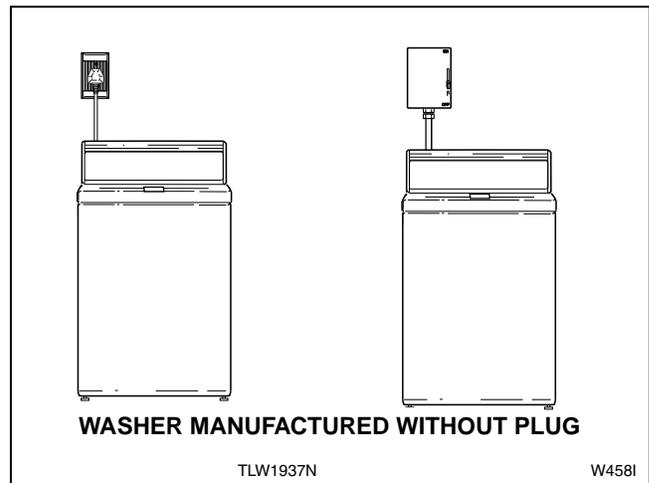


Figure 14

**Step 7: Add Water to the Washer**

Prior to first use, add 0.95 liter (one quart) of water to tub.

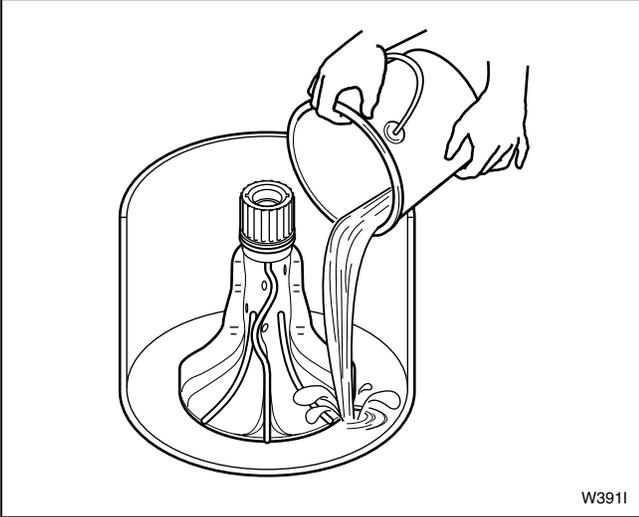


Figure 15

**Step 8: Check Lid Switch**

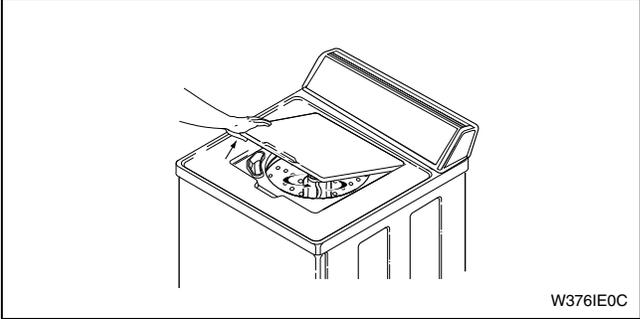


Figure 16

## Electrical Requirements

**NOTE:** The wiring diagram is located in the control hood.

	<b>WARNING</b>
<p>To reduce the risk of fire, electric shock or personal injury, all wiring and earthing <b>MUST</b> conform with the latest edition of the National Electrical Code, ANSI/NFPA 70, and such local regulations as might apply. It is the customer's responsibility to have the wiring, fuses and circuit breakers checked by a qualified electrician to make sure your home has adequate electrical power to operate the washer.</p>	
W129	

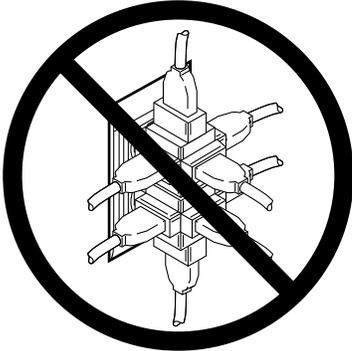

<p><b>DO NOT OVERLOAD CIRCUITS DO NOT USE ADAPTER DO NOT USE AN EXTENSION CORD</b></p>
D009I

Figure 17

### 120 Volt, 60 Hertz, with 3 Prong Grounding (Earthing) Plug

The washer is designed to be operated on a separate branch, polarized three-wire, effectively grounded (earthed) 120 Volt, 60 Hertz, AC (alternating current), circuit protected by a **15 ampere fuse**, equivalent fusetron or circuit breaker.

The three-prong grounding plug on the power cord should be plugged directly into a polarized three-slot effectively grounded receptacle rated 110/120 Volts AC (alternating current) 15 Amps. Refer to *Figure 18* for determining correct polarity of the wall receptacle.

Do not modify the plug provided with the washer – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

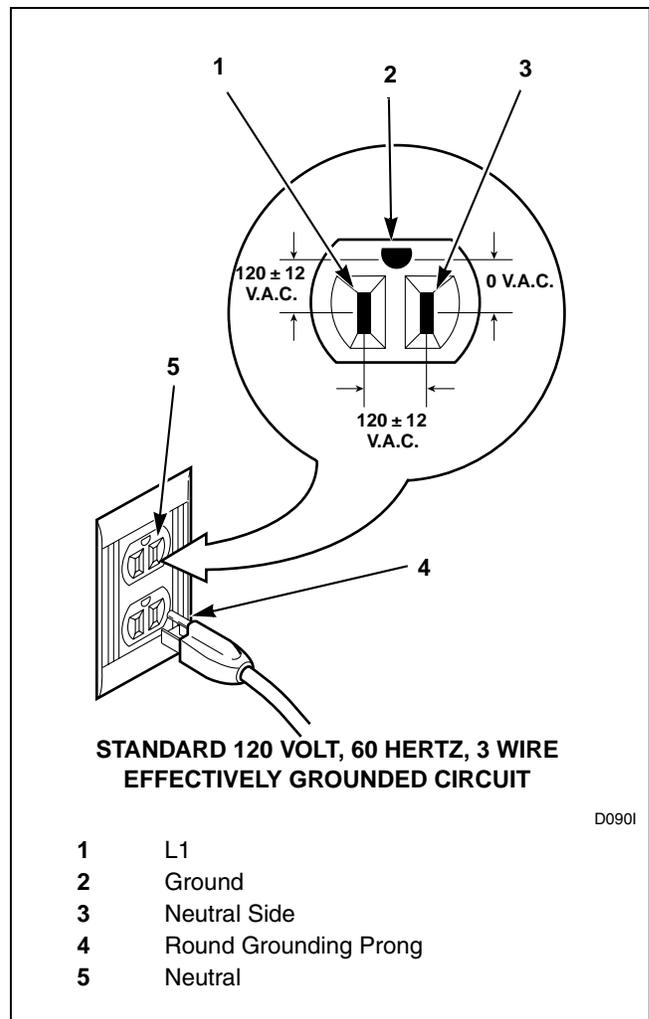


Figure 18

DO NOT OPERATE OTHER APPLIANCES ON THE SAME CIRCUIT.

	<b>WARNING</b>
<p>To reduce the risk of electric shock or fire, <b>DO NOT</b> use an extension cord or an adapter to connect the washer to the electrical power source.</p>	
W031	

**240 Volt/60 Hertz**

The washer is designed to be operated on a separate polarized three-wire, earthed 240 Volt, 60 Hertz, single-phase electrical circuit protected by a **10 ampere fuse**, equivalent fusetrone or circuit breaker. **DO NOT OPERATE OTHER APPLIANCES ON THE SAME CIRCUIT WHEN THE WASHER IS OPERATING.**

**Earthing (Grounding) Instructions**

The washer must be earthed (grounded). In the event of malfunction or breakdown, earthing will reduce the risk of electric shock by providing a path of least resistance for electric current. The washer is equipped with a cord having an equipment-earthing conductor. The washer must be plugged or hardwired into an appropriate power source that is properly installed and earthed in accordance with all local codes and ordinances.

	<b>WARNING</b>
<p>Improper connection of the equipment-earthing conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the washer is properly earthed.</p>	
W032	

**Water Supply Requirements**

	<b>WARNING</b>
<p>Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. <b>HYDROGEN GAS IS EXPLOSIVE.</b> If the hot water system has not been used for such a period and before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. <b>The gas is flammable. Do not smoke or use an open flame during this time.</b></p>	
W029	

**NOTE: Water supply faucets must fit standard 19.1 mm (3/4 inch) female garden hose couplings. DO NOT USE SLIP-ON OR CLAMP-ON CONNECTIONS.**

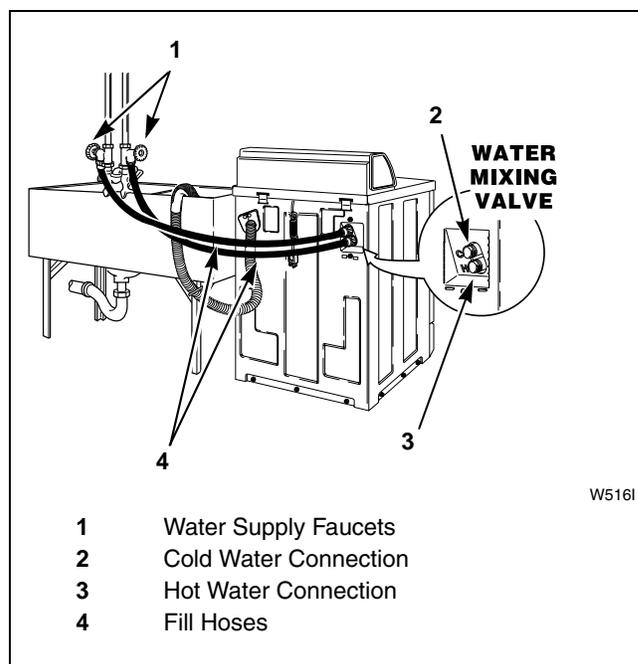


Figure 19

## Installation

### Water Temperature

#### Cold:

Recommended cold water temperature is 10° to 24° Celsius (50° to 75° Fahrenheit).

#### Hot:

Recommended hot water temperature is 60° to 66° Celsius (140° to 150° Fahrenheit).

#### Warm:

Mixture of hot and cold water. (Warm water temperature is dependent upon the water temperature and the pressure of both the hot and cold water supply lines.)

**NOTE: Longer fill hoses are available (as optional equipment at extra cost) if the hoses (supplied with the washer) are not long enough for the installation. Order hoses as follows:**

No. 20617 Fill Hose 2.44 m (8 foot)

No. 20618 Fill Hose 3.05 m (10 foot)

### Water Pressure

Pressure must be a minimum of 138 to a maximum of 827 kPa (20 to 120 pounds per square inch) static pressure measured at the faucet.

### Risers

Risers (or air cushions) may have to be installed if the pipes knock or pound when flow of water stops.

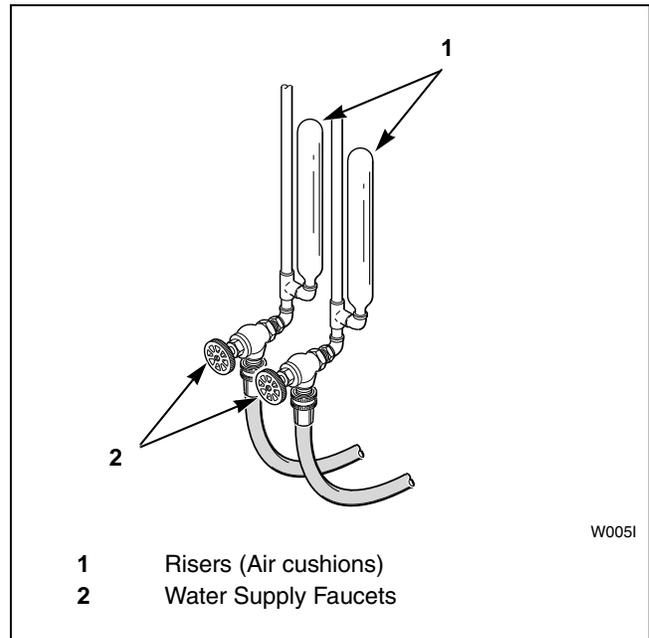


Figure 20

# Operation

## Loading the Washer

### Load Articles

Load items by the amount of space they take up, not by their weight. Mix large and small items in a load to get the best washing results.

Drop items loosely into the washtub. Overloading can cause poor cleaning, excessive wrinkling, and tears.

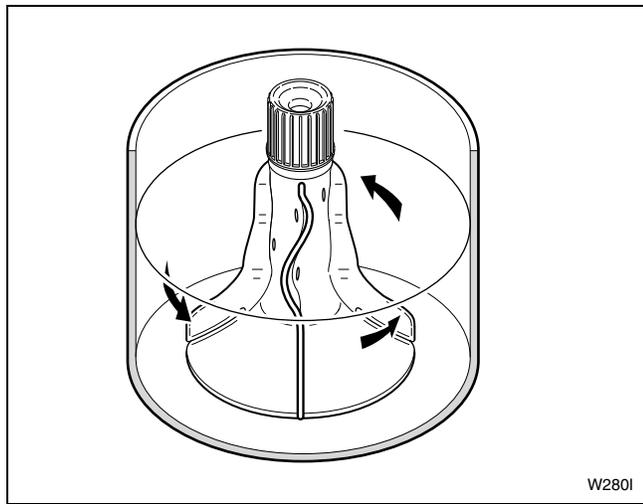


Figure 21

## Load Sizes

### Small

3-4 perm. press dress shirts

OR

1 twin sheet, 1 pillow case

OR

1-2 lightweight dresses

### Medium

6-7 perm. press shirts

OR

2 twin sheets, 2 pillow cases

OR

8 standard bath towels,  
6 wash cloths

### Large

10-11 perm. press shirts

OR

2 full size sheets, 2 pillow cases,  
2 pair men's pajamas

OR

12 standard bath towels,  
4 hand towels, 4 wash cloths

### Extra Large (OPTIONAL)

8-9 shirts and  
5 pair polyester pants

OR

2 queen size sheets,  
4 pillow cases, 2 nightgowns,  
1 pair men's pajamas

OR

1 queen size bedspread

### Reset (OPTIONAL)

Use the RESET if agitation has started and more water is needed for the load.

## Operation

### Water Level

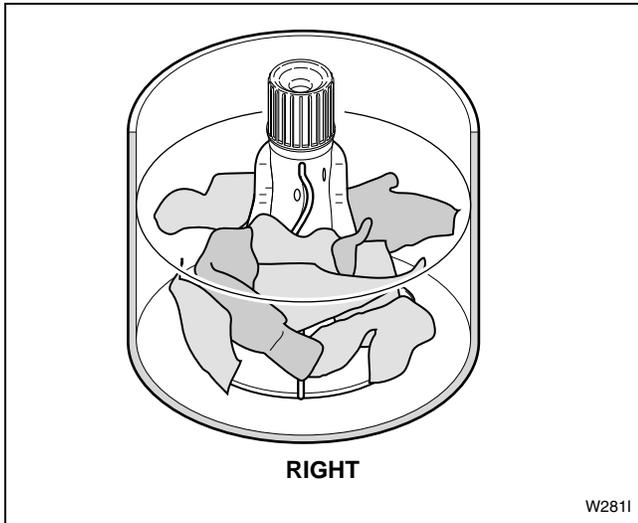


Figure 22

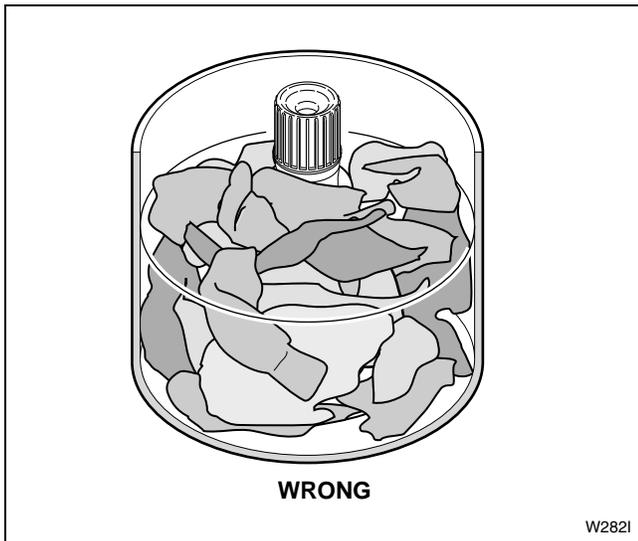


Figure 23

The water level in your washer should fit the size of your wash load. Small loads will use lower water levels.

**IMPORTANT: If in doubt, always use a higher water level. Most average loads will require a water setting of *Large*.**

### Determine Proper Cycle



## WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the Safety Information section before operating your washer.

W496

#### Regular

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The wash time selection will depend on the type of fabric and the amount of soil. For the best results when cleaning heavily soiled items, use a longer wash time. Lightly soiled items require less wash time.

There are three settings in the REGULAR cycle – Extra Clean (Heavy), Normal and Light.

#### Permanent Press Cycle

Use for permanent press items and synthetics. The wash time selection will depend upon the type of fabric and amount of soil.

There are two settings in the PERMANENT PRESS cycle – Normal and Light.

#### Handwash/Delicate

Wash delicate items usually washed by hand on this cycle. A full tub of water is recommended (even for small loads) to allow the delicate items to move freely through the water.

There are two settings in the HANDWASH/ DELICATE cycle – Normal and Light.

## To Wash Clothes

**IMPORTANT:** Before using your new washer, make sure the washer cord is plugged into an electrical outlet that has the proper grounding and polarity. Make sure the washer hoses are connected to the hot and cold water faucets, and that the faucets are turned on. Be sure the drain hose is not kinked and is inserted into a drain. Refer to the **INSTALLATION** section for details of proper washer installation.

**IMPORTANT:** Remove all sharp objects from laundry to avoid tears and rips to items during normal machine operation.

- Sort items into separate loads. Pretreat stains and heavily soiled areas.

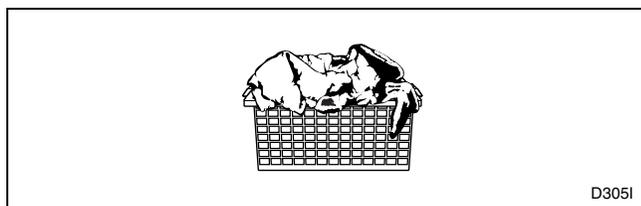


Figure 24

- Measure and add detergent to the washtub.

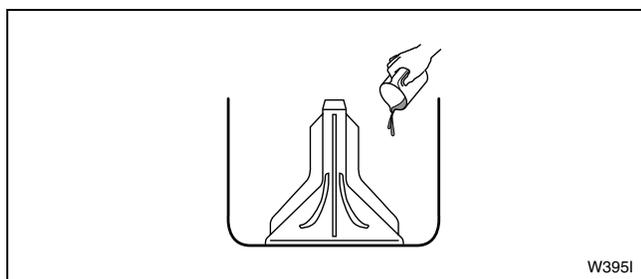


Figure 25

- Add clothes loosely into the washtub.

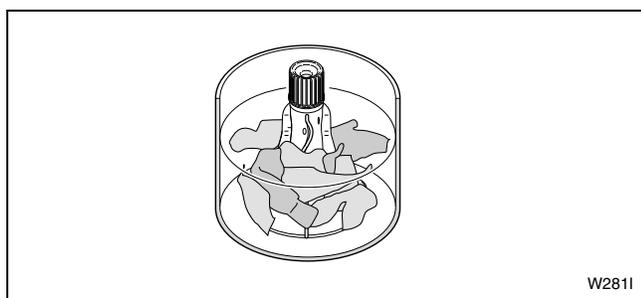


Figure 26

- Close the lid. The washer will not agitate or spin with the lid open.

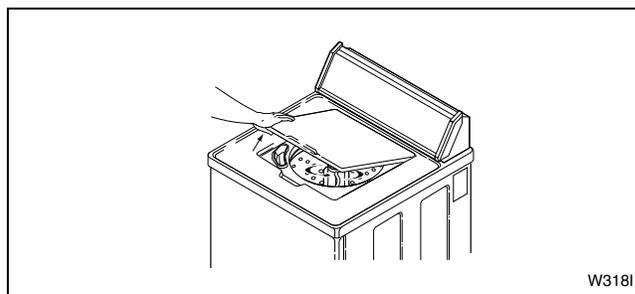


Figure 27

- Set WASH/RINSE temperatures.

**NOTE:** The washer will provide a cold rinse in all **TEMPERATURE** settings. Cold rinses will save you money and energy and will help reduce wrinkling in permanent press and synthetics.

Do not use a warm rinse with permanent press or other synthetic fabrics. A warm rinse can cause wrinkling in some garments.

When using the **HANDWASH/DELICATE** cycle, a **WARM** rinse is not available. If the **WASH/RINSE** selection is set on **WARM/WARM**, the washer will still give a **COLD** rinse. This is to assure proper care of delicate items.

**NOTE:** The **Energy Saver** settings, marked with a dot (•) or an asterisk (\*), show which temperature settings will use the least energy.

- Set **LOAD SIZE (WATER LEVEL)** control. Use **RESET** if agitation has started and more water is needed.

**IMPORTANT:** Holding the **LOAD SIZE (WATER LEVEL)** control in the **RESET** position can cause **flooding of the washer.**

- Select the cycle according to the type of fabric being washed. Push the timer knob in and turn clockwise to the desired cycle and wash time.
- Pull the timer knob **out** to start the water fill. Agitation will begin when the water reaches the level you selected.

The washer will stop (pause) shortly before the wash and rinse spins. Do not turn the timer through these pauses. They are part of the cycle.

## Operation

### Timer

Although the washer cycles are automatic, the timer may be reset to lengthen, shorten or repeat a portion of a cycle.

To set or reset the timer, push timer knob **in to stop** the washer. Hold timer knob in firmly while turning it clockwise to the setting desired. Pull timer knob **out to start** the washer.

### Soaking

Set the timer knob in the center of the word “RINSE” (this prevents the washer from spinning without first filling with water). Place the soaking product and clothes load in the washtub. Pull timer knob to start washer fill. After fill is completed and agitation has started, push the timer knob in. This will stop the washer. When the clothes have soaked the desired length of time, **TURN THE TIMER KNOB TO THE END OF THE RINSE SETTING**, then pull the timer knob out to start the spin.



### CAUTION

**Failure to turn the timer knob to the spin cycle and completely draining the washtub after soaking will result in the washer overflowing and causing property damage.**

W256

## Optional Features

### Bleach Dispenser

The bleach dispenser is located in the left front corner, under the lid.

Use **liquid bleach** in the dispenser. Powdered bleach must not be used in the dispenser. Add powdered bleach to the wash water.

Carefully pour recommended amount of bleach into the dispenser during the first fill of the washer.

### Fabric Softener Dispenser

#### To Use Dispenser

After the clothes are loaded into the washtub and before the start of the WASH cycle, pour the proper amount of liquid fabric softener into dispenser.

The large fabric softener dispenser allows for the fabric softener to be diluted with water. We recommend adding water up to the fill level. Overfilling can allow fabric softener to spill onto the clothes.

Setting the water level to medium or higher will result in better performance from the fabric softener.

The fabric softener will remain in the dispenser until the end of the wash spin, and will be dispensed into the incoming rinse water.

#### To Clean the Dispenser

Remove the dispenser housing from agitator by squeezing the lower part of the dispenser, pulling directly upward and at the same time tilting slightly. This will expose the dispenser cup, which is also removable for cleaning (refer to *Figure 28*). Both housing and cup can be soaked in hot soapy water and rinsed clean. The funnel shape in top of agitator also needs to be cleaned. The hole and the slots in the two rings will require using a small brush for proper cleaning.

After cleaning, install dispenser cup, then push dispenser housing down until firmly snapped together.

### Use Tips

- Liquid fabric softeners will be dispensed during the final rinse and should not be combined with bleach, bluing, starch, detergents, soaps or packaged water conditioners.
- When adding detergent to wash water, do not allow any to enter into softener dispenser cup, as softener will become gummy.

To prevent softener buildup, the dispenser can be filled with clean water for automatic cleaning. This can be done in washing cycles other than when softener is used.

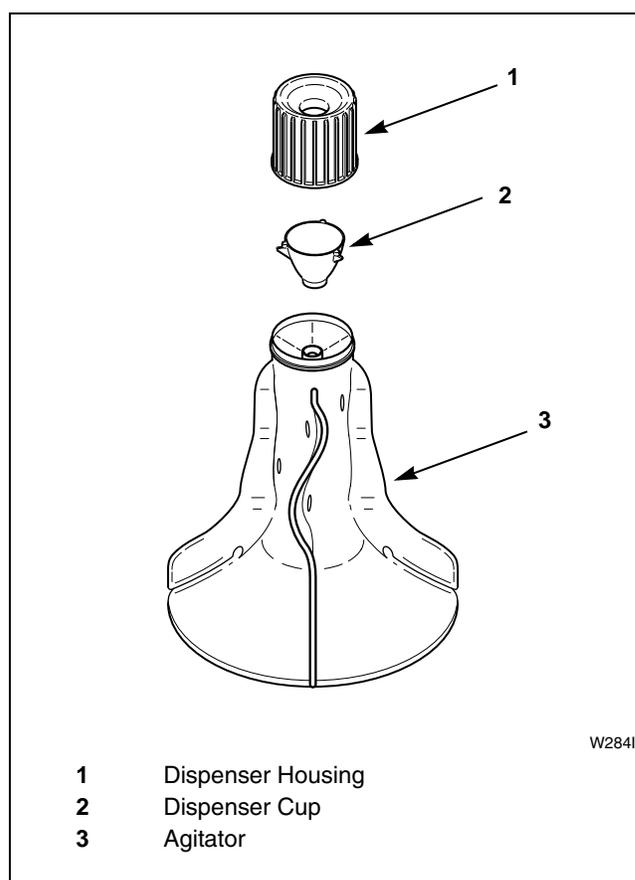


Figure 28

## Operation

### Washing Temperature Guide

Water Temperature	Use	Comments
<b>HOT</b> <b>60°C (140°F)</b>	<ul style="list-style-type: none"><li>• Sturdy whites and colorfast items.</li><li>• Work clothes.</li><li>• Soiled items.</li><li>• Diapers.</li></ul>	<ul style="list-style-type: none"><li>• Best cleaning for heavily soiled items.</li><li>• Best for sanitizing.</li></ul>
<b>WARM</b> <b>37°C (99°F)</b>	<ul style="list-style-type: none"><li>• Rinsing of some items (OPTIONAL).</li><li>• Light and moderately soiled items.</li><li>• Non-colorfast or dark colors.</li><li>• Permanent press.</li><li>• Silks, woolens, nylon, acrylic.</li></ul>	<ul style="list-style-type: none"><li>• Reduces wrinkling in permanent press fabrics.</li><li>• Less fading.</li><li>• Reduces shrinking in knits.</li></ul>
<b>COLD</b> <b>18°C (65°F)</b>	<ul style="list-style-type: none"><li>• Rinsing of most items.</li><li>• Non-colorfast fabrics.</li><li>• Extra sensitive clothing.</li></ul>	<ul style="list-style-type: none"><li>• Saves energy.</li><li>• Reduces color fading.</li><li>• Reduces wrinkling.</li><li>• Reduces shrinking.</li></ul>

# Maintenance

## User-Maintenance Instructions

### Cold Weather Care

If the washer is delivered on a cold day (below freezing), or is stored in an unheated room or area during the cold months, do not attempt to operate it until the washer has had a chance to warm up.

### Care of Your Washer

Use only a damp or sudsy cloth for cleaning the control panel.

Wipe the washer cabinet as needed. If detergent, bleach or other washing products are spilled on the cabinet, wipe immediately.

Do not use scouring pads or abrasive cleansers on any part of the washer.

The washtub will need no particular care though it may need rinsing or wiping after an unusual load has been washed.

Leave the lid open to allow the inside of the washer to dry out after use. This helps prevent musty odors from developing.

### Replacing Hoses

Hoses and other natural rubber parts deteriorate after extended use. Hoses may develop cracks, blisters or material wear from the temperature and constant high pressure they are subjected to.

All hoses should be checked on a yearly basis for any visible signs of deterioration. Any hose showing the signs of deterioration listed above should be replaced immediately. All hoses should be replaced every five years.

### Vacations and Extended Non-Use

**IMPORTANT: To avoid possible property damage due to flooding, turn off the water supply to the washer whenever there will be an extended period of non-use.**

### Filter Screens

Check the filter screens in the fill hoses for debris or damage annually. Clean or replace them if necessary.

If the washer is filling with water slower than normal, check the filter screens. Clean or replace them if necessary.

Order filter screen Part No. F270300 from the nearest authorized parts distributor.

## Reinstallation of Shipping Materials

### Shipping Brace

The shipping brace in the lid opening should be **saved** and reinstalled whenever the washer is moved. To reinstall the brace, open the washer lid and place the brace over the washer agitator, placing the back of the brace into the washtub first.

### Shipping Plug

The plastic shipping plug should be saved and reinstalled any time the washer is moved. The plug fits into two openings: The base opening and the shipping plug opening on the bottom of the mobile pivot dome. The plug **MUST** be inserted into both openings to prevent damage to the washer. Refer to *Figure 29*.

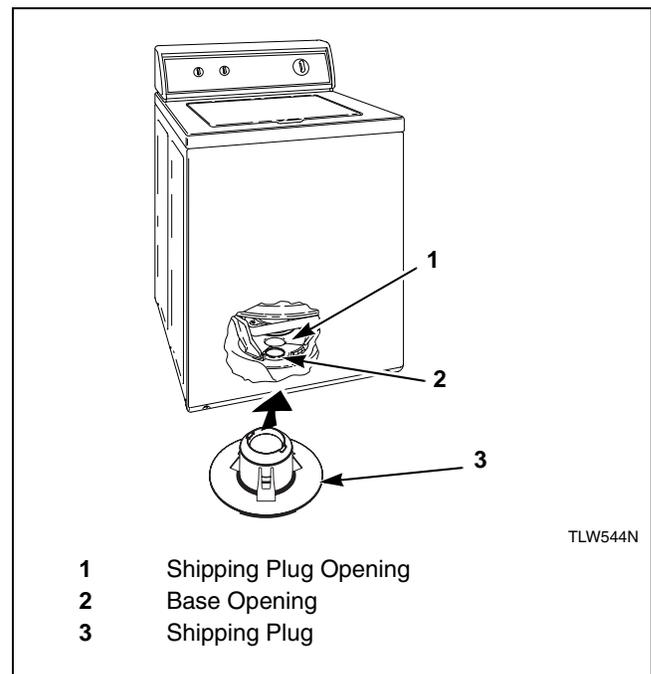


Figure 29

## Motor Overload Protector

This internal overload protector will stop the motor automatically in the event of an overload. The overload protector will reset itself in two or three minutes and the motor will restart automatically. If the overload protector stops the motor again, remove the washer from use and call the service person to correct the problem.

**Maintenance**

**Before You Call for Service**

If the washer:

<b>Won't Fill</b>	<b>Won't Start</b>	<b>Won't Agitate</b>	<b>Won't Spin</b>	<b>Possible Reason — Do This to Correct</b>
•	•	•	•	Be sure power cord is plugged all the way into the electrical outlet.
	•	•	•	Close the lid.
•	•	•	•	Check the house fuse or circuit breaker.
	•	•	•	Has the motor overload protector cycled?
•				Turn on the hot and cold water faucets.
•	•	•	•	Pull timer knob out to start the washer.
•				Was the last spin completed?
•				Clean the screens in the water mixing valve and the filter screens in the fill hoses.
•				Water is siphoned from the washer during the cycle. Refer to <i>Installation</i> section.
•	•			Are controls properly set?
		•	•	Broken drive belt. Call the service person.

## If Service Is Required

If service is required, contact the nearest Factory Authorized Service Center.

If you are unable to locate an authorized service center or are unsatisfied with the service performed on your washer, contact:

**Alliance Laundry Systems**  
**Shepard Street**  
**P.O. Box 990**  
**Ripon, Wisconsin 54971-0990**  
**U.S.A.**  
**Phone: (920) 748-3121**

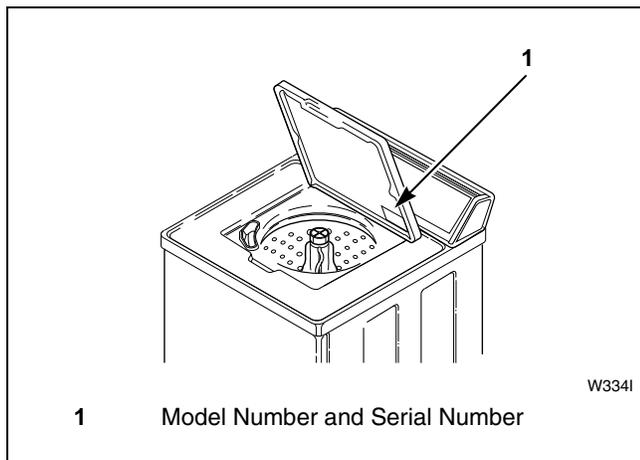


Figure 30

When calling or writing about your washer, PLEASE GIVE THE MODEL AND SERIAL NUMBERS that are located on the nameplate. Refer to *Figure 30* for location. Please include a copy of your bill of sale and any service receipts you have.

	<b>WARNING</b>
<p><b>To reduce the risk of serious injury or death, DO NOT repair or replace any part of the unit or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.</b></p> <p style="text-align: right;">W025E</p>	

**Maintenance**

**Information for Handy Reference**

**Alliance Laundry Systems  
Shepard Street  
P.O. Box 990  
Ripon, WI 54971-0990  
U.S.A.**

Date Purchased \_\_\_\_\_

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

Dealer's Name \_\_\_\_\_

Dealer's Address \_\_\_\_\_ Phone Number \_\_\_\_\_

Service Agency \_\_\_\_\_

Service Agency Address \_\_\_\_\_ Phone Number \_\_\_\_\_

**NOTE: Record the above information and keep your sales slip. Model and serial numbers are located on the nameplate.**