

# Contents

## **Getting started ..... 7**

Assembly, SIM card, battery, turning on, startup menu, calls.

## **Getting to know your phone ..... 12**

Phone overview, icons, use the menus, entering letters, file manager.

## **Calling ..... 21**

Calls, contacts, voice control, call options.

## **Messaging ..... 33**

Text messaging, picture messaging, voice messaging, email, My Friends.

## **Imaging ..... 43**

Camera, video recorder, pictures.

## **Entertainment ..... 48**

WALKMAN™, radio, PlayNow™, ringtones, MusicDJ™, VideoDJ™, games and more.

# Sony Ericsson W600i

## **Connectivity ..... 58**

Internet and email settings, synchronizing, Bluetooth, infrared, USB cable, update service.

## **More features ..... 66**

Alarm clock, calendar, tasks, profiles, time and date, SIM card lock, etc.

## **Troubleshooting ..... 73**

Why doesn't the phone work the way I want?

## **Important information ..... 78**

Sony Ericsson Consumer Web site, service and support, safe and efficient use, end user licence agreement, warranty, declaration of conformity.

## **Index ..... 90**

## Sony Ericsson

GSM 850/900/1800/1900

This user guide is published by Sony Ericsson, without any warranty. Improvements and changes to this user guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide.

All rights reserved.

**©Sony Ericsson Mobile Communications AB, 2005**

Publication number: EN/LZT 108 8097 R1A

Please note:

Some of the services in this user guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or

prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under licence.

The marble logo, Style-Up, QuickShare, PlayNow, MusicDJ, PhotoDJ and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

WALKMAN and the WALKMAN logo and symbol are registered trademarks of Sony Corporation.

Microsoft, Windows and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the U.S and other countries.

Mac OS is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications.

T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user licence agreement for Sun™ Java™ J2ME™.

- 1** Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.
- 2** Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licences to export, re-export, or import Software. Software may not be

downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

- 3** Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Part of the software in this product is copyright © SyncML initiative Ltd. (1999-2002). All rights reserved.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

## **PlayNow™ Terms and conditions (T&C)**

Your mobile phone has PlayNow™, a unique entertainment service from Sony Ericsson. With PlayNow, you can, for example, listen to music tones before you download them to your phone. In some countries/regions you may be able to purchase e.g. music tones from some of the world's top musical artists ("Purchase").



*PlayNow may not be available in all countries/regions*

PlayNow is a trademark or a registered trademark of Sony Ericsson Mobile Communications AB.

PlayNow is a service provided by Sony Ericsson Mobile Communications (USA) Inc. (in the U.S.), and which allows you to download e.g. music tones ("Content") to your Sony Ericsson product. If you want to get in contact with Sony Ericsson, please go to the Contact Us section at the general Sony Ericsson web page ([www.sonyericsson.com](http://www.sonyericsson.com)) or call our local customer care centre.

Please note that Sony Ericsson may use an agent or partner for the purposes of billing, ordering and delivering Content.

Right to download and Purchase the Content will give you the right to use the Content exclusively for your own personal use. No licence is granted to you with respect to the human-readable source code for any Content and no rights are sold, transferred or

otherwise conveyed with respect to any Sony Ericsson or its content providers patents, copyrights, trade marks, trade secrets or other intellectual property rights.

## **User requirements**

To Purchase Content you must be at least 18 years old or receive your parent's or guardian's consent.

When using PlayNow, you hereby accept and agree to the following: (i) You will follow the user instructions you have been and will be presented with during the entire use of PlayNow; (ii) Your Sony Ericsson product must support the technical requirements, if applicable; (iii) You may not initiate the PlayNow client without the Sony Ericsson product being sufficiently charged; and (iv) To the fullest extent permitted by law, neither Sony Ericsson nor its content providers can be held responsible for any damage or loss of other software or hardware of your Sony Ericsson product resulting from the use of PlayNow.

## **Payment terms**

You hereby agree and accept to use PlayNow and when applicable Purchase Content for which you will be charged the amount appearing in your phone display and the network operator charge for sending a text message. The total cost for the Premium SMS (a payment mechanism automatically generating one or more text message(s) once you have accepted the Purchase) will be charged to your mobile phone bill

or to your pre-paid phone card. Further payment terms will be determined by your subscription agreement with your operator.

The cost for your connection to the PlayNow client via GPRS to download the Content is incremental and not included in the approximate price quoted in the phone display.

### **Cancellation and withdrawal**

Once you have accepted a price quoted in the phone display along with these terms and conditions you have confirmed your Purchase and cancellation is not possible. Please note that by accepting the Purchase in the phone display you have implicitly consented that your order for services will be performed by Sony Ericsson prior to the end of the usual period for the right for withdrawal and since the services by their nature can not be returned to Sony Ericsson, you will not be entitled to exercise your right to withdraw.

### **Content**

The Content is owned by Sony Ericsson or Sony Ericsson's Content providers. You may download the Content exclusively for your own, personal use. Content may not be modified, altered or distributed.

### **Warranty Disclaimer and Limitation of Liability**

CONTENT IS PROVIDED "AS IS" AND TO THE FULLEST EXTENT PERMITTED BY LAW SONY ERICSSON AND ITS CONTENT PROVIDERS

SPECIFICALLY DISCLAIM ANY WARRANTY OR CONDITION WHATSOEVER REGARDING MERCHANTABILITY, FITNESS FOR A SPECIFIC PURPOSE, TITLE OR NON-INFRINGEMENT. TO THE FULLEST EXTENT PERMITTED BY LAW SONY ERICSSON ALSO DISCLAIMS ALL WARRANTIES WITH REGARD TO WHETHER THE CONTENT WILL MEET YOUR INDIVIDUAL REQUIREMENTS, WORK IN COMBINATION WITH ANY HARDWARE OR SOFTWARE OR OPERATE ON AN UNINTERRUPTED OR ERROR FREE BASIS. IN NO EVENT WILL SONY ERICSSON'S LIABILITY FOR ANY CLAIM RELATING TO THE CONTENT OR ITS USE, WHETHER IN CONTRACT, TORT, OR OTHERWISE, EXCEED THE AMOUNTS PAID BY YOU FOR SUCH CONTENT. IN NO EVENT WILL SONY ERICSSON BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR STATUTORILY MULTIPLE DAMAGES OF ANY KIND ARISING OUT OF YOUR PURCHASE, ATTEMPTED USE OR USE OF THE CONTENT. THE ABOVE LIMITATIONS ONLY APPLY TO THE GREATEST EXTENT PERMITTED BY LAW. NOTHING IN THESE TERMS AND CONDITIONS LIMIT YOUR STATUTORY RIGHTS AS A CONSUMER. PLEASE NOTE THAT YOUR PERSONAL SETTINGS AND/OR DOWNLOADS MAY BE LOST WHEN YOUR SONY ERICSSON PRODUCT IS REPAIRED OR REPLACED. WITH RESPECT TO THE OPERATION

OF PLAYNOW, IN NO EVENT SHALL SONY ERICSSON BE LIABLE FOR ANY USER ERROR, OR FOR THE AVAILABILITY, FAILURE OR NON-PERFORMANCE OF THE NETWORK SERVICE ON WHICH THE SONY ERICSSON DEVICE OPERATES.

### **Support**

Sony Ericsson and its agents or representatives hereby reserve the right to refer the consumer to the relevant operator if the reason for the error is exclusively due to non-availability or non-functionality of the operator's services. In the event Sony Ericsson is required under law to remedy any failed delivery of a PlayNow content, Sony Ericsson's sole obligation to you, as determined in its absolute discretion shall be to repair or replace the Content. If, in Sony Ericsson's discretion such repair or replacement cannot be performed, Sony Ericsson will provide a refund in the amount of or your payment for the content. Sony Ericsson reserves the right to charge you a reasonable handling fee where the error may be attributed to you and/or your non compliance with all instructions applicable to PlayNow, including without limitation what is stated herein and in the phone display.

### **Access to PlayNow and Limitation**

Sony Ericsson may change, modify or withdraw access to PlayNow at any time, including its services, without prior notice, and without any liability

whatsoever. Sony Ericsson is not liable for the temporary non-availability of PlayNow, or for any delay or damage during the transmission. To the fullest extent permitted by law, no warranty of any kind is made in relation to the condition, suitability, availability, accuracy, reliability, merchantability and/or non-infringement of PlayNow or Content provided through the service, the user's own equipment, any public communication and/or operator networks or that provision of this PlayNow or the services will be uninterrupted or error-free.

### **Export**

The Content may be subject to applicable export control laws. You agree to obey all such laws and regulations with respect to your possession and use of the Content.

### **Dispute Resolution**

Any controversy arising out of Sony Ericsson's provision of the Content or your use or attempted use of such Content shall be fully and finally resolved by the courts of your home country. The laws of the state of New York shall apply to the extent permitted by law, without regard to any conflict of law principles.

## Getting started

*Assembly, SIM card, battery, turning on, startup menu, calls.*

More information and downloads are available at [www.SonyEricsson.com](http://www.SonyEricsson.com).

## Instruction symbols

The following instruction symbols appear in this user guide:



Note



Indicates that a service or function is network- or subscription-dependent. Contact your network operator for details.



Refers to more information on another page.



Use a selection or navigation key to scroll and select ➡ *13 Keys and buttons*.



Press the navigation key centre.



Press the navigation key up.



Press the navigation key down.



Press the navigation key to the left.



Press the navigation key to the right.

## Assembly

Before you can use your phone you need to:

- Insert the SIM card.
- Attach and charge the battery.

## SIM card and battery information

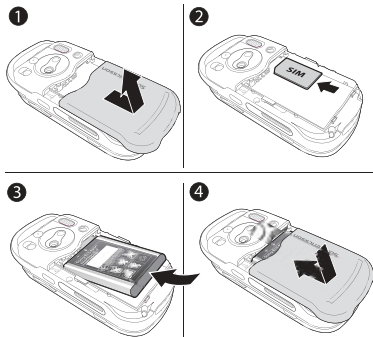
When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and names and numbers in your contacts, among other things.



*If you have been using a SIM card in another phone, make sure that your information is saved to the SIM card before you remove it from the other phone. For example, contacts may have been saved in the phone memory.*

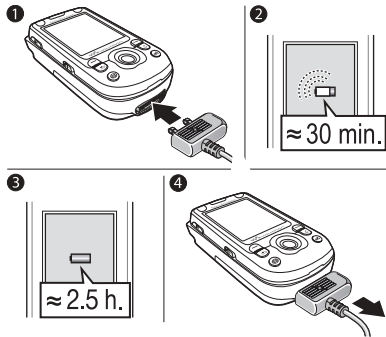
## Getting started

### To insert SIM card and battery



- 1 Remove the battery cover, if attached.
- 2 Insert the SIM card in the slot with the cut off corner first and the gold contacts facing down.
- 3 Place the battery with the label side up and the connectors facing each other. The SIM card will click in place.
- 4 Place and slide the battery cover into place.

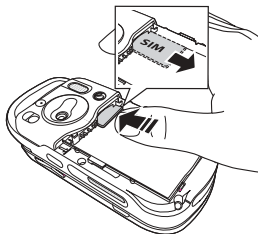
### To charge the battery



- 1 Connect the charger to the phone. The symbol on the charger plug must face upwards.
- 2 It may take up to 30 minutes before the battery icon appears on the screen.
- 3 Wait approximately 2.5 hours or until the battery icon indicates that the battery is fully charged. Press a key to activate the screen.
- 4 Remove the charger by pulling it out.



### To remove the SIM card




Press the edge of the SIM card to release it from the slot.

### PIN

You may need a PIN (Personal Identity Number) to activate the services in your phone. The PIN is associated with your SIM card, and not with the phone. Your PIN is provided by your network operator. When you enter your PIN, each digit appears as \*, unless your PIN starts with the same digits as an emergency number, for example 911 or 112. The reason for this is to always let you make emergency calls without entering a PIN.

If you make a mistake while entering your PIN, delete the number by pressing **(C)**.

 *If you enter the wrong PIN three times in a row, the SIM card is blocked and the message PIN blocked appears. To unblock it, you need to enter your PUK (Personal Unblocking Key) ➡ 71 SIM card lock.*

### Battery

Some functions use more battery power than others and may cause a need for more frequent re-charging. If talk time or stand-by time becomes noticeably shorter, you may have to replace the battery. Only use approved batteries from Sony Ericsson  
➡ 82 Battery.

### Turning on the phone and making calls

Make sure that the phone is charged and your SIM card is inserted before you turn it on. When you have turned the phone on, you can use the setup wizard to quickly and easily prepare your phone for use.

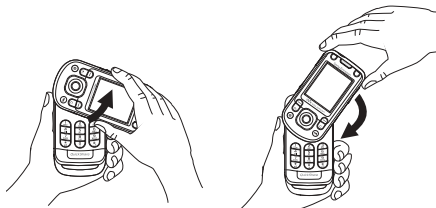
## Getting started

### To turn on the phone



- 1 Press and hold ①. The first start-up may take a couple of minutes.
- 2 Select whether you want to use the phone with all functionality or the WALKMAN™ player only ► **10 Startup menu**.
- 3 Enter your SIM card PIN, if requested.
- 4 At first start-up, select the language you want for your phone menus.
- 5 ► **Yes** if you want the setup wizard to help you get started, and follow the instructions that appear. You can start the wizard from the menu system at any time, ► **Settings** ► the **General** tab ► **Setup wizard**.

### To open and close the phone



- To open the phone, rotate the top section up until it clicks into place.
- To close the phone, rotate the top section down in the opposite direction.




*When you open the phone, rotate the top section 180 degrees to the left or right. Do not rotate the top section more than 180 degrees. If you force the top section more than 180 degrees in either direction, the phone will be damaged.*

### Startup menu

When the startup menu is activated, each time you turn on the phone, you can select to listen to music only, instead of using the phone with full functionality. This means all transmitters of the

phone are turned off, preventing disturbance of sensitive equipment, for example, in an airplane or in a hospital. You cannot make calls, receive calls, or send messages, etc. You can only use the WALKMAN player. If you have selected **Music only**, you can still receive calendar and task reminders, and the alarm can still signal.



 *Always follow regulations and any flight crew instructions with respect to onboard use of electronic devices.*

### To deactivate the startup menu

- 1 ► **Settings** ► the **General** tab ► **Start-up** menu.
- 2 Select **Don't show**.

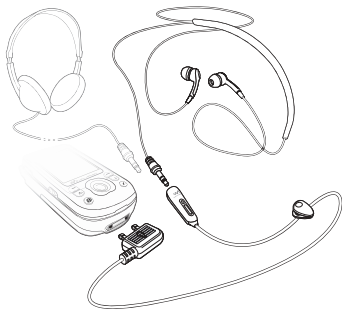
### To make and receive calls

You can make and receive calls when the phone is open or closed.


- 1 When open, enter the phone number (with international prefix and area code if applicable) ► **Call** to make the call. ► **End call** to end the call.
- 2 When open or closed, ► **Contacts** and select the contact to call. Use  or  to select a number ► **Call**.

- 3 When the phone rings ► **Answer** or ► **Busy** to reject the call. This can be done in either open or closed mode.

## Stereo hands-free headset



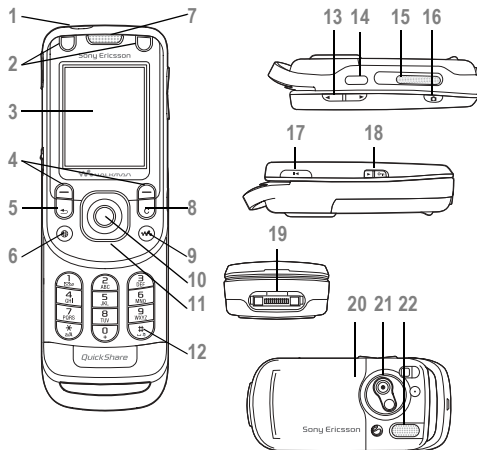
You can connect compatible accessories using a 3.5 mm jack, such as headphones, to your stereo hands-free headset.

 *You can still answer calls and use the microphone when other compatible accessories are in use.*

## Getting to know your phone

*Phone overview, icons, use the menus, entering letters, file manager.*

### Phone overview



- 1 ① Power on/off button
- 2 Dedicated game buttons
- 3 Screen
- 4 — Selection keys
- 5 ↶ Back key
- 6 ⊕ Internet button
- 7 Ear speaker
- 8 C Clear key
- 9 WALKMAN™ key
- 10 ● Navigation key
- 11 Front Style-Up™ Cover
- 12 # — Silent key
- 13 ▲ ▼ Volume, camera and picture zoom buttons
- 14 K Infrared port, Bluetooth connection
- 15 External speaker
- 16 📷 Camera button
- 17 ▶ || Play/Pause button
- 18 🔒 Lock switch, turn light on/off (camera)
- 19 Stereo headset and charger connector

- 20 Back Style-Up™ Cover
- 21 Camera lens
- 22 External speaker

For more information ➡ *13 Keys and buttons*

## Navigation

The main menus are shown as icons on the desktop. Some submenus include tabs that appear on the screen. Scroll to a tab by pressing the navigation key left or right and select an option.

### Navigating the menus



 


 


- Press ● (navigation key) to go to the desktop or to select highlighted items.
- Press ●●●● to move through the menus.
- Press ●● to move between the tabs.



- Press (—) to select options shown immediately above these keys on the screen.
- Press (←) to go back one level in the menus. Press and hold to return to stand-by or to end a function.

## Keys and buttons

	Press to delete items, such as pictures, sounds and contacts. During a call, press and hold to mute the microphone.
	Press to open the browser.
	Press to open or minimize the WALKMAN™ player.
	Press to take a picture or to record a video clip.
	Press and hold to launch the WALKMAN player or radio in a minimized mode and press again to close the WALKMAN player or radio.

## Getting to know your phone

	Press and hold to call your voicemail service (if set).
 - 	Press and hold any of these keys to reach a contact beginning with a specific letter. Press multiple keys to quickly jump to that specific contact.
 - 	Press any of these keys and press <b>Call</b> to speed dial.
	In stand-by, press to view status information. Quickly press twice to reject a call. Press once to turn off the ringtone when receiving a call. Press to increase the volume during a call, or when using the WALKMAN player. Press and hold to go back one track. When using the camera, press to zoom out. Press and hold to voice dial, alternatively say your magic word (if set) ➡ 27 <i>Voice dialling</i> .

	Press and hold to set the phone to silent. The alarm signals even if the phone is set to silent. Press once to turn off the ringtone when receiving a call.
	In stand-by, press to view status information. Quickly press twice to reject a call. Press once to turn off the ringtone when receiving a call. Press to decrease the volume during a call, or when using the WALKMAN player. Press and hold to go forward one track. When using the camera, press to zoom in. Press and hold to voice dial, alternatively say your magic word (if set) ➡ 27 <i>Voice dialling</i> .

- 
- |        |  |
|--------|--|
| ▶ Info | Get more information, explanations or tips about selected features, menus or functions available in your phone. Scroll to a menu item<br>▶ Info. |
|--------|--|
- 
- |        |   |
|--------|---|
| ▶ More | Enter a list of options. There are different alternatives in the list of options depending on where you are in the menus. |
|--------|---|

### Menu overview



**PlayNow?\***



**Internet services\***



**Entertainment**

Online services\*  
Games  
VideoDJ?  
PhotoDJ?  
MusicDJ?  
Remote control  
Record sound  
Demo tour



**Camera**



**Messaging**

Write new  
Inbox  
My friends\*  
Email  
Call voicemail  
Drafts  
Outbox  
Sent messages  
Saved messages  
Templates  
Settings



**WALKMAN**

Now playing  
Artists  
Tracks  
Playlists  
Videos



**File manager**

Pictures  
Videos  
Sounds  
Themes  
Web pages  
Games  
Applications  
Other



**Contacts\*\***

**Options**  
Speed dial  
My business card  
Groups  
SIM contacts  
Special numbers  
Advanced  
**New contact**



**Radio**





### Calls\*\*\*



All



Answered



Dialled



Missed



### Organizer

- Alarms
- Applications
- Calendar
- Tasks
- Notes
- Synchronization
- Timer
- Stopwatch
- Light
- Calculator
- Code memo



### Settings\*\*\*



**General**

- Profiles
- Time & date
- Language
- Update service
- Voice control
- Phone status
- Shortcuts
- Play/pause button
- Start-up menu
- Locks
- Setup wizard
- Tips and tricks
- Master reset



**Sounds & alerts**

- Ring volume
- Ringtone
- Silent mode
- Increasing ring
- Vibrating alert
- Open phone sounds
- Message alert
- Key sound



**Display**

- Wallpaper
- Themes
- Start-up screen
- Screen saver
- Brightness
- Sleep mode clock
- Edit line names\*



**Calls**

- Divert calls
- Manage calls
- Time & cost
- Show/hide my no.
- Handsfree
- Switch to line 2\*



**Connectivity**

- Bluetooth
- Infrared port
- USB connection
- Synchronization
- Device mgmt.
- Mobile networks
- Data comm.
- Internet settings
- Streaming settings
- Settings for Java?
- Accessories















### Note

\* Some menus are operator-, network- and subscription-dependent.

\*\* Options when phone contacts are set to default, options change when SIM contacts are set to default.

\*\*\* Use the navigation key to move across tabs in submenus. For more information ➡ 13 Navigation.

### Standby icons

-  Tells you the strength of the GSM network signal.
-  GPRS network is within range and can be used.
-  EDGE network is within range and can be used.
-  Tells you the status of the battery.
-  Tells you the status of the battery charging.
-  You have missed an incoming call.
-  Call and messaging function alerts are off, alarm is still on.
-  You have received a text message.
-  You have received an email message.
-  Your phone is receiving a picture message.
-  You have received a picture message.
-  You have received a voice message.
-  You have an ongoing call.
-  You have an appointment reminder.



You have a task reminder.



 
 

 


The magic word is activated.

### Shortcuts

You can use keypad shortcuts to quickly go to a menu, and you can use predefined navigation key shortcuts to quickly reach certain functions. You can edit the navigation key shortcuts to suit your own needs.

#### Using keypad shortcuts

Enter the menus by pressing  and then enter the number of the menu to which you want to go. For example, to reach the fifth menu item, press . To reach the tenth, eleventh and twelfth menu items, press ,  and  respectively. To go back to stand-by, press and hold .

#### Using navigation key shortcuts

In stand-by, press , ,  or  to go to a shortcuts menu, or directly to a function.

#### To edit a navigation key shortcut


► **Settings** ► the **General** tab ► **Shortcuts** and select which shortcut you want to edit ► **Edit**.

## Phone language

Select the language for phone menus or the languages that you may use when writing.

### To change the phone language

- ► **Settings** ► the **General** tab ► **Language** ► **Phone language**. Select a language.
- From stand-by, you can also press:
  - Ⓢ 8888 Ⓢ for automatic language (SIM)
  - Ⓢ 0000 Ⓢ for English.

 *Most SIM cards automatically set the menu language to the country where you bought your SIM card. If not, the predefined language is English.*

### To select writing language

- 1 ► **Settings** ► the **General** tab ► **Language** ► **Writing language**.
- 2 Scroll to the language that you want to use and mark it. ► **Save** to exit the menu.

## Entering letters and characters

When writing messages and notes, there are two ways to enter letters and characters:

- Multitap text input
- T9™ Text Input

### To enter letters using multitap input

- Press (2) - (9) repeatedly until the desired character appears on the screen.
- Press (\*aA) to shift between capital and lower-case letters.
- Press and hold (0+) - (9) to enter numbers.
- Press (C) to delete letters and numbers.
- Press (1) for the most common punctuation marks.
- Press (#-) to add a space.

### T9™ Text Input

The T9 Text Input method uses a in-built dictionary to recognize the most commonly used word for each sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

### To enter letters using T9 Text Input

- 1 For example, if you want to write the word “Jane”, press (5), (2), (6), (3).
- 2 If the word shown is the one you want, press (#-) to accept and add a space. To accept a word without adding a space, press Ⓢ. If the word shown is not the one you want, press Ⓢ or Ⓢ repeatedly to view alternative words.

## Getting to know your phone

- 3 Continue writing your message. To enter a full stop or other punctuation marks, press (1) and then (⊙) or (⊙) repeatedly. Accept by pressing (#-).

### **To add words to the T9 Text Input dictionary**

- 1 While entering letters ► **More** ► **Spell word**.
- 2 Edit the word by using multitap input. Use (⊙) and (⊙) to navigate between the letters. To delete a character, press (C). To delete the entire word, press and hold (C).

When you have edited the word ► **Insert**. The word is added to the T9 Text Input dictionary. Next time you enter this word using T9 Text Input, it will appear as one of the alternative words.

### **To switch between writing methods**

Before, or while entering letters, press and hold (\*a/A) to switch between writing methods.

### **Options when entering letters**

► **More** to enter a list of options that offers different alternatives when writing a message.

## **File manager**

Files such as **Pictures**, **Videos**, **Sounds**, **Themes**, **Games** and **Applications** are saved in the folders in the phone memory. Create sub folders to move or copy files to. Unrecognized files are saved in the **Other** folder.

When handling files, you can select several or all files in a folder at the same time.

### **To use a file from the file manager**

- 1 Select a file in **Pictures** or **Sounds**.
- 2 ► **More** ► **Use as** and select an option.

### **To move a file to a folder**

- 1 ► **File manager** and open a folder.
- 2 Scroll to a file, for example, a picture that you want to move ► **More** ► **Manage files** ► **Move**.
- 3 Select the folder you want to move the file to, or select **New folder** and name the folder ► **OK**.

### **To create a subfolder**

- 1 ► **File manager** and open a folder.
- 2 ► **More** ► **New folder** and enter a name for the folder.
- 3 ► **OK** to save the folder.

**To select several files**

- 1 ▶ **File manager** and select a file ▶ **More** ▶ **Mark**  
▶ **Mark several** to select several files.
- 2 Scroll and select more files by pressing **Mark**.
- 3 ▶ **More** ▶ **Unmark all** to remove the selection.

**To select all files in a folder**

- 1 ▶ **File manager** and select a file ▶ **More** ▶ **Mark**  
▶ **Mark all** to select all files.
- 2 ▶ **More** ▶ **Unmark all** to remove the selection.

**To move or copy files to a computer**

➡ 65 *Transferring files using the USB cable.*

**File information**

Items that are downloaded, or received using one of the available transfer methods, may be copyright protected. If a file is protected, you may not be able to copy or send that file. You can select to view information for the file.

## Calling

*Calls, contacts, voice control, call options.*

### Making and receiving calls

Before you can make or receive calls, you must turn on the phone and be within range of a network.

➡ 9 *Turning on the phone and making calls.*

### Networks

When you turn on the phone, it automatically selects your home network if this is within range. If it is not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming.

You can select the network you want to use, or you can add a network to your list of preferred networks. You can also change the order in which networks are selected during an automatic search.

**To view available network options**


▶ **Settings** and use  or  to scroll to the **Connectivity** tab ▶ **Mobile networks**.

**To make a call**

- 1 Enter the area code and the phone number.
- 2 ▶ **Call** to make the call.
- 3 ▶ **End call** to end the call.

## Calling

### To make international calls

- 1 Press and hold  until a + sign appears.
- 2 Enter the country code, area code (without the leading zero) and phone number ► **Call**.

### To re-dial a number

If a call connection fails and **Retry?** appears ► **Yes**.



*Do not hold the phone to your ear while waiting. When the call connects, the phone gives a loud signal.*

### To answer or reject a call

► **Answer** or ► **Busy**.





### Missed calls

If you have missed a call, **Missed calls:** appears in stand-by, indicating the number of missed calls.

 
 
To view the missed calls in the call list ► **Yes**.

If you want to view the missed calls later ► **No**.

### To check your missed calls

- 1 From stand-by ► **Calls** and use  or  to scroll to the **Missed** tab.
- 2 Scroll  or  and ► **Call** to call a number.

### To turn off the microphone

- 1 Press and hold  to mute the microphone during a call.
- 2 Press and hold  again to resume a conversation.



### To use the loudspeaker during a call

► **More** ► **Turn on speaker** or **Turn off speaker**.



*Do not hold the phone to your ear while using the loudspeaker. This could damage your hearing.*

### To change the ear speaker volume

Press  to increase or  to decrease the ear speaker volume during a call.

## Emergency calls

Your phone supports the international emergency numbers, for example, 112, 911 and 08. These numbers can normally be used to make emergency calls in any country, with or without a SIM card inserted, if a GSM network is within range.



*In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

## **To make an emergency call**

Enter, for example, 112 ► **Call**.

## **To view local emergency numbers**

- **Contacts** ► **Options** ► **Special numbers**
- **Emergency nos.**

## **Contacts**

You can save your contact information in the phone memory as contacts, or on the SIM card as names and numbers. You can choose which contacts information – **Phone contacts** or **SIM contacts** – is shown as default. For useful information and settings ► **Contacts** ► **Options**.

### **Default contact**

If you select to use **Phone contacts** as default, your contacts will show all information saved in **Contacts**. If you select **SIM contacts** as default, the contacts will only show names and numbers saved on the SIM card.

### **To select default contacts**

- 1** ► **Contacts** ► **Options** ► **Advanced** ► **Default contacts**.
- 2** Select **Phone contacts** or **SIM contacts**.

 



## **SIM contacts**

Save contacts on your SIM card with name and number.

### **To add a SIM contact**

- 1** ► **Contacts** ► **New contact** ► **Add**.
- 2** Enter the name ► **OK**.
- 3** Enter the number ► **OK** ► **Save**.

 
## **Phone contacts**

Save contacts in the phone with names, phone numbers and personal information. You can also add pictures and ringtones to contacts. Use , ,  and  to scroll between the tabs and their information fields.

### **To add a phone contact**

- 1** ► **Contacts** ► **New contact** ► **Add**.
- 2** Enter the name ► **OK**.
- 3** Enter the number ► **OK**.
- 4** Select a number type.
- 5** Scroll between the tabs and select the fields to add information. To enter symbols such as @, ► **More** ► **Add symbol** and select the symbol ► **Insert**.
- 6** When all information is entered ► **Save**.

### **To delete a contact**

► **Contacts** and scroll to a contact and press .

### **To delete all phone contacts**

► **Contacts** ► **Options** ► **Advanced** ► **Delete all contacts** ► **Yes** and ► **Yes**. Names and numbers on the SIM card are not deleted.

### **To automatically save names and phone numbers to the SIM card**

► **Contacts** ► **Options** ► **Advanced** ► **Auto save on SIM** and select **On**.

### **Memory status**

The number of contacts you can save in the phone or on the SIM card depends on available memory.

► **Contacts** ► **Options** ► **Advanced** ► **Memory status**.



## **Using contacts**

Contacts can be used in many ways. Below you can see how to:

- call phone and SIM contacts.
- send contacts to another device.
- copy contacts to the phone and SIM card.
- add a picture or a ringtone to a phone contact.
- edit contacts.
- synchronize your contacts.

### **To call a phone contact**

1 ► **Contacts** and select the contact to call.

2 Use  or  to select a number ► **Call**.

### **To call a SIM contact**

- If **SIM contacts** is default ► **Contacts** and select the name and number from the list ► **Call**.
- If **Phone contacts** is default ► **Contacts** ► **Options** ► **SIM contacts** and select the name and number from the list ► **Call**.

### **To send a phone contact**

► **Contacts** and select a contact ► **More** ► **Send contact** and select a transfer method.

### **To send all phone contacts**

► **Contacts** ► **Options** ► **Advanced** ► **Send all contacts** and select a transfer method.

### **To copy names and numbers to the SIM card**

1 ► **Contacts** ► **Options** ► **Advanced** ► **Copy to SIM**.

2 Select one of the alternatives.



*When copying all contacts from the phone to the SIM card, all existing SIM card information is replaced.*



### **To copy names and numbers to phone contacts**

- 1 ▶ **Contacts** ▶ **Options** ▶ **Advanced**  
▶ **Copy from SIM.**
- 2 Select one of the alternatives.

### **To add a picture or a ringtone to a phone contact**

- 1 ▶ **Contacts** and select the contact you want to add a picture or personal ringtone to ▶ **More** ▶ **Edit contact.**
- 2 Select the relevant tab and then select **Picture** or **Ringtone** and ▶ **Add.**
- 3 Select a picture or sound and ▶ **Save.**

### **To edit a phone contact**

- 1 ▶ **Contacts** and select a contact ▶ **More** ▶ **Edit contact.**
- 2 Scroll to the relevant tab and select the field to edit and ▶ **Edit.**
- 3 Edit the information and ▶ **Save.**

### **To edit a SIM contact**

- 1 If SIM contacts is default ▶ **Contacts** and select the name and number to edit.  
If phone contacts is default ▶ **Contacts** ▶ **Options** ▶ **SIM contacts** and select the name and number to edit.
- 2 ▶ **More** ▶ **Edit contact** and edit the name and number.

## **Synchronizing contacts**

You can back up and synchronize your contacts with a contacts application on the Web. For more information, please contact your network operator.

### **To synchronize contacts**

- 1 ▶ **Contacts** ▶ **Options** ▶ **Sync. contacts.**
- 2 If you have more than one account, select which account to use ▶ **Select**  
➡ *61 Synchronizing* for more information.

## **Call list**

Information about the most recently dialled, answered and missed calls are listed in separate tabs.

## Calling

### **To call a number from the call list**

- 1 ► **Calls** from stand-by and select a relevant tab.
- 2 Scroll to the name or number to call ► **Call**.

### **To add a call list number to contacts**

- 1 ► **Calls** from stand-by and select a tab.
- 2 Scroll to the number to add ► **More** ► **Save number**.
- 3 ► **New contact** to create a new contact, or select an existing contact to add the number to.

### **To clear the call list**

- **Calls** and select the **All** tab ► **More** ► **Delete all**.

## Speed dialling

Save the phone numbers that you want to reach easily in positions 1-9 in your phone.

### **To speed dial**

From stand-by, enter the position number ► **Call**.

### **To edit speed dialling numbers**

- 1 ► **Contacts** ► **Options** ► **Speed dial**.
- 2 Scroll to the position ► **Add** or ► **Replace**.

## Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.



*Contact your network operator for your voicemail number or for more information.*

### **To call your voicemail service**

Press and hold **1**. If you have not entered a voicemail number, ► **Yes** and enter the number.

### **To edit your voicemail number**

► **Messaging** ► **Settings** ► **Voicemail number**.

## Voice control


 
Manage calls with your voice by creating voice commands to:

- Voice dial – call someone by saying the name.
- Activate voice control by saying a “magic word”.
- Answer and reject calls when using a hands-free.

### **Before voice dialling**

Activate the voice dialling function and record your voice commands. An icon appears next to a phone number that has a voice command.

## **To activate voice dialling and record names**

- 1** ▶ **Settings** ▶ the **General** tab ▶ **Voice control** ▶ **Voice dialling** ▶ **Activate** ▶ **Yes** ▶ **New voice** and select a contact.
- 2** If the contact has more than one number, use  and  to view the numbers. Select the number to add the voice command to. Record a voice command such as “John mobile”.
- 3** Instructions appear. Wait for the tone and say the command that you want to record. The voice command is played back to you.
- 4** If the recording sounds ok ▶ **Yes**. If not ▶ **No** and repeat step 3.

To record another voice command for a contact  
▶ **New voice** ▶ **Add** again and repeat steps 2-4 above.

## **Caller name**

Hear your recorded contact name when you receive a call from that contact.

## **To turn the caller name on or off**

- ▶ **Settings** ▶ the **General** tab ▶ **Voice control** ▶ **Play caller name**.

## **Voice dialling**

Start voice dialling from stand-by using the phone, a portable hands-free, a Bluetooth headset or by saying your magic word.

## **To make a call**

- 1** From stand-by, press and hold one of the volume buttons.
- 2** Wait for the tone and say a recorded name, for example “John mobile”. The name is played back to you and the call is connected.

## **To make a call with a hands-free**

From stand-by, press and hold the hands-free button, or press the Bluetooth headset button  
➡ 64 To add a Bluetooth hands-free.

## **The magic word**

Record and use a voice command as a magic word to activate voice control without pressing any keys. The magic word can only be used with a hands-free or a Bluetooth headset.



*Choose a long, unusual word or phrase that can easily be distinguished from ordinary background speech.*

### **To activate and record the magic word**

- 1 ▶ **Settings** ▶ the **General** tab ▶ **Voice control** ▶ **Magic word** ▶ **Activate**.
- 2 Instructions appear. ▶ **Continue**. Wait for the tone and say the magic word.
- 3 ▶ **Yes** to accept or ▶ **No** for a new recording.
- 4 Instructions appear. ▶ **Continue** and select the environments in which you want your magic word to be activated.

### **Voice answering**

Answer or reject incoming calls by using your voice, when using a hands-free.



*You can only use a MIDI, WAV (16 kHz), EMY or IMY file as a ringtone with voice answering.*

### **To activate voice answering and record voice answer commands**

- 1 ▶ **Settings** ▶ the **General** tab ▶ **Voice control** ▶ **Voice answer** ▶ **Activate**.
- 2 Instructions appear. ▶ **Continue**. Wait for the tone and say “Answer”, or another word.
- 3 ▶ **Yes** to accept or ▶ **No** for a new recording.
- 4 Instructions appear ▶ **Continue**. Wait for the tone and say “Busy”, or another word.

- 5 ▶ **Yes** to accept or ▶ **No** for a new recording.
- 6 Instructions appear. ▶ **Continue** and select the environments in which you want voice answering to be activated.

### **To answer or reject a call using voice commands**

When the phone rings, say:

- “Answer” to connect the call or
- “Busy” to reject the call.

### **To edit your voice commands**

▶ **Contacts** select the contact ▶ **More** ▶ **Edit contact**. Scroll to the relevant tab.

### **To re-record a voice command**

- 1 ▶ **Settings** ▶ the **General** tab ▶ **Voice control** ▶ **Voice dialling** ▶ **Edit names**.
- 2 Select a command ▶ **More** ▶ **Replace voice**.
- 3 Wait for the tone and say the command.



### **Diverting calls**

Divert calls, for example, to an answering service.



*When the Restrict calls function is activated, some Divert calls options are not available.*

➡ 31 Restricted dialling.

Your phone has the following options:

- **Divert always** – all calls.
- **When busy** – if a call is ongoing.
- **Not reachable** – if turned off or unreachable.
- **No reply** – if not answered in a specified time.

## **To activate a call divert**

- 1 ► **Settings** ► the **Calls** tab ► **Divert calls**.
- 2 Select a call type and divert option ► **Activate**.
- 3 Enter the phone number to divert your calls to, or press **Look up** to find a contact ► **OK**.

## **To deactivate a call divert**

Scroll to the divert option ► **Deactivate**.

## **More than one call**


Handle more than one call simultaneously.



## **Call waiting service**

When activated, you hear a beep if you receive a second call.

## **To activate or deactivate the call waiting service**

- **Settings** ► the **Calls** tab by using  or  and
- **Manage calls** ► **Call waiting**.

## **To make a second call**

- 1 ► **More** ► **Hold** to hold the ongoing call.
- 2 Enter the number to call ► **More** ► **Call**.

## **Receiving a second call**

When you receive a second call, you can:

- ► **Answer** and put the ongoing call on hold.
- ► **Busy** to reject and continue the ongoing call.
- ► **Replace active call** to answer and end the ongoing call.



## **Handling two calls**

If you have calls ongoing and on hold, you can:

- ► **More** ► **Switch** to switch between the two calls.
- ► **More** ► **Join calls** to join the two calls.
- ► **More** ► **Transfer call** to connect the two calls.  
You are disconnected from both calls.
- ► **End call** and ► **Yes** to retrieve the held call.
- ► **End call** twice to end both calls (operator dependent).

You cannot answer a third call without ending one of the first two calls or joining them into a conference call.

### Conference calls

Start a conference call by joining an ongoing call and a call on hold. You then put the conference on hold to call and add up to five participants or just to make another call.



*There may be additional charges for calls involving multiple parties, contact your network operator for more information.*

#### **To join the two calls into a conference call**

► More ► Join calls.

#### **To add a new participant**

- 1 ► More ► Hold to put the joined calls on hold.
- 2 ► More ► Add call and call the next person you want to include in the conference call.
- 3 ► More ► Join calls.
- 4 Repeat steps 1-3 to include more participants.

#### **To release a participant**

► More ► Release part. and select the participant that to release from the conference call.

### **To have a private conversation**

- 1 ► More ► Talk to and select the participant that you want to talk to.
- 2 ► More ► Join calls to resume the conference call.



### **Two voice lines**

Make separate calls with different phone numbers if your subscription supports alternate line service.

#### **To select a line for outgoing calls**

► Settings and use ⌚ or ⌚ to scroll to the **Calls** tab and select line 1 or 2.

#### **To change the name of a line**

► Settings and use ⌚ or ⌚ to scroll to the **Display** tab  
► Edit line names and select the line to edit.

### **My numbers**

View, add and edit your own phone numbers.



#### **To check your phone numbers**

► Contacts ► Options ► Special numbers  
► My numbers and select one of the options.

## Accept calls

Receive calls only from certain phone numbers. If the call divert option **When busy** is activated, calls are diverted.

### To add numbers to the accepted callers list

- 1 ▶ **Settings** and use  or  to scroll to the **Calls** tab ▶ **Manage calls** ▶ **Accept calls** ▶ **Only from list** ▶ **Edit** ▶ **Add**. Select a contact.
- 2 To add a group of contacts to the accepted callers list ▶ **Groups** ➔ *33 Groups*.

### To accept all calls

▶ **Settings** ▶ the **Calls** tab ▶ **Manage calls** ▶ **Accept calls** ▶ **All callers**.



## Restricted dialling

Restrict outgoing and incoming calls. A password from your network operator is required.





*If you divert incoming calls, you cannot activate some Restrict calls options.*

The following calls can be restricted:

- **All outgoing** – All outgoing calls.
- **Outgoing intl** – All outgoing international calls.

- **Outgoing intl roam.** – All outgoing international calls except to your home country.
- **All incoming** – All incoming calls.
- **Inc. when roaming** – All incoming calls when you are abroad ➔ *21 Networks*.

### To activate or deactivate a call restriction

- 1 ▶ **Settings** and use  or  to scroll to the **Calls** tab ▶ **Manage calls** ▶ **Restrict calls** and select an option.
- 2 Select **Activate** or **Deactivate**, enter your password ▶ **OK**.



## Fixed dialling

The fixed dialling function allows calls to be made only to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2.



*You can still call the emergency number 911 or 112, even when the fixed dialling function is activated.*

Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456.



*When fixed dialling is activated, you cannot view or manage any phone numbers saved on the SIM card.*

## Calling

### **To activate or deactivate fixed dialling**

- 1 ▶ **Contacts** ▶ **Options** ▶ **Special numbers**  
▶ **Fixed dialling** and select **Activate** or **Deactivate**.
- 2 Enter your PIN2 ▶ **OK** and then ▶ **OK** again to confirm.

### **To save a fixed number**

- ▶ **Contacts** ▶ **Options** ▶ **Special numbers** ▶ **Fixed dialling** ▶ **Fixed numbers** ▶ **New number** and enter the information.



### **Call time and cost**

During a call, the duration of the call is shown on the screen. You can check the duration of your last call, outgoing calls and the total time.

### **To check the call time**

- ▶ **Settings** and use or to scroll to the **Calls** tab  
▶ **Time & cost** ▶ **Call timers**.

## **Additional calling functions**

### **Tone signals**

Use telephone banking services or control an answering machine with tone signals during a call.

- To send the tones, press the keys - , or .
- To clear the screen after a call, press .
- To turn the tones on or off during a call, ▶ **More**  
▶ **Disable tones** or **Enable tones**.

### **Notepad**

Enter a phone number during a call. When you end the call, the number remains on the screen to call or save in the phonebook.

- ▶ **Call** to call the number or press ▶ **More** ▶ **Save number** and select a contact to save the number.  
To create a new contact and save the number  
▶ **New contact**.

### **Showing or hiding your number**

If your subscription supports the Calling Line Identification Restriction (CLIR) service, you can hide your phone number when making a call.

### **To always show or hide your phone number**

- 1 ▶ **Settings** ▶ the **Calls** tab ▶ **Show/hide my no.**
- 2 Select **Show number**, **Hide number** or **Network default**.



## Groups

Create a group of numbers and email addresses to send messages to several recipients at the same time ➡ *33 Messaging*. You can also use groups (with numbers) when you create accepted callers lists ➡ *31 Accept calls*.

### **To create a group of numbers and email addresses**

- 1 ▶ **Contacts** ▶ **Options** ▶ **Groups** ▶ **New group** ▶ **Add**.
- 2 Enter a name for the group ▶ **Continue**.
- 3 ▶ **New** ▶ **Add** to find and select a contact number.
- 4 Repeat step 3 to add more numbers. ▶ **Done**.

## Business cards

Add your own business card as a contact.

### **To add your own business card**

▶ **Contacts** ▶ **Options** ▶ **My business card** and add information for your business card ▶ **Save**.

### **To send your business card**

▶ **Contacts** ▶ **Options** ▶ **My business card** ▶ **Send my card** and select a transfer method.

## Messaging

*Text messaging, picture messaging, voice messaging, email, My Friends.*



*Your phone supports various messaging services. Contact your network operator about available services or for more information, visit [www.SonyEricsson.com](http://www.SonyEricsson.com).*

## Text messaging (SMS)

Text messages can contain simple pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.



*If you send a text message to a group, you will be charged for each member of that group.*

### **Before you start**

A service centre number, to send and receive text messages, is provided by your network operator. It may already be set on the SIM card or you can add the number yourself.

## Messaging

### **To set a service centre number**


- 1 ► **Messaging ► Settings ► Text message ► Service centre.**
- 2 The correct service centre number is shown or if the field is empty or you want to add a new number ► **New ServiceCentre** and enter the number, including the international “+” sign and country code ► **Save.**


### **Sending text messages**

For information about entering letters

► **19 Entering letters and characters**

### **To write and send a text message**

- 1 ► **Messaging ► Write new ► Text message.**
- 2 Write your message ► **Continue.**
- 3 ► **Enter phone no.** for a phone recipient or ► **Contacts look-up** for a number or group in Contacts or select from the last used recipients list below the send options ► **Send.**
- 4 To save the message without sending it, press  and ► **Yes** to save in **Drafts.**

 *To send a message to an email address, you need to enter email settings. ► **58 Settings.***

### **To copy and paste text in a message**

- 1 While writing your message ► **More ► Edit ► Copy all** to copy all of the text in your message or ► **Copy text ► Start** and use the navigation key to scroll and mark text in your message ► **End.**
- 2 ► **More ► Edit ► Paste** to paste the text.


### **To insert an item in a text message**

- 1 While writing your message ► **More ► Add item.**
- 2 Select an item type in the list that appears and then select an item to insert.



*You can convert your text message to a picture message. While writing your message ► **More ► To picture msg** and continue creating a picture message. For more information about picture messaging ► **36 Picture messaging (MMS).***

### **Receiving text messages**

► **Yes** to read the message or ► **No** to read it later. When you have read the text message ► **More** for options or press  to close the message.

### **To call a number in a text message**

Select the phone number displayed in the message, ► **Call.**

## Saving and deleting text messages

Received text messages are saved in the phone memory. When the phone memory is full, delete messages or move them to the SIM card to be able to receive new messages. Messages saved on the SIM card remain until they are deleted.

 
### To save a message

- 1 ► **Messaging** ► **Inbox** and select the message to save.
- 2 ► **More** ► **Save message**.
- 3 ► **Saved messages** to save on the SIM card or ► **Templates** to save the message as a template in the phone.

### To save an item in a text message

- 1 While reading a message, select the phone number, picture or Web address to save ► **More**.
- 2 ► **Use** (the phone number you have selected appears) to save the phone number or ► **Save picture** to save a picture or ► **Save bookmark** to save a bookmark.

### To delete a message

- 1 ► **Messaging** and select a folder.
- 2 Select the message to delete and press  or ► **More**.

### To save or delete several messages

- 1 ► **Messaging** and select a folder.
- 2 Select a message ► **More** ► **Delete all msgs** to delete all messages in the folder or ► **Mark several** scroll and select messages by pressing **Mark** or **Unmark**.
- 3 ► **More** ► **Save messages** to save messages in the phone memory or on the SIM card or ► **Delete messages**.

### Long messages

The number of characters allowed in a text message depends on the language used for writing. You can send a longer message by linking two or more messages. You are charged for each of the messages linked in a long message. You may not receive all parts of a long message at the same time.



*Check with your network operator for the maximum number of messages that can be linked.*

### To turn long messages on

- **Messaging** ► **Settings** ► **Text message** ► **Max. msg length** ► **Max. available**.

## Messaging

### Templates for text messages

Add a new template or save a message as a template in your phone ➔ 35 *To save a message.*

#### To add or use templates

- 1 ► **Messaging** ► **Templates** ► **New template** or select a template from the list ► **Text**.
- 2 Write the message ► **OK**.
- 3 Enter a title for the message ► **OK**.

### Message options

Set a default value for several message options or choose the settings each time you send a message.

#### To set default text message options

► **Messaging** ► **Settings** ► **Text message** and select the options to change.

#### To set message options for a specific message

- 1 When the message is written and a recipient is selected ► **More** ► **Advanced**.
- 2 Select an option to change ► **Edit** and select a new setting ► **Done**.

#### To check the delivery status of a sent message

► **Messaging** ► **Sent messages** and select a text message ► **View** ► **More** ► **Details**.

### Picture messaging (MMS)

Picture messages can contain camera pictures, pictures, text, sound, video clips, sound recordings, and signatures that can be sent to a mobile phone or an email address.



*The sender and receiver must have subscriptions supporting picture messaging.*

### Before you start

If settings are not in your phone ➔ 58 *Settings*.


### Writing and sending picture messages

Add text and items. You can add and delete pages and adjust for example the timing and the background colour of your message. You can also preview the message before sending it.

#### To write and send picture messages

- 1 ► **Messaging** ► **Write new** ► **Picture msg**.
- 2 To add text, start writing. ► **More** to select an item to add from the list that appears.
- 3 To add more text, continue writing. ► **More** to add more items to the message or to view options for the items you have already added.
- 4 When you have finished composing your message ► **Continue**.

- 5 ▶ Enter email addr. for an email recipient or  
▶ Enter phone no. for a phone recipient or  
▶ **Contacts look-up** for a number or group in  
Contacts or select from the last used recipients  
list below the send options ▶ **Send**.

 *When writing and editing picture messages you can use the copy and paste functionality ➡ 34 To copy and paste text in a message.*

### **To set default picture message options**

▶ **Messaging** ▶ **Settings** ▶ **Picture message** and select the options to change.

### **Additional send options**

Request a read report, a delivery report and set a priority for a specific message. You can also add more recipients to the message.

### **To select additional send options**

- 1 When the message is created and a recipient is selected ▶ **More**.
- 2 ▶ **Add recipient** to add recipients or  
▶ **Edit recipients** to edit and add recipients.  
▶ **Edit subject** to change the message subject or  
▶ **Advanced** to select additional send options.

### **Receiving picture messages**


Select how to download your picture messages and how to save items that you receive in the picture messages.

### **To set Automatic download**

▶ **Messaging** ▶ **Settings** ▶ **Picture message** ▶ **Auto download** to view and select one of the following options:

- **Always** – automatically download.
- **Ask in roaming** – ask to download.
- **Not in roaming** – do not download.
- **Always ask** – always ask to download.
- **Off** – new messages appear in the **Inbox**.  
Select the message and ▶ **View** to download.

### **To receive picture messages**

▶ **Yes** to read or play the message, ▶ **Stop** to stop playing or reading the message, ▶ **Reply** to immediately reply or ▶ **More** to view a list of options. Press  to close the message.

### **To save an item in a picture message**

When viewing a picture message ▶ **More** ▶ **Save items** and select an item to save from the list that appears.

## Messaging

### Delete picture messages

Picture messages are saved in the phone memory. When the phone memory is full, you must delete messages to be able to receive new messages

► 35 *Saving and deleting text messages.*

### Templates for picture messages

Add a new template or use a pre-defined template.

#### To add a template

- 1 ► **Messaging** ► **Templates** ► **New template** ► **Picture msg.**
- 2 ► **More** to add new items.
- 3 ► **Save**, enter a title ► **OK** to save the template.
- 4 Select a template from the list ► **Use** ► **Continue** and select a recipient to send the message.

#### To use a predefined template

- 1 ► **Messaging** ► **Templates** and select a template from the list ► **Use** to use the template as it is or ► **More** ► **Edit template** to edit the template, ► **Save**, enter a title ► **OK** to save the changes.
- 2 ► **Continue** and select a recipient to send the message to or select a template from the list ► **Use** ► **Continue** if you have edited the template.

## Voice messages

Send and receive a sound recording as a voice message.




*The sender and receiver must have a subscription supporting picture messaging.*

### To record and send a voice message

- 1 ► **Messaging** ► **Write new** ► **Voice message**.
- 2 Record your message. ► **Stop** to end.
- 3 ► **Send** to send the message.
- 4 ► **Enter email addr.** for an email recipient or ► **Enter phone no.** for a recipient phone number or ► **Contacts look-up** for a number or group in Contacts or select from the last used recipients list below the send options. ► **Send**.

### Receiving voice messages

► **Yes** to play the message or ► **No** if you want to play the message later. When you have listened to the voice message ► **More** to view a list of options. Press  to close the message.



## Email

Connect to a POP3 or IMAP mail server to send and receive email messages with your phone. You can use the same email settings in your phone as in your computer email program.

### Before you start

Make sure that your phone subscription supports Internet, email and data transfer and that you have registered as an email user and have email account settings in your phone. ➡ 58 *Settings*.



*For more information on how to enter your email settings contact your network operator or visit [www.SonyEricsson.com](http://www.SonyEricsson.com).*

### Create an email account

If necessary you can manually create an email account. Make sure that you have the email account settings from your email provider available.

Some of the settings are required and some of the settings are optional.

#### To enter required email account settings

- 1 ➤ **Messaging** ➤ **Email** ➤ **Settings** ➤ **Account settings** ➤ **New account**.
- 2 Enter a name for the account ➤ **OK**.

- 3 Press **⌂** to select **Email address**, enter the email address ➤ **OK**.
- 4 Press **⌂** to select **Connect using** and select a data account (provided by your network operator or service provider).
- 5 Press **⌂** to select **Connection type** (POP3 or IMAP).
- 6 Press **⌂** to select **Incoming server**, enter the server name or IP address ➤ **OK**.
- 7 Press **⌂** to select **Username**, enter the username for the email account ➤ **OK**.
- 8 Press **⌂** to select **Password**, enter the password for the email account ➤ **OK**.
- 9 Press **⌂** and scroll to select **Outgoing server**, enter the server name or IP address ➤ **OK**.

#### To enter optional email account settings

Press **⌂** or **⌂** to scroll and continue to select optional settings for your email account, for example **Check interval**.

### Default email account




If you have several email accounts you can set one as default.

## Messaging

### **To set a default email account**

- **Messaging ► Email ► Settings ► Account settings** and select an account.

### **To write and send an email message**

- 1 ► **Messaging ► Email ► Write new.**
- 2 ► **Add** to enter the recipient field ► **Enter email addr.** to enter an email address ► **OK** or ► **Contacts look-up** to select a recipient from **Contacts** ► **Select** or select an email address from the last used recipients list below the send options ► **Select**.
- 3 To add more recipients select **To**, **Cc** or **Bcc** and select recipients to add. When finished selecting recipients ► **Done**.
- 4 Press  to select the subject field, type an email subject ► **OK**. To edit the subject ► **Edit**.
- 5 Press  to select the text field, write your message ► **OK**. To edit the message ► **Edit**.
- 6 Press  to select the attachment field. ► **Add** and choose the attachment type to add, for example a picture or a sound, ► **Select** to select the attachment to add ► **More** ► **Done** or **New attachment** to add more attachments.
- 7 ► **Continue** ► **Send**.



*When writing and editing email messages you can use the copy and paste functionality ► 34 To copy and paste text in a message.*

### **To receive and read email messages**

- 1 ► **Messaging ► Email ► Inbox ► Send&rec** when the inbox is empty or ► **Messaging ► Email ► Inbox ► More ► Send & receive** to download new messages.
- 2 Select a message in the inbox ► **View** to read it.

### **To reply to an email message**

- 1 Select the message to reply in the inbox ► **More** ► **Reply** or open the message ► **Reply**.
- 2 ► **Include message** to include the original message in your reply or ► **Write new** to exclude the original message from your reply.
- 3 Write your message in the text field ► **OK**. To edit the message ► **Edit**.
- 4 ► **Continue** ► **Send**.



### **To save an email address, a Web address or a phone number in an email message**

- 1 Open the message and select an email address, a phone number or a Web address.
- 2 ▶ **More** ▶ **Save address** to save an email address or ▶ **More** ▶ **Save bookmark** to save a Web address or ▶ **More** ▶ **Use** ▶ **Save number** to save a phone number.

### **To view or save an item in an email message**

Select a message ▶ **More** ▶ **Save attachm.** and select an item. ▶ **Save** to save the item or ▶ **More** ▶ **View** to view the item.

### **To save an email message**

Select a message ▶ **More** ▶ **Save message**  
▶ **Saved email.**



*The number of email messages that can be saved in the phone depends on available memory. When the phone memory is full, you must delete messages to be able to receive new messages ➡ 35 Saving and deleting text messages.*

### **To save several email messages**

- 1 ▶ **Messaging** ▶ **Email** ▶ **Inbox**.
- 2 ▶ **More** ▶ **Mark several** and scroll to select messages by pressing **Mark** or **Unmark**.
- 3 ▶ **More** ▶ **Save messages**.

### **To delete an email message (POP3)**

- 1 ▶ **Messaging** ▶ **Email** ▶ **Inbox** ▶ **More**.
- 2 ▶ **Mark for deletion** or ▶ **Mark several** and scroll to select messages by pressing ▶ **Mark** or **Unmark**. Marked messages are deleted the next time you connect to your server.

### **To delete an email message (IMAP4)**

- 1 ▶ **Messaging** ▶ **Email** ▶ **Inbox** ▶ **More**.
- 2 ▶ **Mark for deletion** or ▶ **Mark several** ▶ **Mark** or **Unmark**.
- 3 ▶ **More** ▶ **Clear inbox**. ▶ **With send & rec.** or **No send & rec.** to delete messages.

## Messaging

### My Friends

Connect and log in to the My Friends server to communicate online with your favourite friends. If your subscription supports instant messaging and presence services, you can send and receive messages and see contact status when they are online.



Contact your network operator for more information.

#### **To log in to your My Friends server**

► Messaging ► My friends ► Log in.

#### **To add a contact to the list**

► Messaging ► My friends ► the Contacts tab, More ► Add contact.

#### **To send a chat message from My Friends**

- 1 ► Messaging ► My friends ► the Contacts tab and select a contact from the list.
- 2 ► Chat and type your message ► Send.





You can also start a chat conversation from the Conversations tab, where the chat conversations that you have started also appears.

### Status

Show your status to your contacts only or change it to all users on the My Friends server.

#### **To change your own status**

► Messaging ► My friends ► the My status tab and update your status information. Use  or  to scroll between the status fields.

### Chat group

A chat group can be started by your network operator, by an individual My Friends user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

#### **To start a chat group**

- 1 ► Messaging ► My friends ► the Chat groups tab ► More ► Add chat group ► New chat group.
- 2 Select contacts to invite to the chat group from your list of contacts ► Continue.
- 3 Enter a short invitation text ► Continue ► Send.

**To add a chat group**

- 1 ► Messaging ► My friends ► the Chat groups tab  
► More ► Add chat group.
- 2 ► By group ID to enter chat group ID directly or  
► Search to search for a chat group.



*The conversation history is preserved between log in and log out to let you return to chat messages from old conversations.*

**Area and cell information**

Information messages may be sent to network subscribers within a certain area or cell.

**To turn information on or off**

- Messaging ► Settings ► Area info ► Reception or Cell information.

**Imaging**

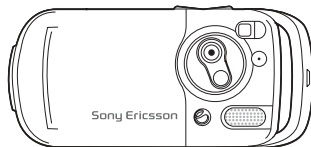
*Camera, video recorder, pictures.*


**Camera and video recorder**

Take pictures and record video clips to view, save or send as picture messages or email attachments. If settings for picture or email messaging are not already in your phone ► 58 Settings.



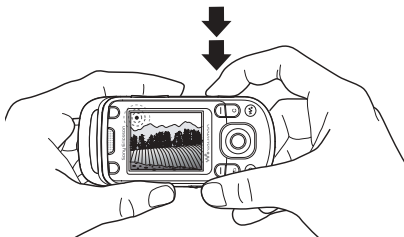
*Do not look directly at the camera light diodes of the phone using a magnification device. Failure to comply with this warning may damage your eyes.*

**To activate the camera**

- 1 Close the phone.
- 2 From stand-by, press and hold  to activate the camera.

## Imaging

### To take pictures and video clips



- 1 Use the navigation key to switch between camera and video recorder.
- 2 Press to take a picture or start recording.
- 3 To end video recording, press again.
- 4 To deactivate the camera, press to go back one level in the menus. Press and hold to return to stand-by.

If you try to use the camera where there is a strong light source, such as direct sunlight or a lamp, the screen may black out and there may be distortion.

### To use the zoom

Use the volume buttons to zoom in and out.

Zoom is not possible when picture size is set to Large (1280 x 1024).

### To adjust brightness

Use the navigation key to increase or decrease brightness.

### To turn on the photo light

Slide to turn the photo light on and off.

### Camera and video options

When the camera or video is activated

► **Settings** for the following options:

- **Switch to video camera** – record a video clip or  
**Switch to still camera** – take a picture.
- **Shoot mode (camera)** – select from:
  - **Normal** – no frame
  - **Panorama** – join several pictures into one
  - **Frames** – add a frame to your picture
  - **Burst** – take a rapid sequence of pictures.
- **Shoot mode (video)** – select from:  
**For picture message** or **High quality video**.  
High quality video is not limited to short clips.

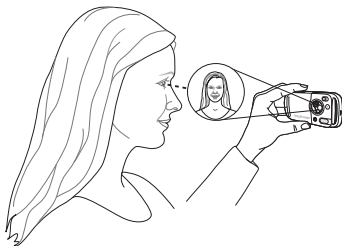
- **Picture size** – Large 1280x1024, Medium 640x480 or Small 160x120.
- **Video size** – Large 176x144 or Small 128x96.
- **Turn on night mode** – adapt to poor lighting conditions.
- **Turn on light** – add light to poor lighting conditions.
- **Turn on self-timer** – take a picture 8-10 seconds after pressing the camera button.
- **Effects** – select from:
  - ▶ **Off** – no effect
  - ▶ **Black & white** – no colour
  - ▶ **Negative** – reversed colours
  - ▶ **Sepia** – brown tint
  - ▶ **Solarize** – overexposure.
- **White balance** – adjust the colours to lighting conditions.
- **Picture quality** – select from:  
Normal or Fine picture quality. Fine changes the JPEG compression and requires more space.
- **Shutter sound** – select different shutter sounds.
- **Turn on time and date** – add time and date.

### **Saving pictures and video clips**

Take a picture or record a video clip. Files are saved automatically in the phone memory

► **20 File manager.**

### **Take a self-portrait**



Hold the phone as shown in the illustration, so that you can see your reflection in the mirror next to the lens. Press the camera button to take the picture.

### **Sending pictures and video clips**

Pictures and video clip recordings stored in the phone can be sent as picture messages. To exchange pictures and video clips using other transfer methods ► **47 Exchanging pictures.**

### **To send a picture or video clip**

Take a picture or record a video clip ► **Send**  
 ► **Continue** and add a recipient.

### **To manage a video clip or a picture**

Record a video clip or take a picture ► **More** and select an option.

### **Transferring pictures to your computer**

Using the USB cable, you can drag-and-drop camera pictures to a computer ➡ *65 Transferring files using the USB cable.*

## **Pictures**

Your phone comes with a number of pictures and animations. You can delete pictures if you want to free memory. Pictures are saved in **File manager** ► **Pictures**. You can also:

- Use a picture as wallpaper and as a screen saver.
- Assign a picture to a contact ➡ *25 To add a picture or a ringtone to a phone contact.*
- Exchange pictures using a transfer method.

### **Handling pictures**

View, add, edit or delete pictures in **File manager**. The number of pictures that you can save depends on available phone memory. File types supported are, for example, GIF, JPEG, WBMP, BMP, PNG and SVG-Tiny.

### **To view pictures**

- 1 ► **File manager** ► **Pictures**, thumbnails appear.
- 2 ► **View** for a full view or ► **More** for options.

### **To display pictures in a slide show**

- 1 ► **File manager** ► **Pictures** and select a picture.
- 2 ► **View** ► **More** ► **Slide show**.

### **To view information about a file**

- 1 ► **File manager** ► **Pictures** or **Videos**, select file.
- 2 ► **More** ► **Information**.

### **Using pictures**

Add a picture to a contact, use it at start-up, as a wallpaper in stand-by or as a screen saver.

### **Screen saver**

The screen saver activates automatically when the phone is idle for a few seconds. After a few more seconds, the screen saver changes to sleep mode, to save power. Press a button to activate the screen again.

### **To use a picture**

- 1 ► **File manager** ► **Pictures** and select a picture.
- 2 ► **More** ► **Use as** and select an option.

**To edit pictures**

➡ 56 PhotoDJ™.

**Exchanging pictures**

You can exchange pictures using one of the available transfer methods. Please note that you are not allowed to exchange some copyright protected material. For more information on sending and receiving pictures in messages ➡ 33 Messaging.

**To send a picture**

► File manager ► Pictures and select a picture  
► More ► Send and select a transfer method.

**To receive a picture via a transfer method**

Select a transfer method and follow the instructions that appear.



*Some phones that support pictures cannot receive picture sizes of more than 160x120. The best picture size to view on a computer is 1280x1024.*

**To save a picture in a message**

➡ 35 To save an item in a text message or  
➡ 37 To save an item in a picture message or  
➡ 41 To view or save an item in an email message.

**Remote screen**

Use a compatible Bluetooth accessory to view pictures on a remote screen such as a TV. The accessory is not included with your phone. For a complete list of compatible accessories, please visit [www.SonyEricsson.com](http://www.SonyEricsson.com).

**To connect to a remote screen**

► File manager ► Pictures ► View ► More ► Remote screen ➡ 62 To add a device to your phone.

## Entertainment

WALKMAN™, radio, PlayNow™, ringtones, MusicDJ™, VideoDJ™, games and more.

### WALKMAN™ player

Play music and video clips. The following file types are supported: MP3, MP4, 3GP, AAC, AMR, MIDI, IMY, EMY and WAV (16 kHz maximum sample rate). You can also use streamed files that are 3GPP compatible.



*AMR and MIDI files are only visible and possible to play with the WALKMAN player if they are DRM-protected. You can, however, listen to other AMR and MIDI files, using the file manager.*

### Install, transfer and play music

Your phone works with the Disc2Phone computer software, included on the CD that comes with the phone. Use Disc2Phone to transfer music from CDs or your computer. This way the music files are transferred in an automatic Artist-Album-Title order. Follow the procedures below to start using the WALKMAN player.

### To install the USB drivers


- 1 Turn on your computer and insert the CD that came with your phone into the CD drive of your computer. If the PC Suite installation window opens, simply close it as it is not needed here.
- 2 Turn on your phone and connect the USB cable to a USB port on the computer and to the phone. The "Found New Hardware Wizards" starts on the computer.
- 3 **Computer:** Click *Install the software automatically* and click *Next*.
- 4 The wizard should find the USB software drivers automatically. Click *Finish*.
- 5 Repeat steps 3 and 4 until all five drivers are installed.

### To install Disc2Phone

- 1 Turn on your computer and insert the CD that came with your phone into the CD drive of your computer. The CD starts automatically and the installation window opens.
- 2 **Computer:** Select a language and click *OK*.
- 3 **Computer:** Click *Install Disc2Phone* and follow the instructions on the screen. When the installation is complete, the Disc2Phone icon appears on the desktop of your computer.




### To transfer music

- 1 Make sure your phone is turned on and connected to the computer with the USB cable.
- 2 **Computer:** Double-click the Disc2Phone icon on the computer desktop to open Disc2Phone.
- 3 **Computer:** For details on transferring music, please refer to Disc2Phone Help. Click  in the top right corner of Disc2Phone window.
- 4 **Computer:** You can obtain CD information (artist, track, etc.) via Disc2Phone if you are connected to the Internet while extracting music from a CD. You must also complete registration before you start.





 


 
 
 

 




*You cannot view the transferred files in your phone until you have removed the USB cable from the phone.*


### To play music and videos

- 1 ► **WALKMAN** or . The WALKMAN player opens.
- 2 Browse for songs by artist or track, or in playlists. You can also browse for video clips. Select a list ► **Open**.
- 3 Highlight a title ► **Play**.

### WALKMAN player controls

- Press  to open the WALKMAN player or to minimize the WALKMAN player during playback.
- Press  to pause the playback. Press again to resume playing.
- Press  to go forward to the next music track or video clip.
- Press  to go back to the previous music track or video clip.
- Press and hold  or  to fast forward or rewind when playing music tracks or video clips.
- Press  or  to show a track-by-track view of the current list when playing music tracks.
- Press  or  to scroll through the playlist during playback. Files that are highlighted will not be selected until you press **Play**.
- When a video clip is playing, press  to play the video in slow motion. To resume normal playback, ► **Play**.
- When a video clip is paused, press  to play the video one frame at a time.
- Press  to go to the WALKMAN player when in the **Now playing** view.
- Press and hold  to exit the WALKMAN player when in the **Now playing** view.

### **Play/pause button**

Press and hold  to start or pause music. Choose between using this button for the WALKMAN™ player or the **Radio**, or the most recently used of these.

### **To change the play/pause button setting**

► **Settings** ► the **General** tab ► **Play/pause button**.

### **Browsing files**

In the WALKMAN player, you can browse for music and video content in lists:

- **Artists** – lists of all available artists.
- **Tracks** – lists all music files (not ringtones) in your phone.
- **Playlists** – create or play your own lists of sound files.
- **Videos** – lists all video clips in your phone.

### **Playlists**

To organize the media files that are stored in the **File manager**, you can create playlists. Files in a playlist can be sorted by artist, title or by the order in which the files were added to the playlist. You can add a file to more than one playlist.

When you delete a playlist or a file from the playlist, it is not deleted permanently from the phone memory. You can add the file to another playlist.

 
### **To create a playlist**

- 1 ► **WALKMAN** ► **Playlists** ► **New playlist** ► Add enter the name of the playlist ► **OK**.
- 2 Select among the files that are available in the **File manager**. You can add several files at a time and you can also add folders. All files in the selected folders will be added to the playlist.

 
### **To add files to a playlist**

- 1 ► **WALKMAN** ► **Playlists** select a playlist ► **Open** ► **More** ► **Add media**.
- 2 Select among the files that are available in the **File manager**.

### **To remove files from a playlist**

- 1 ► **WALKMAN** ► **Playlists** select a playlist ► **Open**.
- 2 Select the file and press .

### **To delete playlists**

- **WALKMAN** ► **Playlists** select a playlist and press .

## WALKMAN player options

► **More** for options:

- **Now playing** – go to the **Now playing** view.
- **Add media** – add files or folders to the playlist.
- **Sort** – sort the playlist by artist, title or by the order in which files were added to the playlist.
- **Delete** – remove a file from the playlist. In playlists you have created, the file is only removed from the playlist. In the **Tracks** list, the file is permanently deleted from the memory.
- **Rename** – rename the playlist. You can only rename user-created playlists.
- **Delete playlist** – delete the playlist. Only the playlist is deleted; the files are still listed in the **File manager**. You can only delete user-created playlists.
- **Information** – view information about the current track or video.
- **Play mode** – change the playback order of songs and videos. Select **Shuffle** to play the playlist files in random order, or **Loop** to restart the playlist when the last file has been played.
- **Stereo widening** – choose between on or off.
- **Equalizer** – change settings for treble and bass when playing music in the WALKMAN player.
- **Send** – send a sound or video clip.

- **Zoom in** – zoom in on a video clip.
- **Capture frame** – when a video clip is paused, capture a picture from the video clip.

## Online music and videos

View videos and listen to music by streaming them to your phone from the Internet. If settings are not already in your phone ► *58 Settings*. For more information, contact your network operator or visit [www.SonyEricsson.com](http://www.SonyEricsson.com).

### To select a data account for streaming

► **Settings** ► the **Connectivity** tab ► **Streaming settings** and select the data account to use.

### To stream video and audio

- 1 ► **Internet services** ► **More** ► **Enter address**.
- 2 Enter or choose the address to a Web page and select a link to stream from. The WALKMAN player opens automatically when a link is selected.

### To stream saved music and videos

- 1 ► **Internet services** ► **More** ► **Bookmarks**.
- 2 Select a link to stream. The WALKMAN player opens and plays the music or video.

### Radio

Listen to FM radio with RDS (Radio Data System) functionality. You must connect the hands-free to your phone as it works as an antenna. The radio can also be used as an alarm signal ➡ *66 Alarm clock*.

#### To listen to the radio

Connect the hands-free to your phone ► **Radio**.

#### Radio control

- **Radio** ► **Search** to find a broadcasting frequency.
- Press or to move 0.1 MHz.
- Press or to select preset channels.
- ► **More** to view options.

#### Saving radio channels

Save up to 20 preset channels.

#### To save radio channels

► **Radio** set frequency ► **More** ► **Save** or press and hold - to save in positions 1 to 10.

#### To select radio channels

Use the navigation key or press - to select a saved channel in positions 1 to 10.

### Radio options

► **More** for the following options:

- **Turn off** – turn off the radio.
- **Minimize** – return to stand-by to use other functions while listening.
- **Save** – save the current frequency in a position.
- **Channels** – select, rename, replace or delete a preset channel.
- **Turn on speaker** – use the loudspeakers.
- **Auto save** – save tuned channels in positions 1 to 20. Previously saved channels are replaced.
- **Set frequency** – enter a frequency manually. Press to go directly to **Set frequency**.
- **RDS** – set options for alternative frequency (AF) and station information.
- **Turn on Mono** – turn on mono sound.

#### To adjust the volume

► or .

## PlayNow™

Listen to music before you purchase and download to your phone.



*This function is network- or operator-dependent. Contact your network operator for information about your subscription and PlayNow™. In some countries you may be able to purchase music tones from some of the world's top musical artists.*



*This service is not available in all countries.*

### Before you start

If settings are not in your phone ➡ 58 Settings.

### To listen to PlayNow™ music

► PlayNow? and select music from a list.

### Downloading from PlayNow™

The total price appears when you select to download and save a music file. Your phone bill or prepay card is debited when a purchase is accepted. Terms and conditions are also provided in the phone kit.

### To download a music file

- 1 When you have listened to a music file and agreed to accept the conditions ► **Yes** to download.
- 2 A text message is sent out to confirm payment and the file is made available to download. Music is saved in **File manager** ► **Sounds**.

## Ringtones and melodies

Your phone comes with melodies that can be used as ringtones. You can exchange melodies using one of the available transfer methods. You are not allowed to exchange copyright-protected material.



*If you select an MP3 file as a ringtone, you cannot use voice answering ➡ 28 Voice answering.*




 
### To select a ringtone

► Settings ► the **Sounds & alerts** tab ► **Ringtone**.

### To turn the ringtone on or off

Press and hold **(# - \*)** from stand-by. All signals except the alarm signal are turned on or off.

### **To set the ringtone volume**

- 1 ▶ Settings ▶ the Sounds & alerts tab ▶ Ring volume and press , ,  or  to decrease or increase the volume.
- 2 ▶ Save to save the setting.

### **Caller-specific ringtones**

If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones to contacts ➡ 25 *To add a picture or a ringtone to a phone contact.*

### **Sounds & alerts options**

Select to use the vibrating alert or sounds.

### **To set the vibrating alert**

- ▶ Settings ▶ the Sounds & alerts tab ▶ Vibrating alert and select from the following options:
- On – all the time.
  - On if in Silent – if ring volume is off or the phone is set to silent.
  - Off – all the time.

### **To set message alert**

- ▶ Settings ▶ the Sounds & alerts tab ▶ Message alert and select an option.






### **To set the key sound**

- ▶ Settings ▶ the Sounds & alerts tab ▶ Key sound and select an option.

## **MusicDJ™**

Compose and edit your own melodies to use as ringtones. A melody consists of four types of tracks – Drums, Basses, Chords, and Accents. A track contains a number of music blocks. The blocks consist of pre-arranged sounds with different characteristics. The blocks are grouped into Intro, Verse, Chorus, and Break. You compose a melody by adding music blocks to the tracks.

### **To compose a melody**

- 1 ▶ Entertainment ▶ MusicDJ?.
- 2 ▶ Insert, Copy or Paste blocks. Use , ,  or  to move between the blocks. Press  to delete a block. ▶ More to view more options.

### **To edit a MusicDJ™ melody**

- ▶ File manager ▶ Sounds and select the melody  
▶ More ▶ Edit.

### Exchanging MusicDJ™ melodies

Send and receive melodies using one of the available transfer methods. You are not allowed to exchange copyright-protected material.



*You cannot send a polyphonic melody or an MP3 file in a text message.*

### To send a melody

- 1 ▶ File manager ▶ Sounds and select a melody.
- 2 ▶ More ▶ Send and select a transfer method.

### To receive a melody via a transfer method

Select a transfer method and follow the instructions that appear.

### VideoDJ™

Compose and edit your own video clips by using video clips, pictures and text. You can also use trim to delete unwanted parts to shorten a video clip.

### To create a video clip

- 1 ▶ Entertainment ▶ VideoDJ?.
- 2 ▶ Add ▶ Video clip, Picture, Text or Camera ▶ Select.
- 3 To add more items press © ▶ Add.

### To edit a selected video clip

▶ Edit for options:

- Trim – to shorten the video clip.
- Add text – to add text to the video clip.
- Replace – to select a new video clip.
- Delete – to remove the video clip.
- Move – to move the video clip to another position.

### To edit a selected picture

▶ Edit for options:

- Replace – to select a new picture.
- Duration – to select the display time for the picture.
- Delete – to remove the picture.
- Move – to move the picture to another position.

### To edit a selected text

▶ Edit for options:

- Edit – to change the text.
- Background – to set background.
- Text colour – to set font colour.
- Duration – to select the display time for the text.
- Delete – to remove the text.
- Move – to move the text to another position.

### VideoDJ™ options

► More for options:

- **Play** – to view the video clip.
- **Send** – to send the video clip.
- **Soundtrack** – to add a soundtrack to the video clip.
- **Transitions** – to set transitions between video clips, pictures and text.
- **Save** – to save the video clip.
- **Insert** – to insert a new video clip, picture or text.
- **New video** – to create a new video clip.

### To edit video clips in File manager

- 1 ► File manager ► Videos ► Open and select file.
- 2 ► More ► VideoDJ? ► Edit.

### Sending video clips

You can send a video clip using one of the available transfer methods. Short video clips can be sent using picture messaging. If a video clip is too long, you can use the Trim function to make a video clip shorter.

### To trim a video clip

- 1 Select a video clip from the storyboard ► Edit ► Trim.
- 2 ► Set to set the start point and ► Start.
- 3 ► Set to set the end point and ► End.
- 4 Repeat steps 2 and 3 or ► Done.

### PhotoDJ™

Edit files using PhotoDJ™ or when viewing files.

### To edit and save a file

- 1 ► Entertainment ► PhotoDJ? or ► File manager ► Pictures and select a file ► View ► More ► Edit.
- 2 ► Tool and select an option.
- 3 After you have edited the selected picture  
► More ► Save picture.

### Sound recorder

With the sound recorder, you can record either your own memos or calls. Recorded sounds can also be set as ringtones. Recording of a conversation is stopped if a participant ends the call. Recording of all sounds stops automatically if you receive a call.



*In some countries or states it is required by law that you inform the other person before recording the call.*

### To record a sound

- 1 ► Entertainment ► Record sound.
- 2 Wait until you hear a tone. When the recording starts, **Recording** and a timer appears.
- 3 ► Save to end, ► Play to listen or ► More for options: Record new, Send, Rename, Delete, Recorded sounds.



**To listen to a recording**

- ▶ **File manager** ▶ **Sounds** and select a recording
- ▶ **Play** or ▶ **Stop**.

**Themes**

Change the appearance of the screen, for example, colours and wallpaper, by using themes. Your phone has some predefined themes that cannot be deleted if they are protected. You can create new themes and download them to your phone. For more information, visit [www.SonyEricsson.com](http://www.SonyEricsson.com).

**To select or change a theme**

- ▶ **File manager** ▶ **Themes** and select a theme.

**Exchanging themes**

Exchange themes using a transfer method.

**To send a theme**

- 1 ▶ **File manager** ▶ **Themes** and select a theme.
- 2 ▶ **More** ▶ **Send** and select a transfer method.

**To receive and save a theme**

- 1 Use a transfer method and open the message you received the theme in.
- 2 Follow the instructions that appear on the screen.

**Games**

Your phone has several entertaining games. You can also download games and applications directly to the folders in your phone. Help texts are available for most games.

**To start and end a game**

- 1 ▶ **Entertainment** ▶ **Games**, select game ▶ **Select**.
- 2 Press and hold  to end the game.

**Applications**

Download and run Java™ applications. You can view information or set different permission levels.

**To view info for Java™ applications**

- 1 ▶ **File manager** ▶ **Applications** or ▶ **Games**.
- 2 Select an application or a game ▶ **More** ▶ **Information**.

### **To set permissions for Java™ applications**

- 1 ▶ File manager ▶ Applications or ▶ Games.
- 2 Select an application or a game ▶ More  
▶ Permissions and set options.

### **Java application screen size**

Some Java applications are designed for a specific screen size and may not be able to adapt the application to the screen. For more information, contact the application vendor.

### **To set the screen size for a Java™ application**

- 1 ▶ File manager ▶ Applications or ▶ Games.
- 2 Select an application or a game ▶ More  
▶ Screen size.
- 3 Select an option, for example, User defined  
▶ Width: and Height: to edit values.

## Connectivity

*Internet and email settings, synchronizing, Bluetooth, infrared, USB cable, update service.*

### **Settings**

Before you start using Internet, Messaging, My Friends or PlayNow™, settings are required in your phone.

Settings may already be entered when you buy your phone. If not, make sure you have a phone subscription that supports data transfer (GPRS).

### **Entering settings**

You can enter settings as follows:

- Receive settings from your network operator or service provider or from [www.SonyEricsson.com](http://www.SonyEricsson.com).
- Enter or edit settings manually, which requires that you have the settings from your network operator or service provider available.



*For more information contact your network operator or visit [www.SonyEricsson.com](http://www.SonyEricsson.com).*

## Using Internet

Browse the Internet using HTTP (Hyper Text Transfer Protocol).

### To select an Internet profile

- Settings ► the **Connectivity** tab ► **Internet settings**
- **Internet profiles** and select a profile to use.

### To start browsing

- **Internet services** and select a service or ► **Internet services** ► **More** to view options.

### To stop browsing

- **More** ► **Exit browser**.

### Options when browsing

- **More** to view options. The menu contains the following options but may depend on the Web page you are visiting:



*If you select an email address when browsing a Web page, you can send a message to that address.*

- **Go to** for options:
  - **Sony Ericsson** – go to the pre-defined homepage set for the current profile.
  - **Bookmarks** – create, use or edit bookmarks.
  - **Enter address** – enter the address to a Web page.

- **History** – list of previously visited Web pages.
- **Tools** for options:
  - **Add bookmark** – add a new bookmark.
  - **Save picture** – save a picture.
  - **Save page** – save the current Web page.
  - **Refresh page** – refresh the current Web page.
  - **Send link** – send a link to the current Web page.
  - **Make a call** – make a call while browsing the Internet. ► **More** ► **End call** to end the call and continue browsing.
- **View** for options:
  - **Full screen** – select normal or full screen.
  - **Text only** – select full content or text only.
  - **Zoom** – zoom in or out on the Web page.
  - **Zoom to normal** – set zoom to default.
- **Advanced** to enter settings for the browser.
- **Exit browser** to disconnect and go to stand-by.

## Using bookmarks

Use, create and edit bookmarks for the browser.

### To work with bookmarks

- 1** ► **Internet services** ► **More** ► **Go to** ► **Bookmarks** and select a bookmark ► **More**.
- 2** Select an option.

## Connectivity

### Downloading

Download files, for example, pictures, themes, games and ringtones from Web pages.

### To download from the Sony Ericsson Web page

- 1 ► Internet services ► Sony Ericsson.
- 2 Browse the Web page, select a file to download and follow the instructions that appear.

### Internet profile for Java™ applications

Some Java applications need to connect to the Internet to receive information, for example, games that downloads new levels from a game server.

### Before you start

If settings are not in your phone ➡ 58 *Settings*.

### To select a profile for Java

► Settings ► the Connectivity tab ► Settings for Java? and select an Internet profile.

### Stored information

When browsing, you can save information.



*It is advisable to clear any sensitive information about previously visited Internet services. This is to avoid a security risk if your phone is misplaced, lost or stolen.*

The following information can be saved:

- Cookies – improve Web page access efficiency.
- Passwords – improve server access efficiency.

### To allow cookies

► Internet services ► More ► Advanced  
► the Browsing tab ► Allow cookies ► On.

### To clear cookies

► Internet services ► More ► Advanced  
► the Other tab ► Clear cookies ► Yes.

### To clear the password list

► Internet services ► More ► Advanced  
► the Other tab ► Clear passwords ► Yes.

### Internet security



Secure browsing is supported. When using an Internet profile you can turn on security in the phone.

### Trusted certificates

Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

**To check certificates in your phone**

- ▶ **Settings** ▶ the **Connectivity** tab ▶ **Internet settings**
- ▶ **Security** ▶ **Trusted cert.**

**Synchronizing**

Synchronize phone contacts, appointments, tasks and notes via Bluetooth, the infrared port, Internet services or the USB cable included with the phone.

Synchronization software for your computer is available on the CD included with the phone. You can also visit [www.SonyEricsson.com](http://www.SonyEricsson.com) to download the software or Getting started guides for synchronization.

**To select sync order for contacts**

- ▶ **Contacts** ▶ **Options** ▶ **Advanced** ▶ **Sync. order**
- to select to order by first or last name.

**Synchronization with nearby devices**

Install the computer synchronization software using the CD that comes with your phone or download it from [www.SonyEricsson.com](http://www.SonyEricsson.com). The software includes help information.

**Remote synchronization via Internet**

Synchronize online via an Internet service.

**Before you start**

- If settings are not in your phone ➤ 58 *Settings*.
- Register a synchronization account online.
- Enter remote synchronization settings.

**To enter remote synchronization settings**

- 1** ▶ **Organizer** ▶ **Synchronization** ▶ **New account**  
▶ **Yes** to create a new account.
- 2** Enter a name for the new account ▶ **Continue**.
- 3** Enter the following:
  - **Server address** – server URL.
  - **Username** – account username.
  - **Password** – account password.
  - **Connection** – select an Internet profile.
  - **Applications** – mark applications to synchronize.
  - **App. settings** – select an application and enter a database name, and if required, username and password.
  - **Sync. interval** – set how often to synchronize.
  - **Remote initiation** – select to always accept, never accept or always ask when starting from a service.
  - **Remote security** – insert a server ID and a server password.
- 4** ▶ **Save** to save your new account.


### **To start remote synchronization**

► **Organizer** ► **Synchronization** and select an account ► **Start**.

## **Bluetooth™ wireless technology**


Bluetooth makes it possible to connect wirelessly to other Bluetooth devices. You can:

- connect to several devices at the same time.
- synchronize information with other devices.
- use the remote control functionality.
- use a remote screen.
- exchange items and play multiplayer games.

 *We recommend a range within 33 feet (10 metres), with no solid objects in between, for Bluetooth communication.*

### **Before you start**

- Turn on Bluetooth to communicate with other devices.
- Pair the Bluetooth devices with your phone that you want to communicate with.


 *Please check if local laws or regulations restrict the use of Bluetooth. If Bluetooth is not allowed, you must ensure that the Bluetooth function is turned off. The maximum allowed Bluetooth radio output power in the phone is automatically adjusted according to possible local restrictions. This means that the range may vary.*

### **To turn Bluetooth on**

► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **Turn on**.

### **Adding devices to your phone**

Enter a passcode to set up a secure link between your phone and the device. Enter the same passcode on the device when prompted. Devices with no user interface, such as a hands-free, will have a pre-defined passcode. Consult the device user guide for more information.

 *Make sure that the device you want to add has Bluetooth activated and visible.*

### **To add a device to your phone**

- 1 ► **Settings** ► the **Connectivity** tab ► **Bluetooth** ► **My devices** ► **New device** to search for available devices.
- 2 Select a device from the list.
- 3 Enter a passcode, if required.

**To organize your list of devices**

- 1 ▶ **Settings** ▶ the **Connectivity** tab ▶ **Bluetooth**  
▶ **My devices** and select a device from the list.
- 2 ▶ **More** to view a list of options.

**Power save**

Turn on to reduce power consumption by optimizing your phone for use with a single Bluetooth device. Turn off to connect with several Bluetooth devices at the same time.

**To save power**

- ▶ **Settings** ▶ the **Connectivity** tab ▶ **Bluetooth**
- ▶ **Powersave** ▶ **On**.

**Phone name**

Enter a name for your phone to be shown to other devices when found.

**To enter a phone name**

- ▶ **Settings** ▶ the **Connectivity** tab ▶ **Bluetooth**
- ▶ **Phone name**.

**Visibility**

Choose to make your phone visible to other Bluetooth devices or not. If set to hide, other devices will not be able to discover your phone via Bluetooth.

**To show or hide your phone**

- ▶ **Settings** ▶ the **Connectivity** tab ▶ **Bluetooth**
- ▶ **Visibility** ▶ **Show phone** or **Hide phone**.

**Exchanging items**

Send or receive items using Bluetooth as the transfer method. Choose a device from the list of found devices.

**To send an item**

- 1 Select an item, for example ▶ **Contacts** and select a contact.
- 2 ▶ **More** ▶ **Send contact** ▶ **Via Bluetooth**.
- 3 Select the device to send the item to ▶ **Select**.

**To receive an item**

- ▶ **Settings** ▶ the **Connectivity** tab ▶ **Bluetooth**
- ▶ **Turn on**. Make sure the phone is visible,
- ➡ 63 *To show or hide your phone*. When you receive an item, follow the instructions that appear.

## Connectivity

### **To add a Bluetooth hands-free**

- 1 ▶ Settings ▶ the Connectivity tab ▶ Bluetooth ▶ Handsfree.
- 2 ▶ Yes if you are adding a Bluetooth hands-free for the first time or ▶ My handsfree ▶ New handsfree ▶ Add if you are adding another Bluetooth hands-free. Ensure that your hands-free is in pairing mode. Consult the device user guide for more information.

### **Transferring sound**

Transfer the sound for calls when using a Bluetooth hands-free. You can also transfer the sound for calls using the keypad.

### **To transfer sound when using a hands-free**

During a call, ▶ More ▶ Transfer sound and select a device.

### **Directing sound**

Direct sound when answering a call with the phone keypad or the hands-free button.

### **To direct sound when answering a call with a hands-free**

- 1 ▶ Settings ▶ the Connectivity tab ▶ Bluetooth ▶ Handsfree ▶ Incoming call.
- 2 ▶ In phone to direct to the phone or  
▶ In handsfree to direct to the hands-free.

### **Remote control**

Use your phone as a remote control device to control computer applications such as a media player or Microsoft® PowerPoint® presentations. Your computer must support Bluetooth HID Profile.

### **To select remote control**

- 1 ▶ Entertainment ▶ Remote control.
- 2 Select an application to use and the computer to connect to.

### **File transfer**

Use a computer equipped with Bluetooth to view and transfer files in the file manager. Use drag-and-drop functionality to:

- Transfer files between phone and computer.
- Move and organize files.
- Delete files from the phone.



## Infrared port

Use the infrared port as a transfer method with compatible devices. You can, for example, synchronize calendar items ➤ *61 Synchronizing*, and send items such as pictures.



*When connecting to a computer, refer to its user documentation. Make sure that computer infrared speed is set to 115200 bps.*

### To turn the infrared port on

- **Settings** ► the **Connectivity** tab ► **Infrared port**
- **On** or ► **10 minutes** to turn on for 10 minutes.

### To connect two devices

- 1 Turn on infrared in both devices.
- 2 Make sure the infrared port on your phone is facing the infrared port on the other device with a maximum distance of 8 inches (20 cm).

### To send an item using the infrared port (example: a contact)

- 1 Make sure that infrared in both devices is on.
  - **Contacts** and select a contact.
- 2 ► **More** ► **Send contact** ► **Via infrared**.

## Transferring files using the USB cable

Your phone comes with a USB cable and when you connect your phone to a computer using the USB cable, the phone memory will appear as a drive on the computer.



*Only use the USB cable included with the phone and connect it directly to your computer.*

Use computer drag-and-drop functionality to:

- Transfer files between phone and computer.
- Move and organize files.
- Delete files from the phone.



*All phone functions, except for alarms and alerts, will be turned off during the USB connection.*

### To start a USB connection with the phone turned on

- 1 Connect the USB cable to your phone and to your computer.
- 2 ► **Settings** and use ⌚ or ⌚ to scroll to the **Connectivity** tab.
- 3 ► **USB connection** ► **Yes**.

## More features

### **To start a USB connection with the phone turned off**

Connect the USB cable to your phone and to your computer.



*Do not remove the USB cable during the file transfer since it may damage your phone memory*

### **To end a USB connection**

- 1 Exit the USB connection on your computer. In Windows, click the Safely Remove Hardware icon in the taskbar, and follow the instructions.
- 2 Remove the USB cable from your phone.

## More features

*Alarm clock, calendar, tasks, profiles, time and date, SIM card lock, etc.*

### **Alarm clock**

Set an alarm for a specific time. You can also set an alarm to recur on specific days. The alarm signal is on even if the phone is set to silent or turned off. The radio can also be used as an alarm.



*If you choose Radio as the alarm signal, please make sure that the hands-free is connected to the phone.*

### **To use alarms**

► **Organizer** ► **Alarms** and select an option:

- ► **Alarm** set a time ► **Save**.
- ► **Recurrent alarm**. Set a time and select days  
► **Mark** ► **Done**.
- ► **Alarm signal** ► **Radio** or **Sounds**.

### **To snooze or turn an alarm off**

To turn the alarm signal off when it rings, press any key, if radio is selected as alarm signal ► **Snooze**. If you do not want the alarm to be repeated ► **Turn off**.

### **To cancel an alarm**

► **Organizer** ► **Alarms** ► **Alarm** ► **Turn off**.

## Calendar

You can use the calendar to keep track of important meetings. The calendar can be synchronized with a computer calendar or with a calendar on the Web ➡ *61 Synchronizing.*

## Appointments

Add new appointments or use existing appointments as templates. You can also set reminders for appointments.

### To add a new appointment

- 1 ▶ **Organizer** ▶ **Calendar** and select a date  
▶ **Select** ▶ **New appointment** ▶ **Add**.
- 2 Enter details and confirm each entry.

### To view an appointment

- 1 ▶ **Organizer** ▶ **Calendar** and select a day (appointment days marked in bold).
- 2 Select an appointment ▶ **View**.

### To view a calendar week


 

 
 
 

- ▶ **Organizer** ▶ **Calendar** ▶ **More** ▶ **View week**.

### To set when reminders should sound

- 1 ▶ **Organizer** ▶ **Calendar** ▶ **More** ▶ **Advanced**  
▶ **Reminders**.
- 2 ▶ **Always** for a reminder to sound even when the phone is turned off or set to silent. When the reminder sounds ▶ **Yes** to read the appointment or ▶ **No** to turn off the reminder. A reminders option set in the calendar affects a reminders option set in tasks.

### Navigating in your calendar

Use the navigation key to move between days or weeks. In the monthly and weekly views, you can also use the keypad as follows.

- |   |   |
|---|---|
|  <i>Today's date</i> |   |
|  <i>Back a week</i>    |  <i>Next week</i>  |
|  <i>Back a month</i>   |  <i>Next month</i> |
|  <i>Back a year</i>    |  <i>Next year</i>  |

### Calendar settings

- ▶ **Organizer** ▶ **Calendar** ▶ **More** to select an option:
- **View week** – view appointments of the week.
  - **New appointment** – add a new appointment.
  - **Change date** – go to another date in the calendar.

## More features

- **Advanced** – find, set reminders or select a start day for the week.
- **Delete** – delete appointments.

### Exchanging appointments

Exchange appointments using a transfer method. You can also synchronize appointments with a computer ➡ *61 Synchronizing*.

#### To send an appointment

Select an appointment in the list for a certain day  
► **More** ► **Send** and select a transfer method.

## Tasks

Add new tasks or use existing tasks as templates. You can also set reminders for tasks.

#### To add a new task

- 1 ► **Organizer** ► **Tasks** ► **New task** ► **Add**.
- 2 ► **Task** or **Phone call**.
- 3 Enter details and confirm each entry.

#### To view a task

► **Organizer** ► **Tasks** and select a task ► **View**.

#### To set when reminders should sound

- 1 ► **Organizer** ► **Tasks** and select a task ► **More** ► **Reminders**.
- 2 ► **Always** for a reminder to sound even when the phone is turned off or set to silent. When the reminder sounds ► **Yes** to read the task, or to call the phone number in a phone task. ► **No** to turn off the reminder. A reminders option set in tasks affects a reminders option set in the calendar.

### Exchanging tasks

Exchange tasks using a transfer method. You can also synchronize tasks with a computer  
➡ *61 Synchronizing*.

#### To send a task

Select a task in the list of tasks for a certain day  
► **More** ► **Send** and select a transfer method.

## Notes

Make notes and save them in a list. You can also show a note in stand-by.

#### To add a note

► **Organizer** ► **Notes** ► **New note** ► **Add** and enter the note ► **Save**.

**To edit notes**

- 1 ▶ Organizer ▶ Notes and a list appears.
- 2 Select a note ▶ More and select an option.

**Exchanging notes**

Exchange notes using a transfer method. You can also synchronize notes with a computer

➡ 61 *Synchronizing.*

**To send a note**

- ▶ Organizer ▶ Notes and select a note ▶ More ▶ Send and select a transfer method.

**Timer**

Your phone has a timer. When the signal rings press any key to turn it off.

**To set the timer**

- ▶ Organizer ▶ Timer and set the hours, minutes and seconds for countdown.

**Stopwatch**

Your phone has a stopwatch that can save several laps. The stopwatch continues to run when you answer an incoming call.

**To use the stopwatch**

- 1 ▶ Organizer ▶ Stopwatch ▶ Start.
- 2 ▶ Stop or ▶ New lap if you want a lap time.
- 3 To reset the stopwatch ▶ Reset.

**Light**

Use the light as a flash light in dim lit environments. The light can also be used as an SOS signal.



*Do not look directly at the camera light diodes of the phone using a magnification device. Failure to comply with this warning may damage your eyes.*

**To use the light**

- 1 ▶ Organizer ▶ Light.
- 2 Choose between On for 1 minute, On, Off or SOS.

**Calculator**

The calculator can add, subtract, divide and multiply.

**To use the calculator**

- ▶ Organizer ▶ Calculator.
- Press or to select  $\div$   $\times$   $-$   $+$   $\%$   $=$
  - Press to delete the figure.
  - Press to enter a decimal point.

### Code memo

Save security codes, such as for credit cards, in the code memo. Set a passcode to open the code memo.

### Checkword and security

To confirm that you have entered the correct passcode you must enter a checkword.

When you enter your passcode to open the code memo, the checkword is shown for a short time. If the passcode is correct, the correct codes are shown. If you enter the incorrect passcode, the checkword and the codes that are shown are also incorrect.

### To open code memo for the first time

- 1 ▶ **Organizer** ▶ **Code memo**. A message with instructions appears ▶ **Continue**.
- 2 Enter a four-digit passcode ▶ **Continue**.
- 3 Re-enter the new passcode to confirm.
- 4 Enter a checkword (maximum 15 characters) ▶ **Done**. The checkword can consist of both letters and numbers.

### To add a new code

- 1 ▶ **Organizer** ▶ **Code memo** and enter your passcode ▶ **New code** ▶ **Add**.
- 2 Enter a name associated with the code ▶ **Continue**.
- 3 Enter the code ▶ **Done**.

### To change the passcode

- 1 ▶ **Organizer** ▶ **Code memo** and enter your passcode ▶ **More** ▶ **Change passcode**.
- 2 Enter your new passcode ▶ **Continue**.
- 3 Re-enter the new passcode ▶ **Continue**.
- 4 Enter a checkword ▶ **Done**.

### Forgot your passcode?

If you forget your passcode, you must reset the code memo.

### To reset code memo

- 1 ▶ **Organizer** ▶ **Code memo** and enter your passcode ▶ **More** ▶ **Reset**.
- 2 **Reset code memo?** appears ▶ **Yes**. The code memo is reset and all entries are cleared. The next time you enter the code memo, you must start at ➡ 70 *To open code memo for the first time*.

## Profiles


Your phone has predefined profiles that are set to suit a certain environment. You can reset all profile settings to the way they were set when you bought your phone.

### To select a profile

► **Settings** ► the **General** tab ► **Profiles** and select a profile.

### To view and edit a profile

► **Settings** ► the **General** tab ► **Profiles** ► **More** ► **View and edit**.

 *You cannot rename the normal profile.*

### To reset profiles

► **Settings** ► the **General** tab ► **Profiles** ► **More** ► **Reset profiles**.

## Time and date

The time is always displayed in stand-by.


- To set the time ► **Settings** ► the **General** tab ► **Time & date** ► **Time**. Enter the time ► **Save**.
- To set the time format ► **Format** and select an option.
- To set the date and date format ► **Settings** ► the **General** tab ► **Time & date** ► **Date**.

## SIM card lock

The SIM card lock protects your subscription, but not the phone itself, from unauthorized use. If you change SIM cards, your phone still works with the new SIM card.

Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone.

If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked**. To unblock it, you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator. You can edit your PIN and select a new four- to eight-digit PIN.

 *If the message **Codes do not match** appears when you edit your PIN, you entered the new PIN incorrectly. If the message **Wrong PIN** appears, followed by **Old PIN**:, you entered your old PIN incorrectly.*

### To unblock your SIM card

- 1** When **PIN blocked** appears, enter your PUK ► **OK**.
- 2** Enter a new four- to eight-digit PIN ► **OK**.
- 3** Re-enter the new PIN to confirm ► **OK**.

## More features

### To edit your PIN

- 1 ► Settings ► the General tab ► Locks ► SIM lock ► Change PIN.
- 2 Enter your PIN ► OK.
- 3 Enter a new four- to eight-digit PIN ► OK.
- 4 Re-enter the new PIN to confirm ► OK.

### To turn the SIM card lock on or off

- 1 ► Settings ► the General tab ► Locks ► SIM lock ► Protection and select On or Off.
- 2 Enter your PIN ► OK.

## Phone lock

Protect your phone against unauthorized use if it is stolen and the SIM card is exchanged. You can change the phone lock code (0000) to any four- to eight-digit personal code.

### Automatic phone lock

If the phone lock is set to automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.



*It is important that you remember your new code. If you should forget it, you have to hand in your phone to your local Sony Ericsson retailer.*

### To set the phone lock

- 1 ► Settings ► the General tab ► Locks ► Phone lock ► Protection and select an alternative.
- 2 Enter the phone lock code ► OK.

### To unlock the phone

If the phone lock is on, enter your code ► OK.

### To edit your phone lock code

- Settings ► the General tab ► Locks ► Phone lock ► Change code.

## Keypad lock

Lock the keypad to avoid dialling a number by accident.



*Calls to the international emergency number 911 or 112 can still be made, even when the keypad is locked.*

### Automatic keylock


In stand-by, automatic keylock means the keypad is locked a short while after you last press a key.


### To set the automatic keylock

- Settings ► the General tab ► Locks ► Automatic keylock.



### **To lock the keypad manually**

Slide the lock switch or open the phone and press and hold  ► **Lock keys**. You can still answer an incoming call and the keypad locks again after the call. The keypad remains locked until you unlock it manually.

To unlock the keypad, slide the lock switch or open the phone and press  ► **Unlock**.

### **Startup screen**



You can select a startup screen that will appear when you turn your phone on.

#### **To select a startup screen**

► **Settings** ► the **Display** tab ► **Start-up screen** and select an option.

### **Brightness**

Adjust the brightness of the screen.

#### **To set the brightness**

► **Settings** ► the **Display** tab ► **Brightness**.

## **Troubleshooting**

### *Why doesn't the phone work the way I want?*

This chapter lists some problems that you might encounter while using your phone. Some problems require you to call your network operator, but you can easily correct most of the problems yourself.

However, if you need to hand in your phone for repair, please note that you may lose information and content that you have saved in your phone. You are advised to make a copy of such information before handing your phone in for repair.

For more support go to [www.SonyEricsson.com](http://www.SonyEricsson.com).

### **I have problems with memory capacity or the phone working slowly**

*Possible cause:* The phone memory is full or the memory contents are not properly organized.

*Solution:* Restart your phone every day to free memory and increase the capacity of your phone. You also have the option to do a **Master reset**. Some of your personal data and settings you have made will be lost when doing this ➡ **76 Master reset**.

### **No battery icon appears when I start charging the phone**

*Possible cause:* The battery is empty or has not been used for a long time.

*Solution:* It may take up to 30 minutes before the battery icon appears on the screen.

### **Some menu options appear in grey**

*Possible cause:* A service is not activated or your subscription does not support the function.

*Solution:* Contact your network operator.

*Possible cause:* Since you cannot send themes, pictures and sounds that are copyright-protected, the **Send** menu is sometimes unavailable.

### **I do not understand the language in menus**

*Possible cause:* The wrong language is set in the phone.

*Solution:* Change the language ➡ 19 Phone language.

### **I cannot turn on the phone**

*Possible cause:* The battery is discharged.

*Solution:* Recharge the battery ➡ 8 To charge the battery.

*Solution:* Turn the phone on with the charger attached. If the phone starts, restart the phone with no charger attached.

### **I cannot charge the phone or battery capacity is low**

*Possible cause:* The charger is not properly connected to the phone.

*Solution:* Make sure that the charger connector clicks properly into place when connected

➡ 8 To charge the battery.

*Possible cause:* The battery connection is bad.

*Solution:* Remove the battery and clean the connectors. You can use a soft brush, cloth or q-tip, soaked with alcohol. Make sure that the battery is completely dry before you put it back. Check that the battery connectors in the phone are undamaged.

*Possible cause:* The battery is worn out and needs to be replaced.

*Solution:* Try another battery and charger for the same phone model, or visit your retailer and ask them to verify if the battery and charger are working properly.

### **The phone turns itself off**

*Possible cause:* The ① button has been pushed unintentionally.

*Solution:* Turn on the automatic keylock, or lock the keypad manually ➡ 72 *Keypad lock*.

*Possible cause:* The battery connection is bad.

*Solution:* Make sure the battery is inserted correctly ➡ 8 *To insert SIM card and battery*.

### ***I cannot use SMS/text messages on my phone***

*Possible cause:* Settings are missing or incorrect.

*Solution:* Contact your network operator to find out the correct SMS service centre setting ➡ 33 *Text messaging (SMS)*.

### ***I cannot use MMS/picture messages on my phone***

*Possible cause:* Your subscription does not include data capability.

*Solution:* Please contact your network operator.

*Possible cause:* Settings are missing or incorrect.

*Solution:* Go to [www.SonyEricsson.com](http://www.SonyEricsson.com), choose your phone model, then choose “Phone setup – MMS” and follow the instructions ➡ 58 *Settings*.

### ***I cannot use the Internet***

*Possible cause:* Your subscription does not include data capability.

*Solution:* Please contact your network operator.

*Possible cause:* Internet settings are missing or incorrect.

*Solution:* Go to [www.SonyEricsson.com](http://www.SonyEricsson.com), choose your phone model, then choose “Phone setup – WAP” and follow the instructions ➡ 58 *Settings*.

### ***The phone cannot be detected by other users via Bluetooth***

*Possible cause:* You have not turned Bluetooth on.

*Solution:* Make sure that Bluetooth is turned on and that your phone is visible to other users

➡ 63 *To show or hide your phone*.

### ***I cannot synchronize or transfer data between my phone and my computer, when using the included USB cable***

*Possible cause:* The cable has not been properly detected and installed on your computer.

The software that came with your phone has not been properly installed on the computer.

*Solution:* Go to [www.SonyEricsson.com](http://www.SonyEricsson.com), choose your phone model, then choose “Product information” - “Getting started”. The guide “Synchronizing the phone with a computer” contains installation instructions and a troubleshooting guide, that may assist you in solving the problem.

## Troubleshooting

### Master reset

The changes that you have made to settings and the content that you have added or edited, will be deleted.

### To reset the phone

- 1 ► Settings ► the General tab ► Master reset.
- 2 ► Reset settings or ► Reset all.
- 3 When instructions appear ► Continue.

### Error messages

#### Insert SIM

*Possible cause:* There is no SIM card in the phone or you may have inserted it incorrectly.

*Solution:* Insert a SIM card ➡ 8 To insert SIM card and battery.

*Possible cause:* The SIM card connectors need cleaning.

*Solution:* Remove the SIM card and clean it. Also check that the card is not damaged in a way that may prevent connection to the phone connectors. In that case, contact your network operator for a new SIM card.

#### Insert correct SIM card

*Possible cause:* The phone is set to work only with certain SIM cards.

*Solution:* Check if you are using the correct operator SIM card for your phone.

#### Wrong PIN/Wrong PIN2

*Possible cause:* You have entered your PIN or PIN2 incorrectly.

*Solution:* Enter the correct PIN or PIN2 ► Yes ➡ 71 SIM card lock.

#### PIN blocked/PIN2 blocked

*Possible cause:* You have entered your PIN or PIN2 code incorrectly three times in a row.

*Solution:* To unblock ➡ 71 SIM card lock.

#### Codes do not match

*Possible cause:* The two codes that you have entered do not match.

*Solution:* When you want to change a security code (for example your PIN) you have to confirm the new code by entering exactly the same code again. ➡ 71 SIM card lock.

### No netw. coverage

*Possible cause:* Your phone is not receiving any radio signal, or the received signal is too weak.

*Solution:* Contact your network operator and make sure that the network has coverage where you are. If so, try to do a new search.

*Possible cause:* The SIM card is not working properly.

*Solution:* Insert your SIM card in another phone. If you still get the same or a similar message, please contact your network operator.

*Possible cause:* The phone is not working properly.

*Solution:* Insert your SIM card in another phone.

If this works, it is probably the phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

### Emerg. calls only

*Possible cause:* You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the emergency number 911 or 112.

*Solution:* You have to move to get a signal that is strong enough. Contact your network operator and make sure your subscription is ok ➡ 22 Emergency calls.

### Phone locked

*Possible cause:* The phone is locked.

*Solution:* To unlock the phone ➡ 72 Phone lock.

### Phone lock code:

*Possible cause:* The phone lock code is required.

*Solution:* Enter the phone lock code. Your phone comes with the default phone lock code 0000

➡ 72 Phone lock.

### PUK blocked

*Possible cause:* You entered your PUK (personal unblocking key) code incorrectly 10 times in a row.

*Solution:* Contact your network operator.

### "Charging, alien battery"

*Possible cause:* The battery that you are using is not a Sony Ericsson approved battery.

*Solution:* ➡ 82 Battery.

# Important information

*Sony Ericsson Consumer Web site, service and support, safe and efficient use, end user licence agreement, warranty, declaration of conformity.*

## Sony Ericsson Consumer Web site

On [www.SonyEricsson.com/support](http://www.SonyEricsson.com/support) there is a section where help and tips are only a few clicks away. Here you find the latest software updates and tips on how to use your product more efficiently.

## Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local websites providing support.
- A global network of Call Centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in this user guide.

Australia	1-300 650 050
Argentina	800-333-7427
Austria	0810 200245
Belgium	02-7451611
Brazil	4001-0444

On [www.SonyEricsson.com](http://www.SonyEricsson.com), under the support section in the language of your choice, you will find the latest support tools and information, such as software updates, Knowledgebase, Phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. See the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. On [www.SonyEricsson.com](http://www.SonyEricsson.com) you can always find the latest updates.)

In the unlikely event that your product needs service, please contact the dealer from whom it was purchased or one of our service partners. Save your original proof of purchase, you will need it if you need to claim warranty.

*For a call to one of our Call Centers you will be charged according to national tariffs, including local taxes, unless the phone number is a toll-free number.*

[questions.AU@support.sonyericsson.com](mailto:questions.AU@support.sonyericsson.com)  
[questions.AR@support.sonyericsson.com](mailto:questions.AR@support.sonyericsson.com)  
[questions.AT@support.sonyericsson.com](mailto:questions.AT@support.sonyericsson.com)  
[questions.BE@support.sonyericsson.com](mailto:questions.BE@support.sonyericsson.com)  
[questions.BR@support.sonyericsson.com](mailto:questions.BR@support.sonyericsson.com)

Canada	1-866-766-9374	questions.CA@support.sonyericsson.com
Central Africa	+27 112589023	questions.CF@support.sonyericsson.com
Chile	123-0020-0656	questions.CL@support.sonyericsson.com
China	4008100000	questions.CN@support.sonyericsson.com
Colombia	18009122135	questions.CO@support.sonyericsson.com
Croatia	062 000 000	questions.HR@support.sonyericsson.com
Czech Republic	844 550 055	questions.CZ@support.sonyericsson.com
Denmark	33 31 28 28	questions.DK@support.sonyericsson.com
Finland	09-299 2000	questions.FI@support.sonyericsson.com
France	0 825 383 383	questions.FR@support.sonyericsson.com
Germany	0180 534 2020	questions.DE@support.sonyericsson.com
Greece	801-11-810-810	
	210-89 91 919 (from mobile)	questions.GR@support.sonyericsson.com
Hong Kong	8203 8863	questions.HK@support.sonyericsson.com
Hungary	01 437 7300	questions.HU@support.sonyericsson.com
India	39011111 (Add STD code from a GSM connection)	
		questions.IN@support.sonyericsson.com
Indonesia	021-2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888	questions.IE@support.sonyericsson.com
Italy	06 48895206	questions.IT@support.sonyericsson.com
Malaysia	03-78809800	questions.MY@support.sonyericsson.com
Mexico	001-95-888-821-8408	questions.MX@support.sonyericsson.com
Netherlands	0900 899 8318	questions.NL@support.sonyericsson.com
New Zealand	0800-100150	questions.NZ@support.sonyericsson.com
Norway	815 00 840	questions.NO@support.sonyericsson.com
Philippines	02-6351860	questions.PH@support.sonyericsson.com

## Important information

Poland	0 (prefix) 22 6916200
Portugal	808 204 466
Romania	(+4021) 401 0401
Russia	095 7870986
Singapore	67440733
Slovakia	02-5443 6443
South Africa	0861 632222
Spain	902 180 576
Sweden	013-24 45 00
Switzerland	0848 824 040
Taiwan	02-25625511
Thailand	02-2483030
Turkey	0212 47 37 777
United Arab Emirates	43 919880
United Kingdom	08705 23 7237
United States	1-866-766-9374
Venezuela	0-800-100-2250

questions.PL@support.sonyericsson.com  
questions.PT@support.sonyericsson.com  
questions.RO@support.sonyericsson.com  
questions.RU@support.sonyericsson.com  
questions.SG@support.sonyericsson.com  
questions.SK@support.sonyericsson.com  
questions.ZA@support.sonyericsson.com  
questions.ES@support.sonyericsson.com  
questions.SE@support.sonyericsson.com  
questions.CH@support.sonyericsson.com  
questions.TW@support.sonyericsson.com  
questions.TH@support.sonyericsson.com  
questions.TR@support.sonyericsson.com  
questions.AE@support.sonyericsson.com  
questions.GB@support.sonyericsson.com  
questions.US@support.sonyericsson.com  
questions.VE@support.sonyericsson.com

## Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.

These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt of



the proper function make sure to have the product checked by certified service partner before charging or using it. Failure to do so might lead to risk for product malfunction or even a potential hazard to your health.



### Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not close your product with an object inserted between keypad and display; this may damage your product.
- Do not paint your product.
- Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Do not use your product near medical equipment without requesting permission.
- Do not use your product when in, or around aircraft, or areas posted "turn off two-way radio".



>60°C / 140°F



- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above your car's air bag.

### CHILDREN

KEEP OUT OF CHILDRENS REACH.  
DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BE DETACHED AND CREATE A CHOKING HAZARD.



### Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

## Important information

Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards.

### Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

The talk and stand-by times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when using the mobile phone.

Turn off your mobile phone before removing the battery. Do not allow the battery to be put into the mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery. Use the battery for the intended purpose only.

### Personal medical devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

### Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use hands-free solutions. We recommend that you use only Sony Ericsson hands-free solutions intended for use with your product.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

### **Emergency calls**

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local network operator.

### **Antenna**

This phone contains a built in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below).

### **Efficient use**

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and stand-by times.

### **Radio frequency (RF) exposure and SAR**

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

## Important information

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the U.S., before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson body worn accessory intended for this phone. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

A separate leaflet with SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: [www.SonyEricsson.com](http://www.SonyEricsson.com).

## Accessible Solutions/Special Needs

For phones sold in the U.S., you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special needs call the Sony Ericsson Special Needs Centre at 877 878 1996 (TTY) or 877 207 2056 (voice), or visit the Sony Ericsson Special Needs Centre at [www.SonyEricsson-snc.com](http://www.SonyEricsson-snc.com).

## Disposal of old electrical & electronic equipment

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



### Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.



The battery should never be placed in municipal waste. Use a battery disposal facility if available.

### End User Licence Agreement

This wireless device ("Device") contains software owned by Sony Ericsson Mobile Communications AB ("Sony Ericsson") and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable licence to use the Software solely in conjunction with the Device on which it is installed. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this licence for a term of the useful life of this Device. You can terminate this licence by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this licence, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

The validity, construction and performance of this licence shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

### Limited Warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national tariffs may apply) or visit [www.SonyEricsson.com](http://www.SonyEricsson.com) to get further information.

## Important information

### Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

### What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region\* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should

always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

### Conditions

- 1 The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sony Ericsson authorized dealer, specifying the date of purchase and serial number\*\*, for this Product, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in

accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or stand-by time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson. Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.

- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorized person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
- 7 Tampering with any of the seals on the Product will void the warranty.
- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

## Important information

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

### **\*EUROPEAN UNION (EU)**

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorized Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in, please call the local Sony Ericsson Call Center.

Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

\*\* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

### **FCC Statement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.





## Declaration of Conformity

We, **Sony Ericsson Mobile Communications AB** of  
Nya Vattentorget

S-221 88 Lund, Sweden

 
declare under our sole responsibility that our product

**Sony Ericsson type AAF-1052021-BV**

and in combination with our accessories, to which  
this declaration relates is in conformity with the  
appropriate standards 3GPP TS 51.010-1,  
EN 301489-7, EN 300328, EN 301489-17 and  
EN 60950, following the provisions of, Radio  
Equipment and Telecommunication Terminal  
Equipment directive **99/5/EC** with requirements  
covering EMC directive **89/336/EEC**, and Low  
Voltage directive **73/23/EEC**.

Lund, August 2005

CE 0682



*Hiroshi Yoshioka, Head of Product Business Unit  
GSM/UMTS*

We fulfil the requirements of the R&TTE Directive  
(**99/5/EC**).

## Index

### A

- alarm clock 66
- animations 46
- answering service 26
- applications 57
- appointments 67
- automatic re-dialling 22

### B

- battery
  - inserting and charging 8
- Bluetooth™ wireless technology 62
- business cards 33

### C

- calculator 69
- calendar 67–68
- call divert 28
- call list 25
- call numbers in message 34
- call time 32
- call waiting 29

- caller-specific ringtones 54
- calls
  - accepting 31
  - answering and rejecting 22
  - emergency 22
  - handling two calls 29
  - international 22
  - making and receiving 11, 21
  - making notes during 32
  - missed 22
  - putting on hold 29
  - recording 56
  - restricting 31
- camera 43–46
- code memo 70
- conference calls 30
- contacts
  - adding phone contacts 23
  - default contacts 23
  - groups of 33
  - synchronizing 61

### D

- date 71
- declaration of conformity 89
- delivery status 36
- Disc2Phone 48
  - installing 48
- display, brightness 73
- downloading files 60

### E

- effects, camera 45
- email 39–41
- entering letters
  - multitap input 19
  - T9™ Text Input 19

### F

- file manager 20
- fixed dialling 31

### G

- games 57
- groups 33

**H**

hands-free 64  
help texts, in phone 15  
hiding number 32

**I**

icons 18  
infrared port 65  
instant messaging *See* My friends 42  
Internet  
    bookmarks 59  
    cookies and passwords 60  
    security and certificates 60  
    settings 59

**K**

key sound 54  
keypad lock 72  
keys and buttons 13–15

**L**

language 19, 74  
light 69  
locks  
    phone 72  
    SIM card 71  
long messages 35

**M**

magic word 27  
melodies 53  
memory status  
    phone contacts 24  
    SIM contacts 24  
menu overview 16  
messages  
    alert 54  
    area and cell information 43  
    delivery status 36  
    email 39  
    picture 36, 38  
    text 33  
    voice 38

microphone 22  
MMS *See* picture messages 36, 38  
multitap input  
    entering letters 19  
music  
    transferring 49  
MusicDJ™ 54  
My Friends 42  
my numbers 30

**N**

navigating menus 13  
networks 21  
night mode, camera 45  
notepad 32  
notes 68

**O**

on if silent 54  
open/close, phone 10

## Index

### P

- phone
  - assembly 7
  - language 19
  - overview 12
- photo light 44
- PhotoDJ™ 56
- picture messages 36–37
- pictures
  - edit 56
  - screen saver 46
  - sizes 45
- PIN code
  - changing 72
  - entering 10
  - unlocking 9
- PlayNow™ 53
- profiles 71
- PUK 9, 72

### R

- remote control 64
- resetting phone 76
- ringtones 53

### S

- screen saver 46
- self-portrait 45
- sending
  - appointments and tasks 68
  - business cards 33
  - melodies and ringtones 55
  - notes 69
  - pictures 47
  - themes 57
- settings
  - display brightness 73
  - email 39
  - Internet 58
  - Java™ 60
- setup wizard 9, 10
- shortcuts 18
- SIM card
  - contact numbers 23
  - copying to/from 24, 25
  - inserting 8
  - lock and unblock 71
- SMS *See* text messages 33
- SOS *See* emergency numbers 22

- sound recorder 56
- sound, transferring and directing 64
- sounds & alerts 54
- speed dialling 26
- start-up screen 46
- startup screen 73
- stereo hands-free headset 11
- stopwatch 69
- streaming media 51
- synchronizing 61–62

### T

- T9™ Text Input
  - add words 20
  - entering letters 19
- tasks 68
- templates 36, 38
- text messages 33–36
- themes 57
- time 71
- timer 69
- transferring
  - music 49

turning on/off

- Bluetooth 62
- infrared port 65
- phone 10
- phone lock 72
- ringtones, melodies 53
- SIM lock protection 72

## U

- unblock SIM card 71
- USB cable 46, 65
- USB drivers
  - installing 48

## V

- vibrating alert 54
- video clips 44, 48
- video recorder 43–46
- VideoDJ™ 55
- voice answering 28
- voice control 26–28
- voice dialling 27
- voice messages 38
- voicemail 26
- volume, ear speaker 22

## W

- WALKMAN™ player 48–51
- wallpaper 46
- WAP *See* Internet 58
- warranty 85
- writing languages 19

## Z

- zoom
  - camera 44
  - video clip 51
  - Web page 59