


# use & care guide

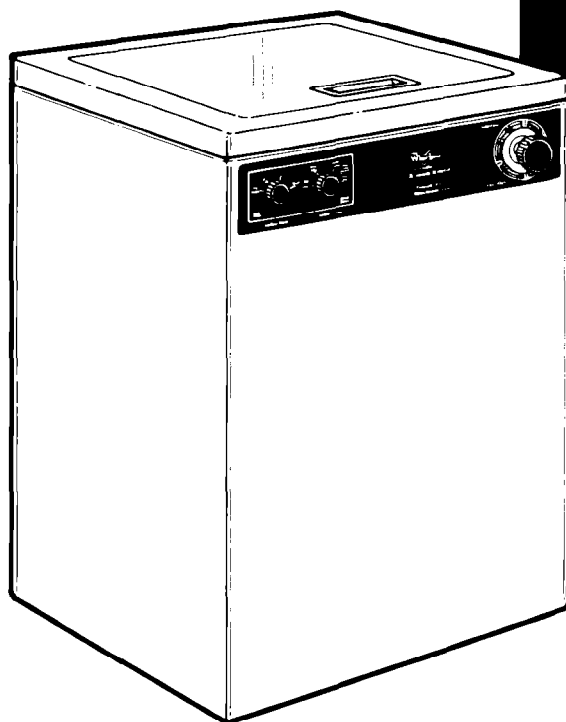


Whirlpool


## **AUTOMATIC WASHER**

**Convertible  
Compact  
Model  
LC4900XM**

Wave Ovens, Trash Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers.

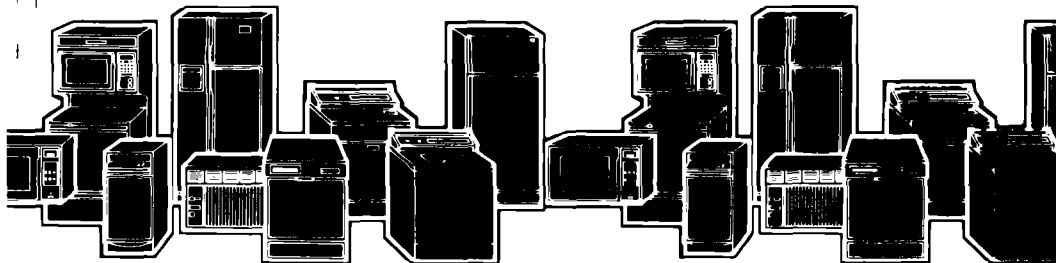

# Parts and features

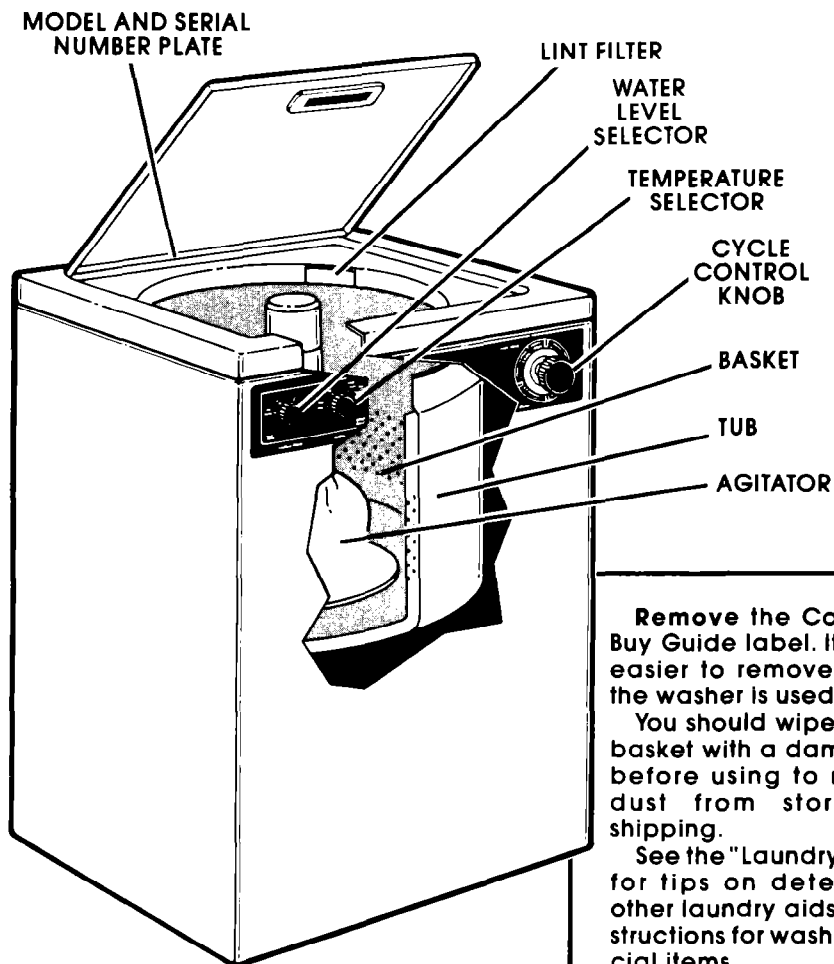

Remove the Consumer Buy Guide label. It will be easier to remove before the washer is used.

You should wipe out the basket with a damp cloth before using to remove dust from storing or shipping.

See the "Laundry Guide" for tips on detergents, other laundry aids and instructions for washing special items.

## Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from plate under the lid near the hinge).
2. Purchase date from sales slip.

Copy this information in these spaces. Keep this book with your "Laundry Guide," sales slip and warranty.

\_\_\_\_\_

Model Number

\_\_\_\_\_

Serial Number

\_\_\_\_\_

Purchase Date

\_\_\_\_\_

Service Company /  
Phone Number

There is no warranty registration to return. Proof-of-purchase is all that is required for in-warranty service.

## Your responsibilities

Read this "Use and Care Guide" and your "Laundry Guide" carefully for important use and safety information.

You are personally responsible for making sure that your washer...

- is installed by a qualified installer.
- is properly installed and leveled on a floor that can support the weight.
- is connected to the right kind of outlet, electric supply, water supply and drain.
- is properly grounded.
- is used only for jobs normally expected of home automatic washers.
- is properly maintained.
- is protected from the weather and kept where the temperature will not fall below freezing.
- is not run by children or anyone unable to operate it properly.

\*See the "Installation Instructions" for complete information.

## Contents

	Page
PARTS AND FEATURES .....	2
YOUR RESPONSIBILITIES .....	3
SAFETY FIRST .....	3
WASHER CONNECTIONS .....	4
LOADING INFORMATION .....	5
STARTING YOUR WASHER .....	6
WHAT HAPPENS IN EACH CYCLE .....	8
REGULAR HEAVY .....	8
PERMANENT PRESS .....	8
KNIT .....	8
GENTLE .....	10
SUPER WASH .....	10
OTHER OPERATING INSTRUCTIONS .....	12
CARING FOR YOUR WASHER .....	13
Winterizing .....	14
IF YOU NEED SERVICE OR ASSISTANCE .....	15

## Safety first

**ALWAYS** unplug the power supply cord before attempting to service the washer.

**NEVER** put flammable fluids (dry-cleaning solvents, gasoline, kerosene) into your washer. **NEVER** use them near your washer.

**ALWAYS** hand launder or air dry fabrics treated with flammable fluids before putting them into your washer.

**NEVER** put your hands into the washer until all motion stops. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.

**DO NOT** allow children to operate or play with the washer. **ALWAYS** store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet, if possible.

**ALWAYS** read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.

**POISON GAS** can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.

**DO NOT** machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.

**SPECIAL CAUTION:** If hot water has not been used recently (usually two weeks or longer), flammable hydrogen gases may build up in the water heater and hot water pipes. To prevent injury or damage, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. Do not smoke or use any open flame near the faucet while it is open.

– SAVE THESE INSTRUCTIONS –


# Washer connections

## 1. Portable one faucet connection:

Use the hose connector provided with the washer for a one faucet connection.

### To connect washer:


- Lift the hoses off the storage rack on the back of the washer.
- Attach the hose connector to the faucet adapter by pulling down on the locking collar while lifting up on the connector, until it snaps into place.

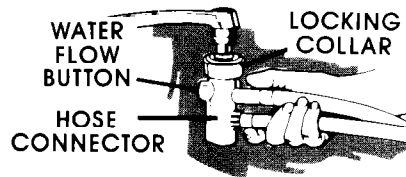


- **Slowly turn the water faucet on** to full.
- Pull the electric power cord from storage area in the back of the washer.
- Plug the power cord into a grounded outlet.

### To disconnect washer:

- Unplug the electric power cord and put it back in its storage area.
- Turn the water faucet off.
- Press the red Water Flow Button to release the water pressure.
- Move the locking collar down and pull down on the connector.

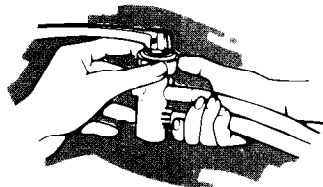

- Drain water from the hoses through the hose connector.
- Hang the hoses on storage rack.

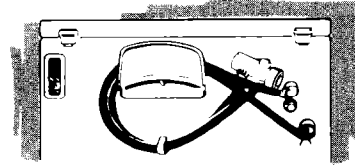


## 2. Portable two faucet connections:

If you have two separate water inlet hoses and a drain hose, your washer can be connected to both hot and cold water faucets.

### Connecting the washer:

- Connect the hot and cold water inlet hose to the hot and cold faucets.
- Secure the drain hose to the sink or standpipe.
- Plug the power cord into a grounded outlet.

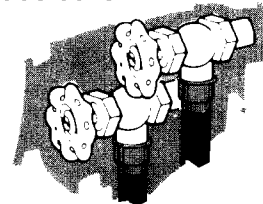

### To disconnect the washer:

- Turn water faucets off.
- Unplug power cord and return it to storage area.
- Disconnect the drain water supply hoses. Hang them on the storage rack.

## 3. Permanent installation:

This washer can be converted from portable to permanent. Instructions for permanent installation come with the washer.

You will need two fill hoses, one drain hose and four leveling legs. These can be purchased from your Whirlpool Dealer.


# Loading information

## DO NOT OVERLOAD



Overloading or packing can...

- cause poor cleaning;
- increase wrinkling;
- cause excessive lint;
- wear out or tear items.

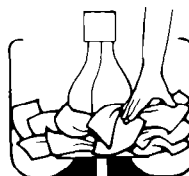

See the chart below for suggested load sizes.

### Suggested load sizes

FABRIC TYPE	MIXED LOAD	UNMIXED LOAD
Permanent press or knits	1 dress 2 pairs slacks 2 blouses	6 shirts <b>OR</b> 2 pantsuits <b>OR</b> 3-4 dresses
Medium weight	1 pair pajamas 2 pillowcases 3 shirts 2 sets of underwear	1 king or queen-size sheet <b>OR</b> 1 double sheet and 2 pillowcases <b>OR</b> 2 single sheets and 2 pillowcases
Heavyweight	3 work shirts 2 work pants	8 bath towels <b>OR</b> 6 bath towels, 3 hand towels and 6 washcloths <b>OR</b> 3 pairs of jeans

### RECOMMENDED AMOUNT OF DETERGENT\* – FULL TUB


	WATER HARDNESS IN GRAINS		
	0-4 Grains	4-10 Grains	10-20 Grains
Powdered Detergents			
Low Suds	$\frac{1}{2}$ - $\frac{3}{4}$ cup (125-175 mL)	$\frac{3}{4}$ -1 cup (175-250 mL)	1 cup (250 mL)
Normal Suds	1 cup (250 mL)	$1\frac{1}{4}$ - $1\frac{1}{2}$ cups (300-350 mL)	$1\frac{1}{2}$ cups (350 mL)
High Suds	$1\frac{1}{4}$ cups (250-300 mL)	$1\frac{1}{2}$ cups (350 mL)	$1\frac{3}{4}$ cups (425 mL)
No phosphate	– Follow package recommendations –		
Liquid Detergents	$\frac{1}{4}$ to $\frac{2}{3}$ cups (60 to 180 mL), depending on the brand and amount of soil. Follow package recommendations.		

\*These recommendations do not apply...


- In areas where phosphates are banned.
- In areas with laws limiting (by weight or percentage) the amount of detergent used in a wash load.

# Starting your washer

Before starting your washer, be sure you have measured and added detergent, and have put in a properly sorted load.

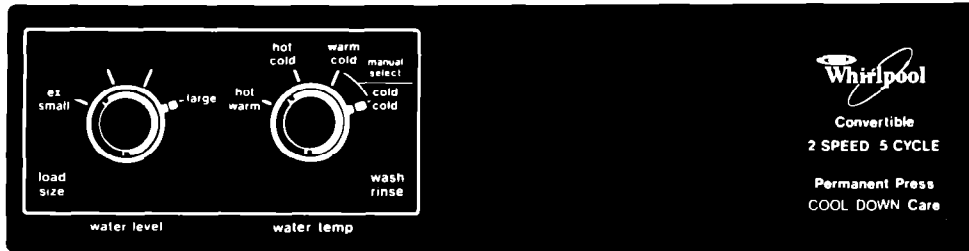


## Select a 1. LOAD SIZE

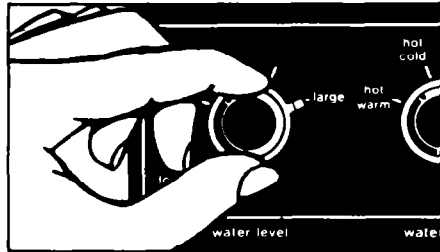

- Turn the knob to point at a setting that describes the size of load you want to wash.
- Set the knob on or between EX SMALL (a few items) and LARGE (a full load).

See page 5 for details on load sizes.

## Select WATER 2. TEMPERATURES

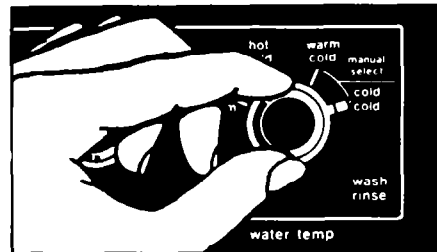

### For permanent or two faucet connection:

- USE WATER TEMP Selector to match wash and rinse water temperatures to the type of fabrics being washed.

### For one faucet connection:

- Set WATER TEMP Selector.
- See pages 8-11 for details on changing water temperatures at the faucet.


Recommended wash temperatures can be found in your "Laundry Guide" and printed under the washer lid.


## LOAD SIZES AND WATER LEVELS

Use less than a full tub of water when you have less than a full load to wash.

For best cleaning results, the load must be able to move freely in the water. Too big a load or too little water can tear items.


- LARGE (11.9 gals./45.1 L)\*
  - (10.4 gals./39.4 L)\*
  - (8.8 gals./33.3 L)\*
  - EX SMALL (7.3 gals./27.7 L)\*
- \*Approximate fill with load.

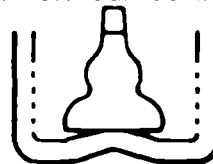

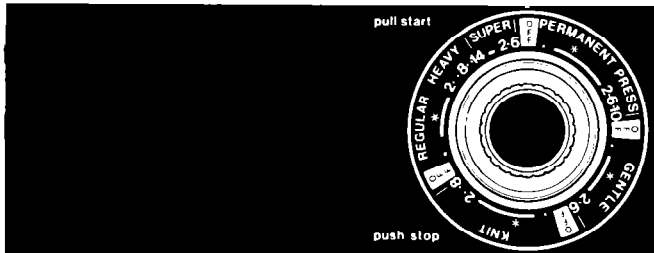


### 3. Select CYCLE and WASH TIME;


#### Start the washer

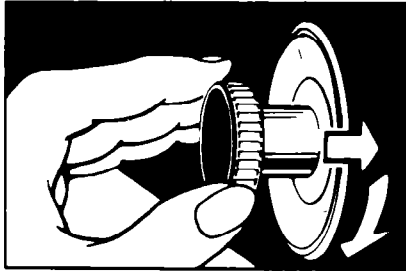


**A.** Push in the Control Knob and turn it to the right. It must be pushed in and turned only clockwise.

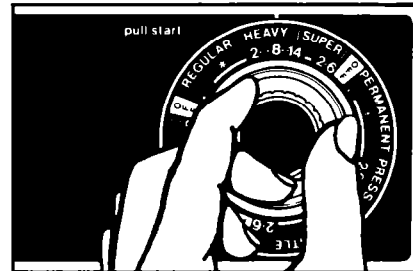

**B.** Stop on a number in the cycle you want. The numbers are minutes of wash time. The drawing shows 8 minutes of agitation in the REGULAR HEAVY Cycle.

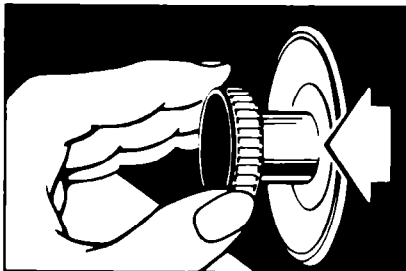

**C.** Start the washer by pulling out the Control Knob. The washer will fill to the level you set with wash water of the selected temperature. After filling, the washer will agitate for the selected number of minutes.

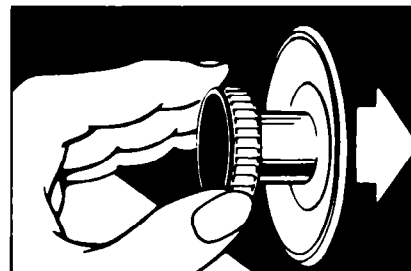


**D.** To stop the washer at any time push in the Control Knob. To restart the washer, pull out the Control Knob. To set the controls for a rinse and spin or drain and spin, see page 12.

# What happens in each cycle


Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.

When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns

## REGULAR HEAVY Cycle

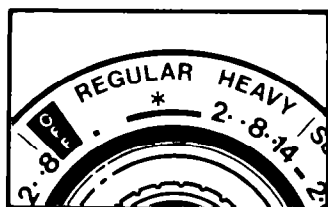


High agitation and spin speeds help remove heavy soils and spin water from heavy or sturdy cotton fabrics.

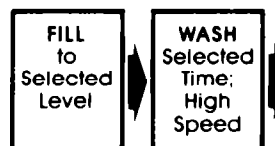


## PERMANENT PRESS Cycle




High-speed agitation, low-speed spin and cooling of the wash water before the spin help clean clothing and keep wrinkles from setting into permanent press fabrics.

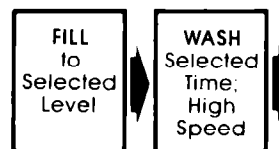

## KNIT Cycle

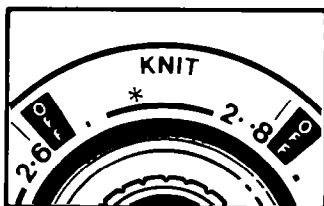


Low agitation and spin speeds and shorter wash time gently wash delicate items and washable synthetic knits.

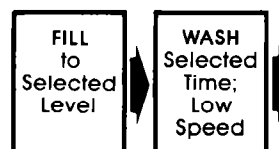






clockwise until it points to OFF and the cycle ends.

**NOTE:** You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, cold water is sprayed on the spinning load to help with the rinsing.



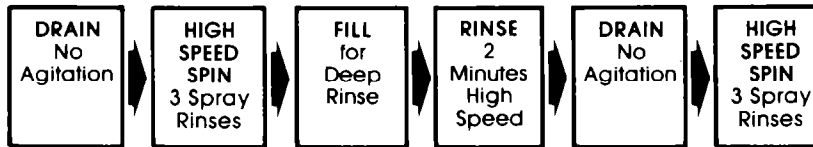


 Adjust faucet for rinse water temperature if using single faucet connection.

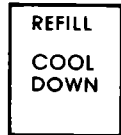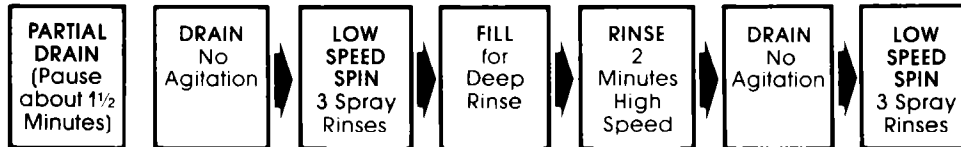

**NOTE:** Always use **cold rinse water** for permanent press fabrics.

 
Adjust faucet for **cold rinse** if using single faucet connection.

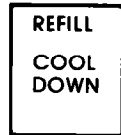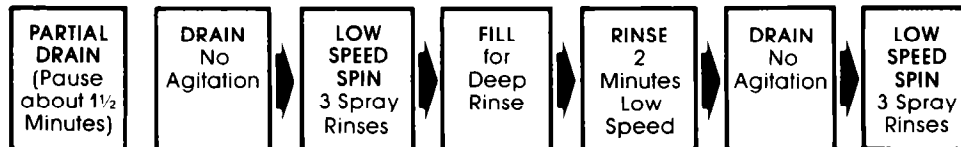


**NOTE:** Always use **cold rinse water** for delicate knit fabrics.

Adjust faucet for **cold rinse** if using single faucet connection.


## GENTLE Cycle

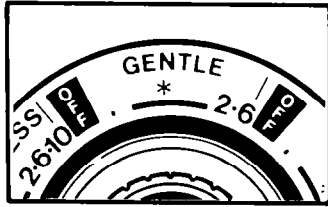


Use for delicate items that need a short wash and spin time. Wash nylon hose or panty hose in a net laundry bag.

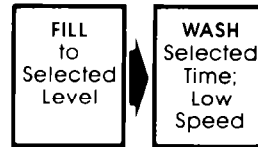


## SUPER WASH Cycle

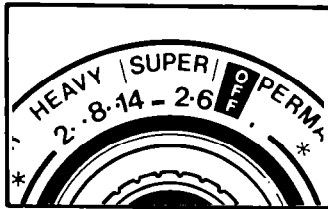


Use for washing heavily soiled or stained load that needs extra agitation. Use twice the recommended amount of detergent when using Super Wash.

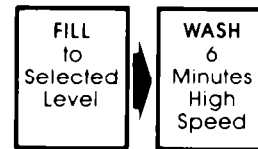

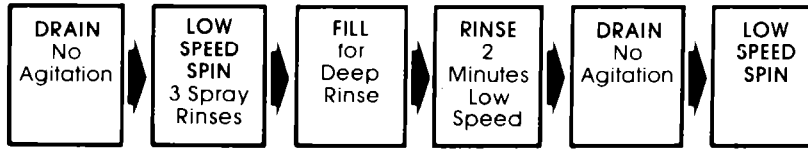


Adjust faucet for rinse water temperature if using single faucet connection.

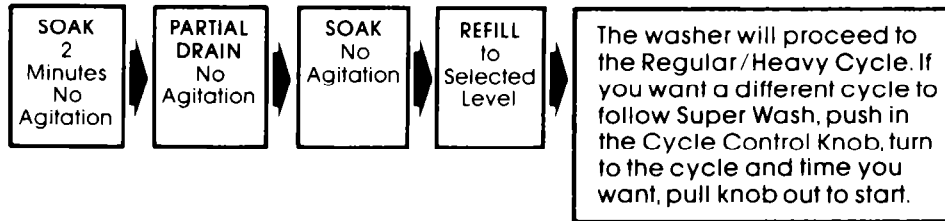

WHAT HAPPENS IN EACH CYCLE

## Other operating instructions

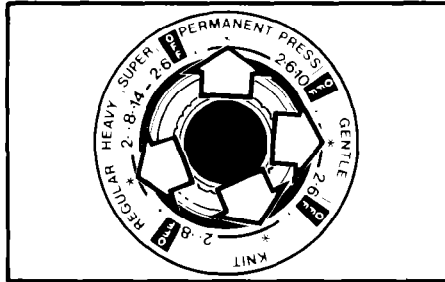

### For a rinse and spin


You may need an extra rinse and spin for heavily soiled loads which need more detergent. (Extra detergent can require an extra rinse.)

- Push Control Knob in.
- Turn clockwise to any \* on the dial.

**See above drawing.**

- Pull Control Knob out.
- The washer will fill, agitate, drain and spin.

For agitation and spin speeds in each cycle, see pages 8-11.

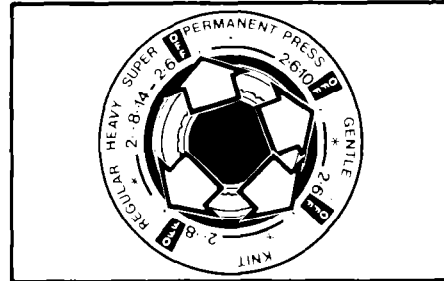

### For a drain and spin

Your washer can be set to drain and spin out water.

- Push Control Knob in.
- Turn clockwise to the dot just before OFF in any cycle.


**See above drawing.**

- Pull Control Knob out.
- The washer will drain and spin.


### Cleaning the lint filter

Water runs through the lint filter whenever the washer agitates. Check it often to make sure it's clean and is filtering at its best.


To remove it for cleaning, press the release and pull straight out. Instructions for cleaning are printed on the bottom of the filter.

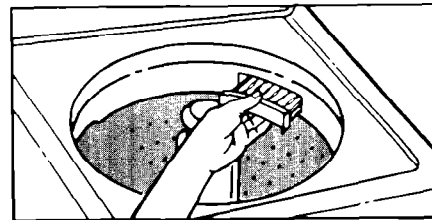

# Caring for your washer

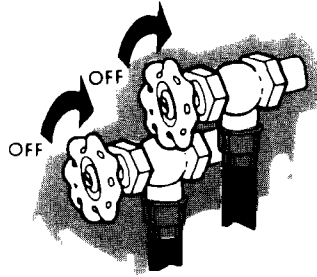

**WHEN NOT WASHING**, keep both water faucets turned off. This takes the pressure off the water inlet valve and hoses.

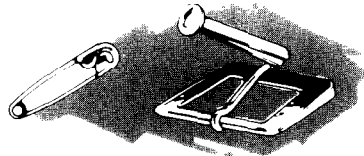


**REMOVE SHARP OBJECTS** such as pins, buckles, etc., from clothes before washing. Close metal zippers.




## **NEVER USE THE WASHER TO...**


- store wet or dry laundry.
- soak for more than 2 hours.
- soak with chlorine bleach.
- soak with vinegar or other acids.
- soak or store urine soaked clothes.

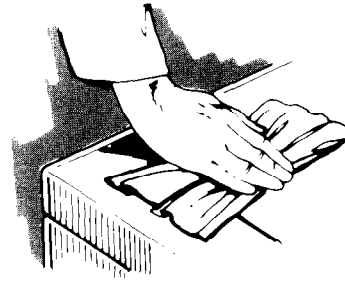

**AFTER WASHING**, use a soft dry cloth to wipe the outside and inside dry. Leave the lid up until the basket is dry. **Wipe up spills right away.** Spills can dull or damage the finish.

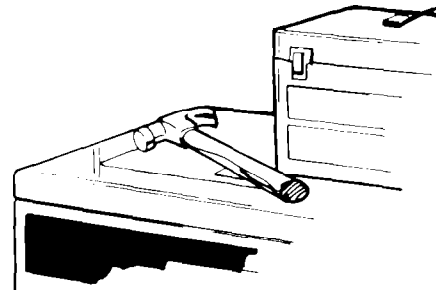

**SHARP OR HEAVY OBJECTS** should never be put on or in the washer. Check pockets for bolts, nuts, tools, etc.


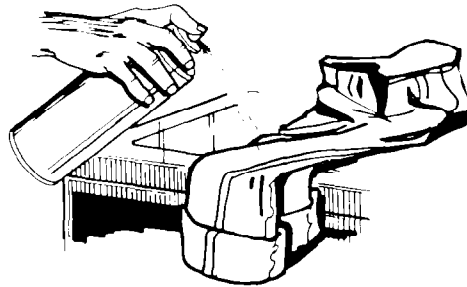


**SOME PRETREATMENT PRODUCTS** can damage washer and dryer dials, consoles and finishes. Do not use these products on or near your washer or dryer.

**Service or performance problems caused by the use of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.**

## Winterizing


Because some water stays in the washer, freezing can cause a lot of damage. If your washer is **stored or moved** during the cold weather...

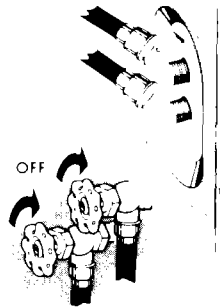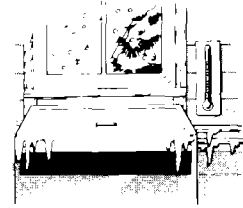


**1.** Shut off both water faucets. Disconnect and drain water inlet hoses



**2.** Put a quart of automobile-type antifreeze in the basket.

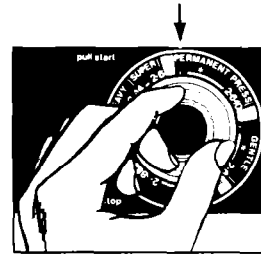


**3.** Set the washer for a DRAIN and SPIN (see page 12). Let it run for about 30 seconds to mix the antifreeze and water.

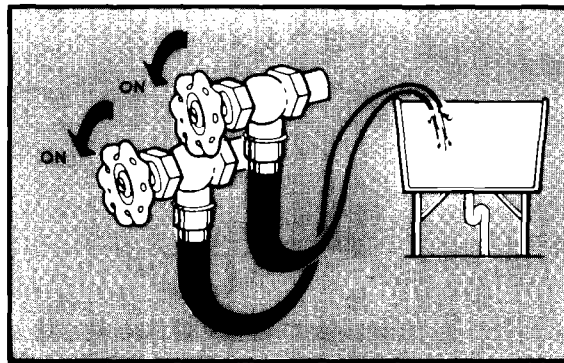

### To use the washer again...

1. Flush water pipes and hoses.
2. Connect hoses to the washer.
3. Turn on the water faucets.

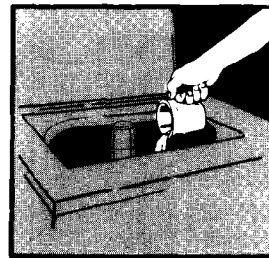

**4.** Run the washer through a complete cycle with one cup of detergent to clean out the antifreeze.

# If you need service or assistance, we suggest you follow these four steps:

## 1. Before calling for assistance...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

### IF YOUR WASHER DOES NOT FILL:

- Is the power supply cord plugged in?
- Are both water faucets open?
- Are fuses blown or circuit-breaker tripped?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

### IF YOUR WASHER DOES NOT SPIN:

- Is the lid closed?
- Is the power supply cord plugged in?
- Is a fuse blown or circuit-breaker tripped?

### IF YOUR WASHER STOPS DURING THE PERMANENT PRESS OR KNIT CYCLE:

- Remember, the washer will stop for about 1½ minutes after the partial drain during the cool down period in these cycles.

### IF WASHER FILLS AND DRAINS WITHOUT RUNNING:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

### MAKE SURE THE DRAIN HOSE IS HIGHER THAN THE WATER LEVEL IN THE WASHER. IF IT ISN'T...

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See "Installation Instructions")

## 2. If you need assistance\*...

Call Whirlpool **COOL-LINE**<sup>®</sup> service assistance telephone number.

Dial free from:

Continental U.S. . (800) 253-1301  
Michigan . . . . . (800) 632-2243  
Alaska & Hawaii (800) 253-1121

and talk with one of our trained Consultants. The Consultant can instruct

you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

## 3. If you need service\*...



Whirlpool has a nationwide network of franchised **TECH-CARE**<sup>®</sup> Service Companies. **TECH-CARE** service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate **TECH-CARE** service in your area, call our **COOL-LINE** service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - MAJOR - SERVICE & REPAIR	OR	ELECTRICAL APPLIANCES - MAJOR - REPAIRING & PARTS
WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE		WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE
SERVICE COMPANIES		SERVICE COMPANIES
XYZ SERVICE CO. 123 Maple . . . . . 999-9999		XYZ SERVICE CO. 123 Maple . . . . . 999-9999
OR		
WASHING MACHINES, DRYERS & IRONERS - SERVICING		
WHIRLPOOL APPLIANCES FRANCHISED TECH-CARE SERVICE		
SERVICE COMPANIES		
XYZ SERVICE CO. 123 Maple . . . . . 999-9999		

## 4. If you have a problem\*...

Call our **COOL-LINE** service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Guy Turner, Vice President  
Whirlpool Corporation  
Administrative Center  
2000 US-33 North  
Benton Harbor, MI 49022

\*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

IF YOU NEED SERVICE OR ASSISTANCE



Making your world a little easier.

Part No. 385033

Printed in U.S.A.

atic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Micro

