

Fully automatic washing machine

User's manual



This manual is for

HWM62-0566


- Please read this manual carefully before using.
- Retain it for future reference.



## Contents



● Names of the parts .....	1
● Safety precautions .....	2
● Installation and adjustment .....	4
● Usage of the drain hose .....	5
● Installation the water inlet hose .....	6
● Preparation before washing .....	8
● Put in the laundries .....	9
● Usage of the detergent .....	9
● Close the top lid .....	10
● Use the operation buttons .....	10
● Finish washing .....	13
● Disposal after washing .....	14
● Trouble shooting * Answer to question .....	15
● Packing list *Specification .....	16
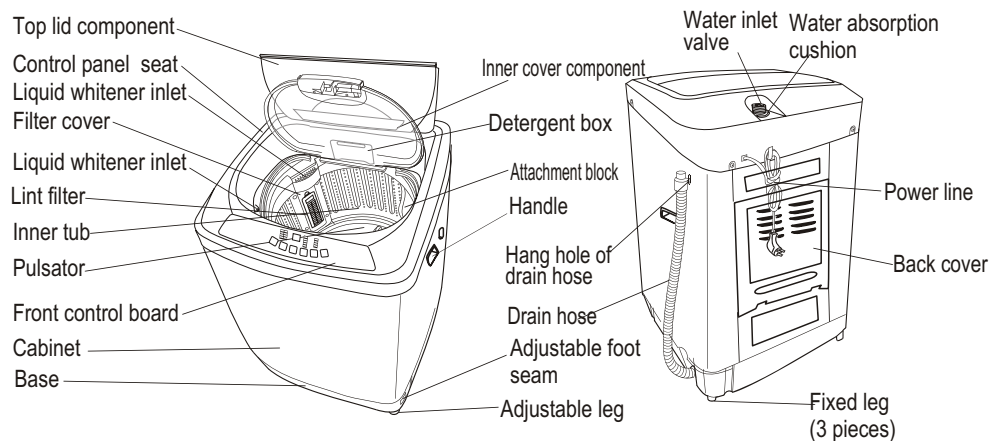
# Names of the parts



Notes: All illustrations in this Manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

## Meaning and description of the symbols

Warning sign 	Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.
Forbidding sign 	Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of the user.

Please check if the power receptacle has good earthing condition before using to guarantee your safety.

## Safety precautions

Please insert the power cord into special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.




When the machine is normally using, please put the power plug at the location easily to be inserted and extracted by hand. Be sure to pull the plug off when there's power failure, or the machine is being moved, cleaned or when it is idle.



If the power cord is bad, to avoid risk it is required to replace it by the technicians of our special shop or the after-sale service department. Keep the pin of the power plug clean.




Do not put the machine at damp place like the bathroom. Never wash it with water. Do not place wet laundries on the control panel.

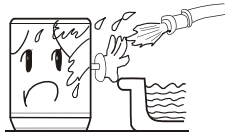

Do not use water hotter than 50°C.




In case the washing machine is installed on ground with carpet, do not block the ventilation hole with carpet.

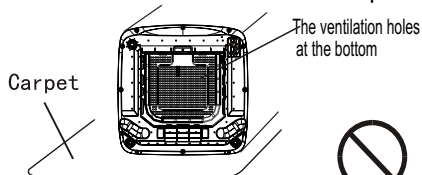

Do not wash water-proof laundries like the raincoat, bike covers etc. to avoid abnormal vibrations in spinning.



Do not let the machine share one receptacle with other electric appliances. If the power plug is damaged, or the plugging into the receptacle is loose, do not use the plug any more.

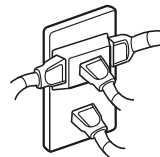

## Safety precautions

Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children.




Do not decompose, repair or alter the machine by yourself.




Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.




Do not wash laundries with volatile materials (such as thinner, petrol etc.)

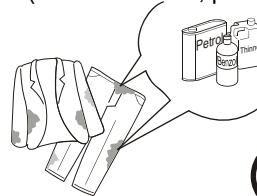


The handicapped or children without care shall not use the machine.

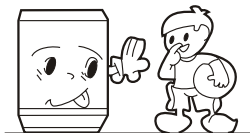


Keep the machine away from direct sunlight and heat source like the heater.

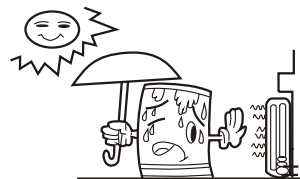

 Please keep the lint filter in good condition, and install it to proper position during washing. If the lint filter is lost or damaged, please contact the customer care agent of our company.



 ● To protect your laundries and washing machine, please take out all of the coins, buttons, sand, hairpin and other foreign materials before washing.



- Please check if the water faucet is open, and if the connection of the water inlet pipe is proper.
- It is suggested to use foamless washing powder.
- To change the direction of drain pipe, please contact the customer care agent of our company.
- Please don't use the washer in the environment below 0°C; if the washer has been stored below 0°C, please be sure to ensure the washer is placed under the room temperature for 24 hours and then use otherwise the washing effects may be lowered or the washer may be damaged.

## Installation and adjustment

Please install and adjust the machine according to the requirement of the manual.

It is very important to your security and correct operating the machine.

### Install the inner cover component

Before using the washing machine firstly, please install the inner cover component.

1. Open the top lid of the washing machine.
2. Put the inner cover component on the outer tub cover, aiming the inner cover shaft to the installation hole of the corresponding outer tub cover shaft groove.
3. Firstly insert the inner cover shaft of the left side into the corresponding outer tub cover shaft groove (see to the figure 1), then hold the middle position of the front of the outer tub cover with left hand forcibly, handhold the right and below position of the inner cover with right hand, push the inner cover to the outer cover vertically, make the inner cover shaft into the corresponding outer tub cover shaft groove (see to the figure 2). Please install to designated position to guarantee there are no dropping or abnormal sound in opening and closing of the inner cover, and the operation shall be smooth. Do not dismount the inner cover component after washing.

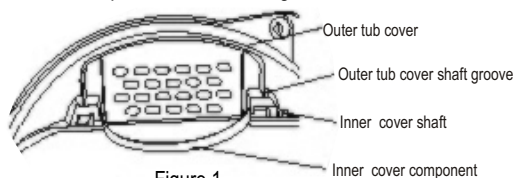


Figure 1


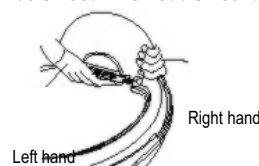


Figure 2

After opening the package, please lean the washing machine gently down on soft items (like towel cloth, blanket, etc.). Install the bottom plate to the bottom of the machine with one screw by a cross screwdriver, then lift the machine up gently. See to the figure:

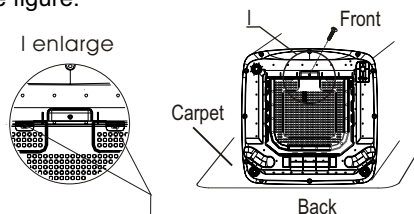


The two claws of bottom plate should insert the two strip holes, and insure

### Adjust the Installation position


The washing machine away from wall should be overrun 20mm. The largest allowable slope of the shank base of the machine is  $2^\circ$ . The slanting or rough ground will result in unstable running or stoppage of the machine. Please adjust it with following methods:

- Confirm it's horizontal:  
Hang the lead line to check if it is horizontal.
- Adjust the adjustable leg:  
1. To twist the adjustable leg, please first lift up the side of the leg slightly, loosen the adjustable nut, and twist the leg.  
2. After adjustment, fasten the nut.

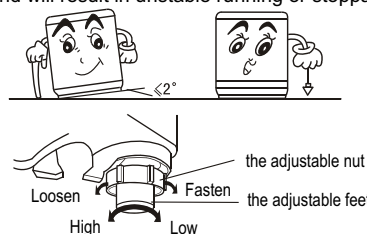


## How to change the direction of the drain hose

1. Loosen the screws of back cover, dismantle the back cover, then take off the drain hose (As indicated figure 1)

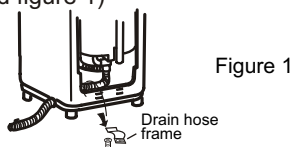

2. Take off the drain hose from base, nip flat the drain hose mouth, dismantle the hang hook, take the drain hose into cabinet from the left of base (As indicated figure 2)

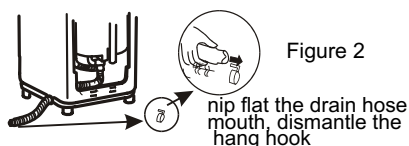

3. Extend the drain hose from the right side of base, fix the drain hose onto the base with the drain hose frame, and screw down the screws, put the hang hole onto the drain hose, then hang up the drain hose. (As indicated in Figure 3)




4. Install the back cover as primary state.

Remarks: in order to make sure of the correct of installation, it is suggested to change the direction of the drain hose with our company serviceman .

## Usage of the drain hose

The drain hose shall drain smoothly


1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth, and cost such long time that the machine may stop at mid way.
2. Do not trample or press the drain hose.

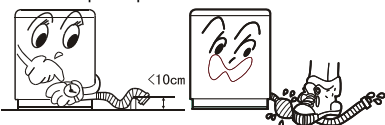


3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.



4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

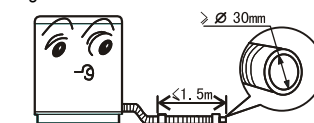


If the extra hose is too long, cut it either at A or at B point.

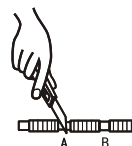


# Installation the water inlet hose

## Confirm the water faucet

water faucet, suitable

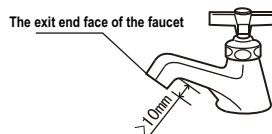

water faucet, not suitable

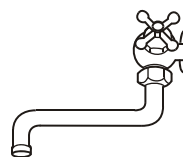

It is required that the front end shall be longer than 10mm.

The exit end face of the faucet shall be flat and smooth. If not please file it to avoid leakage.

## Connection between the water inlet hose jointer and the water faucet

1. Press the lower end of the lock lever and push down the slider. Take off the water inlet hose jointer from the water inlet hose component. See to Figure 1.
2. Loosen the screw till the water faucet can be accessed. Put the jointer of the water inlet hose on the faucet. See to Figure 2. (If the faucet is too large and the jointer can not be set on the water faucet, please loosen the four screws and take out the bushing in the jointer. The front end of the faucet must be smooth, otherwise it may leak water. See to Figure 3.)

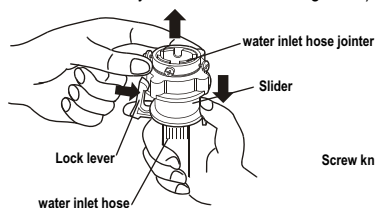


Figure 1

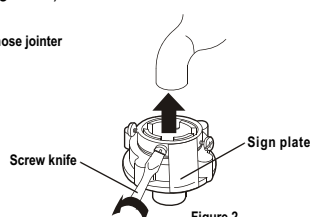


Figure 2

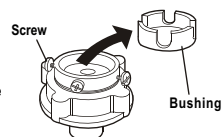


Figure 3

3. Fasten the four screws evenly. See to Figure 4.

4. Take off the nameplate. Twist the fastening nut as per the indication of the figure to seal up the exit end face of the faucet. See to Figure 5.

remark: Before installation, the threading is 4mm above the upper surface of the nut.  
After installation, the threading is 2mm above the upper surface of the nut..

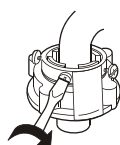


Figure 4

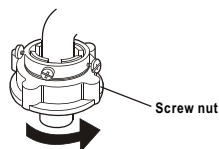


Figure 5


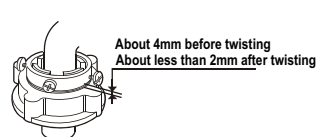


Figure 6




### Connection between the water inlet hose and the washer

1. Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each usage. If it happens please contact our after-sale department immediately.
2. Put the nut of the water inlet hose on the valve jointer.
3. Fasten the nut. Swing it gently to confirm if it's suitable.

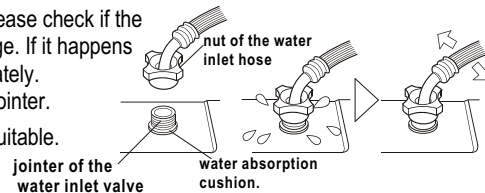


### Connection between the jointer of the water inlet hose and the water inlet hose

1. Push down the slider. Insert the water inlet hose into the jointer.
2. Hang the lock lever to the jointer. Release the slider till a click sound is heard.

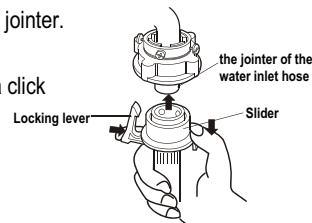


### Check the connection between the jointer of the water inlet hose and the water faucet

1. Swing the hose gently to confirm if it is fastened stable.
2. After installation, open the faucet to check if it leaks.
3. Do not bend the hose with overstrain.
4. Before each usage please check if the connection between the jointer of the water inlet hose and the water faucet, and the installation of the water inlet hose are firm, so as to prevent dropping from improper installation position.

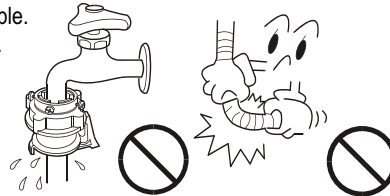

### Dismantle the water inlet hose

1. Close the water faucet.
  2. Press the locking lever. Push down the slider. Then pull of the water inlet hose.
- If the machine is used frequently, the jointer of the water inlet hose can be kept on the faucet to prevent damaging the fixing screw.

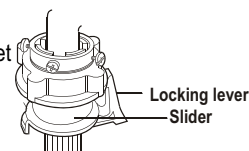

# 1 Preparation before washing







## Preparation before washing

1. Connect the water inlet hose. Open the water faucet.
2. Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. The earth terminal shall not link to gas pipeline and faucet water pipeline.
3. Put down the drain hose.



4. slanting or uneven ground may result in unstable working or abnormal noise. Please make the machine stand horizontally

## Pay attention to followings before washing the laundries

Check if the laundries has special requirement on washing	Clear the pocket. Take out the coins, sand, hairpins etc.	Tie the long strips; fasten the buttons; close zippers.	The quantity of the laundries shall not be too large. Stretch and loosen the laundries before putting them in the tub.	When the pulsator is running , the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.
				
a. Check if the laundries are applicable for washing with machine. b. Divide the laundries that are not colorfast from other laundries. c. Put those laundries difficult to absorb water into water with hand. d. For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil. e. For those laundries that may get lint ball and those with long fur, tum it over before putting in. f. Do not put those laundries polluted by chemicals into the washing machine directly.				


## 2 Put in the laundries



- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select high water level for laundries less than 1.0kg, so as to avoid splashing of water.

## 3 Usage of the detergent

Inlet for concentrated washing powder and detergent

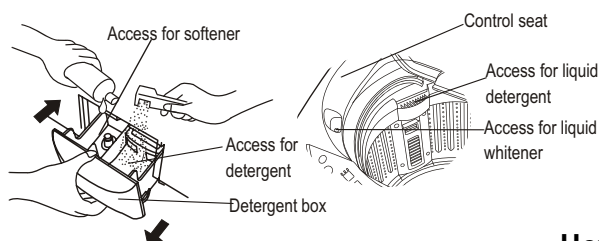

- Put the washing powder and softener into the detergent box directly as indicated in the left figure.
- After that, please close the detergent box.

### How to use the softener

- When you use softener, the softener must be lower than the underside of water cap.
- Please often wash the detergent box, because softener may curdle easily.
- Before use softener, you must select disinfect program first.
- When the concentration of softener is high, please use after diluting.

### How to use the whitener

- Fill water to decided level. Dilute the whitener with container. Pour it slowly into the washing tub.
- Avoid using whitener on laundries with colour or pattern as they are prone to lose colour.
- The whitener shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before use.

### How to use the washing powder

- Directly dissolved in the machine (not applicable for fuzzy program and reserve wash)
    1. Fill small quantity of water.
    2. Add the powder. Run for 30 seconds to dissolve it completely.
  - 3. Put in the laundry. Select suitable water level.
 

The instant dissolving of the washing powder:

    1. Prepare warm water of 30°C and a container.
    2. Add the powder while stirring to fully dissolve it. In selecting The super quick program, it is suggested to adopt liquid detergent instead of washing powder to guarantee the washing effect.
  - Put in the proper quantities detergent according to the water level and the laundries quantities.
- It is suggested not to use high sudsing detergent. Washing powder with poor quality or long time storage maybe caked. Please pay attention to cleaning the detergent box in time.

## 4 Close the top lid

Except draining, if the top cover is opened, the washing machine will stop running and alarm.

## 5 Use the operation buttons

### a Description of the function of buttons

#### Mode and meaning of the indicators

- The light is off
- Flashing: indicate the running program or indicate the water level
- On: indicate the program about to run, or indicate the selected mode or indicate the water level

#### Child lock function

- Enactment: Push down the PROGRAM button and RESERVE button, then push down the POWER ON/OFF button. The digitron displays "CL", at the same time, three beeps sound, the child lock function is ok. After setting, push down the start/pause button. The child lock function is activated. All of the buttons are locked and cannot make selection.
- Release the child lock function: push down the PROGRAM and REVERSE button at the same time for more than 2 second. After a beep sound, the child lock function is released.
- After the program is finished, the child lock function is released automatically.

#### Reserve/remain time indicator digitron


- During sensing, it displays --
- During reserve procedure, it displays the remained reserve time (in hours)
- During operation of programs, it displays the remained time (minutes).
- In case of abnormal phenomenon, it displays the abnormal symbol (see to Page 15)

Page 15



#### "Start/pause" button

- After the power is switched on, press it to start the machine
- During working, push it to pause.
- During pause, push this button to restart and go on working

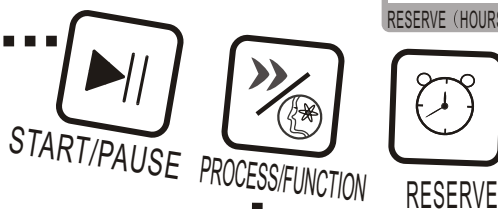

#### "Procedure/Function" button

- You can choose one or more procedure among soak, wash, rinse, spin.
- This machine can set function (heavy wash, heavy rinse, heavy spin, gentle spin), you can choose one or more among them. When you switch on the power, the machine will set to PROCESS state; push the "PROCESS/FUNCTION" for more than 2 seconds. After a beep sound, switch to FUNCTION state, at this time, you can choose different function; push the "PROCESS/FUNCTION" for more than 2 seconds. After a beep sound, switch to PROCESS state. Whether at which state before switching on the power, after switching on the power, the machine set to process state automatically, and you can not change; if you want to choose function, please switch off the power first, then switch on the power again.
- You can choose function as below:  
Heavy wash, adding 10 minutes washing time at the primary time.  
Heavy rinse, adding one rinsing with store water at the primary state.  
Heavy spin, adding 3 minutes spinning time at the primary time.  
Gentle spin, setting to gentle spin at spinning.
- When you choose quick, postable, tub dry program, you can not choose "PROCESS/FUNCTION"


#### "Reserve" button

- The digitron displays remain time before washing is finished (in minutes)
- Push "reserve" button, the digitron displays the reserve time of washing (in hours). The indicator flashes to indicate that the reserve function is operating.
- Push "reserve" button to display the reserve mode.



### "Power" button

- Push the "power" button to switch on the power.
- Under power-on mode, push it to switch off the power.
- Push the "power" button to switch on the power. If the "start/pause" button is not pushed, the machine will switch off the power automatically after 5 minutes.

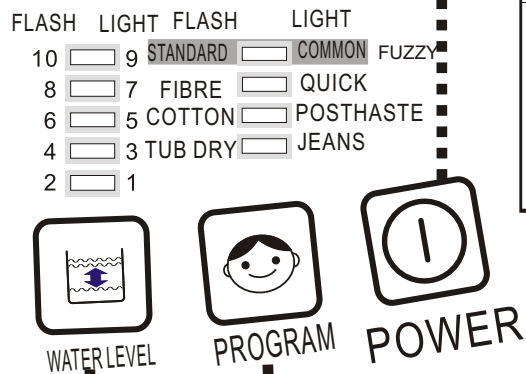

### "Program" button


- Following automatic programs are available for selection

Program	Applicable situation
Common	Common washing
Quick	Quick and high-efficiency wash for common laundries
Posthaste	Super quick wash of the laundry under 1 kg with light soil
Jeans	Washing the relatively big and thick laundries
Standard	Washing the normal laundries
Fibre	Washing the fibre textiles
Cotton	Washing the woollen textiles
Tub dry	Drying the inner tub and the outer tub, which can avoid growing mildew.(after washing clothes, there is dampness between the inner tub and the outer tub, the wall of the inner tub and out tub can breed mildew, where you can choose the tub dry program, Drying the inner tub and the outer tub, keeping the inner tub and outer tub dry, which can avoid growing mildew.

### "Water level" button


- During common and standard programs, the washing machine can detect the laundries automatically. After detection, it will set the water level to suitable valve automatically.
- You can also set water level by yourself. After the machine is started, it will not set water level automatically. You shall push the start/pause button to make new setting.
- If there's water inside the tub, the machine cannot detect the laundries and will display water level 6 .If wet laundries are put in, it may display water level 10 .
- If posthaste program is selected, it will display water level 3 . The water level can not be adjust. When water level 1 is reached in water filling, it will perform washing while filling water. When water level 3 is reached, it will change to normal washing.
- During operation of wash ,rinse and soak program, you can push down the water level button to add water. When you release the button, or it reaches the overflow water level, the machine will stop adding water.
- The water level decided may be different from actual value because of the different moisture level of the laundries.

## b Steps of using the operation buttons and description of each step.

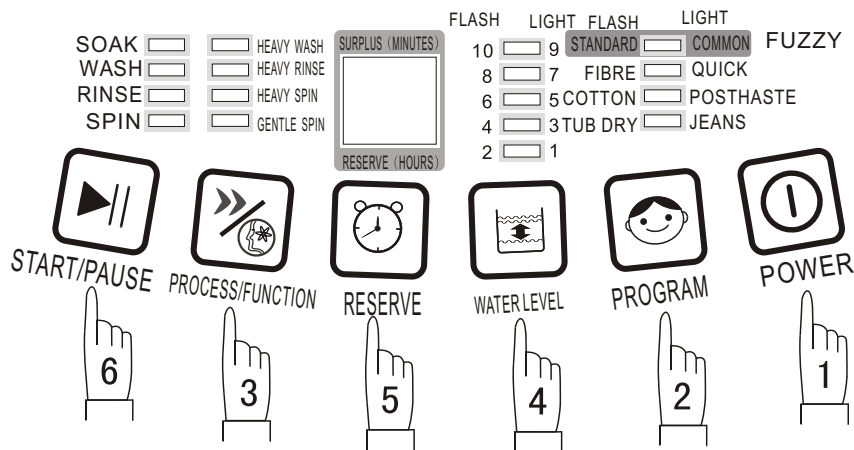

### 1 Push the "POWER ON/OFF " button to switch on the power.

- It has the special power resume function. In the case of power failure or the power plug is loose during washing, the machine can save the running program, and resume the program after the power supply is recovered. You do not need to set the program again.

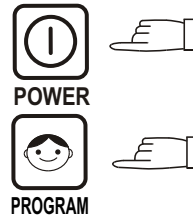

### 2 Push the "PROGRAM" button to select the suitable automatic program.

After switching on the power, the machine will set common program automatically. To select other automatic program, push the "program" button till the relative indicator is light or flash. Refer to the "program button" on Page 11 for the selection. For instance: select "Posthaste" program for laundries with small quantity and light soil.


Page 11

- In selecting the common and standard program, the machine will execute fuzzy program to select water level and wash time according to the cloth and weight of the laundries. The full procedure is controlled automatically.

### 3 Push the "PROCESS/FUNCTION" button to select suitable procedure and function.

#### Attention

 - Even there's no water in the tub, a certain period is required before spin starting.
- Do not use the soak program for the woolen textiles
- Wash and spin after putting the damageable clothes into tuck net, to avoid scathe.
- The pulsator will rotate brokenly when the water level reach to 4.
- The soak procedure can work in cooperation with automatic programs like common, cotton, standard, jeans, fibre. There is intermittent pulsator stirring during soak.
- After the machine starts operation, you can only set the program and procedure during soak washing, and can not make setting in other cases.
- When running the saving water program, if the water pressure is too lower, the machine will adjust program from saving to sluicing automatically for the effect of rinsing.



## Procedure program selection method( "PROCESS" select state)

Times of pushing the PROCEE/PROGRAM button	Selected procedure programe	Applicable circumstance	Contents (the lighted indicators indicate the programs about to run)
0	WASH 、 RINSE 、 SPIN (standard program)	When the common laundries need washing, rinsing and spinning.	SOAK WASH RINSE SPIN ● ○ ○ ○
1	WASH (the washing liquid remains in the tub)	Repeat using the washing liquid	SOAK WASH RINSE SPIN ● ○ ● ●
2	WASH 、 RINSE (the rinsing liquid remains in the tub)	When prevent the laundries from corrugating, and the laundries do not need spinning	SOAK WASH RINSE SPIN ● ○ ○ ●
3	RINSE 、 SPIN	When the laundries need rinsing and spinning after manual washing	SOAK WASH RINSE SPIN ● ● ○ ○
4	SPIN (spin after drain)	When the laundries need only spinning after manual washing (first drain then spin)	SOAK WASH RINSE SPIN ● ● ● ○
5	SOAK 、 WASH、 RINSE 、 SPIN	The laundries are very dirty, or the sleeves and collars of the shirt are very dirty. First soak then wash.	SOAK WASH RINSE SPIN ○ ○ ○ ○

- Push the SELECT button for 6 times, and it will resume the initial mode. It will circulate in that sequence.
- water pressure and water level influence the wash time.
- When the "PROCESS/FUNCTION" button is on the "FUNCTION" state, push "PROCESS/FUNCTION" button, it will circulate as nether sequence:  
Heavy wash->heavy rinse->heavy spin->gentle spin->heavy wash 、 heavy rinse->heavy wash 、 heavy spin->heavy wash 、 gentle spin->heavy rinse 、 heavy spin->heavy rinse 、 gentle spin->heavy wash 、 heavy rinse 、 heavy spin->heavy wash 、 heavy rinse 、 gentle spin->heavy wash.

### 4 Press " WATER LEVEL "button, select suitable water level

After switching on the power, when select the common and standard program, the washing machine will execute fuzzy program automatically to detect the cloth. After defection, it can set the water level automatically. To select other water level, first push the "start/pause" button, then push the "water level" button to set the water level.



### 5 Push the "reserve" button to select suitable reserve wash program



After switching on the power, the reserve program is set to off mode automatically. If you need to set the washing procedure to be finished at reserved time, please push the " reserve " button to set the reserve wash program. Refer to reserve button in Page 10 for selection.

#### • Confirm the operation of reserve program

Page 10

- When the "reserve" function is activated, the indicator light of the program you have set will be off. The "reserve (hours)" and "surplus(minutes)" indicator lights will be on. During reserve procedure, push the "reserve" button to display the reserve mode.
- To change the running program or cancel the reserve setting, you need to switch off the power and make new selection.

### 6 Push the "start/Pause" button 6 Finish washing









START/PAUSE

After Finishing wash ,the washing machine will cut off the power automatically

## 7 Disposal after washing

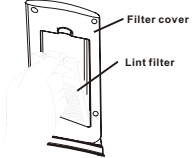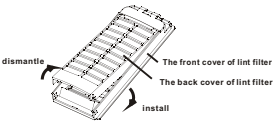- After using, please clean the lint and foreign materials of the lint filter etc. in time. Otherwise it may influence your using the machine.
- Please first pull off the power plug from the receptacle before cleaning.

<p>Clean the detergent box and set it on the control panel seat.</p> <p>1.The method of dismantle:Push it up aslant and gently.</p> <p>2.The method of install : install it upwards and aslant and push it in .</p>		 <p>Dismantle</p>  <p>Install</p>
<ul style="list-style-type: none"> <li>● The lint filter must be used during washing.</li> <li>● It must be cleaned in time after each using.</li> </ul> <p>The methods of dismantle and install lint filter as follows:</p> <p>1.Push down the spring piece of the top lint filter to make the claws out of the filter cover, and then pull out the lint filter to get it down.(See to the figure 1)</p> <p>2.Pull the back of the lint filter, and then you can get down it off the front cover of the lint filter. (See to the figure 2)</p> <p>3.Sweep the rubbish in the lint filter.</p> <p>4.Put the back of the lint filter into the front cover .(See to the figure 2)</p> <p>5.Put the lint filter into filter cover, and make it tight</p> <p>6.Make sure the lint filter is well installed, or it can influence your use.</p>		
 <p>Figure 1</p>	 <p>Figure 2</p>	
<p>The filter screen of the water inlet valve is likely to be blocked by foreign materials and influence the water inlet.</p> <p>Please clean it with brush every two months.</p> 	<p>If the cabinet is dirty, wipe it with wet cloth</p> <ul style="list-style-type: none"> <li>● Do not flush it directly with water.</li> <li>● Wipe it with neutral detergent.</li> <li>● Do not wipe it with thinner, petrol, alcohol etc.</li> </ul> 	

- 1.After washing, close the water faucet. ( If needed, you can dismantle the water inlet hose).
- 2.Do not store water in the washing machine for a long period. Drain the water completely after each using.
- 3.Be sure to pull off the power plug before maintenance.
- 4.Hang up the power cord and drain hose.
- 5.Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time ( about 1 hour), then close the top lid.



## Trouble-shooting Answer to question


 

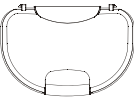
(If there's breakdown, please pull off the power plug before checking) The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair. If there are real breakdowns, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomenan		The reason	How to settle
The digitron displays E0.		<ul style="list-style-type: none"> <li>The top lid is opened during reserve procedure.</li> </ul>	<ul style="list-style-type: none"> <li>Close the top lid.</li> </ul>
The drainage cannot work, or is too slow. The digitron displays E1.		<ul style="list-style-type: none"> <li>Is the drain hose put down?</li> <li>Is the drain hose blocked?</li> </ul>	<ul style="list-style-type: none"> <li>Put down the drain hose. Open and close the top lid once.</li> <li>Clean the foreign material. Open and close the top lid once.</li> </ul>
It stops running in midway. The digitron displays E2.		<ul style="list-style-type: none"> <li>The top lid is not closed.</li> </ul>	<ul style="list-style-type: none"> <li>Close the top lid.</li> </ul>
The safety switch acts, and the spinning cannot work. Amend twice automatically. The digitron displays E3.		<ul style="list-style-type: none"> <li>Are the laundries put slantingly?</li> <li>Is the machine slanting?</li> </ul>	<ul style="list-style-type: none"> <li>Reorder the laundries. Close the top lid.</li> <li>Placed the machine horizontally, open and close the top lid once.</li> </ul>
The water filling does not work, or is slow. The digital displays E4.		<ul style="list-style-type: none"> <li>Is the water tap opened, or is there water supply failure?</li> <li>Is the water inlet valve blocked?</li> <li>Is the water pressure too low?</li> </ul>	<ul style="list-style-type: none"> <li>Open the water tap. Open and close the top lid once.</li> <li>Clean the water inlet valve then open and close the top lid once.</li> <li>Use after the water pressure is normal.</li> </ul>
The digitron displays E6.		<ul style="list-style-type: none"> <li>The water level sensor is bad.</li> </ul>	<ul style="list-style-type: none"> <li>Please contact the after-sales service department.</li> </ul>
The machine does not act	Not wash	<ul style="list-style-type: none"> <li>Is there power failure?</li> <li>Is the power plug inserted tightly?</li> <li>Is the water level reached preset position?</li> </ul>	<ul style="list-style-type: none"> <li>Please use it when there's power supply.</li> <li>Insert the power plug tightly.</li> <li>Fill water to the preset position.</li> </ul>
	Not spin	<ul style="list-style-type: none"> <li>Is the power plug inserted tightly?</li> <li>Is the top lid closed reliably?</li> <li>Are the laundries set flat?</li> </ul>	<ul style="list-style-type: none"> <li>Insert the power plug tightly.</li> <li>Close the top lid.</li> <li>Set the laundries flat.</li> </ul>
There's abnormal sound inside the machine		<ul style="list-style-type: none"> <li>Is the machine slanting?</li> <li>Are the laundries put slantingly in spinning?</li> <li>Are there any foreign materials?</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the machine to be even</li> <li>Reorder the laundries and close the top lid.</li> <li>Remove the foreign materials.</li> </ul>
The water tap leaks		<ul style="list-style-type: none"> <li>Is the screw of the jointer of water inlet hose loose or awry?</li> </ul>	<ul style="list-style-type: none"> <li>Fasten the screw of the jointer properly.</li> </ul>

### Common phenomena

Phenomena	Explanation
<ul style="list-style-type: none"> <li>The spinning is intermittent when it starts.</li> </ul>	<ul style="list-style-type: none"> <li>Balance the laundries to avoid slanting.</li> </ul>
<ul style="list-style-type: none"> <li>Push the "spin" button to select "Spin", but it doesn't work.</li> </ul>	<ul style="list-style-type: none"> <li>The program is setting the drain time. Some time is needed before it starts spinning.</li> </ul>
<ul style="list-style-type: none"> <li>There may be some water flowing out of the drain hose in the first use of the machine.</li> </ul>	<ul style="list-style-type: none"> <li>It is the water remained in the factory inspection of performance.</li> </ul>
<ul style="list-style-type: none"> <li>The wash procedure is paused</li> </ul>	<ul style="list-style-type: none"> <li>The cloth sensor is checking the cloth, it will add water after 48 seconds.</li> </ul>
<ul style="list-style-type: none"> <li>The pulsator pauses during water inlet in wash and rinse.</li> </ul>	<ul style="list-style-type: none"> <li>It is to avoid splashing during water inlet.</li> </ul>
<ul style="list-style-type: none"> <li>When the power plug is inserted, computer board indicator is switched on, and the machine starts working</li> </ul>	<ul style="list-style-type: none"> <li>It is the special resume function. In the case of power failure or the power plug is loose during washing, the machine can save the running program, and resume the program after the power supply is recovered. You do not need to set the program again.</li> </ul>

## Packing list

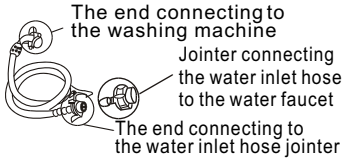Name	Quantity
<ul style="list-style-type: none"> <li>User's manual</li> </ul>	<ul style="list-style-type: none"> <li>One piece</li> </ul>
<ul style="list-style-type: none"> <li>Warranty card</li> </ul>	<ul style="list-style-type: none"> <li>One piece</li> </ul>
<ul style="list-style-type: none"> <li>Water inlet hose                              </li> </ul>	<ul style="list-style-type: none"> <li>One piece</li> </ul>
<ul style="list-style-type: none"> <li>Bottom plate                              </li> </ul>	<ul style="list-style-type: none"> <li>One piece (Put into the inner tub)</li> </ul>
<ul style="list-style-type: none"> <li>Tapping screws                              </li> </ul>	<ul style="list-style-type: none"> <li>One piece</li> </ul>
<ul style="list-style-type: none"> <li>Inner cover component                              </li> </ul>	<ul style="list-style-type: none"> <li>One piece (Put into the inner tub)</li> </ul>
<ul style="list-style-type: none"> <li>Fully automatic washing machine</li> </ul>	<ul style="list-style-type: none"> <li>One set</li> </ul>

## Specification

Water level/Water quantity (about)	1/14L、2/18L、3/22L、4/26L、5/29L、6/32L、7/36L、8/39L、9/42L、10/45L
Injection pressure	0.03MPa~1MPa
Rated washing/spinning capacity	6.2/6.2