

Warranty:

LIMITED WARRANTY* ONE (1) YEAR:

Your *Elite* small kitchen appliance is built with precision, inspected and tested before leaving our factory. It is warranted, to the original purchaser, to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. This warranty gives you special legal rights and you may also have other rights to which you are entitled, which may vary from state to state. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.

This limited warranty covers appliances purchased and used within the surrounding United States and does NOT cover:

- Damages caused from improper usage or installation of appliance.
- Damages caused from shipping.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- The loss or missing parts of the appliance. Parts will need to be purchased separately.
- Damage from service by other than an authorized dealer or service center.
- Any transportation and shipping charges.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

*One Year Warranty valid only in the United States, **excluding** Alaska, Hawaii, and Puerto Rico. For international warranty, please contact the local distributor.

**Any instructions or policy included in this manual may subject to change at any time.

Model EG-1500

Elite 15" Oversized Non-Stick Electric Skillet

Distributed by: **MAXI-MATIC®**, USA

18401 E. Arenth Ave. Building B. City of Industry, CA 91748

Customer Service Department: (626) 912-9877 Ext. 116/120 MON-FRI 9am-5pm PCT

Email: info@maxi-matic.com



15" Oversized Non-Stick Electric Skillet with Glass Lid



Model EG-1500

INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces . Use handles or knobs if applicable.
3. Remove all packaging plastics and other materials from unit before operating.
4. Wash all removable accessories before using for the first time.
5. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
6. Close supervision is necessary when appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
14. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
15. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
18. Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.
19. Do not place any of the following materials in the unit: Paper, cardboard, plastic and the like.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

PARTS & FEATURES

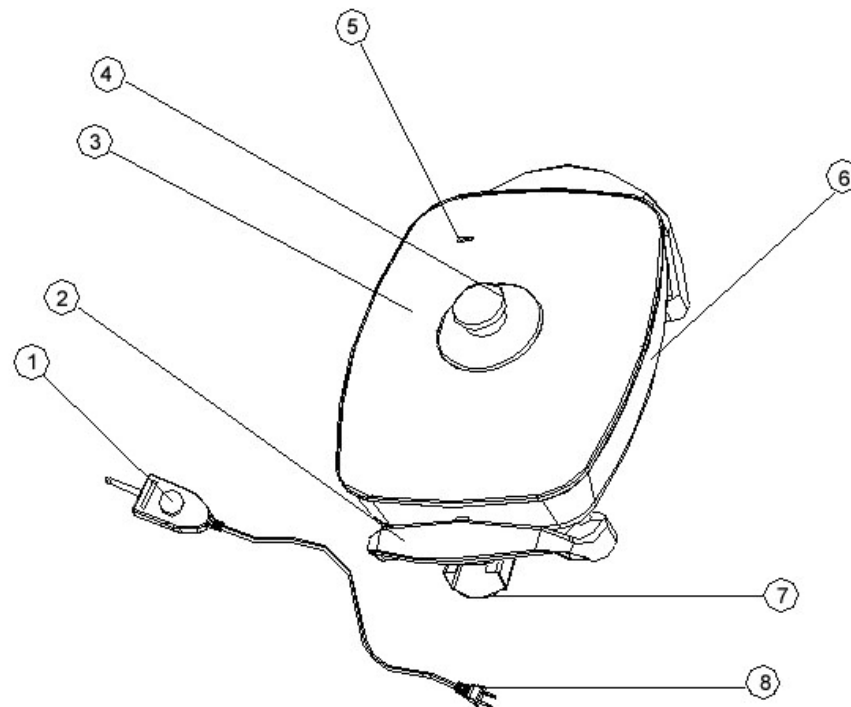

- 1) 450°F Temperature Control Knob.
- 2) Cool-Touch Handles.
- 3) Tempered Glass Lid.
- 4) Cool-Touch Knob.
- 5) Ventilation Hole.
- 6) Die-Cast Aluminum body.
- 7) Power socket for Temperature control.
- 8) Power cord.

HOW TO USE

Before using your skillet for the first time, remove all packaging materials and wash all the parts EXCEPT for the thermostat and power cord in warm soapy water. Dry completely before using.

ASSEMBLY & OPERATION:

Always operate the skillet on a stable leveled surface to avoid any accidental spills.

- 1) Insert thermostat control and power cord into the side of the unit where it is indicated by a small rectangular opening. Line up the metal conductor and push in gently.
- 2) Always make sure that the thermostat is set to the OFF position before plugging the power cord into a wall outlet.
- 3) Set thermostat to desired temperature. Wait few minutes for skillet to heat up and place prepared food into the skillet.
- 4) Cook either with or without the cover as indicated in recipes.
- 5) For roasting: Prepare foods and place into skillet.
- 6) Set thermostat to indicated temperature.
- 7) Place cover over the skillet and keep covered to prevent heat from escaping.
- 8) When cooking cycle is complete, turn the thermostat control to OFF.
- 9) Unplug power cord from wall outlet.
- 10) Remove thermostat control from the skillet by pulling gently.
- 11) Serve food directly from the skillet while it is still hot OR simply remove the meal from the skillet and serve on your own platter or dishes.

CARE & CLEANING

Always make sure the unit is in the OFF position and the power cord is UNPLUGGED before washing any parts of the 15" skillet.

- 1) The cover of the skillet is dishwasher safe or can simply be cleaned w/ a damp soapy cloth or sponge.
- 2) The main base of the skillet can be cleaned with a damp soapy cloth or sponge.
NEVER IMMERSE THE BASE OF THE SKILLET INTO WATER OR ANY OTHER LIQUIDS FOR THIS MAY DAMAGE IT SEVERLY!
- 3) Dry thoroughly before storing away the unit.
- 4) **NEVER USE ABRASIVE CLEANSERS OR MATERIALS TO CLEAN ANY PARTS OF THE SKILLET FOR THIS MAY DAMAGE THE SURFACES AND NON-STICK COATING!**

Short Cord Purpose

- 1) A short power-supply cord is provided to reduce risks of injuring yourself from becoming entangled in or tripping over a longer cord.
- 2) Longer extension cords are available and may be used if you exercise caution during use.
- 3) If a longer cord is used please note the following:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.The longer cord should be arranged so that it will not drape over the counter top of tabletop where it can be pulled on by children or tripped over unintentionally.

Polarized Plug

If this appliance has a **polarized plug** (meaning one blade is wider than the other one), please follow the below instructions:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only in one direction. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

This appliance is intended for Household Use Only.