

INSTRUCTIONS



HGFD45

HOBART HGF, HGD AND HGC SERIES GAS FRYERS

WITH OR WITHOUT FILTER-IN-A-DRAWER

MODELS

HGF35	ML-126994	HGF35F	ML-135536
HGF45	ML-126995	HGF45F	ML-135537
HGF65	ML-126996	HGF65F	ML-135538
HGF85	ML-126997	HGF85F	ML-135539
HGFD35	ML-126416	HGD35F	ML-126953
HGFD45	ML-126417	HGD45F	ML-126956
HGFD65	ML-126418	HGD65F	ML-126959
HGFD85	ML-126419	HGD85F	ML-126962
HGFC35	ML-126420	HGC35F	ML-126954
HGFC45	ML-126421	HGC45F	ML-126957
HGFC65	ML-126422	HGC65F	ML-126960
HGFC85	ML-126423	HGC85F	ML-126963



701 S. RIDGE AVENUE
TROY, OHIO 45374-0001

937 332-3000

www.hobartcorp.com

FORM 35614 (February 2004)

IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

IMPORTANT

IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUTOFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

IN THE EVENT OF A POWER FAILURE, DO NOT ATTEMPT TO OPERATE THIS DEVICE.

TABLE OF CONTENTS

GENERAL	5
SPECIFICATIONS	5
OPTIONS AND FEATURES	6
BATTERY CONFIGURATIONS	6
FIELD-INSTALLED ACCESSORIES	8
FACTORY-INSTALLED ACCESSORIES	8
HGF SERIES FRYMATE (Dump Station)	8
INSTALLATION	9
UNPACKING	9
LOCATION	10
INSTALLATION CODES AND STANDARDS	10
ASSEMBLY	11
GAS CONNECTIONS	12
GAS PRESSURES AND ORIFICES	12
TESTING THE GAS SUPPLY PIPING SYSTEM	12
LEVELING FRYER	13
FLUE CONNECTIONS	13
ELECTRICAL CONNECTIONS	13
OPERATION	14
BEFORE FIRST USE	14
FILLING FRY TANK WITH SHORTENING	14
LIGHTING INSTRUCTIONS FOR HGF FRYER WITH MANUAL PILOT IGNITION	15
LIGHTING INSTRUCTIONS FOR MANUAL PILOT IGNITION (HGFD/HGFC SERIES)	16
STARTUP WITH ELECTRONIC IGNITION	16
HGFD SERIES	17
CONTROLS	17
PROGRAMMING	18
MELT OPERATION	19
USING THE FRYER (AFTER STARTUP)	20
SHUTDOWN	20
EXTENDED SHUTDOWN	20

TABLE OF CONTENTS (cont.)

HGFC SERIES 21

 CONTROLS 21

 PROGRAMMING 22

 TEMPERATURE AND TIME PROGRAMMING 25

 USING THE FRYER (After Startup) 29

 SHUTDOWN 30

 EXTENDED SHUTDOWN 30

 FRYING GUIDELINES (All Models) 30

 DAILY FILTERING 31

 HIGH LIMIT DEVICE (All Models) 32

 DRAIN INTERLOCK (HGD and HGC Series) 32

 SHORTENING LIFE (All Models) 32

CLEANING 33

 DAILY 33

 WEEKLY OR AS REQUIRED 33

MAINTENANCE 34

 LUBRICATION 34

 BURNER FLUE 34

 SERVICE 34

TROUBLESHOOTING GUIDE 35

 ALARMS AND ERROR MESSAGES (HGD and HGC Series) 36

Installation, Operation and Care of MODELS HGF, HGD and HGC SERIES GAS FRYERS

SAVE THESE INSTRUCTIONS

GENERAL

Hobart HGF, HGD and HGC Series Gas Fryers are produced with quality workmanship and material. Proper installation, usage and maintenance of your fryer will result in many years of satisfactory performance.

It is suggested that you thoroughly read this entire manual and carefully follow all of the instructions provided.

The Mobile Filter, used for filter-ready fryers, is covered in a separate Instruction Manual. Fryers equipped with Filter-In-A-Drawer are covered in a separate Instruction Manual. Follow the instructions in the appropriate manual for filtering, draining and dumping shortening.

Hobart HGF, HGD and HGC Series Gas Fryers are available in various sizes, with an array of features and options for a range of commercial fryer applications. The overall tank widths on the 35 and 45 models are the same. The 65 models have a larger tank capacity than the 45 models. The 65 and 85 models are the same width. The 85 models are deeper and have a larger tank capacity than the 65 models.

The HGD models have digital controls and a solid state thermostat. The HGC Fryers have a microprocessor (computer) control and timer.

SPECIFICATIONS

Model Size	No. Tubes	BTU/Hr.	Width	Lbs. of Fry Compound
35	3	90,000	15 1/2" (39 cm)	35-40 (16-18 kg)
45	4	120,000	15 1/2" (39 cm)	45-50 (20-23 kg)
65	5	150,000	21" (53 cm)	65-75 (29-34 kg)
85	5	150,000	21" (53 cm)	85-90 (39-41 kg)


OPTIONS AND FEATURES

- Stainless Steel Tank (Standard)
- Basket Lift with Timer (D and C series)
- Tri-, Twin- or Single-Basket (D and C series)
- Manual Pilot or Electronic Ignition (D and C series)
- Filter-Ready (Stand-alone fryers only)
- Filter-In-A-Drawer (Model numbers ending in F)

BATTERY CONFIGURATIONS

- Batteries can be configured with any HGF, HGD or HGC Series Fryer or Frymate Dump Station; only one Frymate Dump Station per battery (Fig. 1).
- All fryers can be free-standing or arranged in batteries of 2 to 4 units.
- The number preceding the model number of your HGF, HGD or HGC Series Fryer refers to the number of units in a battery.
- All options and accessories can be used in any battery configuration.
- All "F" suffix filter models may be in batteries of 2 to 4.

Non Filter Models

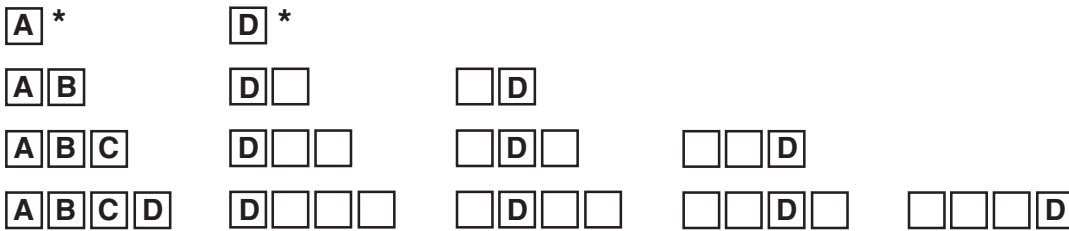


[D] = Dump Station [] = Fryer

*Indicates interplumbing is not applicable.


Fig. 1

Filter-In-A-Drawer Models [HG(F), HGD(F), HGC(F)]


2 Cabinets in Battery

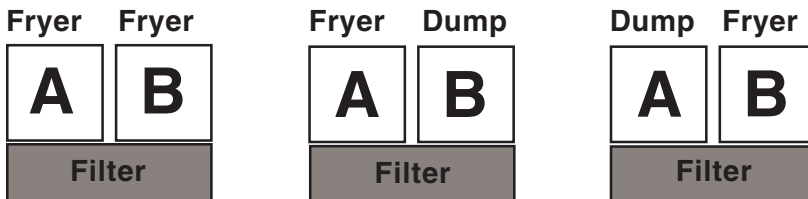

3 Cabinets in Battery

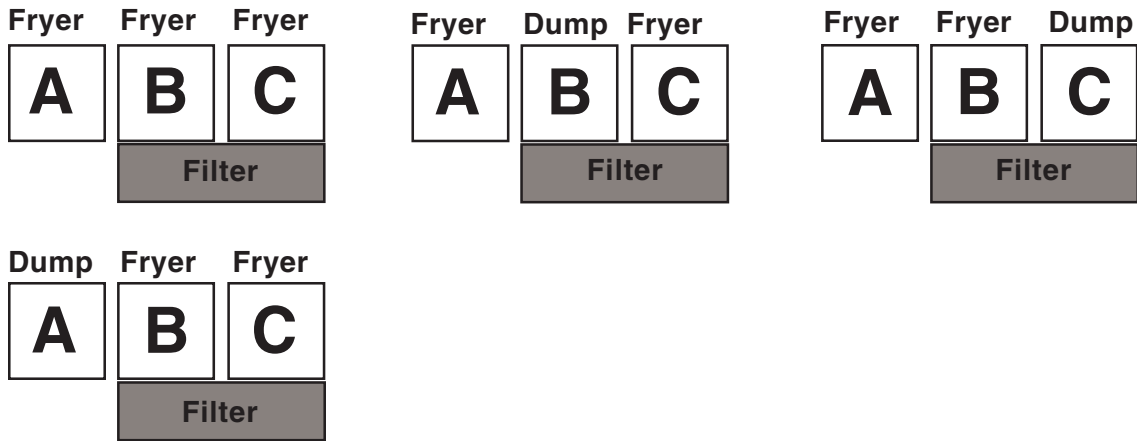

4 Cabinets in Battery (For 35 and 45 Only)

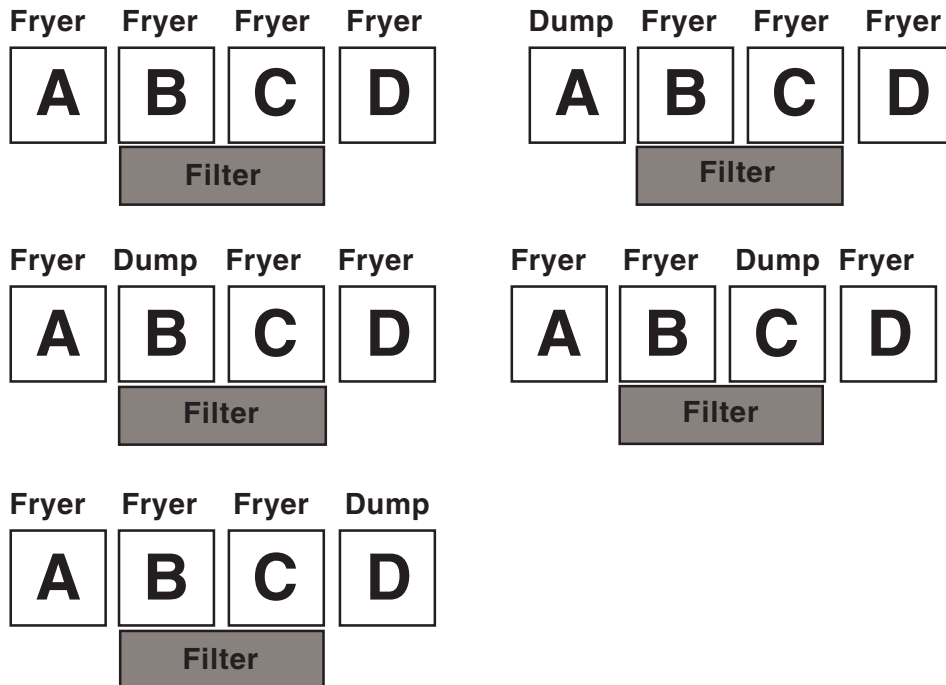

The configurations shown are standard (default) locations. Any deviation will result in substantially increased lead times. Check with your Hobart customer service representative for acceptance of different configurations.

FIELD-INSTALLED ACCESSORIES

- Casters
- Twin Baskets
- Tri-Baskets (65 and 85 models only)
- Single Baskets
- Heat Lamp (RO only)
- Flex Hose 4' (1.2 m) (gas connection)
- Flex hose S/S 5' (1.5 m) (gas connection)
- Vat Cover
- Battery Tray
- Tank Skimmer
- Tank Scoop

FACTORY-INSTALLED OPTIONS

- Basket Lift
- Battery Configuration
- Battery Interplumbing (Model numbers ending in F)
- Electronic Ignition

HGF SERIES FRYMATE (Dump Station)

Model HGFO Frymate Dump Station can be configured in a battery with fryers 15 1/2" (39 cm) or 21" (53 cm) in width.

Frymate provides a final prep area where excess oil drains away and product is seasoned, packaged and kept ready for sale.

HGFO Series Frymate - Finish Options

HGFO15, HGFO21, HGFO21S	Front Door	Sides & Dummy Flue	Legs
Standard	Stainless Steel	Stainless Steel	Stainless Steel Legs
Optional	N/A	N/A	Casters

Model HGFO15 is for use with all 35 and 45 Series Fryers.
 Model HGFO21 is for use with all 65 Series Fryers.
 Model HGFO21S is for use with all 85 Series Fryers.

HGFO Series Frymate - Features

Sizes	Heat Lamp	Tops	
		Solid Pan	Pan Perforated
35 & 45	Opt.	Std.	N/A
65 & 85	Opt.	Std.	Opt.

INSTALLATION

Before installing the fryer, verify that the type of gas (natural or propane) agrees with the specifications on the fryer data plate, which is located on the inside of the door panel. Ensure the fryer is configured for the proper elevation.

UNPACKING

This fryer was carefully inspected before leaving the factory. The transportation company assumes full responsibility for safe delivery upon acceptance of the shipment.

Immediately after unpacking the fryer, check for possible shipping damage. If the fryer is damaged, save the packaging material and contact the carrier within 15 days of delivery.

Do not use the door or its handle to lift the fryer.

Remove tiedown straps from the burners (Fig. 2).

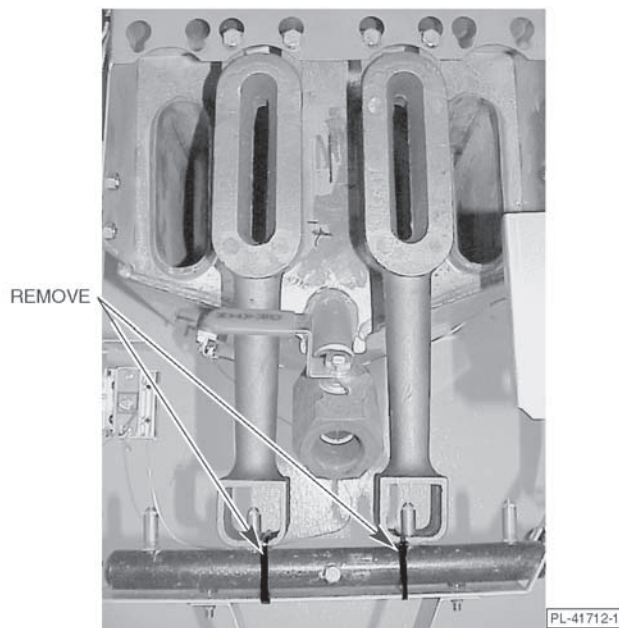


Fig. 2

LOCATION

The equipment area must be kept free and clear of combustible substances. Minimum clearance from combustible construction is 6" (15 cm) from the sides and 6" (15 cm) from the back of the fryer. Minimum clearance from noncombustible construction is 0" from the sides and 0" from the back.

At least 16" (41 cm) clearance must be between the fryer and any open-top flame units. Adequate clearances for servicing and proper operation must be allowed. The fryer may be installed on combustible floors.

Install the fryer in an area with sufficient air supply for combustion of the gas at the fryer burners. Provide adequate clearance for air openings into the combustion chamber. Do not obstruct the flow of combustion and ventilation air. Do not permit fans to blow directly on the fryer. Avoid wall-type fans which create cross-currents within a room. Avoid open windows next to the sides or back.

INSTALLATION CODES AND STANDARDS

The fryer must be installed in accordance with:

In the United States of America:

1. State and local codes, or in the absence of local codes, with:
2. National Fuel Gas Code, ANSI-Z223.1 (latest edition), available from The American Gas Association, Inc., 1515 Wilson Blvd., Arlington, VA 22209.
3. National Electrical Code ANSI/NFPA70 (latest edition) (if applicable).

In Canada:

1. Local codes.
2. CSA Standard C22.2 No. 3 Electrical Features of Fuel Burning Equipment (latest edition).
3. CAN/CGA-B149.1 Natural Fuel Gas Code (latest edition), available from The Canadian Gas Association, 178 Rexdale Blvd., Etobicoke, Ontario, Canada M9W 1R3.

ASSEMBLY

When installed, the fryer must be restrained to prevent tipping to avoid the splashing of hot liquid. The means of restraint may be the manner of installation, such as connection to a battery of appliances or installing the fryer in an alcove, or by separate means, such as adequate ties.

Fryers Mounted on Legs (Non-Battered Fryers)

Fryers serviced from the rear must have a minimum clearance of 18" (46 cm) from the wall when mounted on legs.

1. Position fryer in an open space near the final installation area.
2. Tilt fryer on its side. Be careful not to scratch the finish.
3. Thread legs into mounting holes provided on bottom of fryer, then tighten.
4. Carefully raise fryer to its normal position.

Fryers Mounted on Casters

Separate instructions for installing casters to the fryer are included with the casters.

- For an appliance equipped with casters, instructions that (1) the installation shall be made with a connector that complies with the Standard for *Connectors for Movable Gas Appliances, ANSI Z21.69* or *Connectors for Moveable Gas Appliances, CAN/CGA-6.16*, and a quick-disconnect device that complies with the Standard for *Quick-Disconnect Devices for Use With Gas Fuel, ANSI Z21.41*, or *Quick Disconnect Devices for Use with Gas Fuel, CANI-6.9*, (2) adequate means must be provided to limit the movement of the appliance.
- The fryer must be installed with a connector (not supplied by Hobart) in compliance with the above code(s).
- The fryer must be installed with restraining means to guard against transmission of strain to the connector, as specified in the strain relief manufacturer's instructions (Fig. 3).
- The fryer must be installed with the casters provided.
- Turn the gas supply off before disconnecting the restraint.

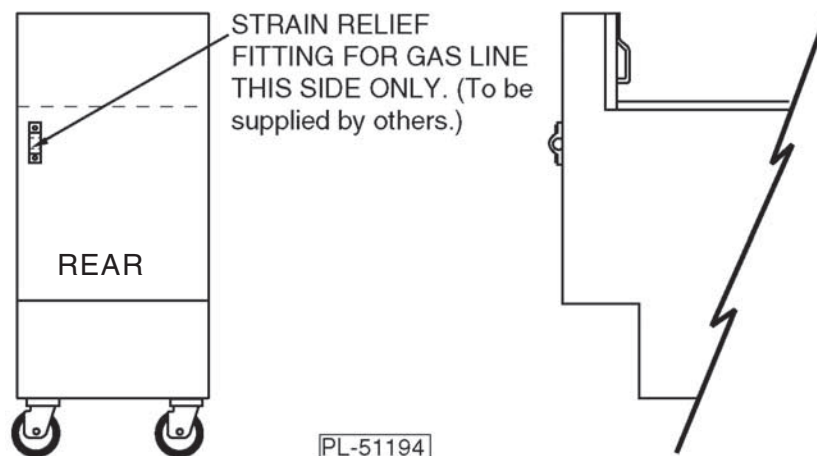


Fig. 3

GAS CONNECTIONS

CAUTION: All gas supply connections and any pipe joint compound must be resistant to the action of propane gases.

The gas inlet is located on the lower right rear of the fryer. Codes require that a gas shutoff valve be installed in the gas line ahead of the fryer.

The gas supply line must be at least the equivalent of 1/2" iron pipe for single units and 1 1/4" for batteries. If using the optional quick-disconnect flex hose: 3/4" iron pipe for single units and 1 1/4" iron pipe for batteries.

Make sure the pipes are clean and free of obstructions, dirt and piping compound. A battery requires one or two connections of appropriate size and type for the gas requirement.

WARNING: PRIOR TO LIGHTING, CHECK ALL JOINTS IN THE GAS SUPPLY LINE FOR LEAKS. USE SOAP AND WATER SOLUTION. DO NOT USE AN OPEN FLAME.

After piping has been checked for leaks, fully purge gas pipes to remove air.

GAS PRESSURES AND ORIFICES

The gas pressure should be set at 4" W.C. (Water Column) (1 kPa) pressure for natural gas and 10" W.C. (2.46 kPa) pressure for propane gas. If incoming pressure exceeds 1/2 psig (3.45 kPa), an additional pressure regulator must be installed.

TESTING THE GAS SUPPLY PIPING SYSTEM

When test pressures exceed 1/2 psig (3.45 kPa), the fryer and its individual shutoff valve must be disconnected from the gas supply piping system.

When test pressures are 1/2 psig (3.45 kPa) or less, the fryer must be isolated from the gas supply piping system by closing its individual shutoff valve.

LEVELING FRYER

1. Place a spirit level on top of the fryer after gas connections have been made.
2. Adjust the legs to ensure that the fryer is level front-to-back and side-to-side in the final installed position.

FLUE CONNECTIONS

The fryer must be located under a hood with adequate connection to an exhaust duct. The hood must extend 6" (15 cm) beyond fryer sides.

Adequate ventilation must be provided and comply with *Vapor Removal from Cooking Equipment*, ANSI-NFPA Standard #96 (latest edition), available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

Clearance above the fryer should be adequate for combustion byproducts to be removed efficiently. An 18" (46 cm) minimum clearance should be maintained between the flue vent and the filters of the hood venting system. Never make flue connections directly to the fryer.

Do not obstruct the flow of the flue gases from the appliance. Proper air balance should be maintained in the room.

ELECTRICAL CONNECTIONS

WARNING: ELECTRICAL AND GROUNDING CONNECTIONS MUST COMPLY WITH THE NATIONAL ELECTRICAL CODE AND/OR OTHER LOCAL CODES.

WARNING: APPLIANCES EQUIPPED WITH ELECTRICAL SUPPLY CORD(S) ARE PROVIDED WITH A THREE-PRONG GROUNDING PLUG, WHICH MUST BE CONNECTED TO A PROPERLY GROUNDED RECEPTACLE. IF THE RECEPTACLE IS NOT THE PROPER GROUNDING TYPE, CONTACT AN ELECTRICIAN. DO NOT REMOVE THE GROUNDING PRONG FROM THE PLUG.

Fryers are equipped with a 120 V, 60 Hz, 1-phase cord and plug.

Do not connect fryer to electrical supply until after gas connections have been made.

OPERATION

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

WARNING: SPILLING HOT FRYING COMPOUND CAN CAUSE SEVERE BURNS. DO NOT MOVE FRYER WITHOUT DRAINING ALL FRYING COMPOUND FROM THE TANK.

BEFORE FIRST USE

- Clean the protective metal oils from all surface parts and the tank interior using a noncorrosive, grease-dissolving commercial cleaner. Follow the cleaner manufacturer's directions.
- Rinse thoroughly and drain (open the front door to access the drain valve).
NOTE: On fryers equipped with Filter-In-A-Drawer, **do not** drain cleaning solution or water into the pump or filter system. See Filter-In-A-Drawer Instruction Manual for information on cleaning.
- Wipe tank completely dry with a soft, clean cloth.
- Clean all fryer accessories.
- Rinse all accessories thoroughly after cleaning and wipe dry.

Seasoning

Light seasoning of the backsplash area is required after every cleaning to avoid possible surface corrosion. Apply a thin layer of cooking oil over the entire backsplash area with a soft, lint-free cloth.

FILLING FRY TANK WITH SHORTENING

Liquid shortening may be used in all HGF, HGD or HGC Series Fryers. Solid shortening can only be used in fryers equipped with a melt cycle. Melting solid shortening without using a melt cycle will damage the fry tank and scorch the shortening. See Melt Options in this manual under your particular model for more information. Make sure the gas valve is off when draining or filling.

1. Fill the fryer tank.
2. Shortening level should be between the MIN and MAX lines in fry tank (Fig. 4). Shortening will expand when heated; do not fill the fry tank past the MAX line.
3. Add fresh shortening as needed.

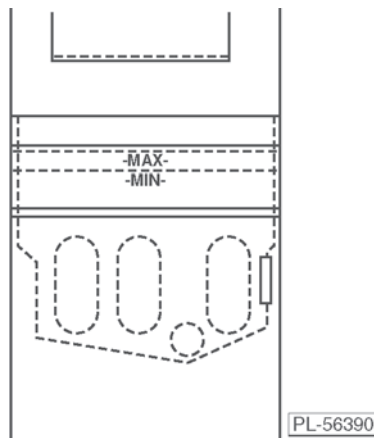


Fig. 4

LIGHTING INSTRUCTIONS FOR HGF FRYER WITH MANUAL PILOT IGNITION

NOTE: HGF fryer is only available with manual ignition.

CAUTION: Before turning the burners on, the fry tank must be filled with liquid or melted shortening.

1. Turn the thermostat OFF. The thermostat is located behind the door (Fig. 5).
2. Push the gas control valve knob and turn to OFF (Fig. 6). Wait 5 minutes for unburned gas to vent.
3. Push and turn gas control valve on to the "I" in PILOT (Fig. 6).
4. While still holding the knob in, light the pilot with a lit taper. Continue to depress the knob until pilot remains lit when knob is released.

If the pilot does not remain lit, repeat steps 2 through 4.

5. Depress and turn gas control knob to ON (Fig. 6).
6. If gas supply is interrupted, repeat steps 1 through 5.

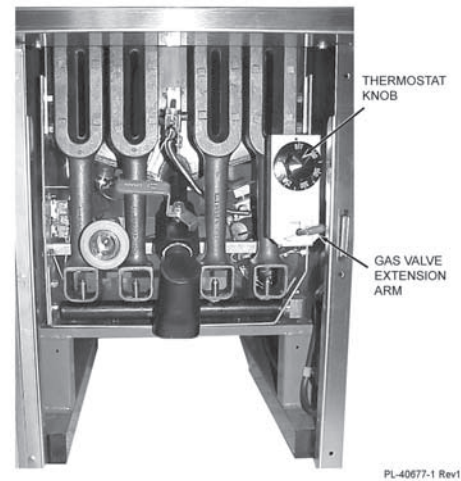


Fig. 5

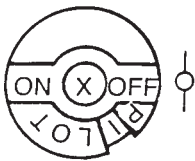


Fig. 6

PL-40678

TURNING THE HGF FRYER ON

To turn the fryer on, set the thermostat knob to the desired temperature. After the set temperature has been reached, the gas control shuts off the gas flow to the burners. The pilot remains lit. The burners will cycle on and off, maintaining the set temperature.

TURNING THE HGF FRYER OFF

1. Turn the thermostat OFF.
2. To keep the pilot lit: Turn the gas control valve knob to "I" in PILOT.
3. To shut off all gas to the system, including the pilot, turn the gas control valve knob to OFF.

EXTENDED SHUTDOWN

1. Turn the main gas shutoff valve off.
2. Turn the thermostat knob to OFF.
3. Turn the gas control valve knob to OFF.

LIGHTING INSTRUCTIONS FOR MANUAL PILOT IGNITION (HGFD & HGFC(F) SERIES)

CAUTION: Before turning the burners on, the fry tank must be filled with liquid or melted shortening.

1. Turn the thermostat knob (located behind the door panel) to OFF (Fig. 7).
2. Push the gas valve extension arm in and turn arm to OFF. Wait 5 minutes for unburned gas to vent.
3. Push gas valve extension arm in and turn to PILOT.
4. While still depressing the arm, light the pilot with a lit taper. Continue with steps 2 through 4 until pilot remains lit when the extension arm is released.
5. Push in and turn gas valve extension arm to ON.
6. Repeat steps 1 through 5 if gas supply is interrupted.

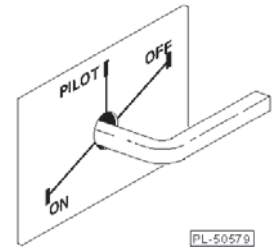


Fig. 7

STARTUP WITH ELECTRONIC IGNITION (HGFD & HGFC(F) SERIES)

CAUTION: Before turning the burners on, the fry tank must be filled with liquid or melted shortening.

1. Plug the power cord into an appropriate grounded receptacle and turn the main gas valve on.
2. Fill the fry tank with shortening. If using solid shortening, the fryer must be equipped with a melt cycle.
3. Open fryer cabinet door; turn the gas valve extension arm located inside the cabinet door to OFF (Fig. 8). Wait 5 minutes for unburned gas to vent.
4. Turn the gas valve extension arm to ON.
5. Press the power switch on.
6. If pilot fails to light within 90 seconds, the display will show IGNITION LOCKOUT. The key pad becomes disabled and the alarm sounds. To restart, turn the fryer power switch OFF. Wait 5 minutes, then repeat steps 3 through 5 until the pilot lights. If the pilot fails to light after several repeated attempts, contact your local Hobart Service office.
7. Thirty seconds after the pilot ignites, the fryer begins heating as programmed.
8. When the set temperature is reached, the burners shut off and the set temperature is displayed in the window. The fryer then cycles on and off to maintain the set temperature.


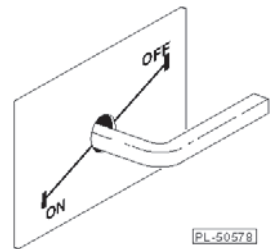


Fig. 8





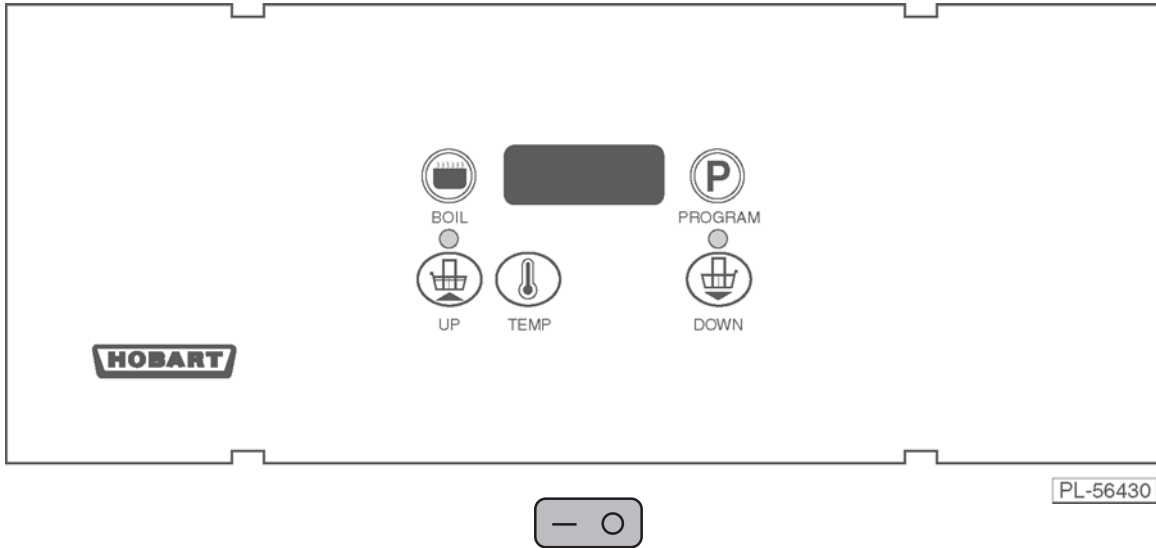

HGFD(F) SERIES

CONTROLS

HGFD(F) Series Fryers are equipped with digital controls and a solid state thermostat.







Control Guide

CONTROL	DESCRIPTION
	Power switch; for turning the fryer on or off.
 BOIL	For cleaning purposes when the fryer is filled with water. Temperature is maintained at approximately 192°F (89°C).
 PROGRAM	For entering and exiting the program mode. For scrolling through program parameters.
 UP	Raises and lowers left fry basket (optional). Starts and stops the timer. Silences the alarm after the timer times out. For entering temperature and time values in the program mode.
 DOWN	Raises and lowers right fry basket (optional). Starts and stops the timer. Silences the alarm after the timer times out. For entering temperature and time values in the program mode.
 TEMP	For viewing actual shortening temperature and set temperature.


 

 

 

 

 



 
PROGRAMMING

Temperature, time, energy source and other parameters must be set before operating. Once these parameters are set, the fryer can be operated at the touch of a button.

Press **P** to enter the program mode and scroll through the parameters. If the Parameter Lock feature is on, LoC is displayed in the window and program entry cannot be accessed. To access the program mode while LoC is on, press     within 6 seconds of pressing **P**. To turn the Parameter Lock feature off, see Program Guide below.

Programming Guide

Once in the program mode, the parameters are displayed in the order listed below. To exit the program and save changes, press and hold **P** for approximately 2 seconds.

PARAMETER	SELECT	DISPLAY	SCROLL
Left Timer	Press  or  to enter time.	LED is lit above the left basket icon. The time value is displayed in window.	Press P and scroll to next item.
Right Timer	Press  or  to enter time.	LED is lit above the right basket icon. The time value is displayed in window.	Press P and scroll to next item.
Set Temperature	Press  or  to enter temperature.	The temperature value is displayed in window.	Press P and scroll to next item.
Offset Calibration	For service only	00F or -00F	Press P and scroll to next item.
Melt Options: Liquid shortening Solid shortening No melt	Press  or  to select melt option.	* CY L (Liquid shortening) or CY S (Solid shortening) or CY O (No melt)	Press P and scroll to next item.
Energy Source	Press  or  to select source of heat.	gAS or * ELEC	Press P and scroll to next item.
Parameter Lock	Press  or  to lock or unlock program entry.	LoC (Unlock Parameter) or ULoC (Lock Parameter)	Press P and scroll to next item.
Fahrenheit or Celsius	Press  or  to select Fahrenheit or Celsius.	* F or C	Press P and scroll to next item.

* = Default setting

Melt Options (HGD Series)

When using solid shortening in the fryer, the CY S (solid shortening) option must be used. Solid shortening must be gently warmed to a liquid state before heating to frying temperatures. Melting solid shortening without using this option will damage the fry tank and scorch the shortening.

The controller has three options for bring shortening up to temperature:

*CY L (Liquid shortening) - For slowly bringing liquid shortening up to temperature.

CY S (Solid shortening) - For slowly melting solid shortening.

CY O (No melt) - For immediately bringing liquid shortening up to fry temperature.





Upon startup, if the CY L or CY S melt option is selected and the shortening temperature is below 135°F (57°C), CY is displayed in the window and the fryer cycles to bring the shortening up to temperature. If the shortening temperature is over 135°F (57°C), HEAT is displayed in the window and the fryer quickly heats up to set temperature.

The temperature is displayed in the window when the fryer has reached the set temperature. After the first initial startup, the fryer always defaults to the last entered melt option.





* = Default setting

USING THE FRYER (After Startup)

Models Without Basket Lift Option

1. Load the fry basket(s); do not overfill. See Recommended Basket Capacities on page 30.
2. Carefully lower basket(s) into shortening.
3. Press  to start the left timer. Press  to start the right timer.
4. When the timer times out, a beeper sounds. Press  to silence the left timer beeper. Press  to silence the right timer beeper.
5. Remove cooked product from fryer.

Models With Basket Lift Option

1. Place the fry basket(s) on the lift arm.
2. Load the fry basket(s); do not overfill.
3. Press  to lower the left basket. Press  to lower the right basket. The timer(s) begin counting down.
4. When the timer times out, a beeper sounds and the basket(s) automatically raise. Press  to silence the left timer beeper. Press  to silence the right timer beeper.

SHUTDOWN

1. Press the power switch off.
2. For models equipped with a manual pilot, turn the gas valve extension arm to PILOT (the pilot will continue to burn). To shut off all gas to the system, including the pilot, turn gas valve extension arm to OFF.
3. For models with electronic ignition, turn the gas valve extension arm to OFF.


EXTENDED SHUTDOWN

1. Turn the main gas shutoff valve off.
2. Press the power switch off.
3. Unplug the fryer.
4. Turn the gas valve extension arm to OFF.
5. Drain the fryer.
6. Allow the fryer to cool, then apply a thin coat of cooking oil to tank interior and tank back to prevent rust.

HGFC(F) SERIES

CONTROLS

HGFC(F) Series Fryers have a microprocessor (computer) thermostat and timer.

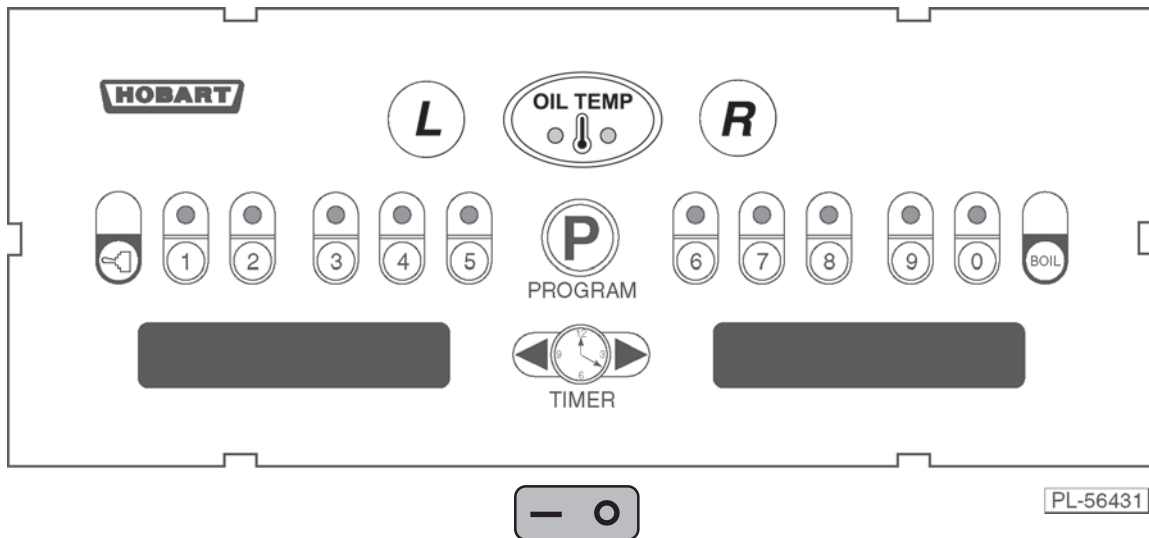




Control Guide

CONTROL	DESCRIPTION
	Power switch; for turning the fryer on or off.
	For setting fry temperature. For viewing actual shortening temperature and set temperature.
	For entering and exiting the program mode.
	For selecting program parameters. For starting timers 1 through 0. For entering temperature and time values.
	For toggling through the selections under program parameters.
	For setting time on timers 1 through 5 in the program mode.
	For setting time on timers 6 through 0 in the program mode.
	For cleaning purposes when the fryer is filled with water. Temperature is maintained at approximately 192°F (89°C).
	Initiates program cooking cycles for units with or without basketlifts.


















PROGRAMMING

Temperature, time and other parameters must be set before operating. Follow the Program Guide to configure the fryer to your particular operation.






















 
Programming Guide

Press  to enter into the program mode, then follow the steps under each parameter to enter the desired information. To exit the parameter and save changes, press . To exit the program completely, press  again.

NOTE: To use set back parameter, the computer must be programmed for basket lifts. Lifts are factory programmed before shipment.

PARAMETER	STEPS	LEFT DISPLAY	RIGHT DISPLAY
Fahrenheit or Celsius	Press 	SELECT	OPTIONS
	Press 	DEGREES F or C	F or C
	Press  to select Fahrenheit or Celsius.	DEGREES F or C	F or C
	Press  when complete.	PROGRAM	
No Password Required	Press 	SELECT	OPTIONS
	Press 	SET PASS	NEW PASS
	Press  to select NO PASS.	NO PASS	NEW PASS
	Press  when complete.	PROGRAM	
Password Required	Press 	SELECT	OPTIONS
	Press 	SET PASS	NEW PASS
	Press  to select PASS REQ.	PASS REQ	NEW PASS
	Press  and enter numeric code.	CODE XXXX	NEW PASS
	Press  when complete.	PROGRAM	
Beeper Volume	Press 	SELECT OPTIONS	OPTIONS
	Press 	VOLUME #	BEEPER
	Press  to select volume.	1, 2 or 3	BEEPER
	Press  when complete.	PROGRAM	

Programming Guide (cont.)

PARAMETER	STEPS	LEFT DISPLAY	RIGHT DISPLAY
Language	Press 	SELECT	OPTIONS
	Press 	ENGLISH (Factory Default)	LANGUAGE
	Press  to select a language.	ENGLISH/ESPAÑOL FRANCAIS/DEUTSCH HOLLAND	
	Press  when complete.	PROGRAM	
Melt Options	Press 	SELECT	OPTIONS
	Press 	NO MELT/LIQUID/SOLID	
	Press  to select melt options.	NO MELT/LIQUID/SOLID	
	Press  when complete.	PROGRAM	
Recovery Time	Press 	SELECT	OPTIONS
	Press 	RECOVERY*	
	Press  when complete.	PROGRAM	
Filter	Press 	SELECT OPTIONS	OPTIONS
	Press 	FILTER	PROG 0000
	Press  to scroll through options.	FILTER	ACT 0000
	Press  when complete.	PROGRAM	
Dispose	Press 	SELECT	OPTIONS
	Press 	DISPOSE	PROG 00
	Press  to scroll through options.	DISPOSE	ACT00
	Press  when complete.	PROGRAM	
Set Back To 275°F	Press 	SELECT	OPTIONS
	Press  Enter 11-99 min. of idle time	IDLE SET BACK	PROG 00
	Press  when complete.	PROGRAM	PROG 00

***Recovery** - During a cold start, the controller measures the time the fryer takes to heat from 200°F to 250°F (93°C to 121°C) and compares it with factory default values.

Melt Options

When using solid shortening in the fryer, the SOLID melt option must be used. Solid shortening must be gently warmed to a liquid state before heating to frying temperatures. Melting solid shortening without using this option will damage the fry tank and scorch the shortening.

The controller has three options for bring shortening up to temperature. Upon startup, the fryer will display the selected melt option in the window when heating:


HEATING	NO MELT - For immediately bringing shortening up to fry temperature.
MELT L	LIQUID - For slowly bringing liquid shortening up to temperature.
MELT S	SOLID - For slowly melting solid shortening.

If the LIQUID or SOLID melt option is selected and the shortening temperature is below 135°F (57°C), MELT L or MELT S is displayed in the window and the fryer cycles to bring the shortening up to temperature. If the shortening temperature is over 135°F (57°C), HEATING is displayed in the window and the fryer quickly heats up to set temperature.

The temperature is displayed in the window when the fryer has reached the set temperature. After the first initial startup, the fryer always defaults to the last entered melt option.

Filter

The Filter parameter can be programmed to alert the operator to filter the shortening by counting the number of cook counts. When the actual cook count is the same as the programmed cook count, FILTER flashes in the window. It also can be programmed to time the filtering process.

- PROG 0000 - Enter the number of cook counts you want the controller to count before giving a filter alert (each time a timer times out is equal to one cook count). To disable the filter reminder, enter 9999.
- ACT 0000 - Leave at 0000 unless editing. This is the number of cook counts.
- TIME 00:00 - Enter the amount of time for timing the filtering process. Leave at zero if you do not wish to use the timer.
- Pressing either arrow on  starts the filter timer after the shortening is drained. (Drain valve open).
- After the timer times out, FILTER DONE is displayed in the window and a beeper sounds for 5 seconds. The filter prompt and cook count are reset to zero. After the beeper stops, CLOSE DRAIN is displayed in the window. See Daily Filtering on page 31 for more information.
- Turn off is displayed in the window. The operator must cycle power switch to continue.

NOTE: The filter prompt can only be reset by completing a filtering cycle or disabling the parameter.

Dispose

The controller can also be programmed to alert the operator to dispose of the shortening by counting the number of times the shortening is filtered. When the filter count is the same as the programmed filter count, DISPOSE is displayed in the window.

- PROG 00 - Enter the number of filter counts you want the controller to count before giving a dispose alert. To disable the dispose reminder, enter 99.
- ACT 00 - Leave at 00 unless editing. This is the number of times the shortening has been filtered.

Dispose (continued)

- Turn power switch off and open the drain valve.
- Discard the shortening into suitable discharge container.
- Close the drain valve and fill the vat with shortening.
- Turn power switch on.
- Enter the programming mode, select the dispose parameter and reset the actual filter count to zero. This will also reset the actual cook count to zero.






NOTE: The dispose prompt can only be reset by resetting the actual filter count or disabling the parameter.

NOTE: The filter prompt takes precedence over dispose.

See Daily Filtering on page 31 for more information.

TEMPERATURE AND TIME PROGRAMMING












Temperature

1. Press  to enter program mode. PROGRAM is displayed in the window.
2. Press  to enter temperature mode. 000°F and TEMP are displayed in the window.
3. Press  through  to enter desired fry temperature. The fry temperature is displayed in the window.
4. Press  to exit the temperature mode. Press again to exit program mode completely.












Time

There are ten timers with advanced timing features on the HGC fryer for setting fry times on multiple products.

Timers  through  :

1. Press  and enter the program mode. PROGRAM is displayed in the window.
2. Press . The LED's on timers  through  are lit and SELECT PRODUCT is displayed in the window.
3. To select a timer, press one of the lit timer numbers; CK# 00:00 and TIME are displayed in the window.
4. Enter the desired time using keys  through . The time is displayed in the window. After entering the time, press ; SELECT PRODUCT is displayed in the window and the LED's on timers  through  are lit.
5. Repeat steps 3 and 4 to program the remaining timers, or press   to exit the program completely.

Timers  through  :






















1. Press  and enter the program mode. PROGRAM is displayed in the window.
2. Press . The LED's on timers  through  are lit and SELECT PRODUCT is displayed in the window.
3. To select a timer, press one of the lit timer numbers; CK# 00:00 and TIME are displayed in the window.
4. Enter the desired time using keys  through . The time is displayed in the window. After entering the time, press ; SELECT PRODUCT is displayed in the window and the LED's on timers  through  are lit.
5. Repeat steps 3 and 4 to program the remaining timers or press   to exit the program completely.

Advanced Time Features


Each timer has additional timing functions that can be programmed to fit your particular operation.

- DUTY TIME - Notifies the operator during a fry cycle to perform a particular task (shake a basket, flip a product, etc.). When the remaining cook time is the same as the Duty Time, a beeper sounds and DUTY # displays in the window. Press the flashing timer number to silence the beeper. The beeper cancels after 5 seconds if not silenced.
- HOLD TIME - Starts after the initial timer beeper is silenced; HD# XX:XX is displayed in the window. After timing out, a beeper sounds. Press the flashing timer number to silence the beeper. The beeper cancels after 5 seconds if not silenced.
- COMPENSATED TIME - Automatically adjusts the time for variations in load sizes.
- STRAIGHT TIME - Does not adjust time for variations; used for regular timing operations.

Setting Advanced Time Features



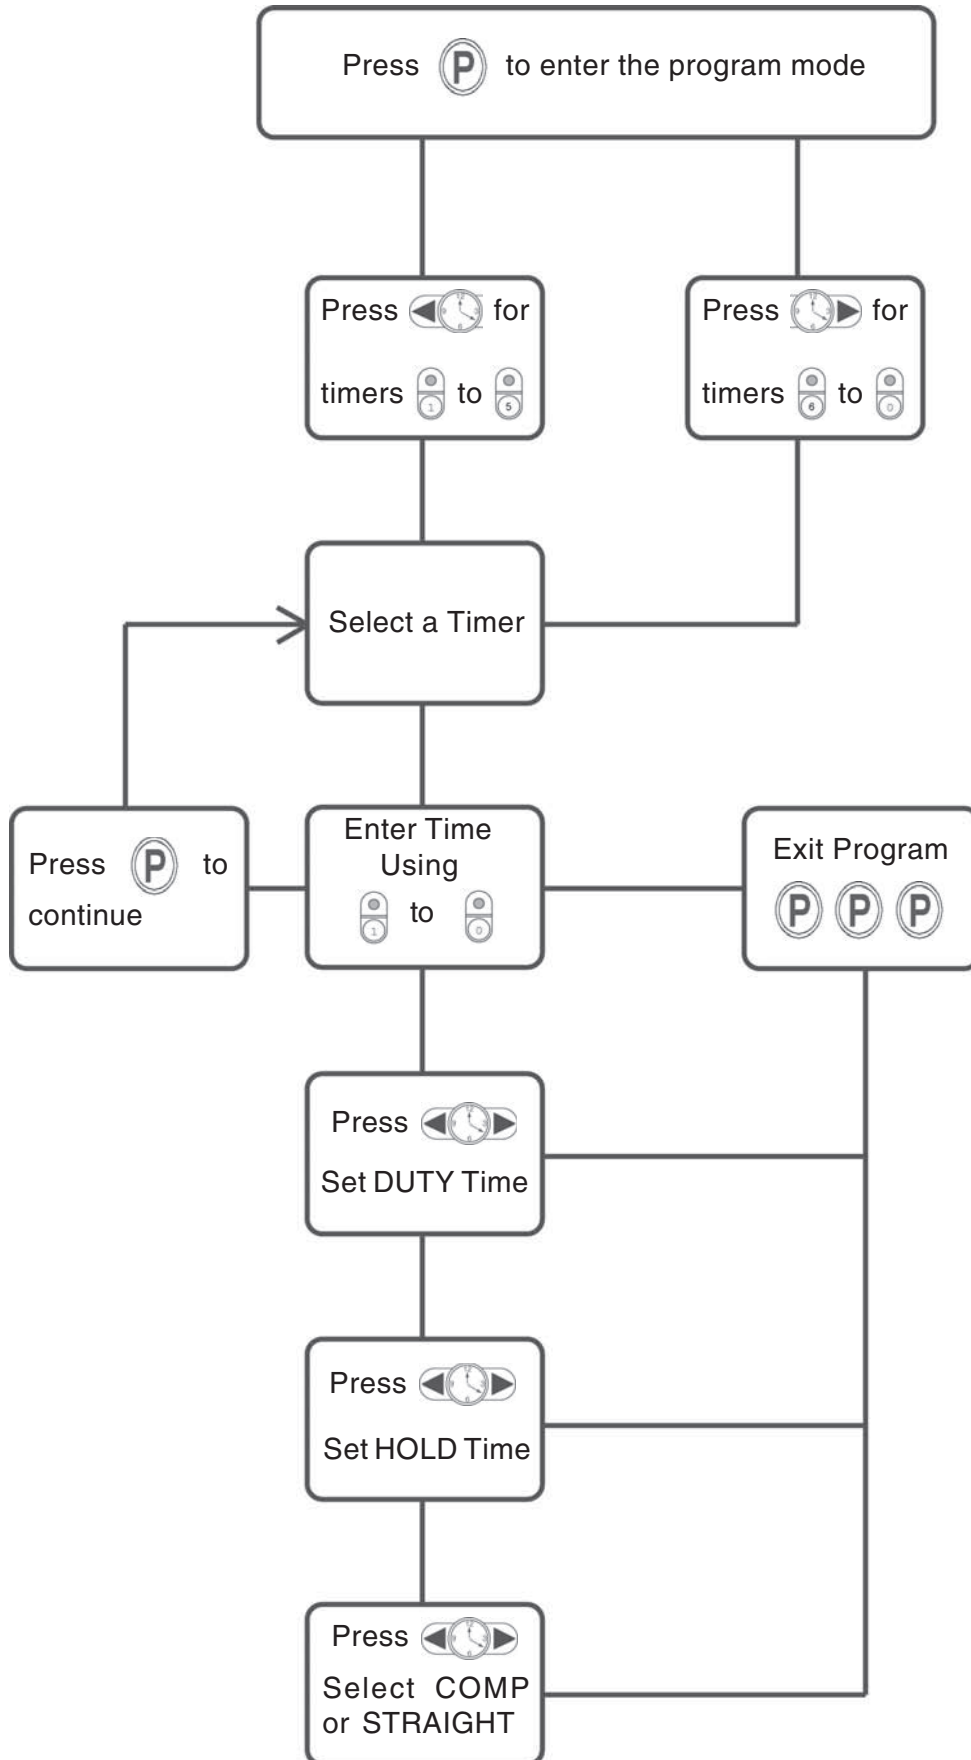

1. Press  and enter the program mode.
2. Press  for timers  through , or press  for timers  through . The LEDs are lit on the timers available for programming, and SELECT PRODUCT is displayed in the window.
3. Select a timer; the programmed time is displayed in the window.
 - A. Duty Time:
 - 1) Press either arrow on ; DT# 00:00 is displayed in the window.
 - 2) Enter the desired time using keys  through . The time is displayed in the window.
 - 3) Continue to the next step or press  to choose another timer.
 - B. Hold Time:
 - 1) Press either arrow on ; HD# 00:00 is displayed in the window.
 - 2) Enter the desired time using keys  through .
 - 3) Continue to the next step or press  to choose another timer.
 - C. Compensated or Straight Time:
 - 1) Press either arrow on ; COMP or STRAIGHT is displayed in the window.
 - 2) Press  to select COMP or STRAIGHT.
 - 3) Press  to choose another timer or press    to exit program mode completely.

Time Programming Quick Chart





USING THE FRYER (After Startup)





Models Without Basket Lift Option

1. Load the fry basket(s); do not overfill. Refer to frying (All Models).
2. Carefully lower basket(s) into shortening.
3. Press the desired program number to select the product to be timed. Timers  through  are programmed for products. Once the product is selected, select  or  button to start timing of the product on the left or right side of the fryer.
4. When the timer(s) time out, a beeper sounds, REMOVE # is displayed in the window and the timer number flashes. Press the flashing timer number to silence the beeper.

Models With One Basket Lift Option

1. Load the fry basket(s), do not overfill. Refer to frying (All Models).
2. Place the fry basket(s) on the lift arm(s).
3. Press the desired number to start the timer. Timers  through  are programmed for products. Once the product is selected, the timing will start and the single basket lift will lower the product into the shortening.
4. When the timer(s) time out, a beeper sounds and REMOVE # is displayed in the window. The timer number flashes and the basket(s) automatically raise. Press the flashing timer number to silence the beeper.

Models With Two Basket Lift Option

1. Load the fry basket(s); do not overfill. Refer to frying (All Models).
2. Place the fry basket(s) on the lift arm.
3. Press the desired program number to select the product to be timed. Timers  through  are programmed for products. Once the product is selected, select  or  button to start timing of the product on the left or right side of the fryer.
4. When the timer(s) time out, a beeper sounds, REMOVE # is displayed in the window and the timer number flashes. Press the flashing timer number to silence the beeper.

NOTE: To cancel a timer after it has started, press and hold the timer number for 5 seconds.

SHUTDOWN

1. Press the power switch off.
2. For models with electronic ignition, turn the gas valve extension arm to OFF.

EXTENDED SHUTDOWN

1. Turn the main gas shutoff valve off.
2. Press the power switch off.
3. Unplug the fryer.
4. Turn the gas valve extension arm to OFF.
5. Drain the fryer.
6. Allow the fryer to cool, then apply a thin coat of cooking oil to tank interior and tank back to prevent rust.

FRYING GUIDELINES (All Models)

- Heat shortening to set temperature.
- Fry pieces of product that are about the same size together.
- Drain or wipe dry raw or wet foods to minimize splatter when lowering into the hot shortening.
- Keep shortening between the MIN and MAX lines. Shortening will expand when heated; do not fill the fry tank past the MAX line.
- Add fresh shortening as needed.

Fry Basket Guidelines

- Shake the basket gently to avoid splattering the shortening.
- Do not overfill baskets (see Recommended Basket Capacities below).
- Hang baskets on rear basket hangers when frying is complete.
- To help reduce batter buildup, dip the basket into shortening before loading.

Recommended Basket Capacities

Sizes	Total Lbs. of Product (1 Basket)	Total Lbs. of Product (2 Baskets)	Total Lbs. of Product (3 Baskets)
35	1 1/2 (0.7 kg)	3 (1.4 kg)	N/A
45	2 1/2 (1.1 kg)	5 (2.3 kg)	N/A
65	3 (1.4 kg)	6 (2.7 kg)	9 (4.1 kg)
85	3 1/2 (1.6 kg)	7 (3.2 kg)	10 1/2 (4.8 kg)

DAILY FILTERING

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

Filtering Guidelines (All Models)

- Stand alone fryers are available in filter-ready and non-filter-ready versions.
- Battery interplumbing is available only on fryers equipped with Filter-In-A-Drawer.
- A cold fryer will not drain properly. Always filter shortening in a liquid state. The shortening under the cold zone area will remain hard, even if the heat is on for a few minutes. If necessary, use the cleanout rod to carefully stir the hard shortening to an area above the cold zone (Fig. 8) where it will melt.
- Filter shortening at least once a day (see Shortening Life on page 33).

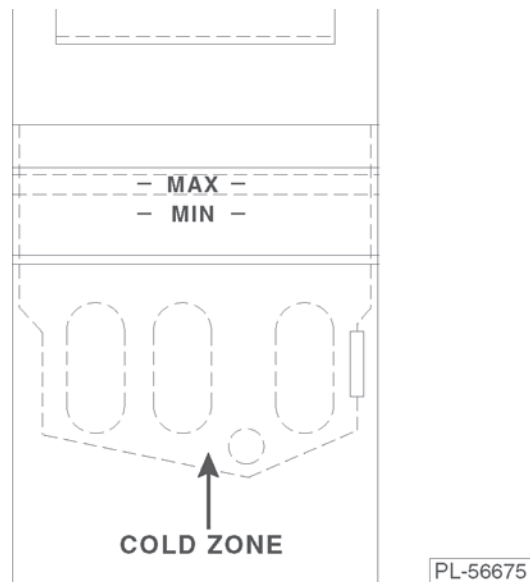


Fig. 8

Filter-Ready Fryers (For Use With Mobile Filter Only)

- The Mobile Filter is covered in a separate instruction manual. Follow the instructions.

Battery Interplumbing (Available Only on Filter-In-A-Drawer Models)

A battery of fryers equipped with optional interplumbing connects the fry tanks to a common drain. Each tank has an individual drain valve. Only one tank can be filtered at a time. Instructions for the Filter-In-A-Drawer are covered in a separate manual. Follow the instructions.

Filtering Procedures (Non-Filter-Ready Fryers)

1. Shut down the fryer.
2. Slowly remove basket(s).
3. Open fryer door and attach the drain pipe to the drain valve.
4. Select a container that will hold all the liquefied shortening and place it below the drain pipe.
5. If using a filter bag, tie it securely to the drain pipe. If a different filter medium is used, place it in the container.
6. Open drain valve carefully so the oil stream is directed through the filter. See Filtering Guidelines on page 31 for draining tips.
7. Flush out scraps and sediment in the fry tank with a small amount of warm shortening.
8. Drain the tank thoroughly and wipe clean.
9. Should it be necessary to clean the tank more thoroughly, see Cleaning on page 33.
10. Close the drain valve.
11. Pour the filtered shortening back into the fry tank.
12. Shortening level should be between the MIN and MAX lines.

HIGH LIMIT DEVICE (All Models)

If the shortening becomes overheated, a high-temperature device will close the gas valve and extinguish the pilot. Should this occur, the pilot will be unable to relight until the shortening temperature is below 300°F (149°C). If the temperature is below 300°F (149°C) and the pilot will not relight, contact your local Hobart Service office. (See alarms and error messages for pilot out and ignition lock (C and D models).

DRAIN INTERLOCK (HGD and HGC Series)

Prevents the burners from operating when the drain valve is open.

SHORTENING LIFE (All Models)

Shortening life can be extended by following these guidelines:

- Do not salt foods over the fryer.
- Use good quality shortening.
- Filter shortening daily (at a minimum).
- Replace shortening if it becomes poorly flavored.
- Keep equipment and surroundings clean.
- Remove excess moisture and particles from food products before placing in fryer.

CLEANING

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

DAILY

- Clean all exterior surfaces of your fryer at least once daily.
- Use a damp cloth with warm water and a mild soap or detergent.
- Rinse thoroughly, then polish with a soft, dry cloth.
- Keep the fryer exterior clean and free of accumulated grease to prevent stubborn stains from forming. If regular cleaning is neglected, grease will be burned on and discolorations may form.
- Remove discolorations by washing with any detergent or soap and water.
- Use a self-soaping nonmetallic scouring pad for particularly stubborn discolorations.
- Always rub with the grain of the stainless steel.
- Do not use a scouring pad or harsh cleaners on the keypad or display area.
- Cleaning instructions for fryers equipped with Filter-In-A-Drawer are covered in a separate instruction manual. Follow the instructions accordingly.

WEEKLY OR AS REQUIRED

1. Drain shortening.

NOTE: Fryers equipped with Filter-In-A-Drawer are covered in a separate instruction manual. Follow the instructions for draining the tank.

2. Flush out scraps and sediment with a small amount of warm shortening.
3. Allow the tank to drain thoroughly.
4. Close the drain valve and fill the tank with a noncorrosive, grease-dissolving commercial cleaner. Follow the manufacturer's instructions.
5. Boil the solution for 15 to 20 minutes. If the cleaner is a water-based chemical, temperature may be 190°F to 212°F (88°C to 100°C). On HGF fryers, set the thermostat as low as possible. Follow the manufacturer's instructions. Monitor boiling to prevent overflow.

NOTE: HGFD and HGFC are equipped with the BOIL feature, fill the tank with water and cleaner and press BOIL. Fryer will automatically set the boil temperature to 192°F.

6. Drain the cleaning solution from the tank.

NOTE: On fryers equipped with Filter-In-A-Drawer, **do not** drain cleaning solution into the pump or filter system. See Filter-In-A-Drawer manual for information on cleaning.

7. Close the drain valve and refill the tank with water.
8. Add 1 cup (235 mL) of vinegar to neutralize alkaline left by the cleaner.
9. Bring the solution to a boil, do not allow to boil over, and let stand for a few minutes.

10. Drain the tank.
11. Rinse the tank thoroughly with clear, hot water (all traces of cleaner must be removed).
12. Dry the tank thoroughly.
13. Close the drain valve and add shortening.
14. Shortening level should be between the MIN and MAX lines. Shortening will expand when heated; do not fill the fry tank past the MAX line. The fryer is now ready for use.

MAINTENANCE

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

WARNING: SPILLING HOT FRYING COMPOUND CAN CAUSE SEVERE BURNS. DO NOT MOVE FRYER WITHOUT DRAINING ALL FRYING COMPOUND FROM THE TANK.

Fryers should be kept on a regulator preventive maintenance schedule. Contact your local Hobart Service office for details.

LUBRICATION

Motors used on basket lifts are permanently lubricated.

FLUE VENT

When the fryer is cool, inspect annually. Check the flue and clear any obstructions.

SERVICE

Contact your local Hobart Service office.

TROUBLESHOOTING GUIDE

SYMPTOM	POSSIBLE CAUSES / SOLUTIONS
No power when switch is turned on.	<p>Tripped breaker; fuse blown / Verify fryer is plugged in and outlet has power.</p> <p>Problem with power switch / Call service.</p>
Fryer will not heat.	<p>Gas supply not on or partially on / Verify gas supply valve is full on / Check hose connection (if applicable).</p> <p>Verify power is on.</p> <p>Gas valve in fryer not on / Verify gas valve is on in fryer / Verify pilot comes on.</p> <p>Problem with high limit / Call service.</p> <p>Problem with electrical system / Turn off gas supply and call service.</p>
Fryer continues to heat.	<p>Combination valve is stuck in open position / Turn off gas supply and call service.</p> <p>Problem with electrical system / Call service.</p>
Fryer heats, but will not reach desired temperature.	<p>Gas supply pressure inadequate / Call service.</p>
Fryer stops heating during operation.	<p>Tripped breaker, fuse blown / Verify fryer is plugged in and check circuit breakers and fuse(s).</p> <p>Check gas supply. Verify pilot is on.</p> <p>Shortening is too hot, high limit switch is open / Call service.</p>

ALARMS AND ERROR MESSAGES (HGD and HGC Series)

Pilot Out - If the pilot is out, the control displays the following message: (Electronic ignition only)

HGD Series - FlrE OUT

HGC Series - PILOT OUT

If no action is taken after 90 seconds, an alarm sounds continuously, the heat demand is disabled and any running cooking cycles are cancelled. The control displays the following message:

HGD Series - Ign LoC

HGC Series - IGNITION LOCKOUT

The fryer must be turned off, then back on before the pilot can be relit and normal fryer functions resumed. See pages 14 and/or 15 for lighting instructions pertaining to your particular model.

Open Probe - If an open probe is detected, the heat demand is disabled and any running cooking cycles are cancelled. All operator buttons are disabled. The control displays the following message:

HGD Series - Prob

HGC Series - OPEN PROBE

The alarm sounds continuously until the fault clears or the fryer is turned off, then back on. If the problem persists, call service.

Shorted Probe - If a shorted probe is detected, the heat demand is disabled and any running cooking cycles are cancelled. All operator buttons are disabled. The control displays the following message:

HGD Series - Hi

HGC Series - SHORTED PROBE

The alarm sounds continuously until the fault clears or the fryer is turned off, then back on. If the problem persists, call service.

Hi Temperature - If the temperature is greater than or equal to 415°F (212°C), the heat demand is disabled and any running cooking cycles are cancelled. All operator buttons are disabled. The control displays the following message:

HGD Series - Hi

HGC Series - SHORTED PROBE

The alarm sounds continuously until the fault clears or the fryer is turned off, then back on. Normal fryer operations resumes when temperature drops below 415°F (212°C). If the problem persists, call service.