

VULCAN

INSTALLATION & OPERATION MANUAL

MODELS EF3, EF4, & EF5 ECONOFRY GAS FRYERS

MODELS

*EF3 ML-52099
EF4 ML-114943
EF5 ML-114944*



IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

IMPORTANT

IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUTOFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

IN THE EVENT OF A POWER FAILURE, DO NOT ATTEMPT TO OPERATE THIS DEVICE.

Installation, Operation and Care of MODELS EF3, EF4 & EF5 ECONOFRY GAS FRYERS

KEEP THESE INSTRUCTIONS FOR FUTURE USE

GENERAL

Your Vulcan-Hart Gas Fryer is produced with quality workmanship and material. Proper installation, usage and maintenance will result in many years of satisfactory performance.

It is suggested that you thoroughly read this entire manual and carefully follow all of the instructions provided.

INSTALLATION

Before installing the fryer, verify that the type of gas (natural or propane) agrees with the specifications on the fryer data plate which is located on the inside of the door. Also be sure the fryer is built for the installation elevation.

The fryer must be restrained with adequate ties to prevent tipping when installed in order to avoid the splashing of hot liquid.

UNPACKING

This fryer was carefully inspected before leaving the factory. The transportation company assumes full responsibility for safe delivery upon acceptance of the shipment. Immediately after unpacking the fryer, check for possible shipping damage. If the fryer is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Accessories packed in the fry tank include:

Crumb Screen	Drain Pipe
Basket Hanger	(2) Twin Fry Baskets
(4) Legs	

Do not use the door or its handle to lift or move the fryer.

LOCATION

The equipment area must be kept free and clear of combustible substances. Minimum clearance from combustible construction is 6" (152.4mm) from the sides and 6" (152.4mm) from the back of the fryer; minimum clearance from non-combustible construction is 0" from the sides and back of the fryer. There must be at least 16" (406.4mm) clearance between the fryer and any open top flame units. Adequate clearances for servicing and proper operation must be allowed.

Install the fryer in an area with sufficient air supply for combustion of the gas at the fryer burners. Provide adequate clearance for air openings into the combustion chamber. Do not obstruct the flow of combustion and ventilation air.

Do not permit fans to blow directly at the fryer. Wherever possible, avoid open windows next to the sides or back of the fryer. Avoid wall-type fans which create air cross currents within the room.

INSTALLATION CODES AND STANDARDS

Vulcan-Hart Fryers should be installed in accordance with:

In the United States of America:

1. State and local codes.
2. The National Fuel Gas Code, ANSI-Z223.1 (latest edition), available from The American Gas Association, Inc., 1515 Wilson Boulevard, Arlington, VA 22209.
3. ANSI-NFPA Standard #96, Vapor Removal from Cooking Equipment, (latest edition), available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

In Canada:

1. Local Codes.
2. CAN/CGA-B149.1 Natural Gas Installation Code (latest edition).
3. CAN/CGA-B149.2 Propane Installation Code (latest edition) available from the Canadian Gas Association, 178 Rexdale Blvd., Etobicoke, Toronto (Ontario), Canada M9W 1R3.

ASSEMBLY

Legs

Position fryer in an open space near the final installation area. Tilt fryer back, being careful to avoid scratching the finish. Thread front legs clockwise into mounting plates provided on the bottom of the fryer until seated. Tilt to front and thread back legs similarly. Carefully raise fryer to its normal position and place it in the installing location.

Castors (Optional)

If the fryer is equipped with casters, the gas connector (available from Vulcan-Hart) must comply with the Standard for Connectors of Movable Gas Appliances, ANSI-Z21.69 (latest edition), and a quick-disconnect device that complies with the Standard for Quick-Disconnect Devices for Use With Gas Fuel, ANSI-Z21.41 (latest edition).

When casters are installed, provide a restraining device for the gas line to limit movement of the fryer without depending on the connector and/or any quick-disconnect device or its associated piping to limit fryer movement. Attach the restraining device to the rear of the fryer (Fig. 1).

If it is necessary to disconnect the restraint, turn off the gas supply before disconnection. Reconnect the restraint before turning the gas supply on and returning the fryer to its installation position.

Instructions for installing casters to the fryer are included with the casters.

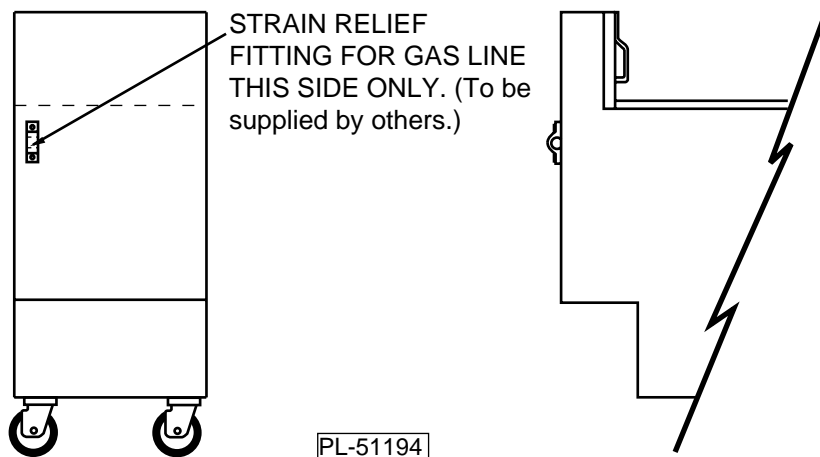


Fig. 1

GAS CONNECTIONS

All gas supply connections and any pipe joint compound must be resistant to the action of liquefied petroleum gases.

The gas inlet is located at the lower left rear.

Codes require that a gas shutoff valve be installed in the gas line ahead of the fryer.

The gas supply line must be at least the equivalent of $\frac{1}{2}$ " (12.7mm) iron pipe. If using the optional quick-disconnect flex hose, $\frac{3}{4}$ " (19mm) iron pipe must be used unless $\frac{3}{4}$ " (19mm) to $\frac{1}{2}$ " (12.7mm) reducing fittings are used. Make sure the pipes are clean and free of obstructions, dirt, and piping compound.

WARNING: PRIOR TO LIGHTING, CHECK ALL JOINTS IN THE GAS SUPPLY LINE FOR LEAKS. USE SOAP AND WATER SOLUTION. DO NOT USE AN OPEN FLAME.

After piping has been checked for leaks, fully purge gas pipes to remove air.

GAS PRESSURES AND ORIFICES

The standard orifices are set at 4" W.C. (Water Column) (0.993 kPa) pressure for natural gas, and 10" W.C. (Water Column) (2.48 kPa) pressure for propane gas. A pressure regulator is supplied as part of the gas control valve.

TESTING THE GAS SUPPLY PIPING SYSTEM

When test pressures exceed $\frac{1}{2}$ psig (3.45 kPa), the fryer and its individual shutoff valve must be disconnected from the gas supply piping system.

When test pressures are $\frac{1}{2}$ psig (3.45 kPa) or less, the fryer must be isolated from the gas supply piping system by closing its individual shutoff valve.

LEVELING THE FRYER

Once gas connections have been made, place a spirit level on top of the fryer. Adjust the legs to ensure that the fryer is level front-to-back and side-to-side in the final installed position.

FLUE CONNECTIONS

Adequate ventilation must be provided and must comply with NFPA Standard #96 (latest edition), and with local codes.

Never make flue connections directly to the fryer.

The fryer must be located under a hood which has an adequate connection to an exhaust duct. The hood must extend 6" (152.4mm) beyond fryer sides.

Clearance above fryer should be adequate for products of combustion to be removed efficiently. An 18" (457mm) minimum clearance should be maintained between the flue vent and the filters of the hood venting system.

Do not obstruct the flow of flue gases from the flue duct located at the rear of the fryer.

Adequate air should be provided in the kitchen to replace air taken out by the ventilating system. This will prevent fryer function from being affected by a reduced atmospheric pressure.

OPERATION

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

WARNING: SPILLING HOT OIL CAN CAUSE SEVERE BURNS. DO NOT MOVE FRYER WITHOUT DRAINING ALL OIL FROM THE TANK.

Tank warranty may be voided by improper operation. Turn gas valve off when draining or filling.

FILL FRY TANK WITH LIQUID SHORTENING


CAUTION: Before turning the burners on, the fry tank must be filled with liquid shortening. If this is not done, the tank walls can be damaged. Warpage can cause leaks.

Use only liquid shortening. Fill fry tank to the "oil level" line on the back wall (Fig. 2).

DO NOT melt solid shortening in the fry tank. The fry tank will be damaged and the shortening will be scorched.

Do not overfill tank.

Keep shortening at "oil level" line in fry tank. Add fresh shortening as needed.

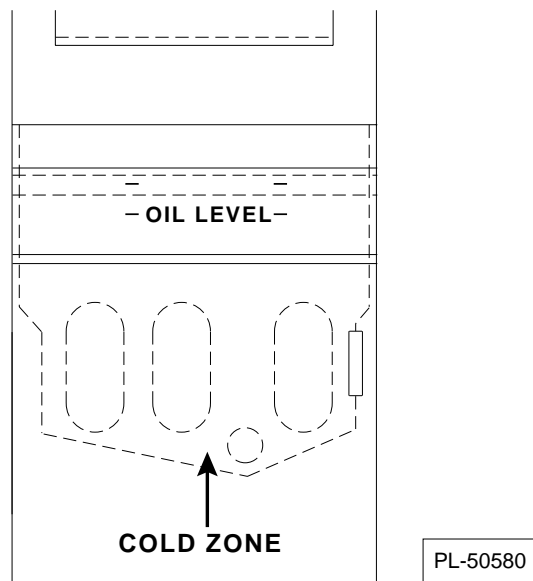


MODEL EF3
Fig. 2

OVER TEMPERATURE DEVICE

If the shortening becomes overheated, a high temperature shutoff device will turn the gas valve off and extinguish the pilot. DO NOT relight the pilot until the shortening temperature is below 300°F (149°C). If this situation persists, contact your local Vulcan-Hart authorized service office.

LIGHTING THE PILOT

1. Turn thermostat OFF. Thermostat is located behind the door (Fig. 3).

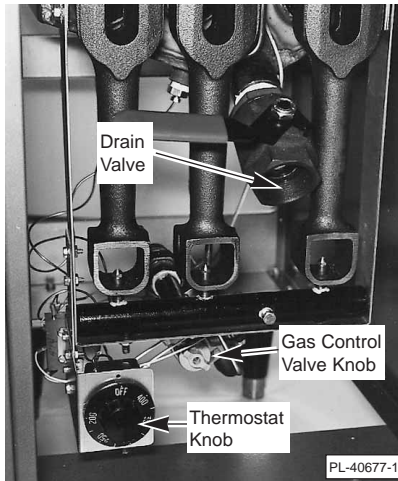

MODEL EF3
Fig. 3

2. Push gas control valve knob and turn to OFF (Fig. 4). Wait 5 minutes for unburned gas to vent.
 3. Push and turn gas control valve to the "I" in PILOT (Fig. 5).
 4. While still holding knob in, light the pilot with a lit taper. Continue to depress knob until pilot remains lit when knob is released.
- If pilot does not remain lit, repeat Steps 2, 3, and 4.
5. Depress and turn gas control knob to ON (Fig. 6).
 6. If gas supply is interrupted, repeat Steps 1-5.

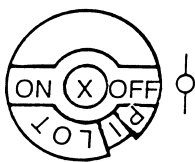


Fig. 4

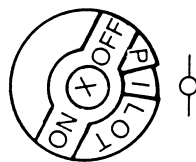


Fig. 5



Fig. 6

PL-40678

TURNING THE FRYER ON

To turn the fryer on, set the thermostat knob to the desired temperature. After the set temperature has been reached, the gas control shuts off gas flow to the burners. The pilot remains lit. The burners will cycle on and off, maintaining the set temperature.

TURNING THE FRYER OFF

1. Turn the thermostat OFF.
2. Turn the gas control valve knob so the "I" in PILOT is opposite the INDEX. In this position, the pilot remains lit.
3. To shut off all gas to the system, including the pilot, turn the gas control valve knob to OFF.

EXTENDED SHUTDOWN

1. Turn the manual gas shutoff valve OFF.
2. Turn the thermostat knob OFF.
3. Turn the gas control valve knob to OFF.

Apply a thin film of cooking oil to the tank interior and the flue housing to inhibit rust.

FRYING FOODS

- Heat shortening to set temperature.
- Pieces of product to be fried should be about the same size to ensure the same doneness.
- Drain or wipe dry raw or wet foods to minimize spatter when lowering into the hot oil.
- Do not overfill baskets.
- Carefully lower baskets into oil.
- When frying doughnuts and fritters, turn product only once during frying.
- When cooking French fries or onion rings, shake basket several times in a way that does not spatter the shortening.
- Batter-covered foods should be dropped carefully, one by one, into shortening or basket. If you use the basket, first dip basket into the shortening to reduce batter build-up on basket surfaces.

When frying is completed, remove baskets or product. Hang baskets on rear basket hangers. Remove food and season it. Do not salt food over the shortening because salt could cause a chemical change in the oil.

SHORTENING LIFE

Shortening life may be extended by following these guidelines:

- Do not salt foods over the fryer.
- Use good quality shortening.
- Filter shortening at least daily.
- Replace shortening if it becomes poorly flavored.
- Keep equipment and surroundings clean.
- Set thermostats correctly.
- Remove excess moisture and particles from food products before placing in fryer.

Add approximately 15% new oil daily. Keep level of shortening at oil level line in fry tank. Add fresh shortening as needed.

DAILY FILTERING

Turn gas valve OFF when draining or filling.

The shortening should always be filtered while liquefied. A cold fryer will not drain properly because the shortening under the cold zone tube area will remain hard, even if the heat is on for a few minutes. If necessary, the clean-out rod may be used to carefully stir up hard fat to an area above the cold zone where it will melt. After the cold zone is liquefied, turn the fryer thermostat and gas valve OFF.

Shortening life will be extended by filtering at least once a day or more often if conditions warrant. A commercial power filter (available from other manufacturers) may be used. Follow the manufacturer's operating instructions for draining, straining, and replacing shortening in the fry tank.

Another way to filter is to drain the shortening from the drain pipe through a filter bag, or cover the receiving container with cheesecloth or other filtering material.

Filtering Procedure

1. Turn the fryer OFF.
2. Slowly remove the baskets, especially if shortening is hot, to prevent splashing.
3. Open the fryer door and attach the drain pipe to the drain valve.
4. Select a container of sufficient capacity and place it below the drain pipe.
5. If you are using a filter bag, tie it securely to the drain pipe. If other filter medium is used, place it in the container.
6. Open the drain valve carefully so the oil stream is directed through the filter.

7. With a small amount of warm shortening, flush out scraps and sediment in the fry tank. Drain the tank thoroughly and wipe clean.
8. If it is necessary to clean the tank more thoroughly follow the procedure shown in CLEANING — WEEKLY OR AS REQUIRED.
9. Close the drain valve.
10. Pour the strained shortening back into the vat.
11. Add shortening to the "oil level" line.

CLEANING

Daily

Clean your fryer regularly with a damp cloth and polish with a soft dry cloth. If regular cleaning is neglected, grease will be burned on and discolorations may form. These may be removed by washing with any detergent or soap and water. A self-soaping scouring pad may be used for particularly stubborn discolorations. Always rub with the "GRAIN" in a horizontal direction.

Keeping the fryer exterior clean and free of accumulated grease will prevent stubborn stains from forming. Wash all exterior surfaces at least once daily. Use a cloth with warm water and a mild soap or detergent. Follow with a clear rinse, then dry.

Fingerprints are sometimes a problem on highly polished surfaces of stainless steel. They can be minimized by applying a cleaner that will leave a thin, oily or waxy film.

Weekly or as Required

1. Once the shortening has been drained, flush out scraps and sediment with a small amount of warm shortening. Allow the tank to drain thoroughly.
2. Close the drain valve and fill the tank with a non-corrosive, grease-dissolving commercial cleaner, following the manufacturer's instructions.
3. Set the thermostat at a temperature recommended by the manufacturer of the commercial cleaner and boil the solution for 15 to 20 minutes. Monitor boiling to prevent overflow.
4. Drain the cleaning solution from the tank.
5. Close the drain valve and refill the tank with water. Add 1 cup (237ml) of vinegar to neutralize alkaline left by the cleaner. Bring the solution to a boil and allow it to stand for a few minutes.
6. Drain the tank and rinse thoroughly with clear, hot water. All traces of cleaner must be removed. Dry the tank thoroughly.
7. Close the drain valve.
8. Add shortening to the "oil level" line.

MAINTENANCE

WARNING: HOT OIL AND PARTS CAN CAUSE BURNS. USE CARE WHEN OPERATING, CLEANING AND SERVICING THE FRYER.

WARNING: SPILLING HOT OIL CAN CAUSE SEVERE BURNS. DO NOT MOVE FRYER WITHOUT DRAINING ALL OIL FROM THE TANK.

VENT

Annually, when fryer is cool, check the flue and clear any obstructions.

SERVICE AND PARTS INFORMATION

To obtain service and parts information concerning this fryer, contact the Vulcan-Hart Service Agency in your area (refer to listing supplied with the fryer), or Vulcan-Hart Company Service Department at the address or phone number shown on the front cover of this manual.