



ILLUSTRATE PARTS LIST

SELF-CONTAINED FLAKED ICE MAKER

MODEL: SERIES 200, 525, 725 (R404A REFRIGERANT)

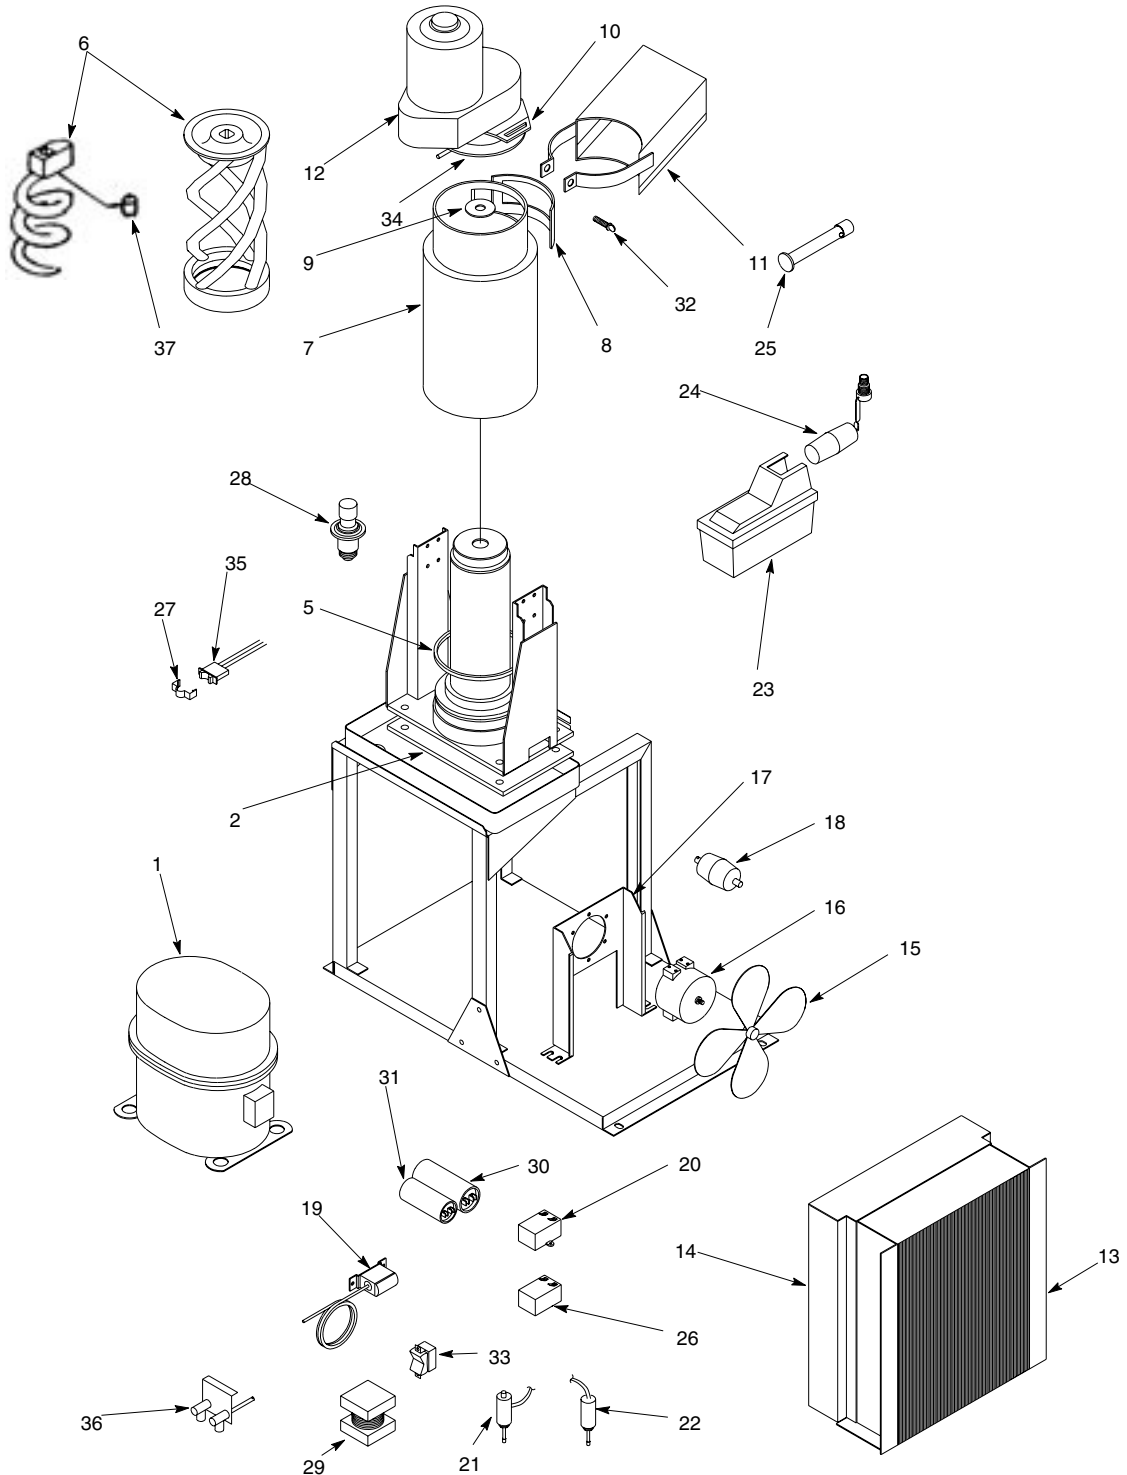


FIGURE 1. Exploded View



PARTS LIST

Item No.	Description	200	525	725
1	Compressor (115V 60HZ)	162964053	162964011	162964011
	Compressor (220V 50HZ)	162964054	162964038	-----
2	Pad, Masonite	09115	36310	36310
3	Hold-Down, Evaporator	163277001	163277002	163277002
4	Evaporator	01501	41100	41100
5	O-Ring	00122	03120	03120
6	Auger	04062	03796	03796
7	Shell, Evaporator	01508	09182	09182
8	Gasket, Evaporator Shell	01916	08666	08666
9	Washer, Thrust	08043	8043	08043
10	Plate, Gearmotor Mounting	04060	03163	03163
11	Chute, Inclined Ice	166046000	08720	08720
12	Gearmotor (Von Weiss; 115V 60HZ)	164826001	164826001	164826001
	Gearmotor (Von Weiss; 220V 50HZ)	164826002	164826002	-----
13	Condenser	02908	25446	25446
14	Shroud, Condenser	161890013	36074	36074
15	Blade, Condenser Fan	165595008	25578	25578
16	Motor, Condenser Fan (115V 60HZ)	23526	25242	25242
	Motor, Condenser Fan (220V 50HZ)	23645	300835000	-----
17	Bracket, Condenser Fan Motor	00260	36075	36075
18	Drier	166184001	166184001	166184001
19	Thermostat, Bin	09570	09570	09570
20	Relay, Gearmotor Start (Von Weiss; 115V 60HZ)	161627001	161627001	161627001
	Relay, Gearmotor Start (Von Weiss; 220V 50HZ)	161627002	161627002	-----
21	Control, High Pressure	165677006	165677006	165677006
22	Control, Fan Switch	165677005	165677005	165677005
23	Float Tank, Complete	21789	21789	21789
24	Float Valve Only	21924	21924	21924
25	Thermowell	20773	29541	29541
26	Relay, Power (115V 60HZ)	164884002	164884002	164884002
	Relay, Power (220V 50HZ)	40713	40713	-----
27	Clip, Delay Thermostat	-----	25871	25871
28	Valve, Automatic Expansion	161921004	161921004	161921004
29	Relay, Compressor Start (115V 60HZ)	161998016	161998008	161998008
	Relay, Compressor Start (220V 50HZ)	161998017	161998011	-----
30	Capacitor, Compressor Start (115V 60HZ)	161165015	161165007	161165007
	Capacitor, Compressor Start (220V 50HZ)	161165016	161165010	-----
31	Capacitor, Gearmotor Start (Von Weiss; 115V 60HZ)	161165000	161165000	161165000
	Capacitor, Gearmotor Start (Von Weiss; 220V 50HZ)	29519	29519	-----
32	Screw, Wing	00890	00890	00890
33	Switch, On-Off/Circuit Breaker (115V 60HZ)	166220001	166220001	166220001
	Switch, On-Off/Circuit Breaker (220V 50HZ)	166220000	166220000	-----
34	Disc, Centering	-----	20956	20956
35	Thermostat, Gearmotor Delay	-----	25864	25864
36	Valve, Refrigeration Service	162978003	162978003	162978003
37	Bushing, Auger Guide	02040	-----	-----

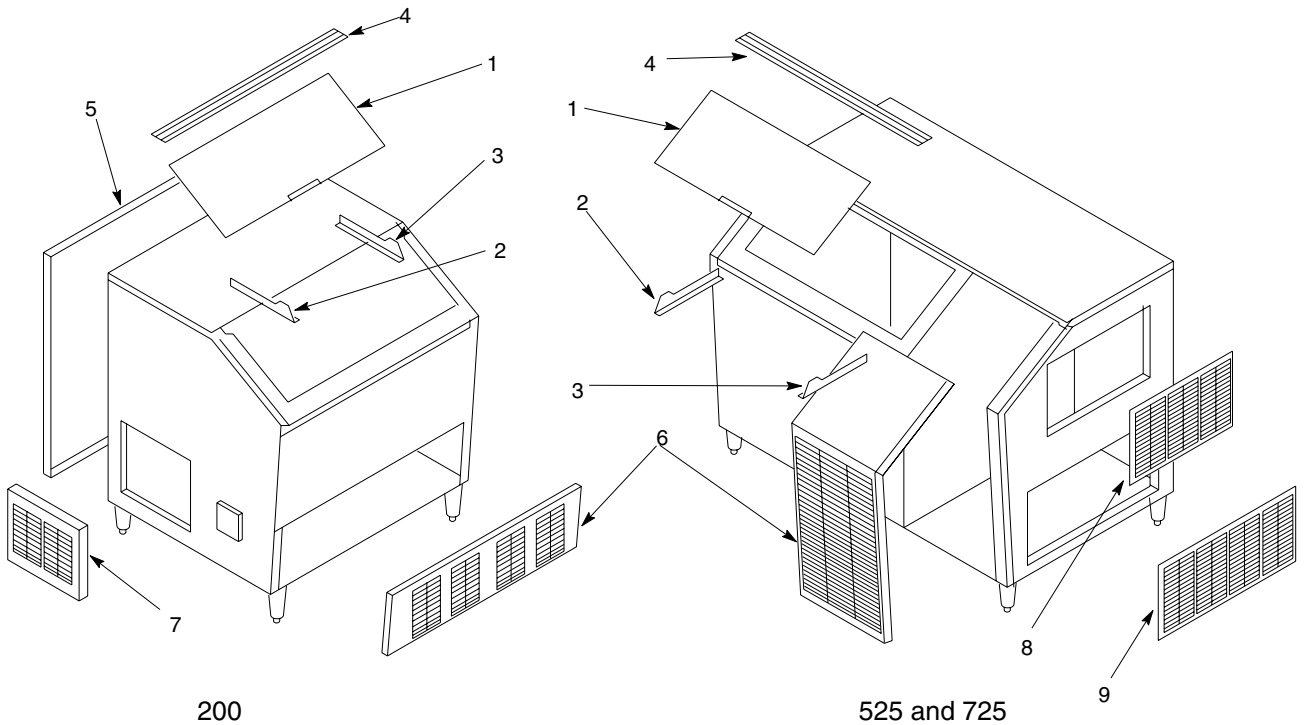


FIGURE 2. Cabinet Exploded View

CABINET PARTS LIST

Item No.	Description	AF200PSCR AF200PSC50R	AF200SSCR	AF525PSCR AF525PSC50R	AF525SSCR	AF725PSCR
1	Bin Door	09120	09120	09120	09120	36555
2	Door, Track, LH	25007	25007	25007	25007	25007
3	Door, Track, RH	08824	08824	08824	08824	08824
4	Door Trim	09112	09112	09112	09112	08681
5	Back Panel	163278001	25043	N/A	N/A	N/A
6	Front Panel	163275002	25853	163283002	26857	163283001
7	Side Louvered Panel	163275013	163275014	N/A	N/A	N/A
8	Upper Louvered Access	N/A	N/A	163275003	25042	163275003
9	Lower Louvered Access	N/A	N/A	163275001	24154	163275004